

339 (270806-)
349 (340001-)
359 (345001-)
459 (276036-)
Balers

John Deere Arc-lès-Gray
OMCC49852 Issue H9
(This manual replaces OMCC31430 G1)
European Version
Printed in Germany
ANGLAIS

General Information

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS RECTANGULAR BALER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS RECTANGULAR BALER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this rectangular baler will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification Views	00-1	Tire inflation	25-10
Safety	05-1	Tightening wheel bolts	25-10
Safety Decals	10-1	Operating the Baler	
Preparing the Tractor		Starting and operating the baler	30-1
Checking ballast, wheel spacing and tire inflation	15-1	Preparing the crop	30-2
Selecting tractor PTO speed	15-1	Selecting correct direction of travel	30-2
Attaching and Detaching		Understanding twine tying cycle	30-2
PTO speed	20-1	Understanding twisting cycle	30-4
Attaching and detaching standard telescoping hookup	20-1	Replacing flywheel shear bolt	30-6
Attaching and detaching CV telescoping hookup	20-2	Replacing knotter and needle drive shear bolt	30-6
Storing hookup	20-3	Adjusting compressor rod height	30-7
Storing hydraulic hoses and wiring harness	20-3	Adjusting compressor rod angle	30-7
Adjusting standard telescopic hookup	20-4	Removing compressor rods	30-8
Adjusting CV telescopic hookup	20-4	Checking twine tension	30-8
Adjusting powershaft support	20-5	Adjusting twine tension	30-8
Connecting safety chain	20-6	Adjusting feeder fingers	30-9
Operating jackstand	20-6	Adjusting bale length	30-10
Preparing the Baler		Operating safety latch	30-11
Break-in period	25-1	Adjusting bale weight manually	30-12
Preparing for transport	25-2	Side straw restrictors	30-13
Tongue positioning	25-3	Adjusting bale weight hydraulically	30-14
Hydraulic tongue positioning	25-4	Adjusting pickup teeth height (339)	30-15
Mechanical tongue positioning	25-5	Adjusting pickup teeth height (349, 359 and 459)	30-15
Selecting correct twine and wire	25-5	Resetting bale counter	30-16
Loading twine box	25-5	Attachments	
Tying modified square knot	25-6	Bale counter	35-1
Tying sheet bend knot	25-6	Hydraulic bale tensioner	35-1
Before threading needles	25-6	Service box	35-1
Threading needles (twine baler)	25-7	Lighting equipment	35-2
After threading needles	25-7	Plungerhead extensions	35-2
Loading wire box	25-8	Side straw resistors	35-2
Threading needles (wire baler)	25-9	Bale case springs	35-3
		Pickup gauge wheel	35-3
		Ball joint hitch	35-3
		Loading frame	35-4
		Side drop bale chute	35-6

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMCC49852 H9-19-04AUG99

COPYRIGHT© 1998
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Trailer hitch, bale chute and bale chute extension	35-6	Adjusting knotter drive brake (339 and 349)	50-16
Hydraulic pickup lift	35-7	Adjusting knotter drive brake (359 and 459)	50-17
Wire containers	35-7	Adjusting needle frame and needle link (339 twine baler)	50-17
Multi-luber device	35-7	Adjusting needle frame and needle link (349, 359 and 459 twine balers)	50-18
Lubrication and Maintenance		Adjusting needles (Twine balers)	50-18
Observe service intervals	40-1	Adjusting twine holder	50-20
Grease	40-1	Adjusting tucker fingers	50-21
Gear case oil	40-2	Adjusting knife arm	50-22
Transmission and hydraulic oil	40-2	Replacing knife and wiper plate	50-24
Alternative lubricant	40-3	Adjusting knotter gears	50-25
Lubricant storage	40-3	Removing knotter assembly	50-26
Mixing of lubricant	40-3	Replacing billhook cam	50-26
Lubricate baler properly	40-4	Adjusting twine disk	50-27
As required	40-4	Adjusting billhook tongue	50-28
Every 5 hours	40-7	Adjusting needle link (Wire balers)	50-28
Every 8 hours	40-7	Adjusting needles - Wire baler	50-29
Every 10 hours	40-8	Adjusting wire guides	50-31
Every 20 hours	40-9	Adjusting center pulley	50-31
Every 50 hours	40-10	Adjusting guide alignment and clearance	50-31
Every 100 hours	40-11	Adjusting grippers	50-32
Every season	40-13	Adjusting twister hooks	50-32
Troubleshooting		Adjusting bevel gear and pinion	50-33
Knotter difficulties	45-1	Adjusting intermittent drive gear (Wire baler)	50-33
Twister mechanism difficulties	45-10	Adjusting slip clutch (339 and 349)	50-34
Multi-luber difficulties	45-18	Adjusting slip clutch (359 and 459)	50-36
Bale quality	45-19	Adjusting pickup float	50-37
Pickup difficulties	45-20	Adjusting pickup V-belt	50-38
Feeding difficulties	45-21	Adjusting auger drive belt	50-38
Needles not rising	45-21	Adjusting main drive chain	50-39
Power drive difficulties	45-22	Adjusting feeder finger chain	50-40
Shear bolt difficulties	45-22	Adjusting hydraulic bale tension pump chain	50-41
Hydraulic pump difficulties	45-23	Adjusting Multi-luber	50-42
Wheel lock device	45-23	Repairing Multi-luber broken oil lines	50-43
Service		Adjusting plungerhead/bale case	50-43
Placing needles in home position	50-2	Adjusting right-hand wheel lock device	50-50
Timing the baler (339, 349 and 359)	50-3	Bleeding hydraulic system	50-51
Timing the baler (459)	50-5	Storage	
Plungerhead/needles - Basic adjustment	50-11	Storing baler at end of season	55-1
Plungerhead/needles - Synchronization	50-12	Preparing for beginning of season	55-2
Adjusting bale measuring control	50-12	Specifications	
Adjusting trip arm	50-13	339 Baler	60-1
Checking trip arm	50-13	349 Baler	60-3
Adjusting bale measuring control stop	50-13	359 Baler	60-5
Checking stop adjustment	50-14		
Adjusting crank stop	50-15		

Continued on next page

Contents

Page

359 Baler 60-6
459 Baler 60-8

Serial Number

Serial number plate 65-1
Plate description 65-1
Product identification number 65-1

Index

 
Contents

Identification Views



-JUN-23SEP98
CC7877

339 Baler with short tongue

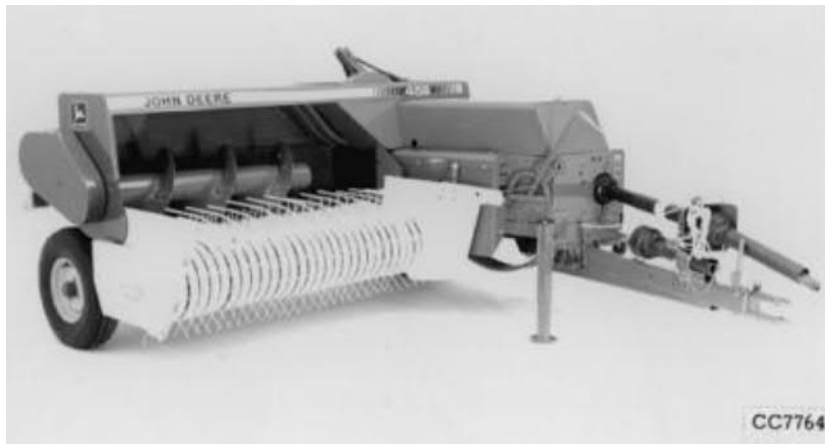

-JUN-05OCT98
CC7764

459 Baler

CC,339SQB004286-19-01AUG98

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

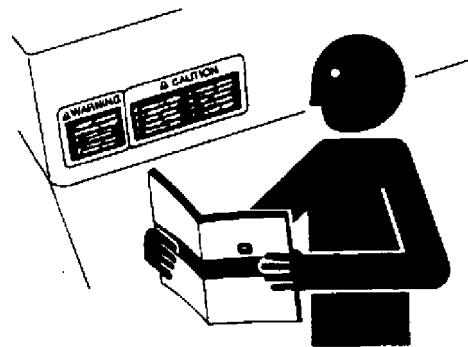

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



 
FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

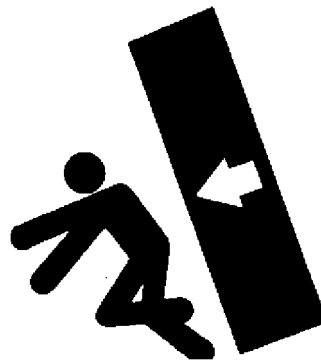

DX,STORE -19-03MAR93


TS219 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

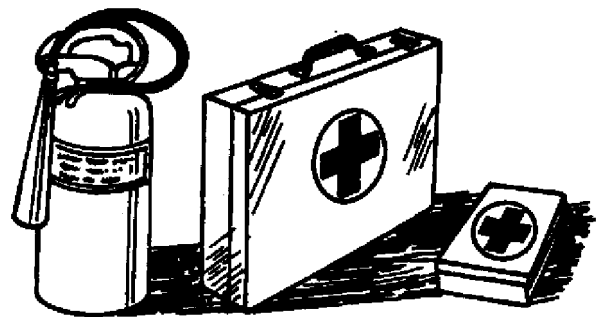

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

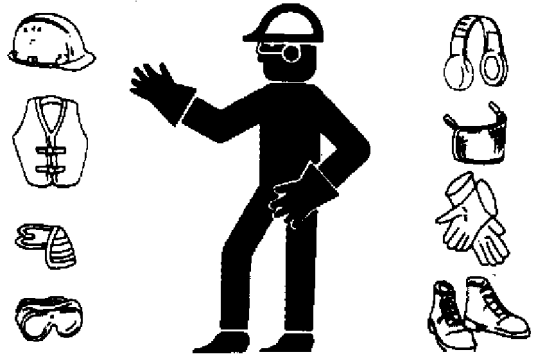

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95



KEEP CLEAR OF FEEDER ELEMENTS

 During operation, always maintain an adequate safety distance to the feeder elements, e.g. pickup, auger, etc. Due to their function, these elements cannot be completely shielded by constructional measures.

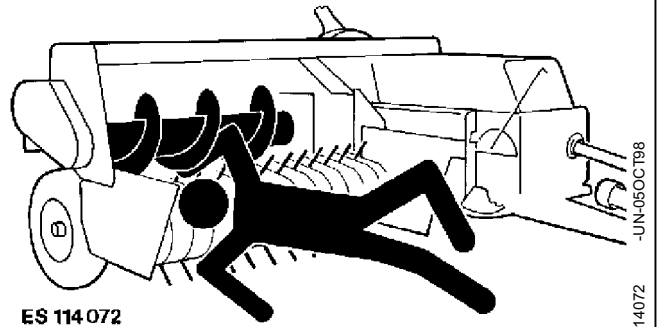

ES 114 072

 
-UN-05OCT98
ES114072

CC,339SQB004288-19-01AUG98

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

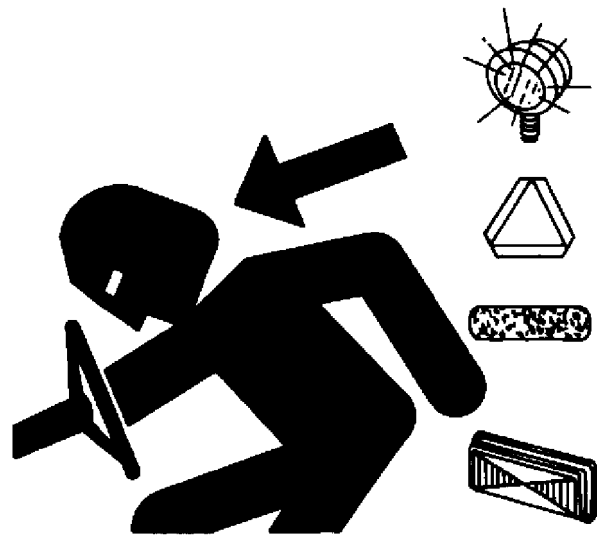

-UN-12APR90
TS951

 
DX,FLASH -19-07JUL99

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

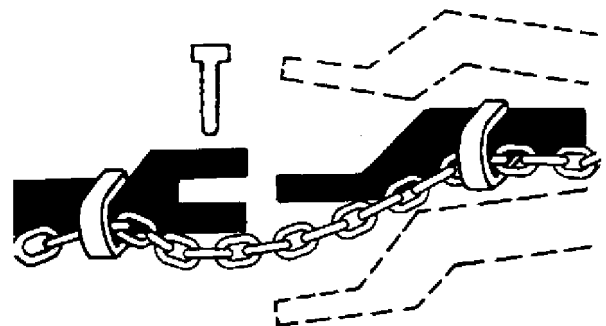

-UN-23AUG88
TS217

DX,CHAIN -19-03MAR93

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>