

SP:12

SPINE1: 350,370,550,570 Spreaders

350, 370, 550 and 570 Manure Spreaders

**John Deere Welland Works
OMW40692 Issue K1
(This manual replaces OMW40657 J0)**

LITHO IN U.S.A.
ENGLISH

Contents

	Page		Page
Safety	1	Recommended Maximum Towing Speed	
		350 Spreader	30
Safety Signs		370 Spreader	31
Safety Decal Location	8	550 Spreader	32
		570 Spreader	33
Preparing The Tractor		Operating The Spreader	
Approved Tractors	15	Preoperating Checks	34
Setting Hydraulic Speed	15	Loading The Spreader	34
Matching PTO Speed 350 Spreader	16	Keep Riders Off Machine	34
Matching PTO Speed 370/550 Spreader	16	Unloading The Spreader	35
Tractor Drawbar Support 570	17	Operating Endpan	36
Using Roll-Over Protection	18	Recommended Spreading Procedure	36
Ballasting Tractor	18	Storing Spreader In Cold Weather	37
Using Lever Lock Clip SGB	18		
Using Lever Lock Clip W/O SGB	18	Attachments	
Removing Quick-Coupler	19	Front Splash Guard 350 Spreader	38
Positioning Drawbar	19	Upper Beater	38
Checking Transmission/Hydraulic Oil		Endpan	38
Level	19	Drawbar Support	38
		Endgate	39
Preparing The Spreader		Selector Valve	39
Lubricate	20	Warning Light Kit	39
Checking Tires	20		
Tighten Wheel Hardware	21	Lubrication and Maintenance	
		Lubricating and Maintaining Spreader	
Controls		Safely	40
Operating		Alternative Lubricants	40
Beater	22	Observing Intervals	40
Endgate	22	Selecting Grease	41
Conveyor	23	Selecting Gear Case Oil	41
Selecting Conveyor Speed	23	Service Intervals	42
Operating Selector Valve	24	Lubricate	
		Driveline	43
Attaching The Spreader		Conveyor Drive	44
Attaching Spreader	25	Beater Drive	45
		Drive Chains	46
Detaching The Spreader		Endgate Arms	47
Detaching Spreader Safely	27	Check Gear Case Oil Level	47
		Checking Tires	48
Transporting		Tighten Wheel Hardware	48
Transporting Spreader	28		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMW40692 K1-19-27SEP91

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Lubricate Tandem Axle 550 and 570 Spreader	49		
Clean and Repack Wheel Bearings	49		
Lubricate Shear Surfaces	50		
Adjust Conveyor	51		
Check Drive Belt	52		
Adjust Drive Belt	52		
Adjust Upper Beater Drive Chain	52		
Adjust Conveyor Drive Shaft Brace	52		
Troubleshooting			
Conveyor	53		
Driveline	54		
Endgate	54		
Beater	55		
Service			
Service Spreader Safely	57		
Keep Service Area Clean	57		
Inch Series Torque Chart	58		
Service Tires Safely	59		
Inflate Tires	60		
Tightening Hydraulic Fittings	60		
Torque Procedure for Fittings	61		
Tightening Flare Type Tube Fittings	62		
Tightening Flare Type Hose Fittings	62		
Tightening Pipe Thread Fittings	63		
Replacing Beater Paddle Teeth	63		
Replacing Drive Belt	64		
Converting RPM Speed 350,370,550	65		
Converting RPM Speed 570	67		
Replace Endgate Seals	68		
Replace Shear Bolts	69		
Conveyor Motor	69		
Conveyor Speed Valve Components	69		
Adjusting Speed Control	70		
Repair Gear Case	71		
Endgate Cylinder Components	72		
Optional Selector Valve Components	73		
Storage			
Storing The Spreader	74		
Removing Spreader From Storage	75		
Crime Prevention			
Assembly			
Prepare Machine for Assembly	78		
Axle Position 550 and 570 Spreader	78		
		Install	
		Axle 550 and 570 Spreader	79
		Wheels	80
		Jackstand and Safety Chain	80
		Conveyor Control Rope	81
		PTO Driveline	84
		Drawbar Support	84
		Splash Guards 350 Spreader	84
		End Pan	85
		Upper Beater Drive Shaft	86
		Upper Beater Washer Location	87
		Assemble Upper Beater	87
		Install Endgate Plates 350 Spreader	91
		Install Endgate Plates 370 and 550 Spreader	91
		Install Endgate Plates 570 Spreader	92
		Install Endgate	92
		Hose Clamp Assembly Instruction	93
		Attach Endgate Hoses 350 Spreader	94
		Attach Endgate Hoses 370 Spreader	94
		Attach Endgate Hoses 550 Spreader	95
		Attach Endgate Hoses 570 Spreader	95
		Install Diverter Valve Tractors/Single SCV	98
		Install Warning Lights	99
		Specifications	
		350 Spreader	103
		Dimensions	104
		370 Spreader	105
		Dimensions	106
		550 Spreader	107
		Dimensions	108
		570 Spreader	109
		Dimensions	110
		Record Serial Number	110
		Index	

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

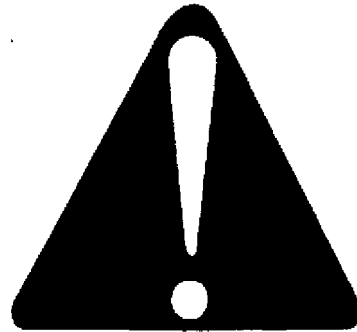

DX,ALERT -19-04JUN90

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

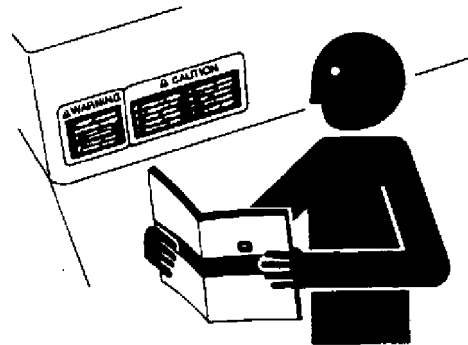

DX,READ -19-04JUN90

TS201 -UN-23AUG88

 


KEEP SHIELDS IN PLACE

Do not operate spreader without safety shields in place.

Rotating parts can crush or dismember causing death or personal injury.

Disconnect PTO driveline and hydraulic lines from tractor before removing shields for adjustment or service.

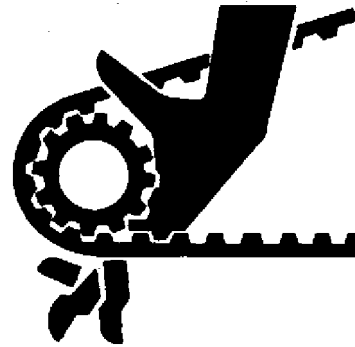


WX,350,SY,1 -19-01JAN90

W14443 -UN-06OCT88

PROTECT BYSTANDERS

Never operate the spreader near people.

 Do not place rocks, timbers or other solid objects in the spreader. Objects can be thrown great distances causing injury to people.

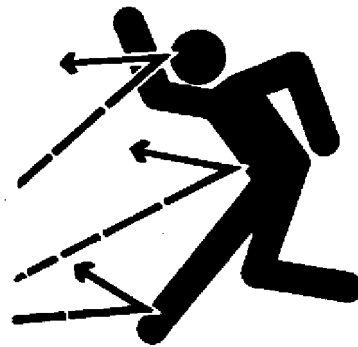

WX,350,SY,2 -19-01JAN90

W14444 -UN-06OCT88

OPERATE SPREADER SAFELY

Rotating parts can entangle or strike people, resulting in death or personal injury.

Never enter a spreader while in operation.

Operate the spreader from the tractor seat only.

Do not exceed load capacity of the spreader. See Transporting section.

Reduce speed when turning or traveling on rough terrain.

Avoid traveling over loose fill, rocks, ditches or holes.

When working on inclines or slopes, travel uphill or downhill. Keep tractor in gear when traveling downhill.



WX,350,SY,3 -19-01JAN90

W14445 -UN-06OCT88

 


PARK SPREADER SAFELY

Park spreader on a level surface and block wheels.

Close endgate.

Secure jackstand with pin.

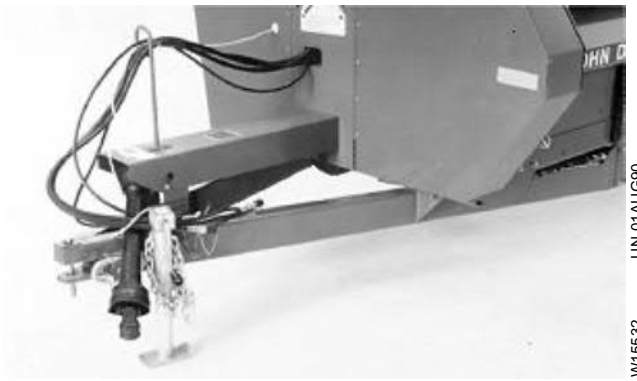

WX,370,SY,1 -19-25JUL90

WI15532 -UN-01AUG90

KEEP RIDERS OFF MACHINE

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.




WX,550,SY,2 -19-19MAR90

WI15321 -UN-04APR90

STAY CLEAR OF RAISED ENDGATE

Contact with a lowering endgate can cause death or personal injury.

 Lower endgate and disconnect hydraulic lines before servicing or adjusting.

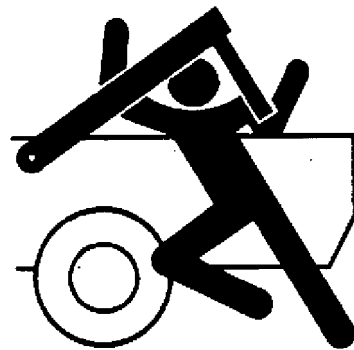

WX,350,SY,6 -19-01JAN90

WI14449 -UN-06OCT88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

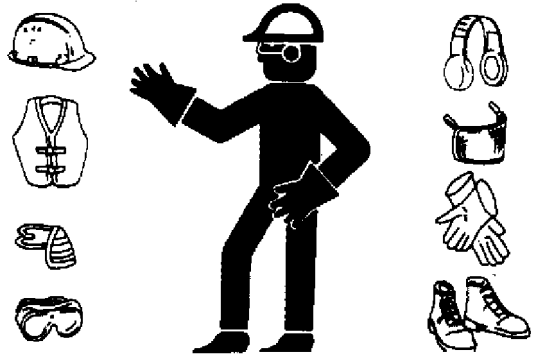

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-04JUN90

TS198 -UN-23AUG88

STAY CLEAR OF ROTATING BEATER

Rotating beater can entangle or strike causing death or personal injury.

Do not clean out or service spreader while beater is rotating.

Disconnect PTO driveline and make sure all parts have stopped rotating before cleaning or servicing.



WX,350,SY,7 -19-02JAN90

W15315 -UN-05FEB90



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

 


USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

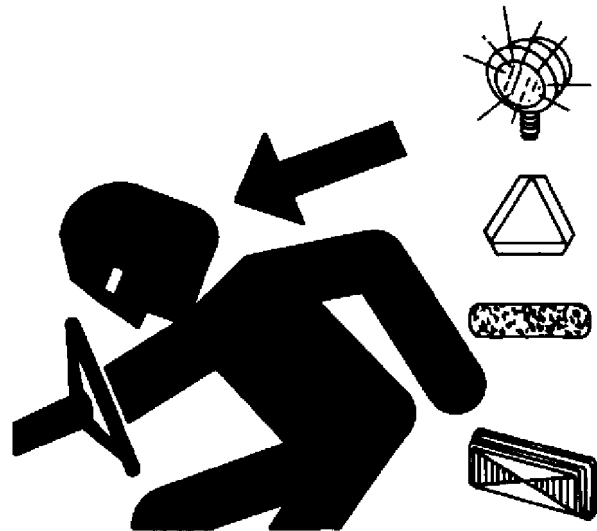

DX,FLASH -19-04JUN90


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

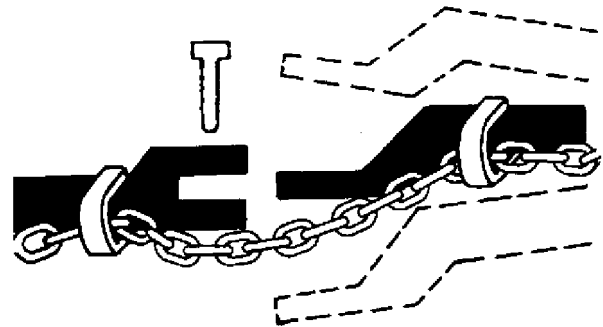

DX,CHAIN -19-04JUN90

TS217 -UN-23AUG88

 


REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing loads equal to or less than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing loads more than equal and up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

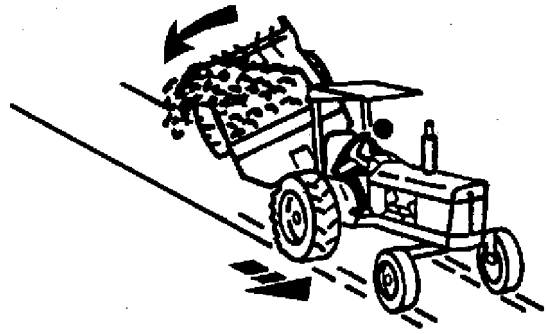

W14447 -UN-06OCT88

WX,570,SY,8 -19-20SEP91

SERVICE SPREADER SAFELY

To help prevent personal injury caused by unexpected movement, be sure to service spreader on level surface.

 
If spreader is connected to tractor, disengage PTO, engage parking brake and/or place transmission in "PARK", shut off engine and remove key.

If spreader is detached from tractor, block wheels and use safety stands to prevent movement.

Replace all shields after lubricating or servicing.



W15322 -UN-04APR90

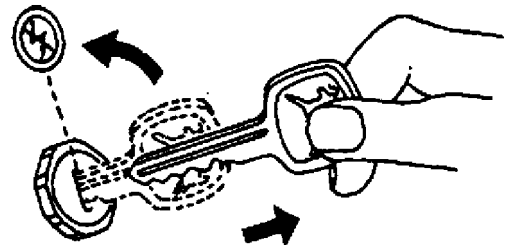

W9765 -UN-24JAN89

WX,550,SY,3 -19-19MAR90

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>