 


410 and 420 Loaders

OPERATORS MANUAL

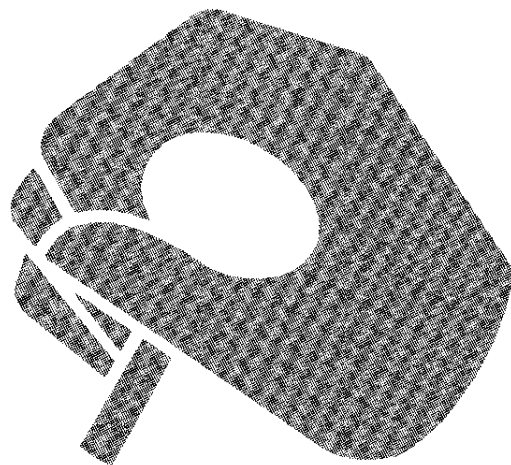

John Deere Welland Works
OMW44978 F8

LITHO IN U.S.A.
ENGLISH

Contents

	Page		Page
Safety	05-1	Using Ballast Box	35-3
Prepare the Tractor		Avoid Rollover Accidents	35-4
Approved Tractors	10-1	DO NOT HANDLE ROUND OR LARGE	
Using Roll-Over Protective Structure (ROPS) ..	10-1	SQUARE BALES	35-4
Keep ROPS Installed Properly	10-2	Using Bucket Level Indicator	35-5
Removing Front Weights	10-2	Leveling and Scraping Forward	35-5
Approved Front Tires	10-3	Leveling in Reverse	35-6
Inflating Front Tires	10-3	Carrying Material	35-6
Setting Front Tread Width	10-4	Removing Material from a Pile	35-6
Checking Front Wheel Hardware	10-4	Loading Operations	35-7
Approved Rear Tires	10-5	Digging	35-8
Selecting Rear Tread	10-6	Backfilling	35-8
Tractor Ballast Requirements	10-7	Attaching and Detaching Attachment	35-9
410 Loader Required Minimum		Attachments	
Ballasting For 4100 Tractor	10-8	Materials Buckets	40-1
420 Loader Required Minimum		Prepare Bucket for Tines	40-1
Ballasting For 4200 Tractor	10-8	Attach Bucket Tines	40-2
420 Loader Required Minimum		Assemble Forklift	40-3
Ballasting For 4300 and 4400 Tractors	10-9	Install Backstops on Forklift	40-4
420 Loader Required Minimum		Ballast Box	40-5
Ballasting For 870 Tractor	10-10	Ballast Box Extension	40-6
Adding Ballast to Rear Wheels	10-10	Bucket Level Indicator	40-7
Adding Ballast to 3-Point Hitch	10-11	Assemble Bucket Level Indicator	40-8
Controls		Install Hood Guard 4100 Tractor	40-9
Operating Control Levers	15-1	Install Hood Guard 4200 Tractor without	
Using Float	15-1	Mower	40-10
Detaching the Loader		Install Hood Guard 4200 Tractor with	
Prepare to Remove Loader	20-1	Mower	40-11
Remove Loader	20-2	Lubrication and Maintenance	
Attaching the Loader		Lubricating and Maintaining Loader Safely	45-1
Prepare to Attach Loader	25-1	Observing Intervals	45-1
Attach Loader	25-2	Selecting Grease	45-2
Check Loader Operation	25-6	Alternative and Synthetic Lubricants	45-2
Transporting		Lubricating Loader	45-3
Carrying Loads	30-1	Checking Transmission/Hydraulic Oil	
Operating the Loader		Level After Every 50 Hours of Use	45-4
Preoperating Checks	35-1	Tighten Mounting Frame Hardware After	
		First 10 and Every 50 Hours of Use 410	
		Loader	45-5

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1998
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Tighten Mounting Frame Hardware After First 10 and Every 50 Hours of Use 420 Loader on 4200, 4300 and 4400 Tractors	45-6	420 Loader Specifications on 4200 Tractor	70-5
Tighten Mounting Frame Hardware After First 10 and Every 50 Hours of Use 420 Loader on 70 Series Tractor	45-6	420 Loader Specifications on 4300 and 4400 Tractors	70-6
Check Front Weight Bracket Hardware 420 Loader on 70 Series Tractors	45-7	420 Loader Specifications on 870 Tractor	70-7
		Record Loader Serial Number	70-8
Troubleshooting		CE Approval Specifications	
Service		Declaration of Conformity	75-1
Servicing Loader Safely	55-1	CE Label	75-1
Keep Service Area Clean	55-2	Decal Locations	75-2
Metric Bolt and Cap Screw Torque Values	55-3	John Deere Service Keeps You On The Job	1
Folding Hood Guard 420 Loader	55-4		
Servicing Tractor	55-5		
Avoid High-Pressure Fluids	55-6		
O-Ring Installation	55-6		
Torque Procedure for Fittings	55-7		
Hose Identification 410 Loader	55-8		
Hose Identification 420 Loader on 4200, 4300 and 4400 Tractors	55-9		
Hose Identification 420 Loader on "70" Series Tractors	55-10		
Replacing Orifice	55-10		
Install 90 Degree Hydraulic Fitting 420 Loader ONLY 70 Series Tractor	55-11		
Check Latch Plate and Locking Lever	55-12		
Storage			
Removing the Loader	60-1		
Lubricating the Loader	60-1		
Storing the Loader	60-2		
Crime Prevention			
Help Prevent Crime	65-1		
Record Identification Numbers	65-1		
Keep Proof of Ownership	65-1		
Park Indoors Out of Sight	65-2		
When Parking Outdoors	65-2		
Reduce Vandalism	65-3		
Report Thefts Immediately	65-3		
Specifications			
Specification Parameters	70-1		
Performance Chart 410 Loader/4100 Tractor . . .	70-1		
Performance Chart 420 Loader/4200 Tractor . . .	70-2		
Performance Chart 420 Loader/4300 and 4400 Tractors	70-2		
Performance Chart 420 Loader/870 Tractor	70-3		
410 Loader Specifications on 4100 Tractor	70-4		

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX.ALERT -19-03MAR93-1/1

T81389 -JUN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



▲ WARNING

▲ CAUTION

DX.SIGNAL -19-03MAR93-1/1

T5187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

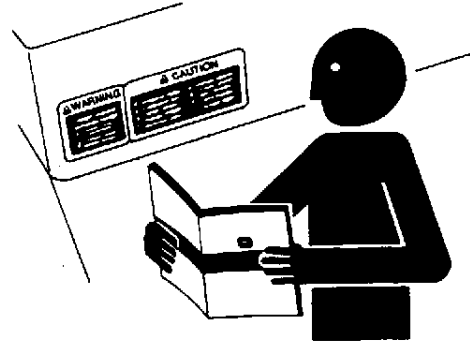

TS201 -UN-23AUG88

DX,READ -19-03MAR93-1/1

 
PROTECT PEOPLE AND ANIMALS

Never allow anyone to walk or work under a raised loader.


Be sure that people, livestock, or pets are not standing near the machine while in operation.

Do not use the loader as a work platform.

Do not lift or carry anyone on loader, in bucket or on any attachment.

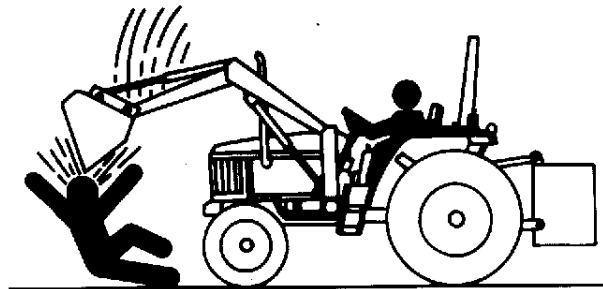

W01140 -UN-12AUG93

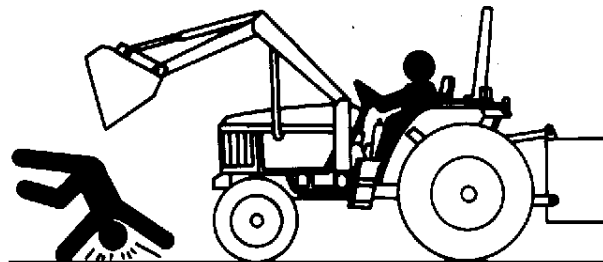 


W01150 -UN-12AUG93

WX,440,SY,5 -19-23AUG93-1/1

HELP PREVENT ROLL-OVERS

Install required rear ballast on tractor for stability.

 Use widest rear wheel tread setting (A) to maximize stability.

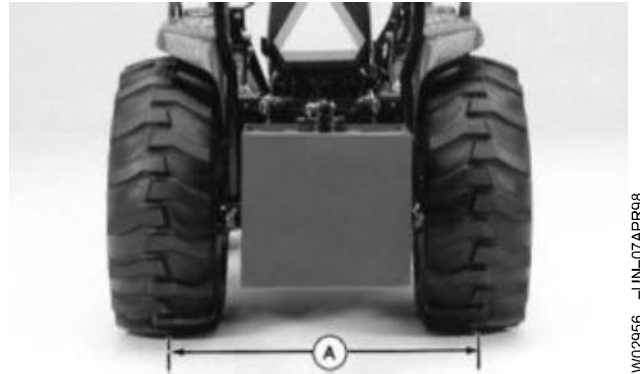


WX,05,WX43 -19-15DEC97-1/1

W02956 -UN-07APR98

AVOID INJURY OR DEATH FROM ROLLOVER ACCIDENTS

To help prevent rollovers:

 - Be careful when operating on a slope.
- Avoid holes, ditches and obstructions which may cause tractor and loader to tip over.
- Balance loads so weight is evenly distributed and load is stable.
- Carry loads close to the ground to aid visibility and lower center of gravity.
- Know capacity of loader. Do not overload.
- Reduce speed before turning. Avoid sharp turns.

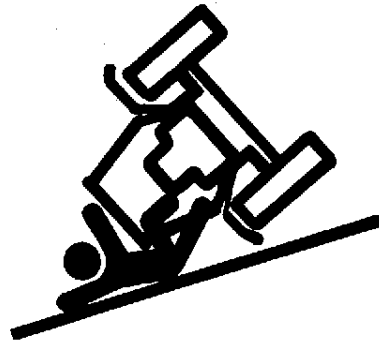

WX,520,SY,2 -19-21FEB92-1/1


RW13093 -UN-07DEC88

AVOID POWER LINES

Serious injury or death can result if tractor or loader contacts electrical lines.

Check lift height clearance before raising loader.

 Do not leave the operator's seat if any part of tractor or loader contacts lines.

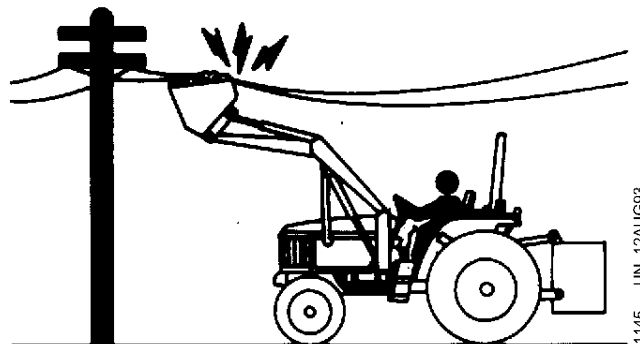

WX,440,SY,6 -19-23AUG93-1/1

W01145 -UN-12AUG93



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

 
If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

DIG SAFELY

Before digging, check for location of underground cables, gas lines and water mains.

Do not leave the operator's seat if any part of tractor or loader contacts lines.

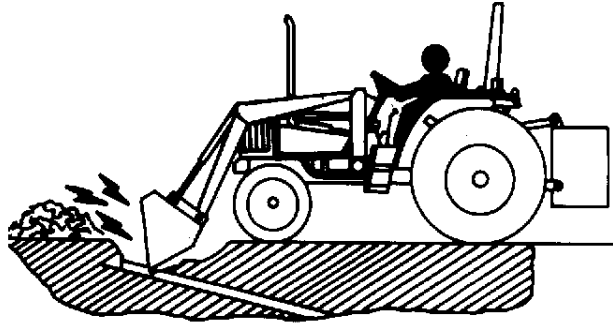

W01149 -UN-12AUG93

WX,440,SY,7 -19-23AUG93-1/1

DETACH LOADER SAFELY

Detach loader on a hard level surface.

Before disconnecting hydraulic hoses relieve all hydraulic pressure.



 
W14000 -UN-05OCT88

WX,80,SY,I -19-30MAY89-1/1

KEEP RIDERS OFF MACHINE

Only allow the operator on the tractor. Keep all riders off.

Riders on tractor or machine are subject to injury such as being struck by foreign objects and/or being thrown off. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

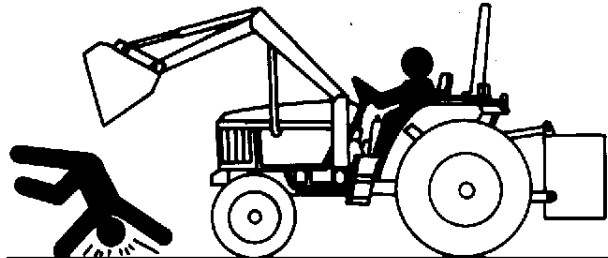

W01150 -UN-12AUG93

 
WX,440,SY,2 -19-23AUG93-1/1

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

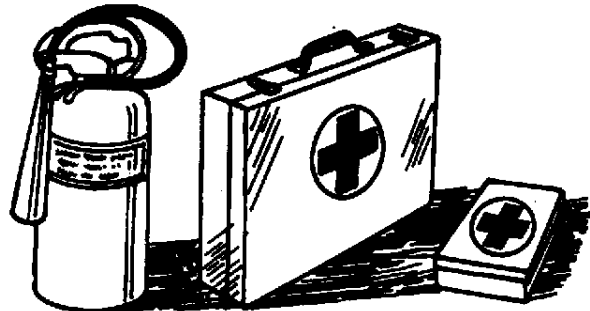


TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

 Do not use a seat belt if operating without a ROPS or cab.

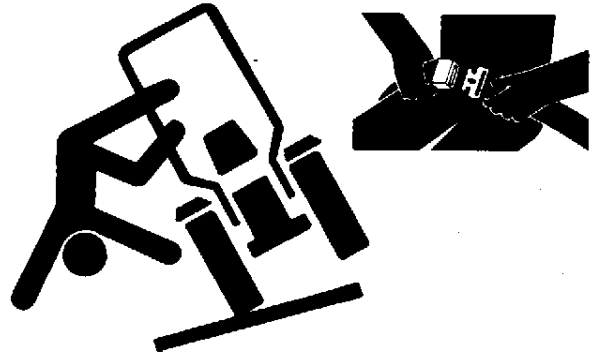

DX,ROPS1 -19-03MAR93-1/1

TS205 -UN-23AUG88

CARRY MATERIALS SAFELY

Be sure anyone operating the loader is aware of safe operation and potential hazards.

Refer to the tractor Operator's Manual for safe operational practices.

Do not exceed lift capacity of loader.

Be sure tractor is ballasted correctly.

Carry load low at all times.

If tractor is equipped with 4-WD, be sure it is engaged during loader operation.

Stop loader gradually when lowering or lifting loads.

 
 
To help prevent loss of control, do not use "FLOAT" position to lower loader.

DO NOT HANDLE ROUND OR LARGE SQUARE BALES, the loader is not approved for bale handling attachments.

Avoid handling loose or shiftable loads.

Reduce tractor ground speed when traveling over rough ground or when making turns.

Drive slowly through gates and doors.

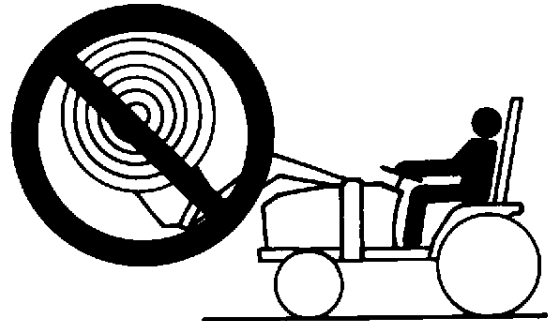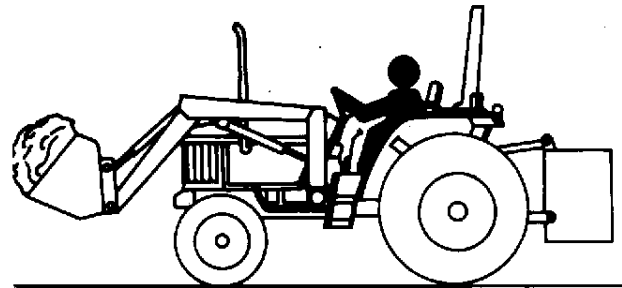

WX,05,WX44 -19-15DEC97-1/1

W01146 -UN-12AUG93

W02502 -UN-17SEP97

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>