

# 425 OFFSET DISK HARROW

 


## OPERATORS MANUAL 425 OFFSET DISK HARROW

OMW21469 H9 English

WELLAND WORKS  
OMW21469 H9

LITHO IN THE U.S.A.  
ENGLISH





# To The Operator


---

**⚠** This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

"Right" and "left-hand" sides are determined by facing in the direction of forward travel.

Record your disk model and serial number in the space provided on page 62. Your dealer needs this important information to give you prompt, efficient service.

This operator's manual contains SI metric equivalents which follow immediately after the U.S. customary units of measure.

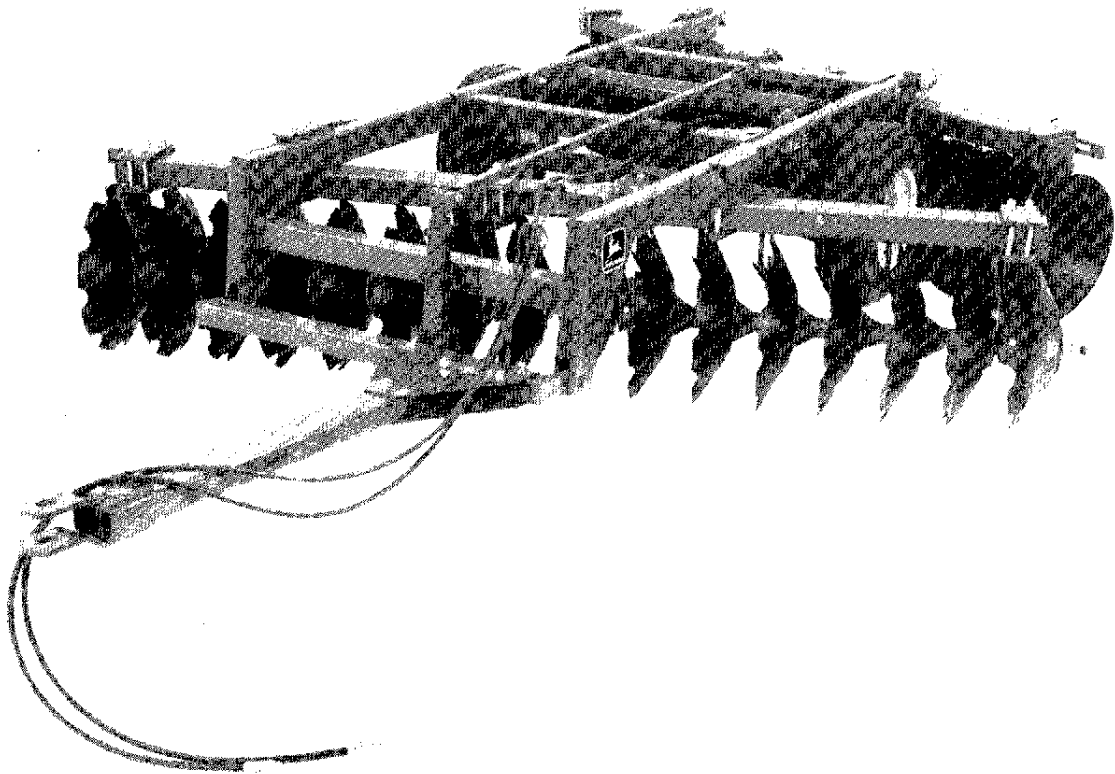



# Contents

	Page		Page
SAFETY.....	2-6	OPERATION—Continued	
PREPARING THE TRACTOR.....	7-10	Adjusting Disking Depth.....	32
Tractor Size.....	7	Adjusting Scrapers.....	33
Tire Pressure.....	7	Filling Furrows.....	33
Ballast.....	7	Lateral Gang Adjustment.....	34
Wheel Tread.....	7	Detaching Disk from Tractor.....	34
Rockshaft Control Lever.....	8	STORAGE.....	35
Hydraulics.....	9	LUBRICATION.....	36
Brakes.....	9	SERVICE.....	37-42
Drawbar.....	10	General.....	37
PREPARING THE DISK.....	11-13	Bolt Torque.....	37
Lubrication.....	11	Disk Gangs.....	37
Hardware.....	11	Gang Bearings.....	38
Tire Inflation.....	11	Tire Inflation.....	38
Hydraulics.....	11	Disk Blade Failures.....	39
Drawbar.....	12	THROUBLE SHOOTING.....	43-45
Initial Settings.....	13	ATTACHMENTS.....	46-48
ATTACHING THE DISK.....	14-15	Furrow Filler.....	46
Positioning Drawbar.....	14	Furrow Filler Disk Scraper.....	46
Attaching Disk to Tractor.....	15	Gang Wrenches.....	47
CONTROLS.....	16-17	Hydraulic Hitch.....	47
Remote Cylinder Control Lever.....	16	Disk Blades.....	48
Remote Cylinder Operating Speed.....	17	Scrapers and Bearings.....	48
TRANSPORTING.....	18-21	Wheels and Tires.....	48
Leveling Disk for Transport.....	18	SMV Emblem.....	48
Setting Transport Link.....	18	Accessory Lights and Devices.....	48
Brakes.....	19	ASSEMBLY.....	49-59
Disk Width.....	19	Main Frame.....	49
Remote Cylinder.....	20	Attaching Axle.....	50
Tire Inflation.....	20	Attaching Wheels and Lift Bar.....	50
Angling Hitch for Transport.....	20	Hitch.....	51
Drawbar.....	21	Assembling Gangs.....	51
OPERATION.....	22-34	Installing Risers.....	54
Before Operating the Disk.....	22	Attaching Disk Gangs to Frame.....	56
Removing the Disk from Transport.....	22	Attaching Scrapers.....	59
Sequence of Field Adjustments.....	23	SPECIFICATIONS.....	60-61
Leveling the Disk.....	24	SERIAL NUMBER.....	62
Adjusting the Hitch.....	26		
Correcting Side Draft.....	28		
Correcting Uneven Gang Penetration.....	30		

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


**<https://www.ebooklibonline.com>**



# Safety

## BEFORE OPERATING

1. Be sure no one is near tractor or disk.
2. Become familiar with all disk and tractor controls.
3. Check condition of hydraulic hoses and connections.

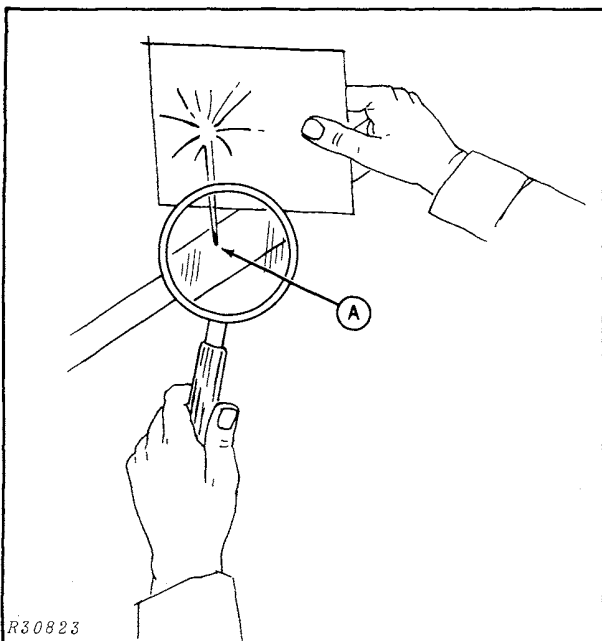

**CAUTION:** Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious personal injury. Before disconnecting lines, be sure to relieve all pressure. Before applying pressure to the system, be sure all connections are tight and that lines, pipes and hoses are not damaged. Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood rather than your hands to search for suspected leaks.

If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

A - Pin Hole Leak

4. Check hardware condition.
5. Remove foreign objects from disk and tractor.
6. Inflate tires as specified on page 38.



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**


## OPERATING

**⚠ CAUTION: Improper use of disk can cause serious injury.**

1. Be sure no one is near tractor or disk.
2. Do not allow riders on tractor or disk.
3. Drive slowly through gates and doors.
4. Reduce tractor speed when turning.
5. Avoid working over holes, ditches or other irregularities.
6. Use extreme caution when working on hillsides.
7. Always park disk on flat level ground.
8. Lower disk blades onto ground when leaving tractor and disk unattended.

If your tractor is equipped with a ROLL-GARD®, use the seat belt under almost all operating conditions.

Use of seat belt is not recommended for tractors without a rollover protective device.

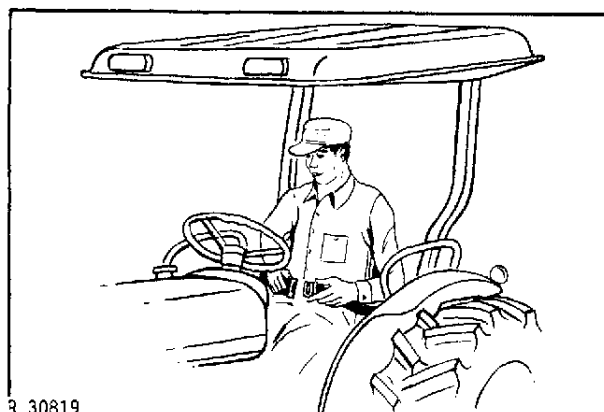


R 30819

## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

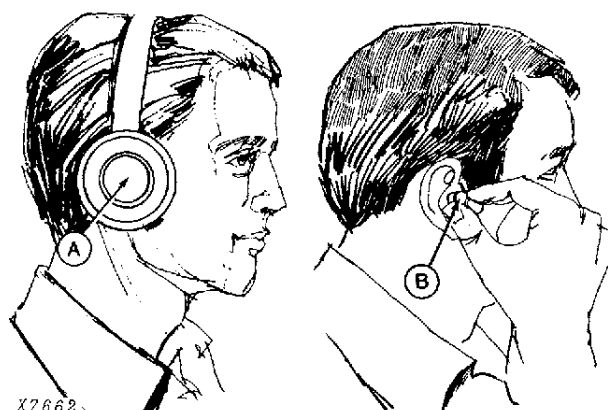

A - Earmuffs  
B - Ear Plugs

X7662