

# **466 and 566 Round Balers**

(Serial No. 114001- )

**John Deere Ottumwa Works**  
**OME92593 Issue L7**  
**(This manual replaces OME86581 H6)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



*John Deere 466 Round Baler*

-UN-28MAY96

E40014

EX.566,IFC -19-28MAY96

# Contents

	Page		Page
<b>Safety</b> .....	05-1	<b>Preparing Baler for Net Wrap</b>	
<b>Safety Signs</b> .....	10-1	Selecting Net Wrap Material .....	25-1
<b>Preparing the Tractor</b>		Care of Net Wrap Material .....	25-1
Adjusting the Drawbar .....	15-1	Additional Net Wrap Storage .....	25-1
Using Heavy-Duty Tractor Drawbar .....	15-2	Opening and Closing Net Wrap Cover .....	25-2
Using Drawbar Shield .....	15-3	Using Net Wrap After Extended Storage .....	25-2
Making Drawbar Shield .....	15-3	Manually Releasing Net Wrap Brake .....	25-7
Three-Point Hitch Position .....	15-3	Threading Net Wrap and Routing Through Rolls .....	25-8
Adjusting Tractor Wheels .....	15-4	<b>Attaching and Detaching</b>	
Checking Ballast, Wheel Spacing and Tire Inflation .....	15-4	Attaching Baler to Tractor Drawbar .....	30-1
Setting Tractor Hydraulic Outlets .....	15-5	PTO Driveline Assembling (If Necessary) .....	30-2
Tractor Convenience Outlet .....	15-5	Connecting .....	30-3
Installing BaleTrak® PLUS Monitor-Controller on Tractor		Attaching to Tractor Hydraulic System .....	30-4
Open-Station .....	15-7	Using Tractor Convenience Outlet .....	30-6
ComfortGard™ Cab .....	15-7	Connecting Baler Wiring Harness to Tractor .....	30-6
SOUND-GARD® Cab .....	15-8	Connecting Warning Light Wiring Harness to Tractor .....	30-7
Using Extended Rear-View Mirror .....	15-9	Detaching Baler from Tractor .....	30-8
<b>Preparing the Baler</b>		<b>Transporting</b> .....	35-1
Checking Oversize Bale Switch .....	20-1	<b>Handling Round Bales</b> .....	40-1
Selecting Twine .....	20-1	<b>Operating the Baler</b>	
Loading Twine Boxes .....	20-2	How the Baler Forms a Bale .....	45-1
Routing Twine from Left-Hand Twine Box (Front Arm) .....	20-3	Crop Preparation .....	45-2
Routing Twine from Right-Hand Twine Box (Rear Arm) .....	20-6	Breaking In Baler .....	45-2
Wheel Spindle Positions 11L-14 Tires		Keep Riders Off Machine .....	45-3
Regular or Mega Pickup .....	20-9	Rotating Output Shaft By Hand .....	45-3
Wide Pickup (466) .....	20-10	BaleTrak® PLUS Monitor-Controller	
Wheel Spindle Positions 31 x 13.5-15 Tires		Introduction .....	45-4
Regular or Mega Pickup .....	20-11	Description .....	45-5
Wide Pickup (466) .....	20-12	Keys and Switches .....	45-6
Adjusting Wheel Spindles .....	20-12	Displays and Indicators .....	45-7
Tire Inflation .....	20-13	Setup Values and Initial Settings .....	45-8
Checking Wheel Nut Torque .....	20-13		

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OME92593 L7-19-20DEC97

COPYRIGHT© 1997  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page		Page
<i>BaleTrak® PLUS Monitor-Controller—Continued</i>			
Diagnostic and Setup Modes . . . . .	45-9	Checking Baler Performance in the Field . . .	45-46
Diagnostic and Setup Channels . . . . .	45-10	Locking the Gate . . . . .	45-47
Operating . . . . .	45-11	Unplugging Baler With Hydraulic Pickup	
Resetting to Initial Settings (Channel		Lift (If Equipped) . . . . .	45-48
01) . . . . .	45-12	Unplugging Baler Under Power . . . . .	45-49
Activating Alarms . . . . .	45-13	Compressor Rack Assembly	
Adjusting Audible Alarm Volume . . . . .	45-13	Removing . . . . .	45-50
Setting Bale Diameter . . . . .	45-14	Installing . . . . .	45-51
Adjusting Bale Diameter Display . . . . .	45-15	Adjusting (Regular/Mega Pickup) . . . . .	45-52
Understanding Variable Core Feature . . . . .	45-16	Adjusting Channel (Mega Pickup) . . . . .	45-53
Adjusting Variable Core Diameter . . . . .	45-17	Setting Pickup Feeder Forks (Wide	
Understanding Twine Wrap Terms and		Pickup—466) . . . . .	45-53
Settings . . . . .	45-19	Starting a Bale in Difficult Conditions . . . . .	45-54
Setting Twine Spacing . . . . .	45-21	Baling	
Setting Number of Twine End Wraps . . . . .	45-22	Short, Dry, Slick Crops . . . . .	45-55
Setting Twine End Wrap Distance . . . . .	45-23	Cornstalks . . . . .	45-56
Setting Number of Net Wraps (If		Long, Stiff, Cane-Type Crops . . . . .	45-57
Equipped) . . . . .	45-25	Wet Hay . . . . .	45-58
Recommended Baling Guidelines . . . . .	45-26	Fire Prevention . . . . .	45-59
Interpreting Bale Shape Indicators . . . . .	45-27	Extinguishing a Fire . . . . .	45-59
Weaving in the Windrow . . . . .	45-29	Bale Push Bar (If Equipped)	
Viewing and Resetting Bale Counters . . . . .	45-30	Operation . . . . .	45-60
Using Manual Actuator, Wrap, and		Operating . . . . .	45-61
By-Pass Switches . . . . .	45-31	Locking Out . . . . .	45-63
Using By-Pass Switch (Twine Wrap) . . . . .	45-32	Engaging . . . . .	45-64
Advanced Operational Information		<b>Attachments</b> . . . . .	50-1
Using Dry Straw Twine Wrap Program		<b>Lubrication and Maintenance</b>	
(Channel 17) . . . . .	45-33	Grease . . . . .	55-1
Setting Bale Shape Sensitivity (Channel		Gear Case Oil . . . . .	55-1
24) . . . . .	45-34	Alternative and Synthetic Lubricants . . . . .	55-2
Setting Near-Full Indicator Set Point		Observe Lubrication Symbols . . . . .	55-2
(Channel 25) . . . . .	45-35	Perform Lubrication and Maintenance . . . . .	55-3
Adjusting New Wrap Delay (Channel		Fire Prevention . . . . .	55-3
26) . . . . .	45-36	Lubrication and Maintenance	
Adjusting Bale Shape Bars (Channel		Every 10 Hours . . . . .	55-4
28) . . . . .	45-37	Every 30 Hours . . . . .	55-8
Changing Monitor-Controller Display to		Every 50 Hours . . . . .	55-10
Metric or English Units . . . . .	45-38	Every 100 Hours . . . . .	55-11
Changing Baler Model Program . . . . .	45-39	Annually . . . . .	55-11
Bale Density Gauge . . . . .	45-40	<b>Troubleshooting</b>	
Adjusting		PTO Driveline Difficulties . . . . .	60-1
Bale Density . . . . .	45-41	Main Drive Slip-Clutch Difficulties . . . . .	60-2
Twine Tension . . . . .	45-41	Drive Chain Difficulties . . . . .	60-2
Pickup Height . . . . .	45-43	Gear Case Difficulties . . . . .	60-3
Gauge Wheels—Regular or Mega		Diagnosing Hydraulic Functions . . . . .	60-4
Pickup . . . . .	45-44	Automatic Twine Wrap . . . . .	60-7
Gauge Wheels—Wide Pickup (466) . . . . .	45-45		
Gathering Wheel Height . . . . .	45-45		

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
BaleTrak® PLUS Monitor-Controller		Adjusting	
Difficulties . . . . .	60-15	Take-Up Arm Compression Spring . . . . .	65-28
Feeding Difficulties . . . . .	60-26	Twine Indicator Retaining Strap . . . . .	65-29
Pickup Difficulties . . . . .	60-29	Twine Cutter Tension . . . . .	65-30
Bale Quality . . . . .	60-33	Cutter Link Support and Twine Arm	
General Baler Difficulties . . . . .	60-35	Clearance . . . . .	65-33
Push Bar Difficulties . . . . .	60-41	Twine Arm Distance from Right	
High-Moisture Kit Difficulties . . . . .	60-43	Sidesheet (466) . . . . .	65-34
Net Wrap Difficulties . . . . .	60-45	Front Twine Arm . . . . .	65-35
		Twine Cutter to Twine Arm . . . . .	65-36
<b>Service—Baler</b>		Twine Arm Timing (566) . . . . .	65-37
Practice Safe Service Procedures . . . . .	65-1	Checking Knife Adjustment . . . . .	65-38
Fire Prevention . . . . .	65-2	Twine Electric Actuator Installation	
Keep Service Area Clean . . . . .	65-3	Adjustment . . . . .	65-39
Service Tires Safely . . . . .	65-4	Adjusting Twine Arm to Starter Roll and	
BaleTrak® PLUS Component Locations . . . . .	65-5	Twine Arm Stop . . . . .	65-43
Wiring Diagrams		Adjusting Pickup Float Springs	
BaleTrak® PLUS Control System . . . . .	65-6	Regular Pickup . . . . .	65-48
Warning Light . . . . .	65-7	Mega Pickup . . . . .	65-49
Replacing Monitor Fuses and Relays . . . . .	65-8	Wide Pickup (466) . . . . .	65-50
Hydraulic System Diagram . . . . .	65-10	Adjusting Pickup Lift Crank Stop Nuts	
Installing Orifice in Tractors With Low		(Wide Pickup—466) . . . . .	65-51
Hydraulic Flow . . . . .	65-11	Hydraulic Pickup Lift Cylinder Dimension . . . . .	65-52
Pickup Idler Spring Dimension (Regular		Checking Pickup Tooth End Play . . . . .	65-53
Pickup) . . . . .	65-13	Adjusting Gate Latch Stop . . . . .	65-54
Adjusting		Adjusting Gate Latch Linkage . . . . .	65-54
Pickup Belt Idler (Regular Pickup) . . . . .	65-14	Replacing Sensors	
Pickup Drive Chain—Mega Pickup . . . . .	65-15	Twine Wrap . . . . .	65-55
Pickup Chains—Wide Pickup (466) . . . . .	65-15	Bale Diameter . . . . .	65-55
Lower Drive Roll Chain . . . . .	65-16	Bale Shape . . . . .	65-56
Upper Drive Roll Chain . . . . .	65-16	Adjusting	
Servicing Upper Chain and Idler . . . . .	65-17	Twine Wrap Sensor (Channel 03—With	
Replacing Chain Idler Bushing . . . . .	65-17	Sound) . . . . .	65-56
Main Drive Slip-Clutch		Bale Diameter Sensor (Channel	
Adjusting . . . . .	65-18	05—With Sound) . . . . .	65-59
Slipping . . . . .	65-19	Bale Shape Bar Display (Channels 07	
Checking Pickup Slip-Clutch Torque		and 09) . . . . .	65-60
(Mega or Wide—466 Pickup) . . . . .	65-20	Bale Shape Sensor (Channels 07 and	
Belt Tracking		09—With Sound) . . . . .	65-61
Checking . . . . .	65-23	Testing Switches	
Adjusting . . . . .	65-24	Gate Latch and Oversize Bale	
Adjusting Scraper(s)		Switches (Channels 11-12-13) . . . . .	65-62
Lower Feed Roll . . . . .	65-26	Twine Wrap Actuator Current (Channel	
Starter Roll (If Equipped) . . . . .	65-27	14) . . . . .	65-63
Idler Roll (High-Moisture Kit) . . . . .	65-27	Tractor Convenience Outlet Voltage	
Auger Scrapers (Wide Pickup—466) . . . . .	65-28	(Channel 15) . . . . .	65-64
		Liquid Crystal Display (LCD) Panel	
		(Channel 16) . . . . .	65-65

Continued on next page

Contents


	Page		Page
Adjusting Switches		Bolt and Cap Screw Torque Value Charts	
Oversize Bale . . . . .	65-66	Metric . . . . .	80-7
Gate Latch . . . . .	65-67	Inch . . . . .	80-8
Checking Microswitches . . . . .	65-67	<b>Crime Prevention Tips . . . . .</b>	<b>85-1</b>
Raising Gate With Hoist . . . . .	65-68	<b>Index</b>	
Checking Belt Pins . . . . .	65-68		
Correct Belt Lacing and Pin Installation . . . . .	65-69		
Incorrect Belt Lacing and Pin Installation . . . . .	65-70		
Installing Belts . . . . .	65-71		
Repairing Belts . . . . .	65-72		
Belts Not Eligible for Warranty			
Replacement . . . . .	65-78		
<b>Service—Net Wrap</b>			
Practice Safe Service Procedures . . . . .	70-1		
Releasing Feed Roll Brake . . . . .	70-2		
Correcting Net Wrap Feeding Problems . . . . .	70-3		
Repairing Cuts On Feed Roll . . . . .	70-6		
Brake Bar Tension			
Decreasing . . . . .	70-7		
Increasing . . . . .	70-8		
Adjusting Knife Arm Stop . . . . .	70-9		
Checking Feed Roll Brake . . . . .	70-12		
Adjusting Feed Roll Pressure . . . . .	70-14		
Net Wrap Switch			
Testing (Channel 10) . . . . .	70-15		
Adjusting . . . . .	70-16		
Checking Cutoff Indicator Channel Travel . . . . .	70-19		
Knife			
Removing and Installing . . . . .	70-21		
Sharpening . . . . .	70-24		
Actuator			
Removing . . . . .	70-24		
Installing . . . . .	70-26		
Removing and Installing Net Wrap V-Belt . . . . .	70-29		
Net Wrap V-Belt Idler Arm			
Removing and Installing . . . . .	70-30		
Checking Adjustment . . . . .	70-30		
Adjusting Net Wrap Roll Support Brackets . . . . .	70-32		
Checking and Adjusting Lower Net Wrap			
Guide . . . . .	70-33		
<b>Storage . . . . .</b>	<b>75-1</b>		
<b>Specifications</b>			
Machine Specifications			
BaleTrak® PLUS Monitor-Controller . . . . .	80-1		
466 Baler . . . . .	80-2		
566 Baler . . . . .	80-4		
Record Product Identification Numbers . . . . .	80-6		

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

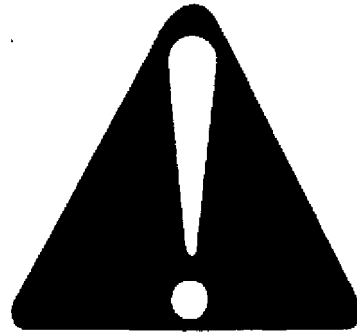

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

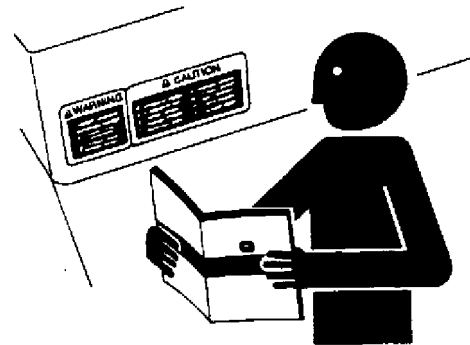


DX,READ -19-03MAR93

TS201 -UN-23AUG88



## PROTECT BYSTANDERS

To prevent crushing injury be sure bystanders stand clear before operating gate and unloading bale.

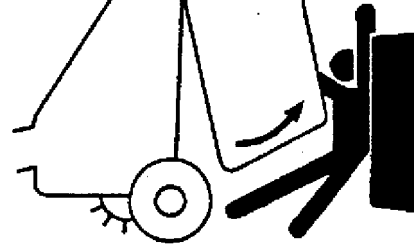


EX,435C,A -19-01SEP88

E32162 -UN-12SEP88

## OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:

- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO and shut off engine.
- Stand clear of baler at all times when machine is operating.

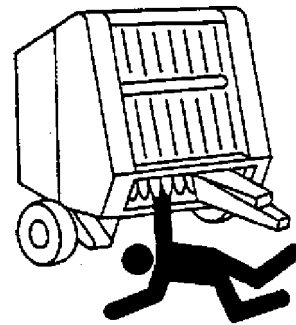


EX,435C,B -19-01SEP88

E32161 -UN-12SEP88

## OPERATE SAFELY ON SLOPES

Be especially careful when operating on hillsides. The baler may tip sideways if it strikes a hole, ditch, or other irregularity.

To prevent injury or damage from a rolling bale, discharge bales on level ground or in such a manner that the bale will not roll.

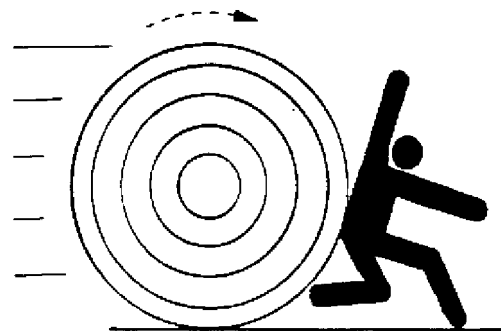

EX,435C,C -19-14JUL92

E36866 -UN-30APR92




## HANDLE ROUND BALES SAFELY

To help prevent personal injury, do not handle round bales without approved John Deere Round Bale Handling attachments.

Improper use of loaders to handle round bales can result in serious injury or death to the tractor/loader operator. This could be caused by the bale rolling back down the loader into the operator's station.

To attain optimum stability and visibility:

- Do not handle bales that exceed the bale weight limitations of the loader.
- Carry the bale slowly and as low as possible to the ground.
- Operate the loader controls smoothly, avoiding jerky operation.
- When handling round bales on a slope, always approach the bale with the tractor facing uphill.
- Never use the tractor/loader to stop a rolling bale.

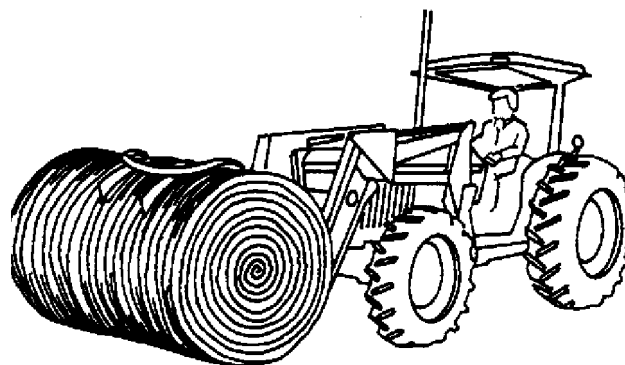

-UN-06OCT88

W7718

EX,435C,D -19-01SEP88

## KEEP RIDERS OFF MACHINE

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



-UN-23AUG88

TS249

EX,945IC,H -19-13FEB97



## PREPARE FOR EMERGENCIES


Be prepared if a fire starts.

1. Eject bale immediately.
2. Move tractor and baler upwind 9 m (30 ft) away from flammable material.
3. Raise gate and engage gate lock valve.
4. Use fire extinguisher or other water supply to put out fire.

- A 9.5 L (2-1/2 gal) pressurized-water fire extinguisher is recommended. See manufacturer's recommendation for inspection and maintenance.

Keep first aid kit handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

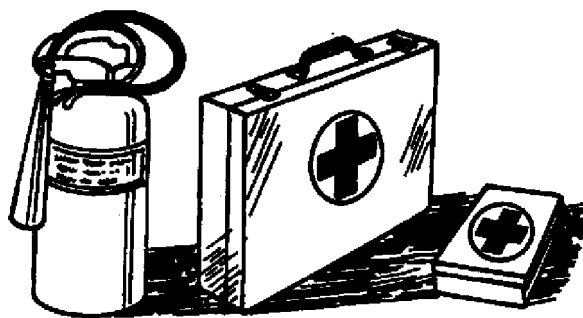

-UN-23AUG68

TS291

EX,435C,J -19-25OCT96



## FIRE PREVENTION

To reduce the risk of fire, follow these guidelines, especially in dry crop conditions:

- Equip the baler with a water-type fire extinguisher. Large capacity water fire extinguishers are recommended because application of water can cool hot parts to prevent a fire. (See Attachments section.)
- Keep foreign material (crop, chaff, twine, net wrap material, etc.) from building up on the machine near potentially hot areas, such as bearings on ends of baler rolls and slip clutch. Remove this buildup as part of the regular service operations.
- Avoid high pressure power-washing adjacent to the bearings on ends of baler rolls to prevent damaging seals.
- Check bearings on ends of baler rolls regularly for early signs of failure replace as necessary. (See Lubrication and Maintenance section or see your John Deere dealer.)
- If noticeable changes in machine performance occur which might indicate a part is beginning to fail, stop baling immediately and investigate the cause of any sounds, smells, or sights which are unusual.
- Promptly eject bales after they have been tied or wrapped. Do not use the baler to transport bales from the field. Do not bring a baler, with a bale inside it, into a building. Never leave a baler unattended with a bale inside the chamber.
- Use extreme care if it is necessary to park a baler in a field of dry crop or stubble. Whenever possible, park baler on bare ground or in an area surrounded by bare ground. Before leaving a baler which has been operating, verify there are no areas which are hot enough to start a fire. Do not leave the baler unattended near bales which have been baled wet, because spontaneous combustion can occur.
- If service operations require using a welder, cutting torch or grinder on the baler, refer to Fire Prevention in Service—Baler section for guidelines which may prove useful in preventing a fire.
- Use extreme care when smoking around the baler.





## IN CASE OF FIRE

Stop baling immediately at the first sign of trouble. This may be a scorched smell, an unusual sound, or the sight of smoke or flame.

**Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.**

If you can safely extinguish the fire, proceed carefully and follow these guidelines:

- Position the tractor upwind from the baler to avoid the fire from overtaking the tractor.
- Open the baler gate to eject any crop material from the bale chamber, and drive away from this material.
- Use a fire extinguisher or other source to spray water at the base of the flame, and to cool adjacent parts. Do not position yourself under an open baler gate. It may fall if baler is on fire.



EX,566C,O -19-05SEP97

TS227 -UN-23AUG88


## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

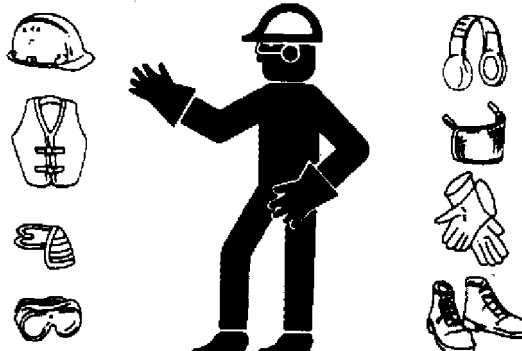

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88




## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

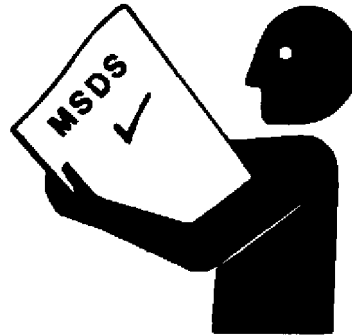

DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95


TS1644 -UN-22AUG95



## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

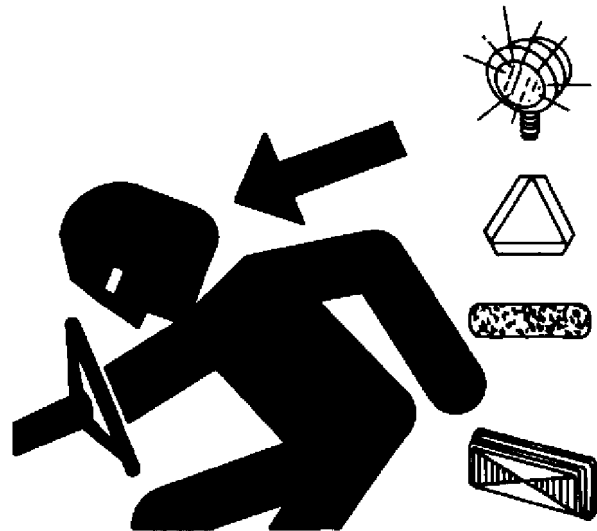

DX,FLASH -19-12SEP95


TSS951 -UN-12APR90

## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

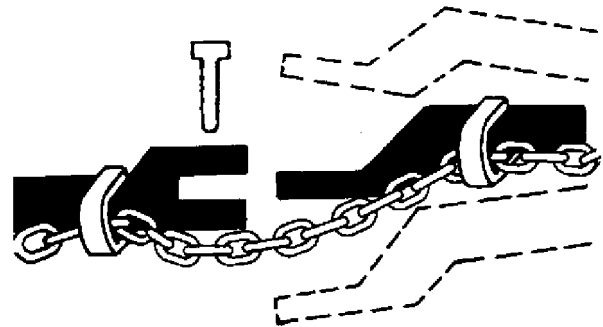

DX,CHAIN -19-03MAR93

TSS217 -UN-23AUG88




## TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

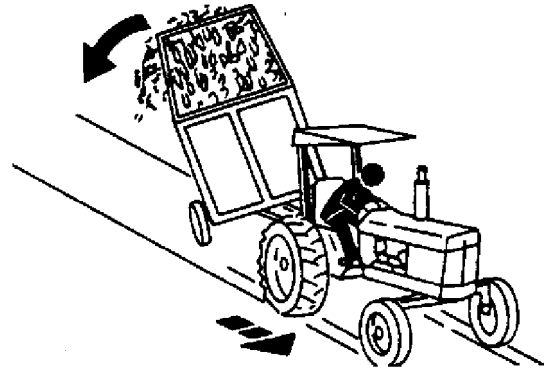

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

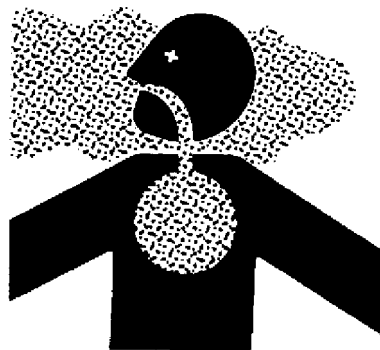

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90


## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

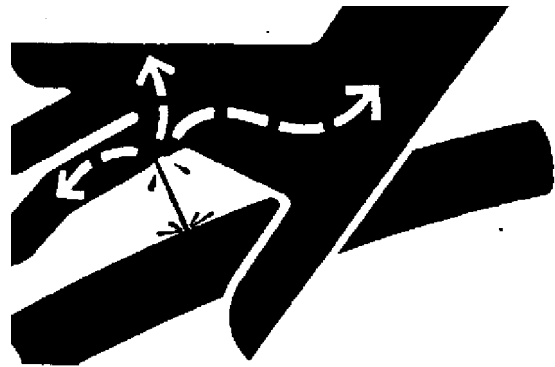

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88



## DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

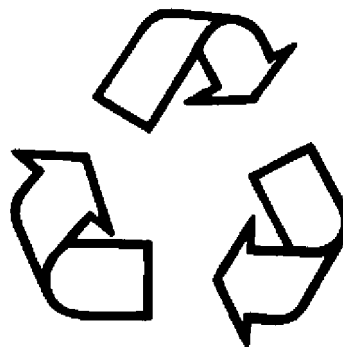

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**