

# 467 BALER



JOHN DEERE

## OPERATORS MANUAL

467  
BALER


OME66569 D4 English

JOHN DEERE OTTUMWA WORKS  
OME66569 D4

LITHO IN THE U.S.A.  
ENGLISH



## INTRODUCTION

 
 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Measurements are shown with their respective Metric equivalents throughout this operator's manual. These equivalents are the SI (International System) Units of Measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction the baler will travel when in use.

Your warranty appears on your copy of the purchase order copy which you should have received from your dealer.

Record your baler model and serial numbers on page 106.

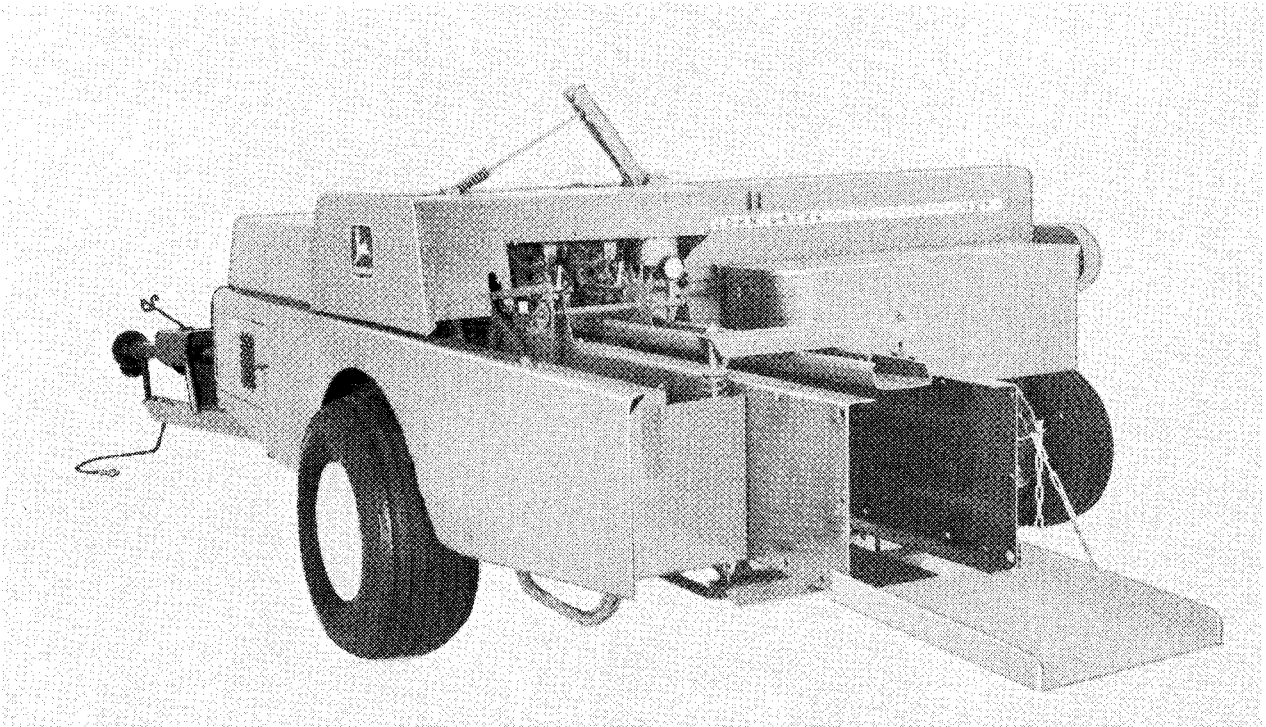

*John Deere 467 Baler*

E21811

*John Deere 467 Baler*



# Contents

---

|                               | Page |
|-------------------------------|------|
| Safety .....                  | 2    |
| Preparing the Tractor .....   | 5    |
| Preparing the Baler .....     | 7    |
| Attaching and Detaching ..... | 15   |
| Transporting .....            | 18   |
| Operating the Baler .....     | 20   |
| Attachments .....             | 33   |
| Lubrication .....             | 36   |
| Troubleshooting .....         | 43   |
| Service .....                 | 55   |
| Storage .....                 | 86   |
| Assembly .....                | 89   |
| Specifications .....          | 106  |
| Index .....                   | 107  |

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

 


# Safety

## BEFORE OPERATING

1. Read operator's manual, machine decals and SAFETY section of this manual.
2. Remove foreign objects from machine.
3. All shields must be in place and secure.
4. Become familiar with all controls.

## OPERATE SAFELY

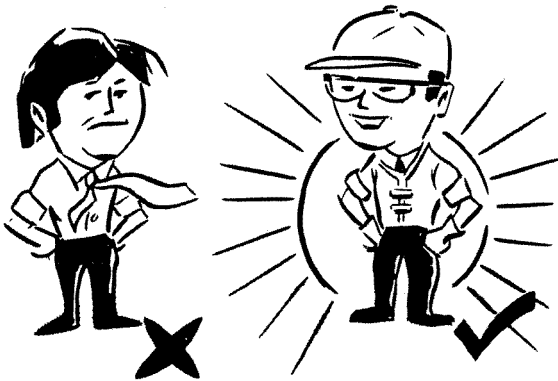

E19363

Never allow riders on the baler.

Keep all shields in place when operating baler.

Wear relatively tight and belted clothing to prevent catching on some machine parts.

Be especially careful when operating on hillsides. The baler may tip sideways if it strikes a hole, ditch, or other irregularity.

Do not try to remove or pull twine or wire from bale case or knotter when baler is running.

Do not attempt to pull hay from pickup when baler is running.

Do not use the chuck or forage wagon for loading or transporting bales.

Use extreme caution when tripping knotters by hand with the baler running. Do not touch knotter. Stand clear of needle frame.


## USE A SAFETY CHAIN

 A safety chain will help control drawn equipment should it accidentally separate from the drawbar while transporting. Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning. See your John Deere dealer for a chain with a strength rating greater than the gross weight of the towed load.

## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

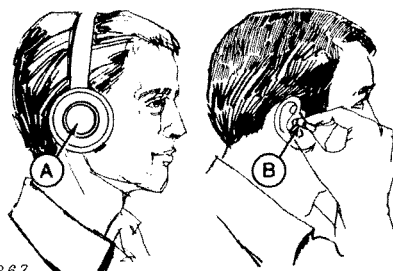

E17267

A—Earmuffs  
B—Earplugs

E17267

## PRACTICE SAFE MAINTENANCE

 
Before servicing or adjusting the baler, removing material, or hitching wagon to baler, always:

1. Disengage all power.
2. Shut off engine.
3. THEN WAIT until all moving parts have stopped moving.

## AVOID HIGH-PRESSURE FLUID

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

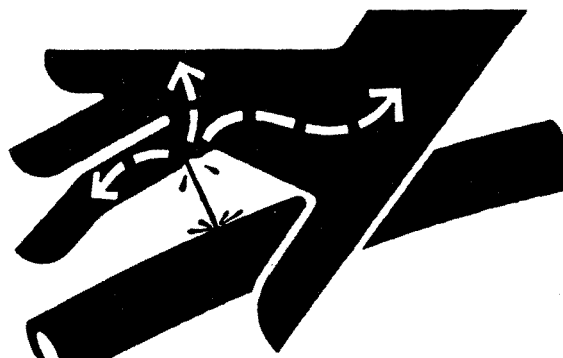

X9811

*Continued on next page*



**Suggest:**

 
**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

## SERVICE TIRES SAFELY

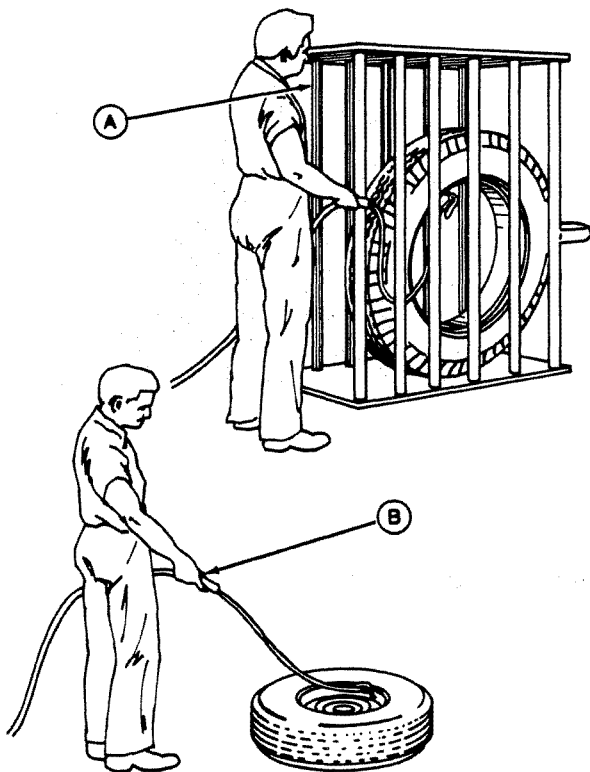

TS-0123

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.


When sealing tire beads on rims, never exceed 35 psi or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead, and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

**A—Use a safety cage if available.**

 **B—Do not stand over tire. Use a clip-on chuck and extension hose.**

## DRIVING ON PUBLIC ROADS

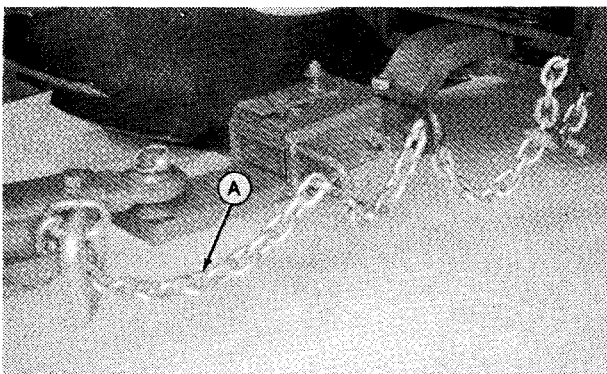

E23697

A safety chain (A) will help control drawn equipment should it accidentally separate from the drawbar while transporting. Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning. See your John Deere dealer for a chain with a strength rating greater than the gross weight of the towed load.

Never tow baler faster than 20 mph (32 km/h).

When transporting the equipment on a road or highway at night or during the day, use accessory lights and devices for adequate warning to operators of other vehicles. In this regard, check local governmental regulations. Various safety devices are available from your John Deere dealer.


Be sure SMV emblem and warning lights are clean and visible.

## OBSERVE SAFETY SIGNS AND MESSAGES

 This message is used for general reminders of good safety practices or to direct attention to unsafe practices. The message will appear in your operator's manual and/or the sign will appear on the machine with the color combination of yellow and black.

**WARNING:** This message denotes a specific potential hazard. The sign will be displayed on the machine in areas of potential hazard. The sign will have the color combination of yellow and black.

**DANGER:** This message denotes the most serious specific potential hazard. The sign will be displayed on the machine in areas of potential hazard. The sign will have the color combination of red and white.

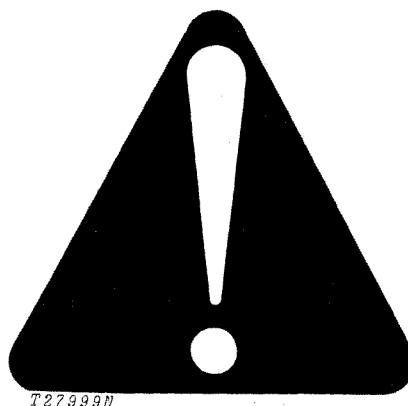

T27999N

## OBSERVE "IMPORTANT" MESSAGES

Messages labeled "important" will appear in your operator's manual and/or on the machine to provide specific instructions for performing adjustments, services, etc. If these instructions are not followed it could result in damage to the machine.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**