

**565**  
(From Serial No. 323924)  
**and 575**  
(From Serial No. 325041)  
**Round Balers**

**John Deere Arc-lès-Gray**  
**OMCC52492 Issue I9**

European Version

Printed in Germany

**ANGLAIS**

# Contents

	Page		Page
<b>Identification Views</b>			
565 identification views . . . . .	00-1	Connecting telescoping hook-up . . . . .	25-5
575 identification views . . . . .	00-2	Attaching to hydraulic system . . . . .	25-6
<b>Safety</b> . . . . . 05-1			
<b>Safety Decals</b> . . . . . 10-1			
<b>Preparing the Tractor</b>			
Adjusting drawbar . . . . .	15-1	Warning lights . . . . .	30-1
Adjusting front tread . . . . .	15-1	Preparing for transport . . . . .	30-1
Adjusting rear tire tread . . . . .	15-1	Storing jackstand . . . . .	30-2
Checking ballast . . . . .	15-2	<b>Operating the Baler - General Purposes</b>	
PTO speed . . . . .	15-2	Break-in period . . . . .	35-1
Setting selective control valves . . . . .	15-2	Rotating baler by hand . . . . .	35-1
Preparing tractor for monitor installation . . . . .	15-3	How the net wrapping works . . . . .	35-2
Installing monitor support . . . . .	15-5	Crop preparation . . . . .	35-3
Connecting monitors . . . . .	15-8	Feeding the material . . . . .	35-4
Using drawbar shield . . . . .	15-10	Operating in short, dry slick crops . . . . .	35-6
<b>Preparing the Baler</b>			
Selecting twine . . . . .	20-1	Operating in cornstalks . . . . .	35-7
Tying sheet bend knot . . . . .	20-1	Operating in silage and damp crops . . . . .	35-7
Tying modified square knot . . . . .	20-1	Gate lock valve . . . . .	35-8
Loading twine boxes . . . . .	20-2	Unplugging baler . . . . .	35-8
Routing twine . . . . .	20-4	Unplugging 575 with precutter device . . . . .	35-9
Routing twine through guides . . . . .	20-7	Bale density gauge . . . . .	35-9
Selecting net roll . . . . .	20-9	Adjusting gate control valve . . . . .	35-10
Care of net roll . . . . .	20-10	Adjusting twine spacing . . . . .	35-10
Care of net wrapping device . . . . .	20-10	Adjusting full-size bale . . . . .	35-11
Loading net boxes . . . . .	20-11	Changing precutter knife support position . . . . .	35-12
Routing net roll . . . . .	20-12	Adjusting pickup height . . . . .	35-14
Tire inflation . . . . .	20-13	Adjusting twine guide . . . . .	35-16
<b>Attaching and Detaching</b>			
Attaching to 540 rpm PTO . . . . .	25-1	Adjusting compressor rack (standard pickup) . . . . .	35-17
Attaching to drawbar . . . . .	25-2	Positioning short crop deflector . . . . .	35-17
Attaching to trailer hitch . . . . .	25-3	Adjusting pickup float (standard pickup) . . . . .	35-19
Connecting safety chain . . . . .	25-4	Adjusting pickup float (wide pickup) . . . . .	35-19
Storing jackstand . . . . .	25-4	Adjusting pickup float (precutter device) . . . . .	35-20
Using jackstand . . . . .	25-4	Adjusting lubrication pump flow . . . . .	35-21
		Adjusting chain oiling system brush flow . . . . .	35-23
		Installing straw bar on 565 . . . . .	35-24
		Installing straw bar on 575 . . . . .	35-25

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMCC52492 19-19-01DEC99

COPYRIGHT© 1999  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual

## Contents

	Page		Page
<b>Operating Manual Twine Control</b>			
Manual twine control . . . . .	36-1	Net wrapping . . . . .	40-1
Forming a bale . . . . .	36-2	Wheel chocks . . . . .	40-1
Wrapping a bale . . . . .	36-4	Knife slot fillers kit . . . . .	40-2
Discharging bale . . . . .	36-5	Battery harness . . . . .	40-2
		Monitor mounting bracket . . . . .	40-2
<b>Operating Electronic Wrapping Control</b>		<b>Lubrication and Maintenance</b>	
Electronic Wrapping Control Monitor . . . . .	37-1	Observe service intervals . . . . .	45-1
Forming a bale . . . . .	37-6	Grease . . . . .	45-1
Wrapping a bale manually . . . . .	37-9	Gear oil . . . . .	45-2
Discharging bale . . . . .	37-11	Chain oil . . . . .	45-2
		Oil filters . . . . .	45-2
<b>Operating BaleMaster Control</b>		Alternative and synthetic lubricants . . . . .	45-3
General description . . . . .	38-1	Lubricant storage . . . . .	45-3
BaleMaster component locations . . . . .	38-2	Mixing of lubricants . . . . .	45-3
LCD screen description . . . . .	38-3	Checking precutter knives . . . . .	45-4
Keyboard description . . . . .	38-4	Draining and refilling gear case . . . . .	45-4
Operating BaleMaster monitor . . . . .	38-5	Refilling lubrication pump reservoir . . . . .	45-5
BaleMaster setup values and initial settings . . . . .	38-6	Every 10 hours . . . . .	45-6
Switching ON control monitor under operating mode . . . . .	38-7	Every 30 hours . . . . .	45-11
Switching ON control monitor under diagnostic mode . . . . .	38-8	Annually . . . . .	45-12
BaleMaster malfunctions check-up at start up . . . . .	38-9		
Changing measurement units . . . . .	38-10	<b>Troubleshooting</b>	
Resetting control monitor to initial settings . . . . .	38-11	BaleMaster control monitor . . . . .	50-1
Selecting wrapping mode . . . . .	38-12	Twine wrapping . . . . .	50-2
Adjusting twine density . . . . .	38-13	Feeding . . . . .	50-4
Adjusting net wrap density . . . . .	38-14	Pickup . . . . .	50-6
Adjusting bale start wrap position . . . . .	38-15	Bale quality . . . . .	50-7
Adjusting bale end wrap position . . . . .	38-16	General baler difficulties . . . . .	50-8
Adjusting bale side wrap . . . . .	38-17	Silage equipment . . . . .	50-9
Adjusting twine arm re-extension . . . . .	38-18	Net wrapping . . . . .	50-10
Reducing r.h. side number of twine coils . . . . .	38-19	Chain oiling system . . . . .	50-13
Using bale counter . . . . .	38-20		
Resetting bale counter . . . . .	38-21	<b>Service</b>	
Displaying software versions . . . . .	38-22	Torques for hardware . . . . .	55-1
Selecting baler model . . . . .	38-23	Baler roll numbering . . . . .	55-2
Raising/lowering precutter pickup . . . . .	38-24	Tightening roll sprocket fixing nuts . . . . .	55-3
Retracting or engaging precutter knives . . . . .	38-25	Adjusting bale shape indicator straps . . . . .	55-5
Reversing precutter rotor . . . . .	38-27	Adjusting roll scrapers . . . . .	55-6
Forming a bale . . . . .	38-30	Adjusting roll drive chains . . . . .	55-6
Wrapping a bale with twine . . . . .	38-32	Adjusting pickup drive chains . . . . .	55-7
Wrapping a bale with net . . . . .	38-39	Adjusting precutter main drive chain . . . . .	55-9
Discharging bale . . . . .	38-43	Adjusting twine cutter anvil . . . . .	55-9
		Adjusting twine arm travel . . . . .	55-10
		Adjusting twine arm timing . . . . .	55-11
		Replacing BaleMaster controller fuse . . . . .	55-12
		Diagnosing right gate switch . . . . .	55-12
		Adjusting gate switch . . . . .	55-13
		Diagnosing full-size bale switch . . . . .	55-13
		Adjusting full-size bale switch . . . . .	55-14
<b>Attachments</b>			
Twine pulley sensors . . . . .	40-1		

Continued on next page

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## Contents

	<b>Page</b>
Diagnosing net cut switch . . . . .	55-14
Adjusting net cut switch . . . . .	55-15
Diagnosing twine pulleys . . . . .	55-15
Adjusting twine pulley sensors . . . . .	55-16
Diagnosing gear case output shaft sensor . . . . .	55-17
Adjusting gear case output shaft sensor . . . . .	55-18
Diagnosing precutter knife sensor . . . . .	55-19
Adjusting precutter knife sensor . . . . .	55-20
Diagnosing precutter reverse sensor . . . . .	55-21
Adjusting precutter reverse sensor . . . . .	55-22
Diagnosing twine arm potentiometer . . . . .	55-22
Resetting twine arm actuator rod . . . . .	55-23
Adjusting gear case hydraulic cylinder . . . . .	55-24
Replacing powerline shear bolt . . . . .	55-25
Replacing pickup drive shear bolt . . . . .	55-25
Adjusting net feed roll pressure . . . . .	55-26
Adjusting net knife arm stop . . . . .	55-27
Checking net feed roll brake . . . . .	55-28
Adjusting net feed roll drive belt tension . . . . .	55-29
Removing net feed roll drive belt . . . . .	55-30
Installing net feed roll drive belt . . . . .	55-30
Removing and installing net knife . . . . .	55-31
Sharpening net knife . . . . .	55-31
Removing and installing rear net guide . . . . .	55-32
Removing front net guide . . . . .	55-33
Installing front net guide . . . . .	55-34
Checking front net guide rubber band . . . . .	55-35
Replacing front net guide rubber paddle . . . . .	55-35
Removing net wrapped around feed rolls . . . . .	55-36

### **Storage**

At end of season . . . . .	60-1
Preparing for beginning of season . . . . .	60-2

### **Specifications**

565 . . . . .	65-1
575 . . . . .	65-2

### **Serial Numbers**

Serial number plates . . . . .	70-1
Serial number plate description . . . . .	70-1
Baler identification number . . . . .	70-1
Net wrapping serial number . . . . .	70-1
Precutter device serial number . . . . .	70-2

### **Index**

# Identification Views




*565 Round Baler with standard pickup*



*565 Round Baler with wide pickup*

CC.565RB 004614-19-25AUG99

Identification Views

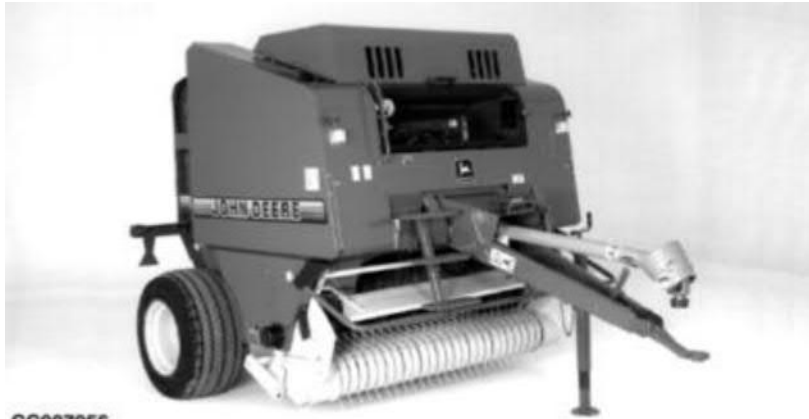

CC007956

575 Round Baler with Precutter device

-UN-17FEB97  
CC007956



CC010083

575 Round Baler with Standard Pickup

-UN-17FEB97  
CC010083


CC.575RB 003473-19-25AUG99

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

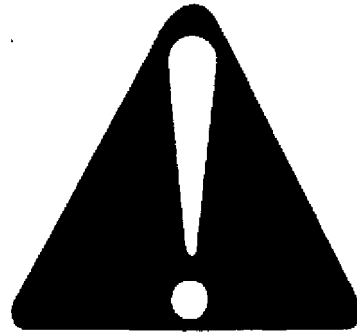

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

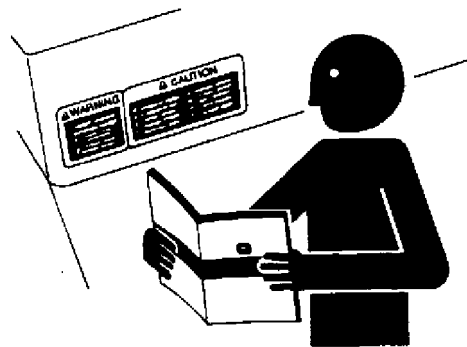

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93


TS219 -UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

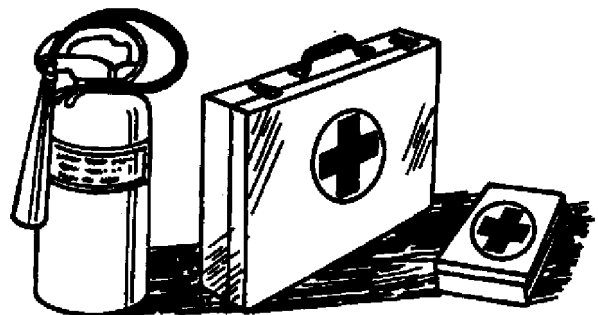

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**




## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

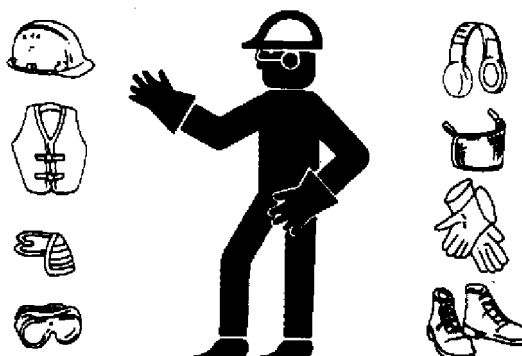

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95


TS1644 -UN-22AUG95



## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

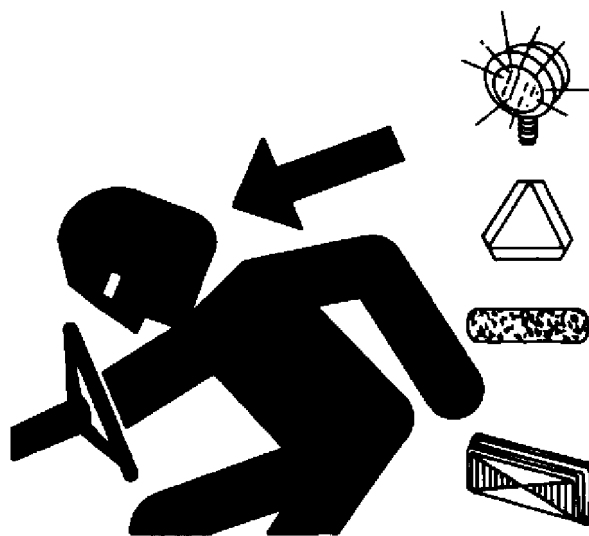

DX,FLASH -19-07JUL99


TSS951 -UN-12APR90

## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

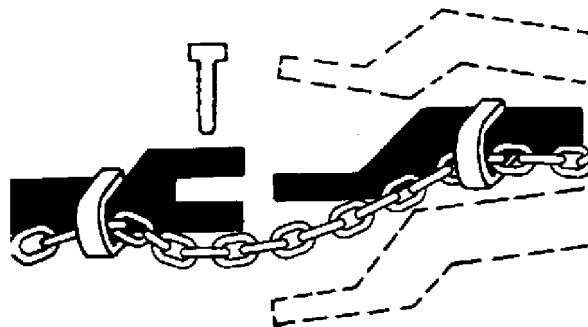

DX,CHAIN -19-03MAR93

TSS217 -UN-23AUG88

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**