

**570, 580  
and 590  
Round Balers**  
(From Serial No. 315565)

**John Deere Arc-lès-Gray  
OMCC45009 Issue A8**

**European Edition**

Printed in Germany

**ANGLAIS**

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	00-1	Using jackstand . . . . .	25-4
<b>Safety</b> . . . . .	05-1	Connecting telescoping hook-up . . . . .	25-5
<b>Safety Decals</b> . . . . .	10-1	Attaching to hydraulic system . . . . .	25-6
<b>Preparing the Tractor</b>		Connecting wiring harness . . . . .	25-7
Adjusting drawbar . . . . .	15-1	Detaching telescoping hook-up . . . . .	25-8
Adjusting front tread . . . . .	15-1	Storing hook-up . . . . .	25-8
Adjusting rear tire spacing . . . . .	15-1	<b>Transporting</b>	
Checking ballast . . . . .	15-2	Warning lights . . . . .	30-1
PTO speed . . . . .	15-2	Preparing for transport . . . . .	30-1
Setting selective control valves . . . . .	15-3	Storing jackstand . . . . .	30-2
Preparing tractor for monitor installation . . . . .	15-4	<b>Operating the Baler-General Purposes</b>	
Installing monitor support . . . . .	15-6	Break-in period . . . . .	35-1
Connecting monitors . . . . .	15-9	Rotating baler by hand . . . . .	35-2
Using drawbar shield . . . . .	15-10	How the net wrapping works . . . . .	35-3
<b>Preparing the Baler</b>		How the soft core works . . . . .	35-4
Selecting twine . . . . .	20-1	Crop preparation . . . . .	35-4
Loading twine boxes . . . . .	20-1	Feeding the material . . . . .	35-6
Tying sheet bend knot . . . . .	20-2	Basic baler settings . . . . .	35-8
Tying modified square knot . . . . .	20-2	Gate lock valve (590 only) . . . . .	35-13
Routing twine . . . . .	20-3	Gate lock device (570-580 only) . . . . .	35-14
Selecting net roll . . . . .	20-5	Unplugging baler with precutter device . . . . .	35-14
Care of net roll . . . . .	20-6	Unplugging baler without precutter device . . . . .	35-15
Care of net wrapping device . . . . .	20-6	Adjusting twine spacing . . . . .	35-16
Loading net boxes . . . . .	20-7	Bale density gauge . . . . .	35-16
Routing net . . . . .	20-8	Adjusting bale density . . . . .	35-17
Setting baler for 1000 rpm PTO . . . . .	20-10	Adjusting twine guide . . . . .	35-18
Tractors with low hydraulic flow . . . . .	20-14	Adjusting lower net guide panel side wedges . . . . .	35-19
Tire inflation . . . . .	20-15	Setting wide pickup feeder forks . . . . .	35-19
<b>Attaching and Detaching</b>		Adjusting compressor rack . . . . .	35-20
Attaching to 540 rpm PTO . . . . .	25-1	Adjusting converging wheel height . . . . .	35-20
Tractor electrical connection . . . . .	25-1	Adjusting wheel spindles . . . . .	35-21
Attaching to drawbar . . . . .	25-2	Adjusting wide pickup gauge wheels . . . . .	35-24
Attaching to trailer hitch . . . . .	25-3	Adjusting starter roll scraper . . . . .	35-24
Connecting safety chain . . . . .	25-4	Adjusting bottom roll scraper . . . . .	35-25
Storing jackstand . . . . .	25-4	Adjusting pickup auger scrapers . . . . .	35-25
		Adjusting pickup float springs . . . . .	35-26

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMCC45009 A8-19-15MAY98

COPYRIGHT© 1998  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996, 1994 Deere & Company

Contents

	Page		Page
Adjusting pickup height . . . . .	35-27	Selecting precutter operating modes . . . . .	38-27
Positioning precutter front sheet . . . . .	35-29	Diagnostic mode . . . . .	38-33
Changing precutter knife support position . . . . .	35-30	Forming a bale . . . . .	38-36
Resetting bale counter . . . . .	35-32	Wrapping a bale with twine . . . . .	38-39
Operating bale push bar . . . . .	35-33	Wrapping a bale with net . . . . .	38-46
		Discharging bale . . . . .	38-50
<b>Operating Manual Twine Control</b>			
Manual Twine Control . . . . .	36-1	<b>Attachments</b>	
Adjusting bale size . . . . .	36-1	Converging wheels . . . . .	40-1
Adjusting soft core diameter . . . . .	36-2	Hydraulic pickup lift . . . . .	40-1
Forming a bale . . . . .	36-3	Standard belt stapler . . . . .	40-1
Wrapping a bale . . . . .	36-5	Goro belt stapler . . . . .	40-2
Discharging bale . . . . .	36-6	Mato belt stapler . . . . .	40-2
<b>Operating Electronic Wrapping Control</b>			
Electronic Wrapping Control Monitor . . . . .	37-1	Road light kit . . . . .	40-2
Adjusting bale size . . . . .	37-4	Flax bundle . . . . .	40-3
Adjusting soft core diameter . . . . .	37-5	Bale discharging ramp . . . . .	40-3
Forming a bale . . . . .	37-6	Gate deflectors . . . . .	40-3
Wrapping a bale . . . . .	37-8	Silage bundle . . . . .	40-4
Discharging bale . . . . .	37-10	Hemp bundle . . . . .	40-4
<b>Operating BaleMaster Control</b>			
General description . . . . .	38-1	Pickup gauge wheel . . . . .	40-4
BaleMaster component locations . . . . .	38-2	Wide pickup . . . . .	40-4
LCD screen description . . . . .	38-3	High floatation tires . . . . .	40-5
Keyboard description . . . . .	38-4	Upper roll drive . . . . .	40-5
Operating BaleMaster monitor . . . . .	38-5	55 bar soft core kit . . . . .	40-5
BaleMaster setup values and initial settings . . . . .	38-6	0 bar soft core kit . . . . .	40-6
Switching ON control monitor . . . . .	38-7	Net wrapping . . . . .	40-6
BaleMaster malfunctions check-up . . . . .	38-8	Bale push bar . . . . .	40-6
Changing measurements units . . . . .	38-9	Rubber covered shells . . . . .	40-7
Resetting control monitor to initial settings . . . . .	38-10	Low drive belt speed bundle . . . . .	40-7
Selecting wrapping mode . . . . .	38-11	Twine pulley sensors . . . . .	40-7
Selecting flax wrapping mode . . . . .	38-12	BaleMaster control monitor battery harness . . . . .	40-7
Adjusting bale size . . . . .	38-13	Monitor mounting bracket . . . . .	40-8
Fine tuning bale size . . . . .	38-14	Hydraulic pressure accumulator . . . . .	40-8
Adjusting soft core diameter . . . . .	38-15	Front twine/net box . . . . .	40-8
Adjusting twine density . . . . .	38-16	Knife slot filler kit . . . . .	40-9
Adjusting net wrap density . . . . .	38-17	Special knife kit . . . . .	40-9
Adjusting bale start wrap position . . . . .	38-18	 	
Adjusting bale end wrap position . . . . .	38-19	<b>Lubrication and Maintenance</b>	
Adjusting bale side wrap . . . . .	38-20	Observe service intervals . . . . .	45-1
Adjusting twine arm re-extension . . . . .	38-21	Grease . . . . .	45-1
Reducing l.h. side number of twine coils . . . . .	38-22	Gear oil . . . . .	45-2
Using bale counter . . . . .	38-23	Alternative lubricants . . . . .	45-2
Resetting bale counter . . . . .	38-24	Lubricant storage . . . . .	45-3
Displaying software versions . . . . .	38-25	Mixing of lubricants . . . . .	45-3
Selecting baler model . . . . .	38-26	Draining and refilling gear case . . . . .	45-4
		Checking precutter knives . . . . .	45-5
		Checking belt wires . . . . .	45-6
		Every 10 hours . . . . .	45-6
		Every 30 hours . . . . .	45-10

Continued on next page

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page		Page
Every 50 hours . . . . .	45-12	Adjusting bale size potentiometer . . . . .	55-37
Annually . . . . .	45-13	Diagnosing twine arm potentiometer . . . . .	55-38
<b>Troubleshooting</b>		Resetting twine arm actuator rod . . . . .	55-39
BaleMaster Control Monitor . . . . .	50-1	Diagnosing net cut switch (baler with adjustable net cut switch) . . . . .	55-40
Twine wrapping . . . . .	50-3	Adjusting net cut switch (baler with adjustable net cut switch) . . . . .	55-40
Feeding . . . . .	50-6	Diagnosing net cut switch (baler with non-adjustable net cut switch) . . . . .	55-41
Pickup . . . . .	50-8	Checking net cut switch (baler with non-adjustable net cut switch) . . . . .	55-42
Bale quality . . . . .	50-10	Adjusting bale size switch . . . . .	55-43
General baler difficulties . . . . .	50-12	Adjusting soft core switch . . . . .	55-44
Silage equipment . . . . .	50-15	Adjusting gear case hydraulic cylinder stroke . . . . .	55-44
Net wrapping . . . . .	50-16	Adjusting slip clutch . . . . .	55-45
Push bar . . . . .	50-20	Checking slip clutch . . . . .	55-45
<b>Service</b>		Adjusting net feed roll pressure . . . . .	55-46
Torques for hardware . . . . .	55-1	Checking net feed roll drive belt . . . . .	55-47
Baler roll numbering . . . . .	55-2	Removing net feed roll drive belt . . . . .	55-48
Adjusting main drive chain . . . . .	55-4	Installing net feed roll drive belt . . . . .	55-48
Adjusting bottom roll drive chain . . . . .	55-4	Access to net knife or net guides . . . . .	55-49
Adjusting upper drive roll chain . . . . .	55-5	Removing and installing net knife . . . . .	55-50
Adjusting precutter drive chain . . . . .	55-6	Sharpening net knife . . . . .	55-50
Adjusting pickup drive chains . . . . .	55-6	Removing rear net guide . . . . .	55-51
Replacing precutter knives . . . . .	55-10	Installing rear net guide . . . . .	55-51
Adjusting upper arm spring . . . . .	55-11	Removing front net guide (baler with adjustable net cut switch) . . . . .	55-52
Adjusting upper arm cylinder . . . . .	55-12	Installing front net guide (baler with adjustable net cut switch) . . . . .	55-53
Adjusting gate latch (590 only) . . . . .	55-12	Removing front net guide (baler with non-adjustable net cut switch) . . . . .	55-54
Adjusting gate latch stop . . . . .	55-13	Installing front net guide (baler with non-adjustable net cut switch) . . . . .	55-55
Adjusting gate locking hooks . . . . .	55-14	Checking front net guide rubber band . . . . .	55-56
Adjusting belt tracking . . . . .	55-15	Adjusting net knife arm stop . . . . .	55-57
Adjusting bale size indicator . . . . .	55-16	Adjusting net feed roll brake (baler with upper net brake) . . . . .	55-58
Adjusting twine cutter anvil . . . . .	55-17	Checking net feed roll brake (baler with lower net brake) . . . . .	55-59
Adjusting twine arm travel . . . . .	55-18	Checking lower net guide panel (net guide panel with side wedges only) . . . . .	55-59
Adjusting twine arm timing . . . . .	55-19	Checking lower net guide panel (panel without side wedges only) . . . . .	55-60
Replacing controller fuse . . . . .	55-20	Checking lower net guide crossbar . . . . .	55-61
Diagnosing right gate latch switch . . . . .	55-20	Checking lower net guide channels . . . . .	55-62
Diagnosing left gate latch switch . . . . .	55-21	Removing net wrapped around feed roll . . . . .	55-63
Adjusting gate latch switches . . . . .	55-21	Replacing powerline shear bolt . . . . .	55-64
Diagnosing oversize switch . . . . .	55-22	Replacing pickup drive shear bolt . . . . .	55-64
Adjusting oversize bale switch . . . . .	55-23	Removing the belts . . . . .	55-65
Diagnosing bale formation potentiometers . . . . .	55-25		
Adjusting bale shape senders . . . . .	55-27		
Diagnosing twine pulleys . . . . .	55-29		
Adjusting pulley sensors . . . . .	55-30		
Diagnosing lower drive roll sensor . . . . .	55-31		
Adjusting lower drive roll sensor . . . . .	55-32		
Diagnosing precutter knife sensor . . . . .	55-33		
Adjusting precutter knife sensor . . . . .	55-34		
Diagnosing precutter reverse sensor . . . . .	55-35		
Adjusting precutter reverse sensor . . . . .	55-35		
Diagnosing bale size potentiometer . . . . .	55-36		

Continued on next page

Contents

	<b>Page</b>
Repairing belts . . . . .	55-66
Preparing damaged belts . . . . .	55-67
Installing standard belt hooks . . . . .	55-68
Installing Goro belt hooks . . . . .	55-70
Installing Mato belt hooks . . . . .	55-74
Installing belts . . . . .	55-77
Routing belts through the baler . . . . .	55-78
Hook belt ends . . . . .	55-80

**Storage**

At end of season . . . . .	60-1
Preparing for beginning of season . . . . .	60-2

**Specifications**

570 baler . . . . .	65-1
580 baler . . . . .	65-3
590 baler . . . . .	65-5

**Serial Numbers**

Serial number plates . . . . .	70-1
Baler serial number plate . . . . .	70-1
Net wrapping serial number . . . . .	70-1
Precutter device serial number . . . . .	70-2

**Index**

# Identification Views



570 Round Baler



580 Round Baler



590 Round Baler


CC.570RB 001433-19-20OCT94

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

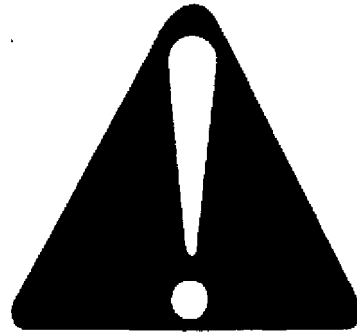

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

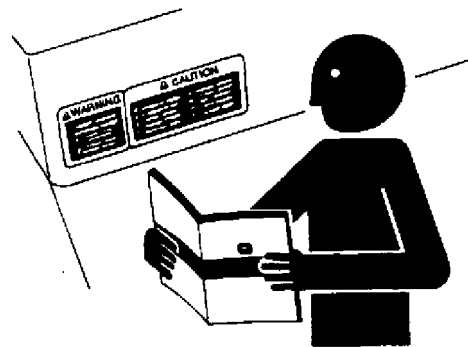

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.




FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

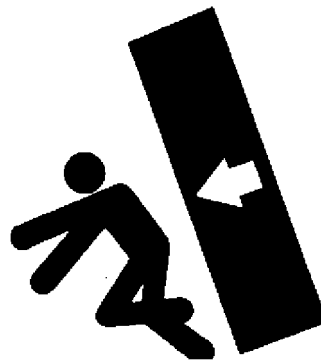

DX,STORE -19-03MAR93


TS219 -UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

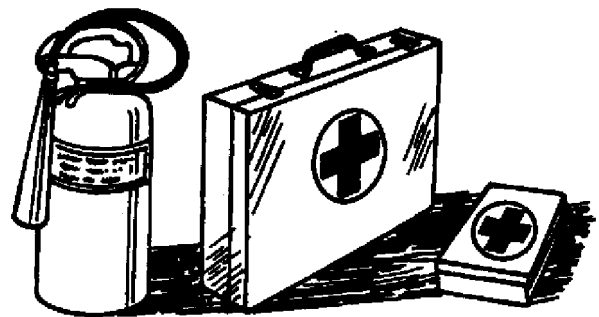

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

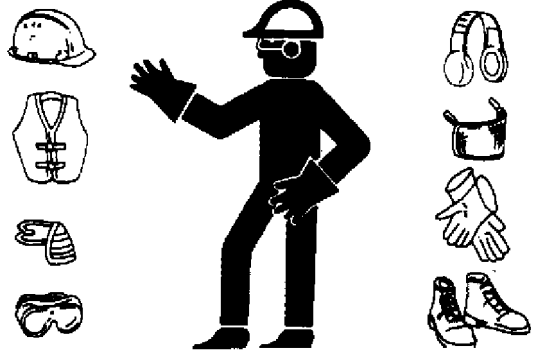

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

## HANDLING OF KNIVES

Prevent personal injury by wearing safety gloves to handle knives.

CC,570RB 004381-19-20APR98

## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

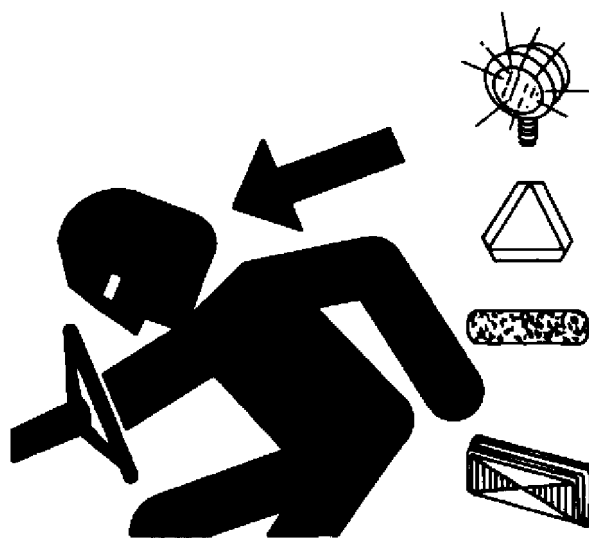

DX,FLASH -19-12SEP95


TS951 -UN-12APR90

## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

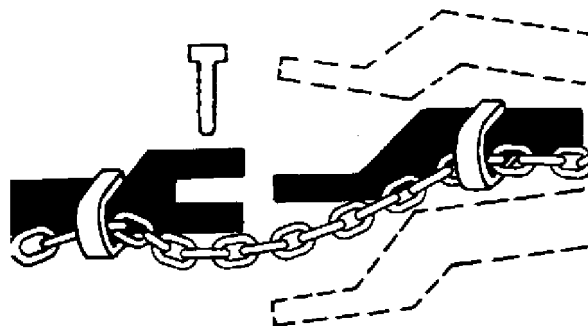

DX,CHAIN -19-03MAR93

TS217 -UN-23AUG88



## OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:


- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO and shut off engine.
- Stand clear of baler at all times when machine is operating.

CC.575RB 001311-19-20MAY94

## AVOIDING INJURY OR DEATH FROM FALLING ROUND BALES

 **CAUTION:** To help prevent personal injury or death caused by falling loads:

- DO NOT handle round bales unless loader is equipped with an approved bale handling device. Otherwise, the bale can fall on the operator when the loader is raised.
- For 6000 and 7000 series tractors, set detent selector knobs on top of valves to “loader” position when using the selective control valve levers to operate the loader. See “Setting Valve Detent Selector” in “Preparing the Tractor” Section.
- Handle raised loads with caution.
- Carry loads low and drive slowly.

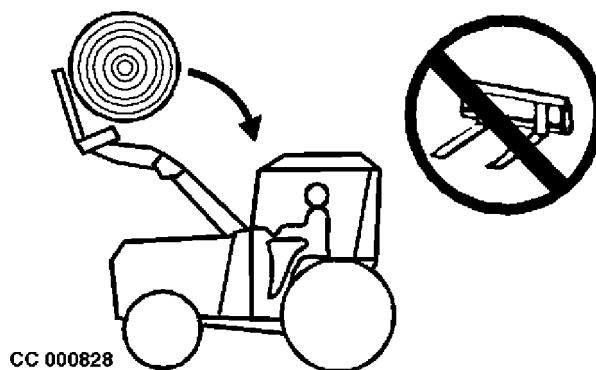

CC000828 -UN-05APR95

CC.575RB 001312-19-20MAY94

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**