

# **575 Round Baler**

**John Deere Arc-lès-Gray  
OMCC40847 Issue L7**

**European Edition**

Printed in Germany

**ANGLAIS**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS ROUND BALER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS ROUND BALER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this round baler will relieve the manufacturer of all liability for any resulting damage or injury.

*Predelivery Inspection*

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	00-1		
<b>Safety</b> . . . . .	05-1	Connect wiring harness . . . . .	25-8
<b>Safety Decals</b> . . . . .	10-1	Detaching telescoping hook-up . . . . .	25-9
		Storing telescoping hook-up . . . . .	25-9
<b>Preparing the Tractor</b>		<b>Transporting</b>	
Adjusting drawbar . . . . .	15-1	Warning lights . . . . .	30-1
Adjusting front tread . . . . .	15-1	Preparing for transport . . . . .	30-1
Adjusting rear tire spacing . . . . .	15-1	Storing jackstand . . . . .	30-2
Checking ballast . . . . .	15-2		
PTO speed . . . . .	15-2	<b>Operating the Baler - General Purposes</b>	
Setting selective control valves . . . . .	15-2	Break-in period . . . . .	35-1
Preparing tractor for monitor installation . . . . .	15-3	Rotating baler by hand . . . . .	35-1
Installing monitor support . . . . .	15-5	How the net wrapping works . . . . .	35-2
Connecting monitors . . . . .	15-8	Crop preparation . . . . .	35-3
Using drawbar shield . . . . .	15-9	Feeding the material . . . . .	35-4
		Operating in short, dry slick crops . . . . .	35-6
<b>Preparing the Baler</b>		Operating in cornstalks . . . . .	35-7
Selecting twine . . . . .	20-1	Operating in silage and damp crops . . . . .	35-7
Tying sheet bend knot . . . . .	20-1	Gate lock valve . . . . .	35-8
Tying modified square knot . . . . .	20-1	Unplugging baler without precutter device . . . . .	35-8
Loading twine boxes . . . . .	20-2	Unplugging baler with precutter device . . . . .	35-9
Routing twine . . . . .	20-4	Bale density gauge . . . . .	35-9
Selecting net roll . . . . .	20-9	Adjusting gate control valve . . . . .	35-10
Care of net roll . . . . .	20-10	Adjusting twine spacing . . . . .	35-10
Care of net wrapping device . . . . .	20-10	Adjusting full-size bale . . . . .	35-11
Loading net boxes . . . . .	20-11	Changing precutter knife support position . . . . .	35-12
Routing net roll . . . . .	20-12	Adjusting pickup height . . . . .	35-14
Tire inflation . . . . .	20-13	Adjusting twine guide . . . . .	35-15
		Adjusting compressor rack . . . . .	35-16
<b>Attaching and Detaching</b>		Positioning short crop deflector (standard pickup) . . . . .	35-16
Attaching to 540 rpm PTO . . . . .	25-1	Positioning short crop deflector (precutter device) . . . . .	35-17
Attaching to drawbar . . . . .	25-2	Adjusting pickup float . . . . .	35-18
Attaching to trailer hitch . . . . .	25-3	Adjusting lubrication pump flow . . . . .	35-19
Connecting safety chain . . . . .	25-4	Adjusting chain oiling system brush flow . . . . .	35-20
Storing jackstand . . . . .	25-4	Installing straw bar . . . . .	35-21
Using jackstand . . . . .	25-4		
Connecting telescoping hook-up . . . . .	25-5		
Attaching to hydraulic system . . . . .	25-7		

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMCC40847 L7-19-15MAR98

COPYRIGHT© 1998  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996, 1995 Deere & Company

Contents

	<b>Page</b>		<b>Page</b>
<b>Operating Manual Twine Control</b>		<b>Wheel chocks</b> . . . . .	
Manual twine control . . . . .	36-1		40-2
Forming a bale . . . . .	36-2	<b>Lubrication and Maintenance</b>	
Wrapping a bale . . . . .	36-4	Checking precutter knives . . . . .	45-4
Discharging bale . . . . .	36-5	Draining and refilling gear case . . . . .	45-4
		Refilling lubrication pump reservoir . . . . .	45-5
		Every 10 hours . . . . .	45-6
		Every 30 hours . . . . .	45-9
		Annually . . . . .	45-10
<b>Operating Electronic Wrapping Control</b>		<b>Troubleshooting</b>	
Electronic Wrapping Control Monitor . . . . .	37-1	BaleMaster control monitor . . . . .	50-1
Forming a bale . . . . .	37-4	Twine wrapping . . . . .	50-2
Wrapping a bale . . . . .	37-6	Feeding . . . . .	50-4
Discharging bale . . . . .	37-8	Pickup . . . . .	50-6
		Bale quality . . . . .	50-7
		General baler difficulties . . . . .	50-8
		Silage equipment . . . . .	50-9
		Net wrapping . . . . .	50-10
		Chain oiling system . . . . .	50-13
<b>Operating BaleMaster Control</b>		<b>Service</b>	
General description . . . . .	38-1	Torques for hardware . . . . .	55-1
BaleMaster component locations . . . . .	38-2	Baler roll numbering . . . . .	55-2
LCD screen description . . . . .	38-3	Tightening Roll Sprocket Fixing Nuts . . . . .	55-3
Keyboard description . . . . .	38-4	Replacing precutter knives . . . . .	55-4
Operating BaleMaster monitor . . . . .	38-5	Adjusting bale shape indicator straps . . . . .	55-6
BaleMaster setup values and initial settings . . . . .	38-6	Adjusting roll scrapers . . . . .	55-7
Switching ON control monitor . . . . .	38-7	Adjusting roll drive chains . . . . .	55-7
BaleMaster malfunctions check-up at start up . . . . .	38-8	Adjusting pickup drive chain . . . . .	55-8
Changing measurement units . . . . .	38-9	Adjusting pickup auger drive chain . . . . .	55-8
Resetting control monitor to initial settings . . . . .	38-10	Adjusting precutter drive chain . . . . .	55-9
Selecting wrapping mode . . . . .	38-11	Adjusting twine cutter anvil . . . . .	55-9
Adjusting twine density . . . . .	38-12	Adjusting twine arm travel . . . . .	55-10
Adjusting net wrap density . . . . .	38-13	Adjusting twine arm timing . . . . .	55-11
Adjusting bale start wrap position . . . . .	38-14	Replacing controller fuse . . . . .	55-12
Adjusting bale end wrap position . . . . .	38-15	Diagnosing right gate switch . . . . .	55-12
Adjusting bale side wrap . . . . .	38-16	Adjusting gate switch . . . . .	55-13
Adjusting twine arm re-extension . . . . .	38-17	Diagnosing full-size bale switch . . . . .	55-13
Reducing r.h. side number of twine coils . . . . .	38-18	Adjusting full-size bale switch . . . . .	55-14
Using bale counter . . . . .	38-19	Diagnosing net switch . . . . .	55-14
Resetting bale counter . . . . .	38-20	Adjusting net switch . . . . .	55-15
Displaying software versions . . . . .	38-21	Diagnosing twine pulleys . . . . .	55-15
Selecting baler model . . . . .	38-22	Adjusting pulley sensors . . . . .	55-16
Precutter operating modes . . . . .	38-23	Diagnosing gear case output shaft sensor . . . . .	55-17
Diagnostic mode . . . . .	38-29	Adjusting gear case output shaft sensor . . . . .	55-18
Forming a bale . . . . .	38-30	Diagnosing precutter knife sensor . . . . .	55-19
Wrapping a bale with twine . . . . .	38-32	Adjusting precutter knife sensor . . . . .	55-20
Wrapping a bale with net . . . . .	38-39	Diagnosing precutter reverse sensor . . . . .	55-21
Discharging bale . . . . .	38-43	Adjusting precutter reverse sensor . . . . .	55-21
		Diagnosing twine arm potentiometer . . . . .	55-22
<b>Attachments</b>		<b>Continued on next page</b>	
Sensors . . . . .	40-1		
Net wrapping . . . . .	40-1		
Front road light kit . . . . .	40-1		
Knife slot fillers kit . . . . .	40-2		
Special knives kit . . . . .	40-2		

Contents

Page

Resetting twine arm actuator rod . . . . . 55-23  
Adjusting gear case hydraulic cylinder . . . . . 55-24  
Replacing pickup drive shear bolt . . . . . 55-24  
Adjusting net feed roll pressure . . . . . 55-25  
Adjusting net knife arm stop . . . . . 55-26  
Checking net feed roll brake . . . . . 55-27  
Adjusting net feed roll drive belt tension . . . . . 55-28  
Removing net feed roll drive belt . . . . . 55-29  
Installing net feed roll drive belt . . . . . 55-29  
Removing and installing net knife . . . . . 55-30  
Sharpening net knife . . . . . 55-30  
Removing and installing rear net guide . . . . . 55-31  
Removing front net guide . . . . . 55-32  
Installing front net guide . . . . . 55-33  
Checking front net guide rubber band . . . . . 55-34  
Replacing front net guide rubber paddle . . . . . 55-34  
Removing net wrapped around feed rolls . . . . . 55-35

**Storage**

At end of season . . . . . 60-1  
Preparing for beginning of season . . . . . 60-2

**Specifications** . . . . . 65-1

**Serial Numbers**

Serial number plates . . . . . 70-1  
Serial number plate description . . . . . 70-1  
Baler identification number . . . . . 70-1  
Net wrapping serial number . . . . . 70-2  
Precutter device serial number . . . . . 70-2

**Index**

*Contents*

# Identification Views



CC007956

575 Round Baler

-UN-17FEB97  
CC007956



CC010083

575 Round Baler with Standard Pickup

-UN-17FEB97  
CC010083

CC.575RB 003473-19-24SEP96



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

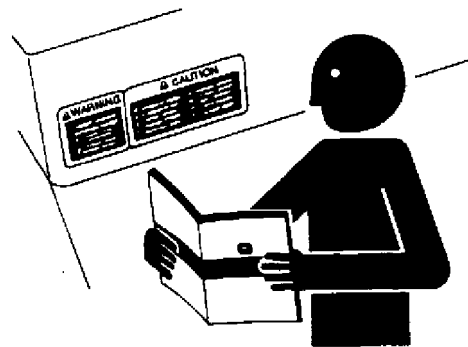

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.




FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

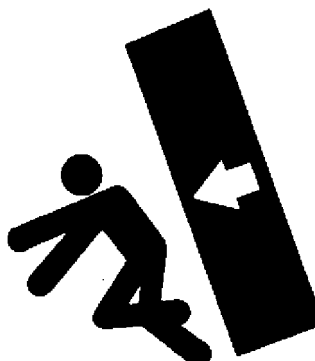

DX,STORE -19-03MAR93


TS219 -UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

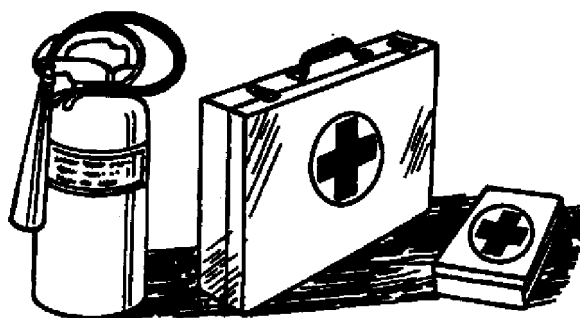

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**