

664

(From Serial No. 4434)

666

(From Serial No. 7288)

Row-Crop Headers

John Deere Werke Zweibrücken
OMZ92335 Issue G4

European Edition

Printed in Germany

ENGLISCH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS ROW-CROP HEADER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS ROW-CROP HEADER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this row-crop header will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification Views	00-1	Troubleshooting	
Safety	05-1	Row-crop header operation	40-1
Safety Decals	10-1	Lubrication and Maintenance	
Preparing the Harvester		Lubrication intervals	45-1
Preparing Series 6000 harvester	15-1	Observe lubrication symbols	45-1
Preparing Series 5000 harvester	15-2	Grease	45-2
Attaching and Detaching		Gear case oil	45-3
664, 666 on Series 6000 harvester	20-1	Alternative lubricants	45-3
664 on Series 5000 harvester	20-2	Draining and refilling gear case	45-4
666 on Series 5000 harvester	20-3	Every 10 hours (664 only)	45-5
Raise jackstand	20-5	Every 10 hours (664 only)—Continued	45-6
Detaching the row-crop header	20-5	Every 10 hours (666 only)	45-7
Transporting		Every 10 hours (666 only)—Continued	45-8
Road regulations	25-1	As required	45-9
Special regulations - Germany only	25-1	Every 50 hours	45-10
Installing road protective bar	25-1	Every 50 hours— Continued	45-11
Folding or unfolding (666 only)	25-2	Every 100 hours (666 only)	45-12
Unfolding outer units (666 only)	25-2	Service	
Folding outer units (666 only)	25-4	Torques for hardware	50-1
Operating the Row-Crop Header		Rotating knives	50-2
Break-in instructions	30-1	Replacing lower rotating knife	50-2
Harvesting preparations	30-2	Reinstalling lower rotating knife	50-3
Pre-operational checks	30-3	Replacing upper rotating knife	50-3
Adjusting outer deflectors	30-3	Gatherer chains	50-4
Adjusting crop deflector	30-4	Replacing gatherer chain	50-4
Adjusting row-crop header float	30-4	Reinstalling gatherer chain	50-5
Input and auger drive sprockets	30-5	Adjusting pressure at rotating knives	50-8
Operating row-crop header	30-6	Adjusting lateral gatherer chain	50-10
Cleaning and checking after work	30-6	Adjusting main drive chain (664 only)	50-11
Changing harvesting unit	30-7	Adjusting feed auger drive chain (664 only)	50-11
Storage	30-7	Adjusting drive chain (666 only)	50-12
Attachments		Replacing auger trough wear plates	50-12
Lateral driven auger	35-1	Storage	
		At end of season	55-1
		Beginning of season	55-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92335 G4-19-21JUN94

COPYRIGHT© 1994
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

Page

 
Specifications

664 row-crop header 60-1
666 row-crop header 60-2

Serial Number 65-1

Index

Identification Views

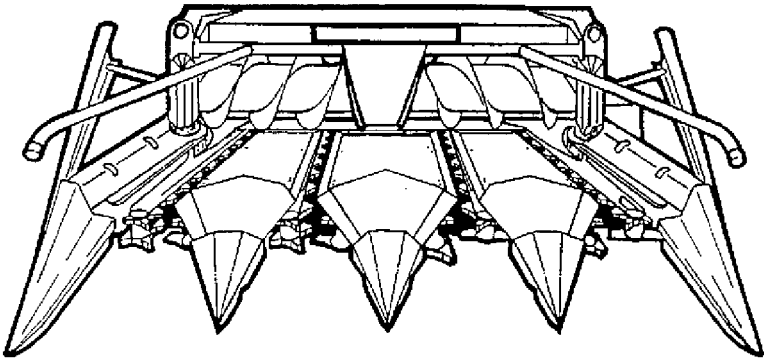


-JUN-31MAR95

CC000250

CC000250

 664 Row-Crop Header

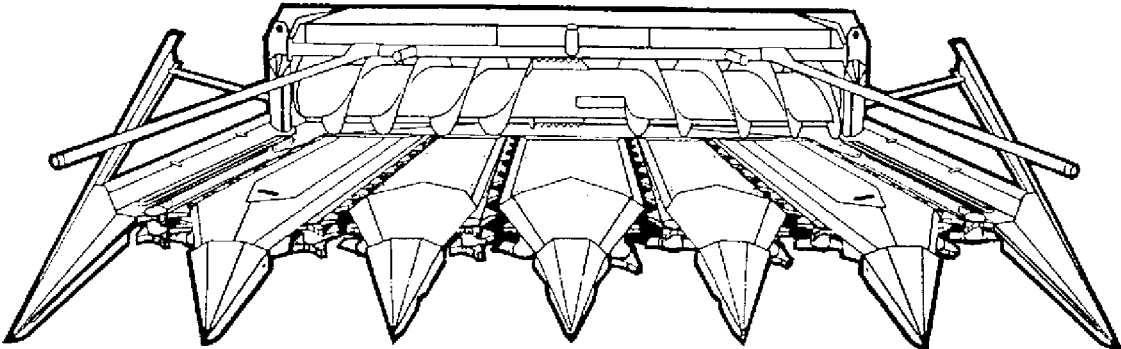

-JUN-31MAR95

CC 000533

CC000533

666 Row-Crop Header


CC,666RC 001051-19-10MAY93

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

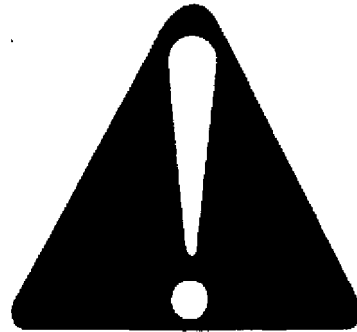

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

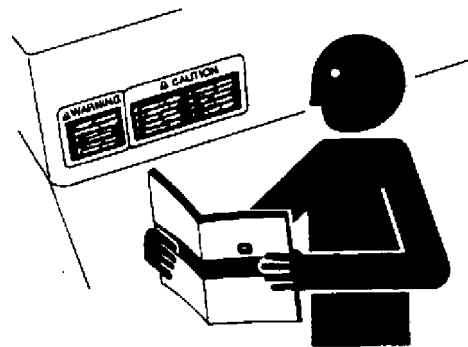

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93


TS219 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

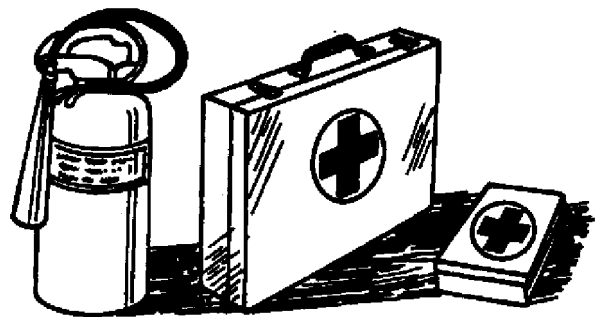

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

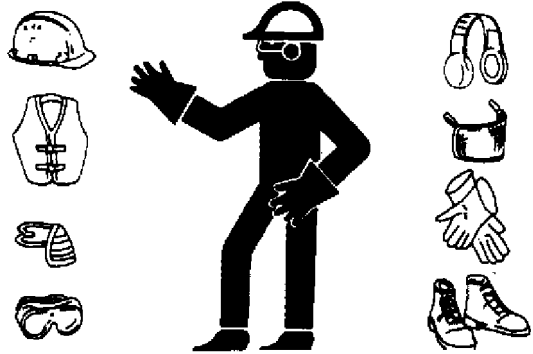

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

 
FX,READY -19-28FEB91

GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

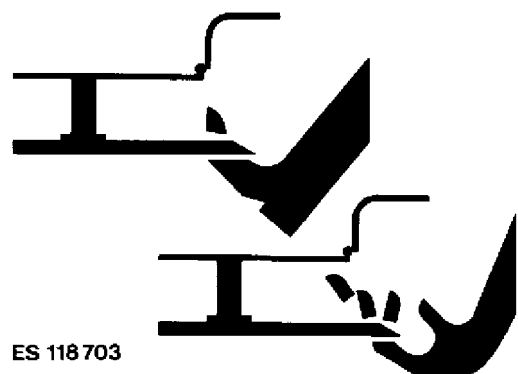

ES 118 703

FX,DEVICE -19-04DEC90

ES118703 -UN-21MAR95

 


USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

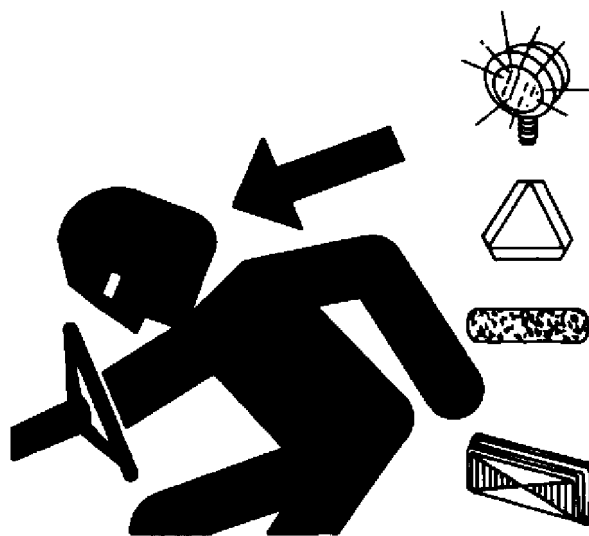

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the forage harvester before starting the engine.



FX,KNIFE -19-21DEC90

TS254 -UN-23AUG88

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>