

664

(From Serial No. 4434)

666

(From Serial No. 8218)

Row-Crop Headers

John Deere Werke Zweibrücken

OMZ92804 Issue F9

European Version

Printed in Germany

ENGLISCH

Contents

	Page		Page
Identification Views	00-1	Operating row-crop header	30-7
Safety	05-1	Cleaning and checking after work	30-7
Safety Decals	10-1	Changing harvesting unit	30-8
		Storage	30-8
Preparing the Harvester		Attachments	
Preparing Series 6000 harvester	15-1	Lateral driven auger	35-1
Preparing Series 5000 harvester	15-2	Troubleshooting	
Choice of row-crop header drive sprocket	15-5	Row-crop header operation	40-1
Installing attaching frame on series 5000 Harvester	15-6	Lubrication and Maintenance	
Installing drive chain on series 5000 Harvester	15-7	Lubrication intervals	45-1
Ballasting series 5000 Harvester	15-8	Observe lubrication symbols	45-1
Attaching and Detaching		Grease	45-2
664, 666 on Series 6000 harvester	20-1	Gear case oil	45-3
664 on Series 5000 harvester	20-3	Alternative lubricants	45-3
666 on Series 5000 harvester	20-4	Mixing of lubricants	45-4
Raise jackstand	20-6	Lubricant storage	45-4
Hydraulic connections (666 only)	20-6	Use genuine John Deere parts	45-4
Detaching the row-crop header from series 6000 Harvester	20-7	Draining and refilling gear case	45-5
Detaching the row-crop header from series 5000 Harvester	20-8	As required	45-6
Transporting		Every 10 hours (664 only)	45-7
Road regulations	25-1	Every 10 hours (666 only)	45-9
Special regulations - Germany only	25-1	Every 50 hours	45-11
Installing road protective bar	25-1	Every 100 hours (666 only)	45-13
Folding or unfolding (666 only)	25-2	Service	
Operating the Row-Crop Header		Torques for hardware	50-1
Break-in instructions	30-1	Rotating knives	50-2
Harvesting preparations	30-2	Replacing lower rotating knife	50-2
Pre-operational checks	30-3	Reinstalling lower rotating knife	50-3
Adjusting outer deflectors	30-3	Replacing upper rotating knife	50-3
Adjusting crop deflectors	30-4	Gatherer chains	50-4
Adjusting row-crop header float	30-5	Replacing gatherer chain	50-4
Input and auger drive sprockets	30-6	Reinstalling gatherer chain	50-5
		Adjusting pressure at rotating knives	50-8
		Adjusting lateral gatherer chain	50-10
		Adjusting drive chain (666 only)	50-11
		Adjusting main drive chain (664 only)	50-11

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92804 F9-19-01JUN99

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

Page

Adjusting feed auger drive chain (664 only) . 50-12
Replacing auger trough wear plates 50-12

Storage

At end of season 55-1
Beginning of season 55-1

Specifications

664 row-crop header 60-1
666 row-crop header 60-2

Serial Number 65-1

Index

<https://www.ebooklibonline.com>

Hello dear friend!

 
Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Identification Views

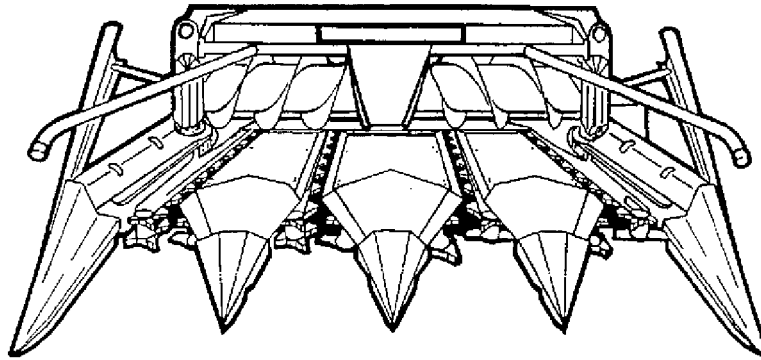


-JUN-31MAR95

CC000250

CC000250

 664 Row-Crop Header

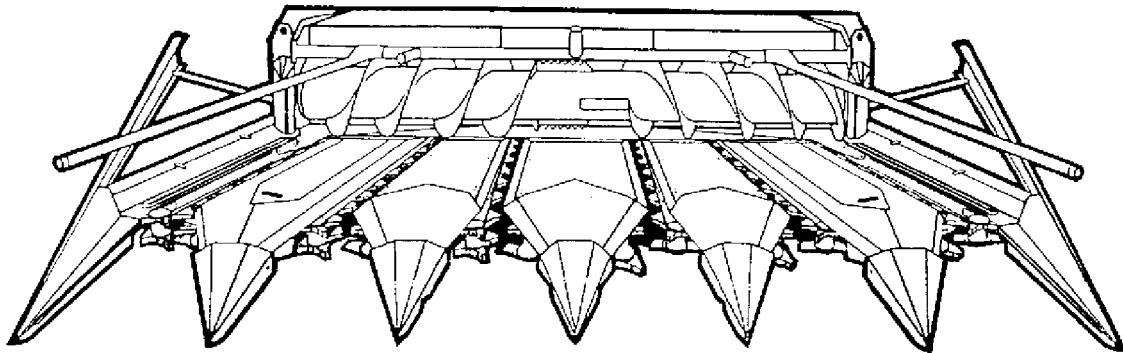

-JUN-31MAR95

CC 000533

CC000533

666 Row-Crop Header


CC,666RC 001051-19-10MAY93

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

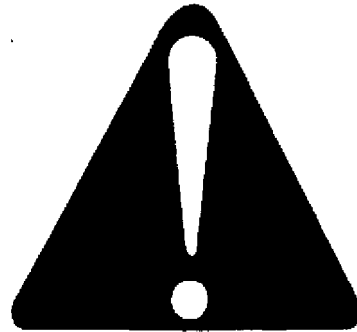

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

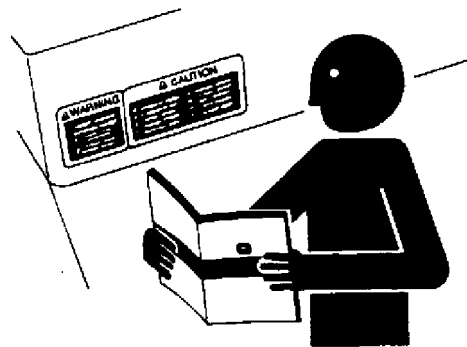

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93


TS219 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

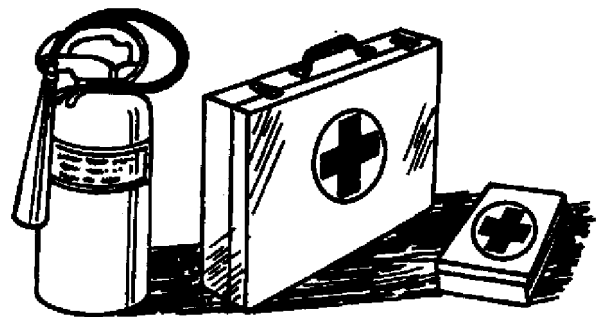

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

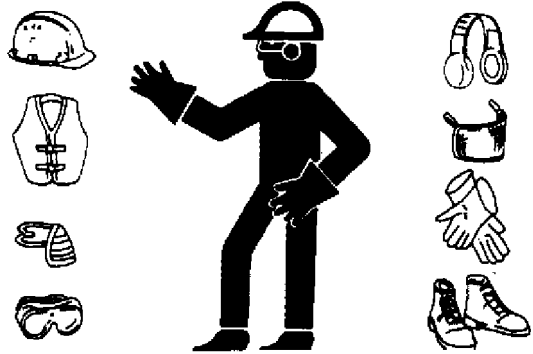

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.


FX,READY -19-28FEB91

GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

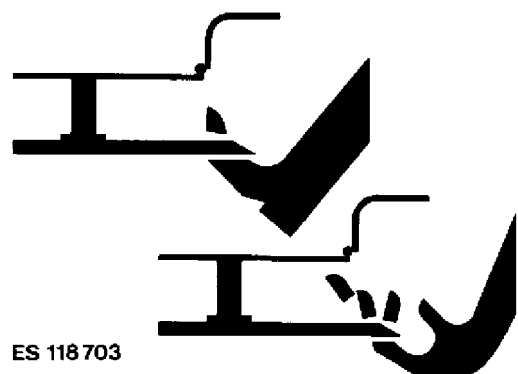

ES 118 703

FX,DEVICE -19-04DEC90


ES118703 -UN-21MAR95



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

 Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

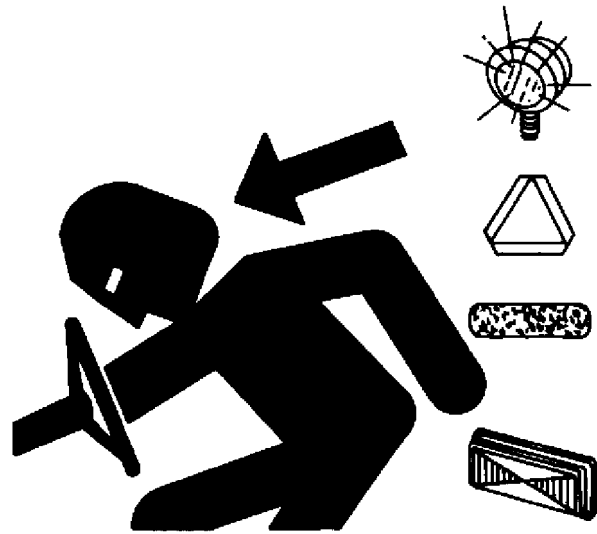

DX,FLASH -19-07JUL99

TS951 -UN-12APR90

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the forage harvester before starting the engine.



FX,KNIFE -19-21DEC90

TS254 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.




DX,SERV -19-04FEB99

TSS218 -UN-23AUG88

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

 Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

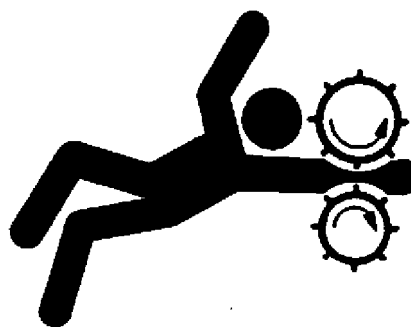

DX,LOOSE -19-04JUN90

TSS228 -UN-23AUG88

 


SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a tractor, always follow safety precautions listed in the implement operator's manual.

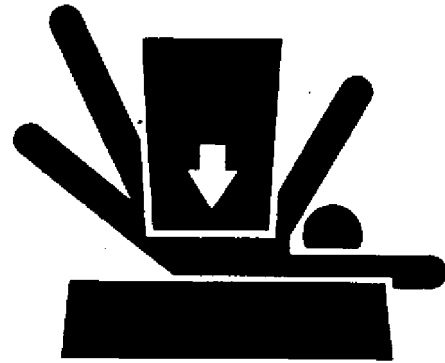


DX,LOWER -19-04FEB99

-UN-23AUG68
TS229

TRANSPORT WITH HARVESTING UNIT INSTALLED

 Before driving forage harvester on public roads, harvesting unit must be raised and secured in this position. It must not, however, obstruct operator's view of the road. Remove crop dividers (if equipped) and install protective cover.

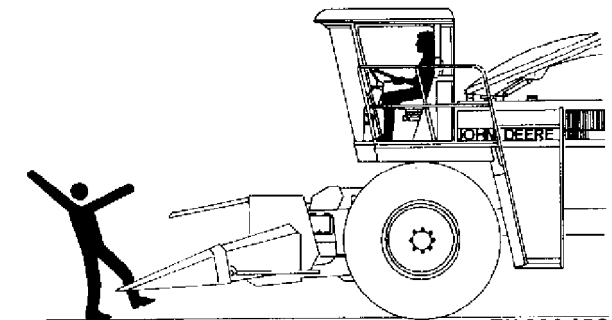


ZX 000452

ZX,HEADER -19-04DEC90

-UN-03APR95
ZX000452

BALLASTING FOR SAFE GROUND CONTACT

 Operating, steering and braking performance of forage harvester can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the harvester at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

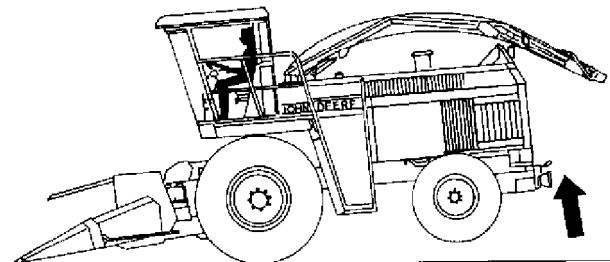

ZX 000453

ZX,WEIGHT -19-02OCT91

-UN-03APR95
ZX000453

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>