

# **680 Series Drawn Chisel Plow**

**John Deere Des Moines Works  
OMN200613 Issue K7  
(This manual replaces OMN200419 K6)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



-UN-12APR94

N42150HR

# Contents

	Page		Page
<b>Safety</b>			
Recognize Safety Information . . . . .	05-1	<b>Attaching and Detaching</b>	
Understand Signal Words . . . . .	05-1	Attaching Machine Safely . . . . .	30-1
Follow Safety Instructions . . . . .	05-1	Marking Hose Connections . . . . .	30-2
Operate Safely . . . . .	05-2	Attach	
Keep Riders Off Machine . . . . .	05-2	Chisel Plow to 8000 and 9000 Series	
Prepare for Emergencies . . . . .	05-2	Tractor . . . . .	30-3
Wear Protective Clothing . . . . .	05-3	Safety Chain to Tractor . . . . .	30-4
Handle Chemical Products Safely . . . . .	05-3	Warning Light Plug . . . . .	30-4
Use Safety Lights and Devices . . . . .	05-4	Checking	
Use a Safety Chain . . . . .	05-4	Wing Fold Operation . . . . .	30-5
Transport Safely . . . . .	05-5	Depth Control Operation . . . . .	30-5
Tow Loads Safely . . . . .	05-6	Detaching Machine from Tractor . . . . .	30-6
Service Chisel Plow Safely . . . . .	05-7	Detaching Hydraulic Hoses-8000/9000	
Practice Safe Maintenance . . . . .	05-7	Series Tractors . . . . .	30-8
Remove Paint Before Welding or Heating . . . . .	05-8	Restoring Hitch Control . . . . .	30-9
Avoid Heating Near Pressurized Fluid		<b>Transporting</b>	
Lines . . . . .	05-8	Attach Safety Chain to Tractor . . . . .	35-1
Avoid High-Pressure Fluids . . . . .	05-9	Using Warning Lights . . . . .	35-1
Support Raised Equipment . . . . .	05-9	Attaching Warning Light Plug . . . . .	35-2
Store Attachments Safely . . . . .	05-10	Keep Riders Off Machine . . . . .	35-2
Safety Signs . . . . .	10-1	Positioning Tractor Drawbar for Transport . . . . .	35-2
<b>Identification</b> . . . . .	15-1	Positioning Jack for Transport . . . . .	35-3
<b>Preparing the Tractor</b>		Locking Up Depth Control . . . . .	35-3
Determining Tractor Requirements . . . . .	20-1	Transporting the Machine . . . . .	35-4
Preparing Hydraulic System . . . . .	20-1	<b>Operating the Machine</b>	
Preparing Hydraulic System (8000 and		Keep Riders Off Machine . . . . .	40-1
9000 Series Tractors) . . . . .	20-2	Follow Safe Operating Procedures . . . . .	40-1
Securing Three-Point Hitch . . . . .	20-3	Tightening Hardware . . . . .	40-2
Positioning Drawbar . . . . .	20-3	Adjusting Spring-Reset Standards . . . . .	40-2
Use a Safety Chain . . . . .	20-3	Operating Guidelines . . . . .	40-3
<b>Preparing the Machine</b>		Understanding the Hydraulic Depth	
Checking and Lubricating Chisel Plow . . . . .	25-1	Control System (Series) . . . . .	40-4
Checking		Operating Depth Consistency—Flexible	
Tire Pressure . . . . .	25-1	Fold Machines . . . . .	40-6
Wheel Bolts and Bearings . . . . .	25-2	Understanding TOUCHSET Depth Control	
Tightening Hardware . . . . .	25-2	(8000 and 9000 Series Tractors) . . . . .	40-7
		Preparing to Operate Machine in Field . . . . .	40-9

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMN200613 K7-19-29SEP97

COPYRIGHT© 1997  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996, 1995, 1994 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page		Page
Setting Single Point Depth Control . . . . .	40-12	Troubleshooting TOUCHSET Depth Control System	
Setting and Operating TOUCHSET Depth Control-8000/9000 Tractors . . . . .	40-14	8000 and 9000 Series Tractors . . . . .	50-5
Adjusting		Troubleshooting Flow Chart . . . . .	50-7
Single Point Depth Control and Indicator . . . . .	40-15	TOUCHSET . . . . .	50-8
TOUCHSET Depth Control Potentiometer and Indicator . . . . .	40-16	<b>Service</b>	
Level		Using Safe Service Procedures . . . . .	55-1
Adjustment Wrench . . . . .	40-16	Replacing Ground Engaging Tools . . . . .	55-1
Machines with Rigid Hitch . . . . .	40-17	Keep Service Area Clean . . . . .	55-2
Frame Front-to-Rear with Level Lift Hitch . . . . .	40-18	Service Tires Safely . . . . .	55-3
Frame Front-to-Rear with Floating Hitch . . . . .	40-19	Torque Charts	
Wings—Flexible Fold Models . . . . .	40-20	Metric Series . . . . .	55-4
Wings—Rigid Horizontal Fold Models . . . . .	40-21	Inch Series . . . . .	55-5
Wings—Floating Hitch . . . . .	40-21	Checking	
Adjusting Folding Cylinder		Wheel Bolts and Bearings . . . . .	55-6
Linkage—Horizontal Fold Models . . . . .	40-22	Tire Pressure . . . . .	55-6
Setting Wing Stops—3.3 m (11 ft) . . . . .	40-23	Adjusting Spring-Reset Standards . . . . .	55-7
Adjusting		Standard Spacing Diagrams	
Wing Fold Operation—3.3 m (11 ft) . . . . .	40-23	3.4 m (11 ft) to 4.6 m (15 ft)—305 mm (12 in.) . . . . .	55-8
Stabilizer Wheels . . . . .	40-24	3.2 m (10 ft 8 in.) to 4.1 m (13 ft 4 in.)—406 mm (16 in.) . . . . .	55-9
Replacing Tools . . . . .	40-24	5.2 m (17 ft) to 6.4 m (21 ft)—305 mm (12 in.) . . . . .	55-10
Replacing Twisted Shovels . . . . .	40-24	5.6 m (18 ft 4 in.) to 6.4 m (21 ft)—406 mm (16 in.) . . . . .	55-11
Tightening Hardware . . . . .	40-25	7.0 m (23 ft) to 8.2 m (27 ft)—305 mm (12 in.) . . . . .	55-12
Adjusting Sweep Pitch Angle . . . . .	40-25	7.4 m (24 ft 2 in.) to 8.2 m (27 ft)—406 mm (16 in.) . . . . .	55-13
Adjusting and Folding Coil Tine Harrow . . . . .	40-25	8.8 m (29 ft) to 10.1 m (33 ft)—305 mm (12 in.) . . . . .	55-14
<b>Lubrication and Maintenance</b>		9.0 m (29 ft 4 in.) to 10.5 m (34 ft 4 in.)—406 mm (16 in.) . . . . .	55-15
Grease . . . . .	45-1	9.4 m (31 ft) to 10.7 m (35 ft)—305 mm (12 in.) . . . . .	55-16
Alternative and Synthetic Lubricants . . . . .	45-2	9.3 m (30 ft 8 in.) to 11.0 m (35 ft 10 in.)—406 mm (16 in.) . . . . .	55-17
Lubricant Storage . . . . .	45-2	11.3 m (37 ft) to 12.5 m (41 ft)—305 mm (12 in.) . . . . .	55-18
Beginning and End of Season . . . . .	45-2	11.2 m (36 ft 8 in.) to 12.8 m (42 ft)—406 mm (16 in.) . . . . .	55-19
Lubrication Symbols . . . . .	45-3	Floating Hitch Standard Spacing Diagrams	
Lubricate		7.0 m to 8.2 m (23 ft to 27 ft)—305 mm (12 in. Spacing) . . . . .	55-20
Hitch Jack . . . . .	45-3		
Rockshaft Bearings . . . . .	45-3		
Wheel Bearings . . . . .	45-4		
Level Lift Hitch Turnbuckle . . . . .	45-4		
Stabilizer Wheels and Adjustment Ratchets (If Equipped) . . . . .	45-4		
Wing Depth Adjusting Screws . . . . .	45-5		
Wheel Pivots of Floating Hitch (If Equipped) . . . . .	45-5		
<b>Troubleshooting</b>			
Recommendations for Working Hard Soils . . . . .	50-4		

Continued on next page



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

Contents

	<b>Page</b>	<b>Page</b>
Floating Hitch Standard Spacing		
Diagrams—Continued		
7.3 m to 8.2 m (24 ft 2 in. to 27 ft)—406 mm (16 in. Spacing) . . . . .	55-21	
8.8 m to 10.1 m (29 ft to 33 ft)—305 mm (12 in. Spacing) . . . . .	55-22	
9.0 m to 10.5 m (29 ft 4 in. to 34 ft. 4 in.)—406 mm (16 in. Spacing) . . . . .	55-23	
9.4 m to 10.7 m (31 ft to 35 ft)—305 mm (12 in. Spacing) . . . . .	55-24	
9.4 m to 11 m (30 ft 8 in. to 35 ft 10 in.)—406 mm (16 in. Spacing) . . . . .	55-25	
11.3 m to 12.5 m (37 ft to 41 ft)—305 mm (12 in. Spacing) . . . . .	55-26	
11.2 m to 12.8 m (36 ft 8 in. to 42 ft)—406 mm (16 in. Spacing) . . . . .	55-27	
Preventing Contamination . . . . .	55-28	
Removing Hydraulic Cylinders . . . . .	55-29	
Installing and Bleeding Wing Fold Cylinders . . . . .	55-30	
Depth Control and Wing Fold Hydraulic Diagrams		
3.4 m to 6.4 m (11 ft to 21 ft)—Depth Control . . . . .	55-31	
5.2 m to 6.4 m (17 ft to 21 ft)—Wing Fold . . . . .	55-32	
7 m to 10.4 m (23 ft to 34 ft 4 in.)—Depth Control . . . . .	55-33	
7 m to 10.4 m (23 ft to 34 ft 4 in.)—Wing Fold . . . . .	55-35	
9.3 m to 12.8 m (30 ft 8 in. to 42 ft) . . . . .	55-36	
9.3 m to 12.8 m (30 ft 8 in. to 42 ft)—Wing Fold . . . . .	55-38	
Checking Depth Control		
Hydraulic System . . . . .	55-39	
Cylinder Leakage . . . . .	55-40	
Diagnosis Chart for 3 Cylinder Depth Control System . . . . .	55-41	
Analyzing Test Results-Depth Control		
Internal Leakage Check . . . . .	55-42	
Depth Control Cylinders		
Installing . . . . .	55-43	
Bleeding . . . . .	55-44	
<b>Storage</b>		
Preparing for Storage . . . . .	60-1	
Removing from Storage . . . . .	60-1	
<b>Specifications</b> . . . . .	65-1	
		<b>Crime Prevention Tips . . . . . 70-1</b>
		<b>Index</b>