

750A Drill
(3 m, 6 m)
(From Serial No. 600427)

John Deere Werke Zweibrücken
OMZ92740 Issue L8

European Version
Printed in Germany
ENGLISCH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS DRILL IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS DRILL SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this drill will relieve the manufacturer of all liability for any resulting damage or injury.

Predelivery Inspection

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Identification Views	00-1	Storing ESC connector	25-7
Safety	05-1	Storing hydraulic hoses and wiring harness	25-7
Safety Decals	10-1	Transporting	
Operator's manual	10-1	Emptying drill for road travel	30-1
Maintenance and repair	10-1	Attaching parking brake lever rope	30-1
Folding outer units	10-1	Transporting the drill	30-2
Locking outer units	10-2	Transport width	30-4
Unfolding the outer units	10-2	Hydraulic trailer brake	30-5
Markers	10-2	Trailer air brake	30-6
Access ladder and platform	10-2	Trailer air brake valve	30-7
Locking the openers	10-3	Compressed air tank	30-7
Avoid high-pressure fluids	10-3	Brake cylinder for air brake	30-8
Preparing the Tractor		Brake pressure test port	30-8
For all tractors	15-1	Engaging parking brake	30-9
Rockshaft selector	15-2	Operating the Machine	
Link lengths	15-2	Guidelines for use	35-1
Sway blocks	15-3	Adjusting opener depth	35-2
Selective control valve	15-3	Hydr. down-pressure®closed-center hydraulics	35-3
Pre-conditions	15-4	Hydr. down-pressure®open-center hydraulics	35-5
Hydraulic fan drive system diagram	15-5	Adjusting press and closing wheel down force	35-7
Adjusting metering valves	15-6	Adjusting seed boots	35-9
Using lever lock clip (50®55 Series Tractors)	15-8	Installing the boot spring	35-9
Installing lever lock clip (50®55 Series Tractors)	15-9	Adjusting closing wheel	35-10
Preparing the Machine		Folding up outer units (6-m version only)	35-11
Checking tire pressure	20-1	Folding/Unfolding track markers	35-12
Installing tractor front-end weights	20-1	Opening seed hopper cover	35-12
Lubricating the drill	20-1	Adjusting the track markers	35-13
Attaching and Detaching		Operating the Pneumatic Drill System	
with quick-coupler (two-point hitch only)	25-1	General description	36-1
without quick-coupler (two-point hitch only)	25-2	Adjusting hydraulic fan speed	36-1
Hydraulic and electrical connections	25-3	Reading the setting of the metering device	36-2
Connecting drill to tractor	25-4	Calibrating the drill	36-3
Detaching drill from tractor	25-6		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

 
OMZ92740 L8-19-01NOV98

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Calibrating with the micrometering system . . .	36-5	Alternative and synthetic lubricants	50-2
Calibration chart (Normal seed)	36-6	Lubrication symbol	50-2
Calibration chart (Fine seed)	36-7	Locking up the openers	50-3
Adjusting the tramlines	36-7	Every 10 hours	50-3
Track widths	36-8	Annually	50-3
Tramlining	36-8	Service intervals	50-5
Tramline rhythms	36-9		
Checking the drill	36-11	Troubleshooting	
Operating the drill in the field	36-12	Openers	55-1
Checking the sowing operation	36-12	Opener down pressure system	55-3
Select correct ground speed, maintain fan speed	36-13	Pneumatic drill system	55-5
Turning with the drill	36-13	Electronic seed-drill control (ESC)	55-7
Emptying seed hopper and metering device	36-14	Hydraulic fan drive	55-9
Treated seed	36-14		
When not in use	36-15	Service	
		Service tires safely	60-3
Electronic Seed-Drill Control (ESC)		Preventing contamination	60-3
Safety	40-1	Removing and repairing cylinders	60-4
Component parts of the ESC	40-1	Laying the hydraulic lines	60-5
Specifications	40-2	Bleeding air from cylinders	60-6
Function	40-3	Opener control hydraulic diagrams	60-7
Signal distribution box	40-4	Cleaning the drill	60-10
Installation	40-5	Checking wheel bolt/bearings	60-10
Operation and description of keypad	40-6	Locking-up the openers	60-11
Alarm signals	40-6	Replacing/adjusting disk blades and bearings	60-13
Initial operation	40-7	Inspecting boots and blades	60-15
Input and changing of data	40-7	Replacing seed deflector and boots	60-16
Key in working width	40-8	Repairing gauge wheel assembly	60-17
Key in drive wheel impulses per 100 m	40-8	Checking gauge wheel clearance	60-17
Key in tramlining rhythm	40-9	Replacing opener arm pivot bushings	60-18
Allocation of tramlining rhythm	40-10	Repairing closing wheel assembly	60-19
Tramlining rhythm manual correction	40-12	Repairing press wheel assembly	60-21
Rhythms with remainder	40-13	Adjusting ESC sensors	60-23
Key in fan speed	40-13	Adjusting land wheel reed switch	60-23
Calibrating with the ESC	40-14		
Function keys	40-15	Storage	
Control keys	40-17	Preparing drill for storage	65-1
Data on the display	40-18	Storing the pneumatic drill system	65-1
Un-coupling the drill	40-19	Removing drill from storage	65-2
Attachments		Specifications	
Open-center tractor	45-1	Tractor recommendations	70-1
Open-center change valve	45-1	Specifications	70-1
Track marker electromagnetic-valves	45-1	Serial number plate	70-2
Wheel chocks	45-1	Serial number	70-3
Road light kit	45-2		
		Index	
Lubrication and Periodic Service			
Grease	50-1		

Identification Views

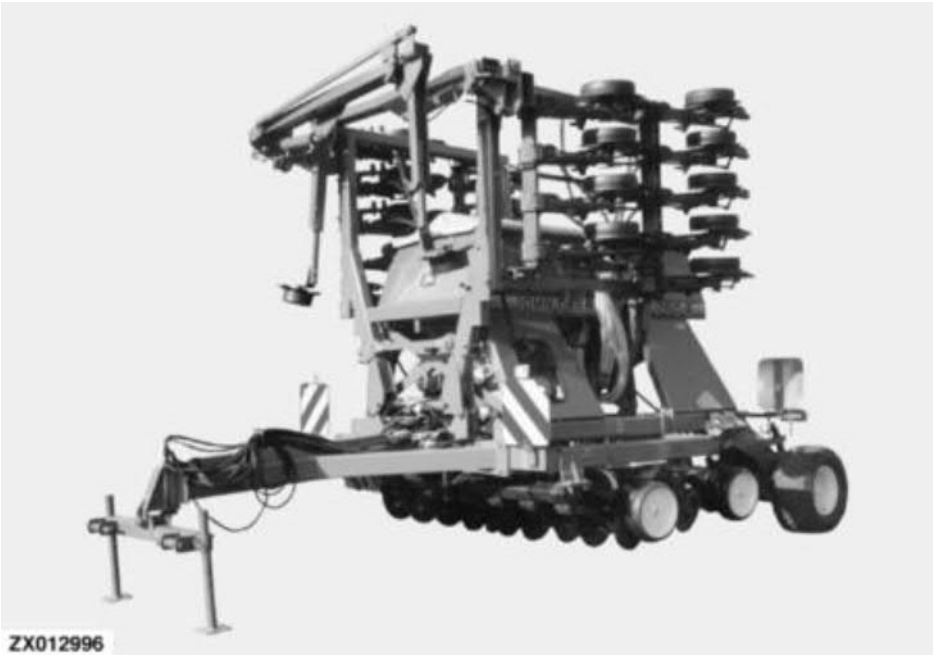

750A Drill, 6 m Version



750A Drill, 3 m Version


ZX_OM750A010172-19-01NOV97

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

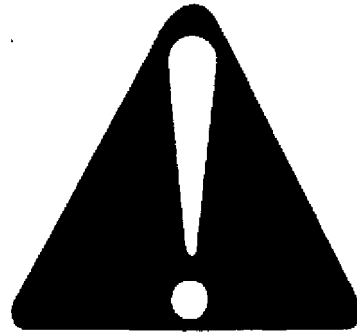

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

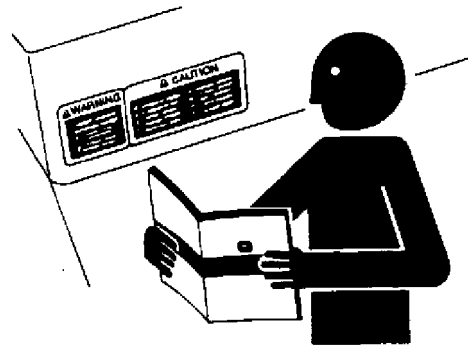

DX,READ -19-03MAR93


TS201 -UN-23AUG88



OPERATE SAFELY

Always keep hands away from opener blades during opener adjustment.

 Always lock-up opener lift cylinder(s) before performing any maintenance or adjustments under machine.

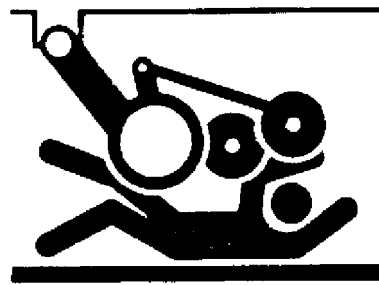

N39627 -UN-22SEP88

 
N39645 -UN-06OCT88

NX,750,C4 -19-21MAR89

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

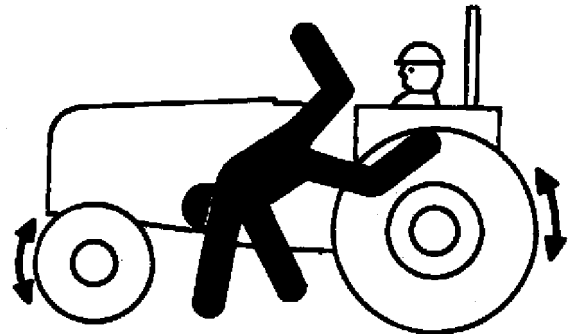

TS290 -UN-23AUG88

 
DX,RIDER -19-03MAR93

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

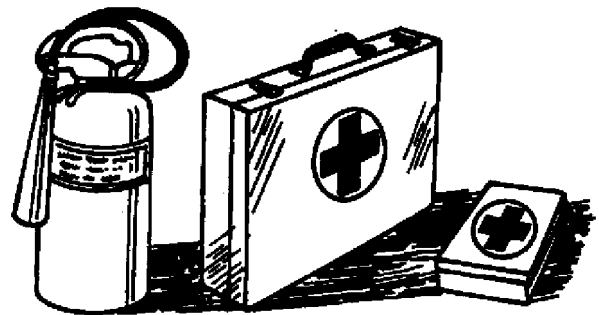

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

 
Thank you so much for reading



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

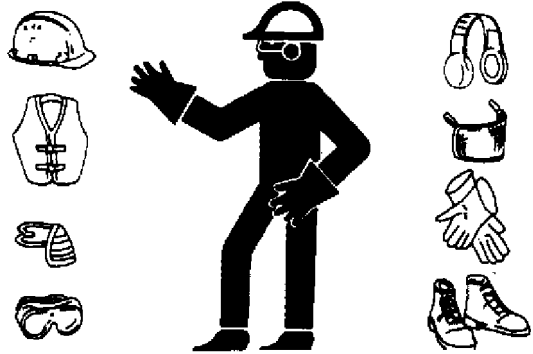


DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG68

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

 Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

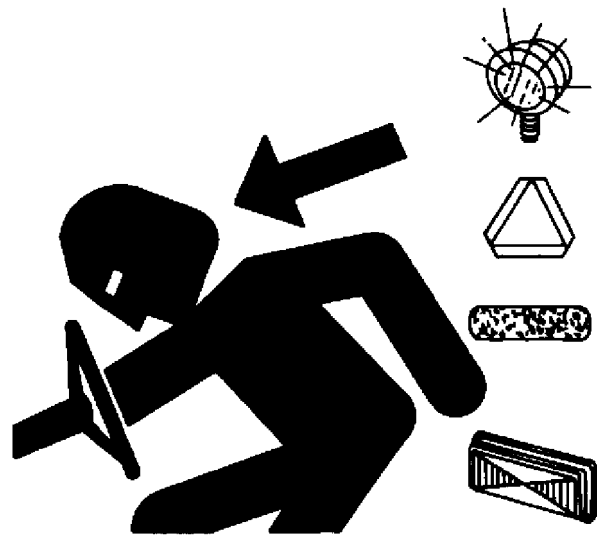

DX,FLASH -19-04FEB99

TS951 -UN-12APR90



TRANSPORT SAFELY

Shift tractor into lower gear when transporting down steep slopes or hills.

 
Make sure reflectors and SMV emblem are easily visible from rear.

Stop slowly.

Always empty all seed and/or fertilizer before transporting drill. DO NOT exceed 16 km/h (10 mph) if drill is not empty.

Always lock-up opener lift cylinder(s) before transporting drill. Hydraulic failure can allow openers to fall rapidly.

If the drill is equipped with marker arms, make sure that arms are locked in raised position before transporting drill.

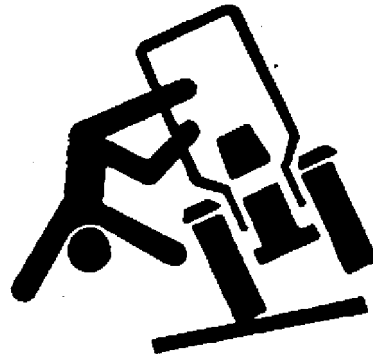

N39084 -UN-30MAR89

ZX,750,C5 -19-01JUL95

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>