

1600A Mower-Conditioner

**John Deere Ottumwa Works
OME83188 Issue J3**

LITHO IN U.S.A.
ENGLISH

Contents

	Page		Page
Safety	05-1	Producing Uniform Windrows:	
Safety Signs	10-1	Augers	35-4
Preparing the Tractor		Conditioner	35-4
Adjusting the Drawbar	15-1	Cutterbar	35-5
Attaching Hitch to Drawbar	15-1	Gauge Shoes and Carrier Frame	
Checking Ballast	15-2	Height	35-5
Selecting Tractor PTO Speed	15-2	Ground Speed	35-5
Setting Hydraulic Outlets	15-2	Knife Hold-Downs	35-6
Tractor Electrical Hookup	15-3	Knife Overlap	35-6
Changing 3-Pin Convenience Outlet to		Platform Float	35-6
Socket Outlet	15-3	Platform Guard Angle	35-7
Using Drawbar Shield	15-4	Reel	35-7
Preparing the Mower-Conditioner		Cutting	
Checking Tire Inflation	20-1	Alfalfa	35-8
Checking Wheel Bolt Torque	20-1	Grass	35-9
Attaching and Detaching		Tall Crop	35-10
Attaching Mower-Conditioner to Tractor		Attachments	40-1
Hitch	25-1	Lubrication and Maintenance	
Detaching Mower-Conditioner from		Lubrication	
Tractor Hitch	25-2	Grease	45-1
Attaching Mower-Conditioner with		Hydrostatic Drive Oil	45-2
Three-Point Hitch	25-3	Knife Drive Case Oil	45-2
Detaching Mower-Conditioner with		As Required	45-3
Three-Point Hitch	25-5	Every 10 Hours	45-3
Transporting	30-1	Every 50 Hours	45-6
Operating the Mower-Conditioner		Maintenance	
Prestarting Checks	35-1	Checking Bolt Torque	45-8
Breaking in the Mower-Conditioner	35-2	Checking Tire Inflation	45-9
Engine RPM and Ground Speed	35-2	Checking Wheel Bolt Torque	45-9
Opening a New Field	35-3	Troubleshooting	50-1
Turning in Field	35-3	Service	
Dirt or Mud Buildup	35-4	Practice Safe Service Procedures	55-1
		Unplugging Machine	55-1
		Working on Hydrostatic System	55-1
		Tightening Bearing Locking Collars	55-2

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME83188 J3-19-25FEB97

COPYRIGHT© 1993
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Adjusting:		Electrical	
Auger to Upper and Lower Stripper		Wiring Harness - Warning lights	55-48
Clearance	55-2	Hydraulic	
Auger to Center Stripper Clearance	55-2	Hydraulic Drive Diagram	55-49
Carrier Frame Height	55-3	Hydraulic Steering and Lift Diagram	55-50
Conditioner Roll Sprockets	55-6	Phasing Cylinders	55-51
Conditioner Roll Adjusting Bolt	55-6	Reel Teeth	
Conditioner Roll Pressure	55-7	Replacing Right-Hand and Center	
Conditioner Roll Spacing	55-8	Section	55-51
Conditioner Roll Timing	55-9	Replacing Left-Hand Section	55-52
Guard Angle	55-10	Storage	60-1
Guard Angle—Electric Guard Angle		Specifications	65-1
Controller	55-11	Crime Prevention Tips	70-1
Gauge Shoes	55-12	Index	
Platform Float	55-13		
Reel	55-14		
Reel Cam	55-15		
Reel Speed	55-17		
Reel Cam Followers	55-18		
Wheel Bearings	55-19		
Windrow Width	55-19		
Cutterbar			
Timing Knives	55-20		
Removing Knives	55-21		
Installing Knives	55-21		
Installing Regular Guards	55-22		
Installing Non-Clog Guards	55-29		
Adjusting Regular Knife Hold-Down	55-31		
Adjusting Non-Clog Knife Hold-Downs	55-32		
Knife Sections	55-32		
Replacing Bolt-On Knife Sections	55-33		
Replacing Center Knife Sections	55-34		
Sharpening Knife Sections	55-35		
Drive Belts			
Adjusting Knife Drive Belt (Both Sides)	55-35		
Adjusting Reel Drive Belt	55-35		
Adjusting Auger Drive Belt	55-36		
Adjusting Platform Drive Belt	55-36		
Aligning Knife Drive Belt	55-36		
Care of V-Belts	55-37		
Replacing Knife Drive Belt (Both Sides)	55-38		
Replacing Reel Drive Belt	55-38		
Replacing Platform Drive Belt	55-39		
Replacing Auger Drive Belt	55-40		
Drive Chains			
Installing O-Ring Connector Link	55-42		
Care of Chains	55-43		
Adjusting Auger Drive Chain Tension	55-44		
Replacing Auger Drive Chain	55-44		
Replacing Conditioner Drive Chain	55-45		

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

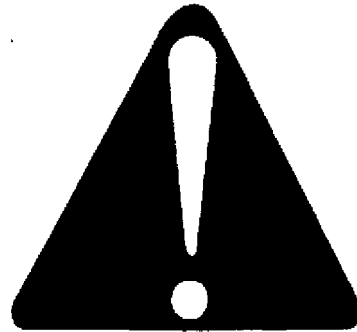

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

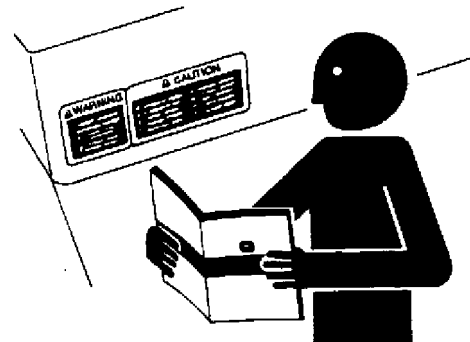

DX,READ -19-03MAR93

TS201 -UN-23AUG88



OPERATE MOWER-CONDITIONER SAFELY

Be sure bystanders stand clear before operating mower-conditioner.

Provide sufficient weight to stabilize tractor when operating on hilly land or other adverse conditions.




EX,1600C,A -19-12JUL90

TS265
-UN-23AUG88

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

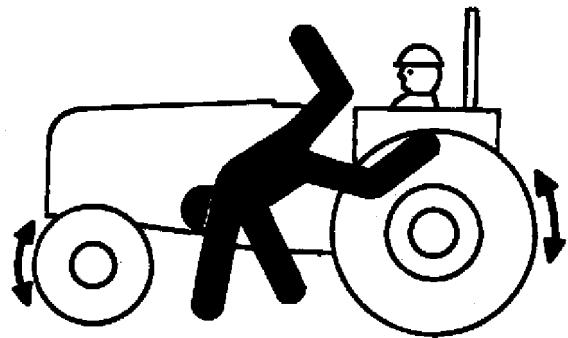

DX,RIDER -19-03MAR93


TS290
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

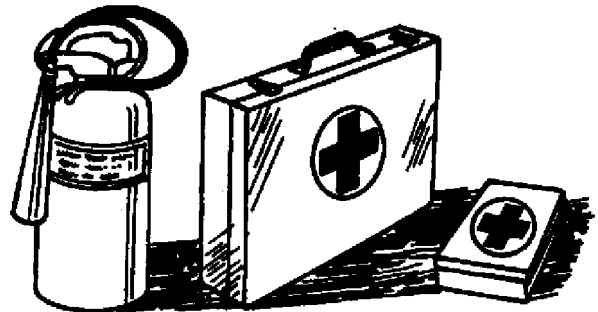


DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

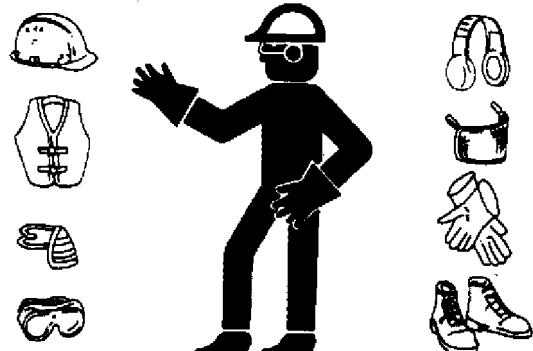

DX,WEAR2 -19-03MAR93

TS206
-UN-23AUG88



HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX,NOISE -19-03MAR93

TS207 -UN-23AUG88

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-03MAR93

TS198 -UN-23AUG88




USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

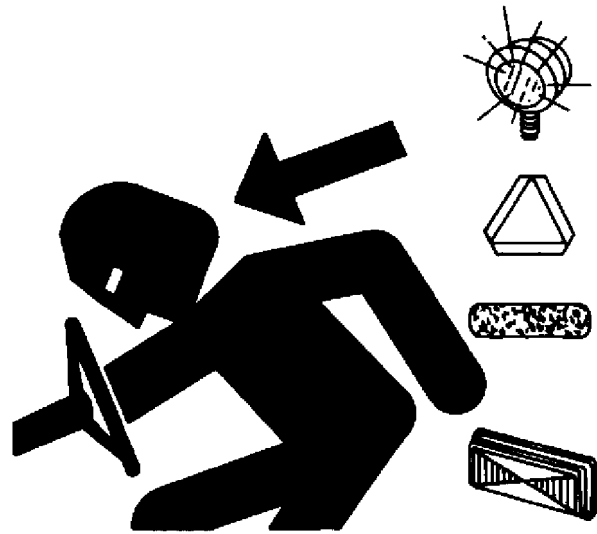

DX,FLASH -19-15MAR93


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

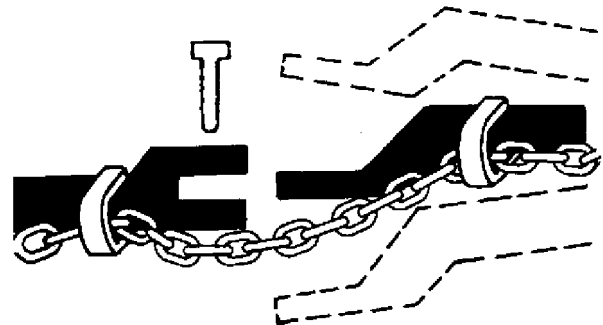

DX,CHAIN -19-03MAR93

TS217 -UN-23AUG88




REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.
- Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

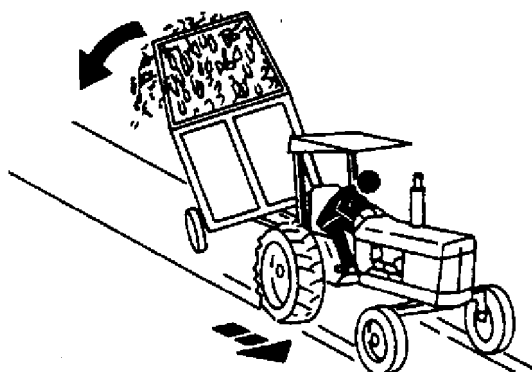

DX,TOW -19-03MAR93

TS216 -UN-23AUG88

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS216 -UN-23AUG88



REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

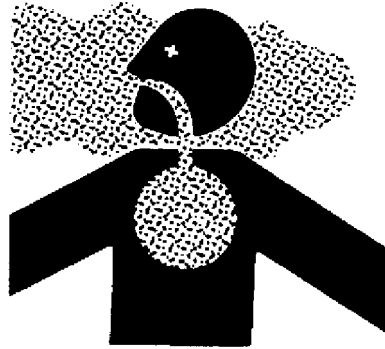

DX,PAINT -19-03MAR93

TS220 -UN-23AUG68

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

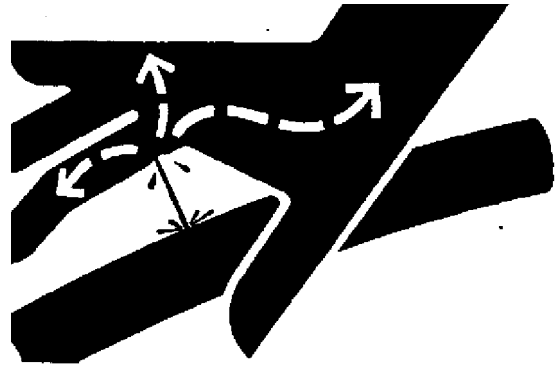

X9811 -JUN-23AUG88

DX,FLUID -19-03MAR93

DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

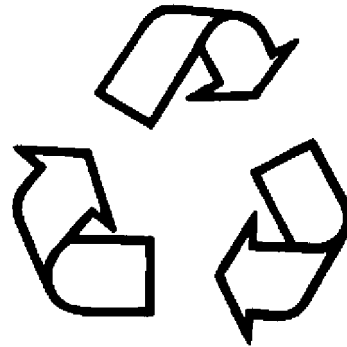


TS1133 -JUN-26NOV90

DX,DRAIN -19-03MAR93

Safety Signs




E35998 -UN-16JUL91

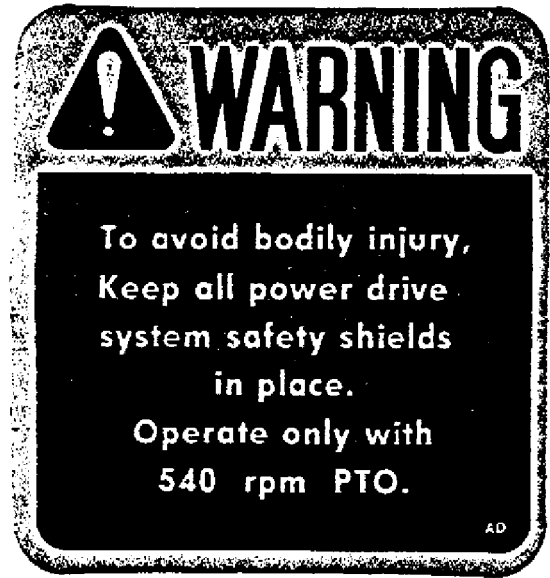

EJD5438 -19-15JUL91

(A)

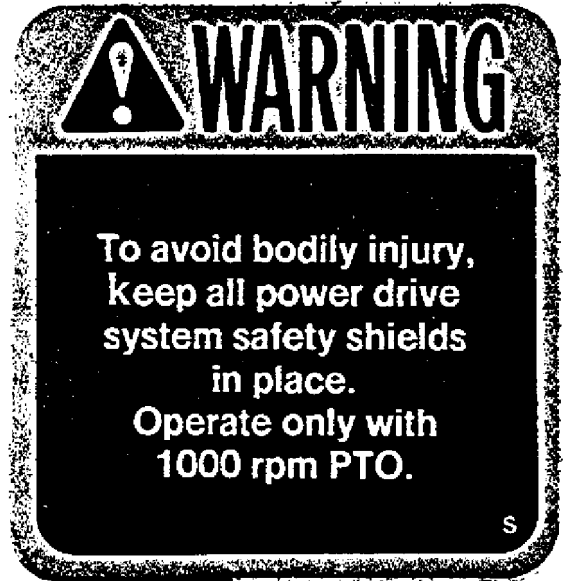

EJD5439 -19-15JUL91

(A)

EX,1600Z,D -19-01JUL91

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>