

**3100, 3200,
3300 and 3400
Tractors**

**DCEO-Mannheim
RT6005012380 Issue B6**

Printed in France
ANGLAIS

Contents

	Page		Page
Identification Views	00-1	Parking the tractor	40-4
Safety	05-1	Towing the tractor	40-5
Safety Decals	10-1	Operating the Tractor	
Controls and Instruments		Reduce fuel consumption	45-1
Dash panel	15-1	Warning concerning steering	45-3
Operator's station	15-2	Transmission controls	45-3
Cab roof controls	15-2	Transmission types	45-4
Indicator lights	15-3	Changing gears	45-5
Instruments	15-5	Changing ranges	45-5
Lights	20-1	Shifting gears from neutral	45-5
Operator's Cab/Platform		Reverse drive lever	45-6
Roll-over protective structure	25-1	Splitter	45-6
Operator's seat	25-4	Front-wheel drive axle	45-7
Passenger seat	25-5	Differential lock	45-7
Opening the doors and windows	25-6	Brakes	45-8
Windshield wiper	25-7	Ground travel speed	45-9
Rear view mirrors	25-7	3100 and 3200	45-10
Heating and ventilation	25-8	3300 and 3400	45-14
Radio	25-9	Rockshaft and Three-Point Hitch	
Break-In Period		Rockshaft control	50-1
After the first 4 and 8 hours of operation	30-1	Remote control	50-2
After the first 30 hours of operation	30-2	Position control	50-2
Within the first 100 hours of operation	30-2	Load control	50-3
After the first 100 hours of operation	30-2	Mixed control	50-4
After the first 250 hours of operation	30-3	Float position	50-4
Prestarting Checks	35-1	Three-point hitch	50-5
Operating the Engine		Center link adjustment	50-6
Starting the engine	40-2	Lift links	50-7
Cold-weather starting aids	40-3	Draft links	50-8
Booster battery	40-4	Stabilizers	50-9
Engine warm-up period	40-4	Hitch configuration	50-11
		Power Take-Off	
		PTO guard	55-1
		Operating the rear PTO	55-2
		Speed selector	55-3
		Attaching PTO-driven equipment	55-4

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

RT6005012380 B6-19-01APR96

COPYRIGHT© 1996
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1995 Deere & Company

Contents

	Page		Page
Operating from stationary position	55-4	Service intervals	85-5
Front PTO	55-5	Service - Daily or Every 10 Hours	
Ballast		Engine crankcase oil level	90-1
Selecting ballast	60-1	Fuel filter	90-1
Measuring rear wheel slip	60-2	Transmission/hydraulic oil level	90-2
Filling tires with liquid ballast	60-3	Coolant level	90-3
Front weights	60-4	Cleaning the dust unloading valve	90-3
Rear wheel weights	60-5	Checking the lights	90-3
Wheel Tread, Tires		Service - Every 50 Hours	
Tire maintenance	65-1	Lubricating the FWD axle	95-1
Tire pressures	65-2	Checking oil level in front PTO housing	95-1
Tire combinations with front-wheel drive	65-3	Service - Every 250 Hours	
Front wheel tread adjustment		Changing engine oil	100-1
Without FWD axle	65-4	Replacing engine oil filter	100-1
With FWD axle	65-5	Checking tension on alternator belt	100-2
Steering stops	65-8	Replacing the transmission oil filter	
Adjusting rear wheel tread	65-8	element	100-3
Dual rear wheels	65-10	Bleeding the transmission/hydraulic circuit	100-3
Additional Equipment		Vehicle clutch — free travel at pedal	100-4
Selective control valves	70-1	PTO clutch — free travel at lever	100-5
Couplers	70-4	Lubricating the brakes	100-5
Maximum permissible oil withdrawal	70-5	Checking hardware at front of tractor	100-6
Hitches	70-6	Lubricating the front axle (not FWD)	100-7
Power outlet socket for electrical		Oil level at FWD axle housing	100-7
equipment	70-9	Oil level in final drives (FWD axle)	100-7
Transport		Lubricating the three-point hitch	100-8
Driving on public roads	75-1	Lubricating the pick-up hitch	100-8
Towing loads	75-2	Changing oil in front PTO	100-9
Towing the tractor	75-3	Service - Every 500 Hours	
Trailer brakes	75-3	Replacing the fuel filter	105-1
Fuel, Lubricants, Hydraulic Oil and Coolant		Air intake hoses	105-1
Fuel	80-1	Replacing the intake screen	105-2
Engine oil	80-2	Replacing the breather in the	
Transmission/hydraulic oil	80-3	transmission/hydraulic circuit	105-2
FWD axle oil	80-3	Check free travel at brake pedals	105-3
Grease	80-4	Service - Every 750 Hours	
Engine coolant	80-6	Checking engine speeds	110-1
Lubrication and Periodic Service		Replacing the cab air filter	110-1
Removing the side panels	85-1	Important note on transmission/hydraulic	
Access to battery	85-1	oil	110-1
Access to fuses	85-2	Changing the transmission/hydraulic oil	110-2
Alternator	85-2	Service - Every 1000 Hours	
Service during break-in period	85-3	Changing oil in FWD axle housing	115-1

Continued on next page

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

	Page
Changing oil in final drives of FWD axle . . .	115-1
Service - Every 1500 Hours or 2 Years	
Replacing the coolant	120-1
Service - As Required	
Air cleaner (engine)	125-1
Cleaning the front and side grilles	125-2
Cleaning the radiator	125-2
Battery service	125-2
Bleeding the fuel circuit	125-3
Cleaning the cab air filter	125-3
Lubricating points	125-3
Starting motor	125-4
Fuses	125-4
Replacing bulbs	125-6
Troubleshooting	
Hydraulic circuit	130-1
Engine	130-2
Electrical system	130-3
Storage	
Storage over lengthy period	135-1
Removing tractor from storage	135-2
Specifications	
Engine	140-1
PTO power output	140-2
Transmission	140-2
Hydraulic circuit	140-3
Electrical system	140-3
Capacities	140-4
Dimensions and weights	
Tractors without FWD axle	140-5
Tractors with FWD axle	140-7
Sound level	140-9
Weights	140-9
Load capacity of tires	140-10
Serial Numbers	145-1
Lubrication and Maintenance Records . . .	150-1
Index	

Identification Views



FD000001

FD000001
-UN-21FEB95

3100 tractor, 2-wheel drive with cab



FD001646

FD001646
-UN-22MAR96

3100 tractor, 4-wheel drive with ROPS


FD,VIEW 003100-19-01FEB96

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

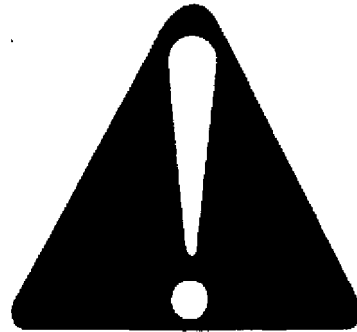

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

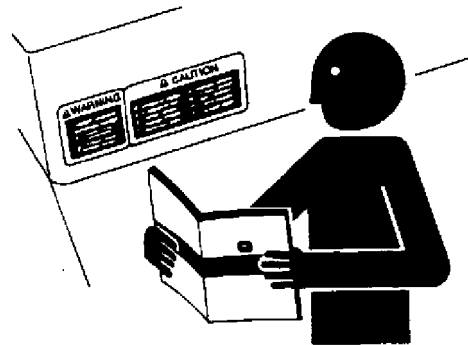

DX,READ -19-03MAR93

TS201 -UN-23AUG88



MOUNT AND DISMOUNT THE MACHINE SAFELY

Always use the access steps and handrails when mounting and dismounting the tractor.

Ensure that the access steps and operator's station are kept clean at all times. This will help prevent accidents.



FD,HANDLE -19-01APR94


TS279 -UN-23AUG88

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

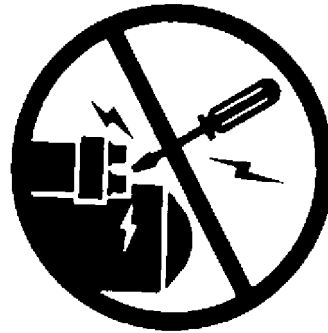


DX,BYPAS1 -19-03MAR93

TS177 -UN-11JAN89

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

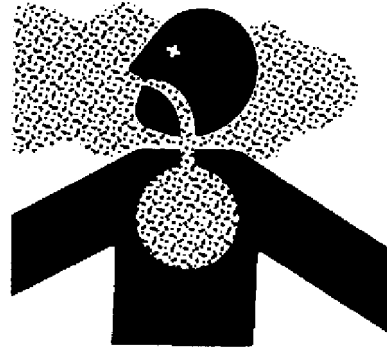


DX,AIR -19-04JUN90


TS220 -UN-23AUG88



OPERATING THE TRACTOR SAFELY

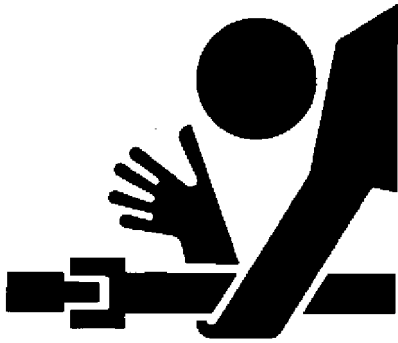

TS276 -UN-23AUG88

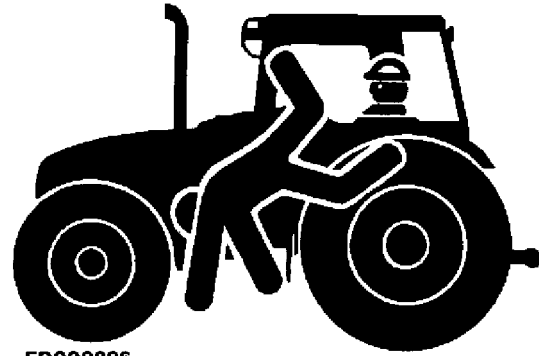

FD000286

FD000286 -UN-24JAN95

Careless use of the tractor can result in unnecessary accidents. Be alert to the hazards of tractor operation. Understand the causes of accidents and take every precaution to avoid them. Most common accidents are caused by:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

To avoid such accidents, it is vital to comply with the safety regulations described in this publication.

Keep riders off the machine


Only allow the operator on the machine. Keep riders off. On machines equipped with a passenger seat, one rider is permitted.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.


FD,HAZARD -19-02JUN94



DRIVING THE TRACTOR SAFELY

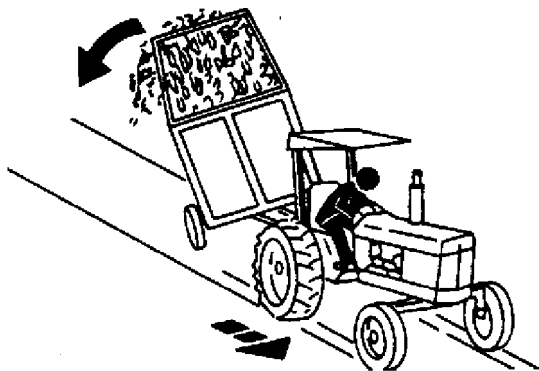

TS216 -JUN-23AUG88

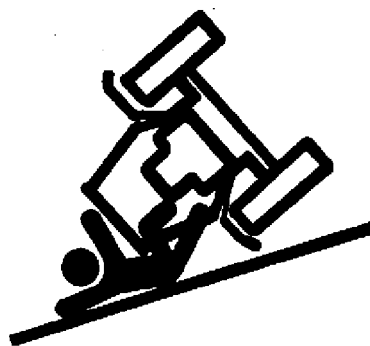

RW13093 -JUN-07DEC88

Always check the road and general operating safety of the machine before using.

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.

To limit the risks of overturning, set the tread width to the maximum suitable for the task. Comply with regulations restricting maximum width.

Make sure the tractor is ballasted properly for its intended task.

Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. When driving down slopes, never depress the clutch and change gear; use the same gear you would use to drive up the slope. Never coast downhill.

When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides. Never drive near the edge of a gully or steep embankment — it might cave in!

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Driving on public roads

It is vital to comply with road traffic regulations.

Before driving the tractor on a public road, make sure that the lights, turn signals and brake lights are functioning correctly. Never switch on the work lights while driving on public roads.

The brake pedals must be coupled together. Never apply the differential lock when driving on a road.

When transporting mounted implement(s), raise the rockshaft. If the implement is equipped with road wheels, use them.

Towing implements or trailers

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away. If trailer brakes are equipped, use them!

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers AS WELL AS the handbrake (the tractor is NOT necessarily immobilized when the transmission is in gear and the engine is switched off), remove main switch key and lock the operator's cab. Position chock blocks.

Never leave tractor unattended while the engine is still running.

Never leave the operator's seat when driving.



LX002510

LX002510 -UN-17JAN95

FD,PARK -19-01JUN94

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

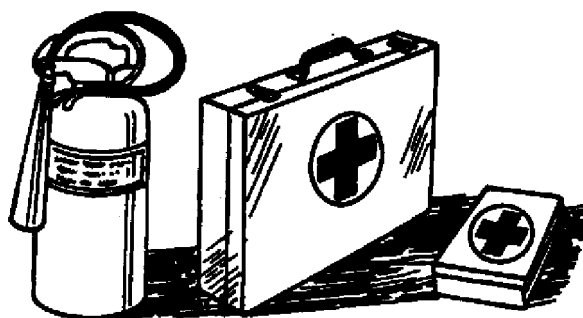

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

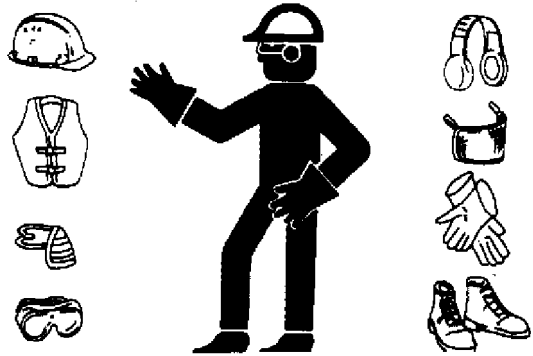

DX,WEAR -19-10SEP90


TS206 -UN-23AUG88

AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

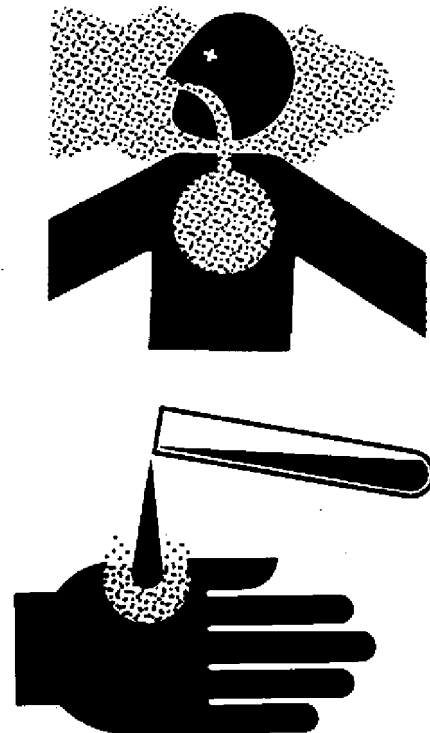

DX,CABS -19-03MAR93

TS220 -UN-23AUG88

TS272 -UN-23AUG88

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>