

3835 Integral Reversible Moldboard Plow

**Industrias John Deere, S.A. de C.V.
OMP57389 Issue J3**

LITHO IN U.S.A.
INGLES

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

Contents

	Page		Page
Safety	05-1		
General Safety Rules	05-2	Landsides for Side draft Control	35-4
Operator Manual	05-5	Shear-Bolt Standards	35-5
		Leveling mechanism	35-6
		Crank and Lift Alignment	35-7
Safety Signs			
Read Safety Signs Carefully	10-1	Lubrication and Maintenance	
Detaching Caution Decal	10-1		
Remote Cylinder Caution Decal	10-1	Trouble Shooting	
Preparing the Tractor		Service	
Tractor Size	15-1	Landside	50-2
Tire Pressure	15-1	Service at the beginning of the season	50-3
Rear Wheel Weighting	15-1		
Front end Weighting	15-2	Storage	
Importance of proper Adjustment	15-2	Keep your Plow prepared	55-1
Rear and Front wheel setting	15-3	Removing the Plow from Storage	55-1
Hydraulics	15-3		
Sway Blocks	15-3	Assembly	
Lateral Float	15-4	General Information	60-1
Lift Link and center link	15-4	Safety Reflector	60-1
		Frame with Standards	60-1
		Bottoms Installation	60-2
		Positions for Standar bolts	60-4
Preparing the Plow		Specifications	
Lubrication	20-1		
Bolts and set Screws	20-1	Serial Numbers	
Before going to field	20-2		
		Crime Prevention Tips	75-1
Attaching and Detaching		Index	
Attaching Plow to Tractor	25-1		
Use Correct Hose Tips	25-2		
Hydraulic Cylinder Hose installation	25-2		
Detaching Plow from Tractor	25-4		
Transporting			
Operation			
Before operating the Plow	35-1		
Leveling Mechanism	35-1		
Field adjusting Plow	35-1		
Raising and Lowering	35-3		
Depth of Plow	35-4		
Reversing the Bottoms	35-4		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMP57389 J3-19-03NOV93

COPYRIGHT© 1993
INDUSTRIAS JOHN DEERE S.A de C.V.
Monterrey, N.L.
All right reserved
A John Deere ILLUSTRATION™ Manual

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

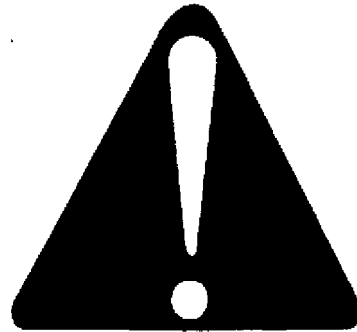

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

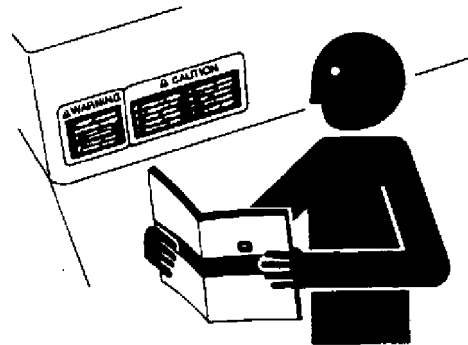

DX,READ -19-03MAR93

TS201 -UN-23AUG88



GENERAL SAFETY RULES

 
- 1.- To avoid injury, always be careful while operating a tractor and plow.
- 2.- For tractor stability and operator safety, tractor front end weights are required.
- 3.- Always lower the plow to the ground when not in use.
- 4.- Always lower the support stand to help support the plow before unhitching from the tractor.
- 5.- Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.
- 6.- Always park plow on flat level ground.
- 7.- Do not grease, oil, or adjust the plow while it is in motion.
- 8.- Drive slowly through gates and doors.
- 9.- Avoid traveling over loose field, rocks and holes.
- 10.- To avoid accidents, be sure no one is near plow when reversing.

PX,3945B,03 -19-28OCT93

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

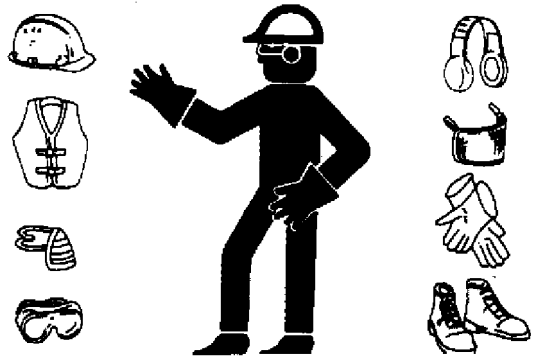

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

 
Thank you so much for reading



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

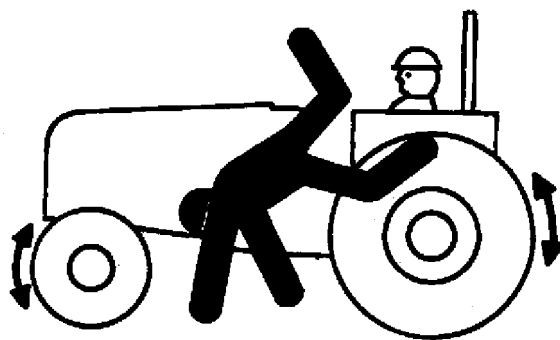

DX,RIDER -19-03MAR93


TS290
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

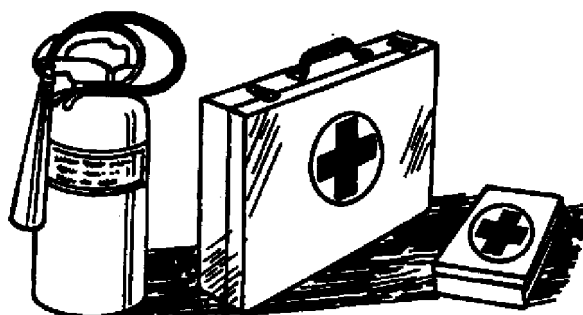

DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

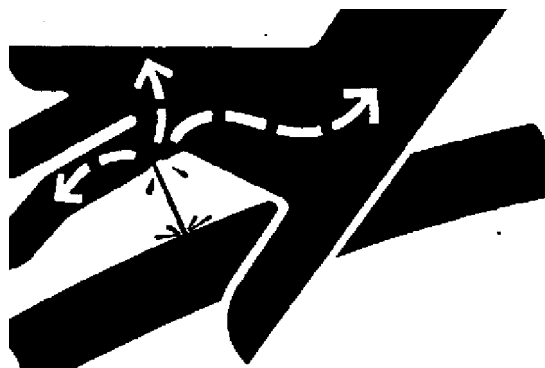

DX,FLUID -19-03MAR93

X9811
-UN-23AUG88




USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

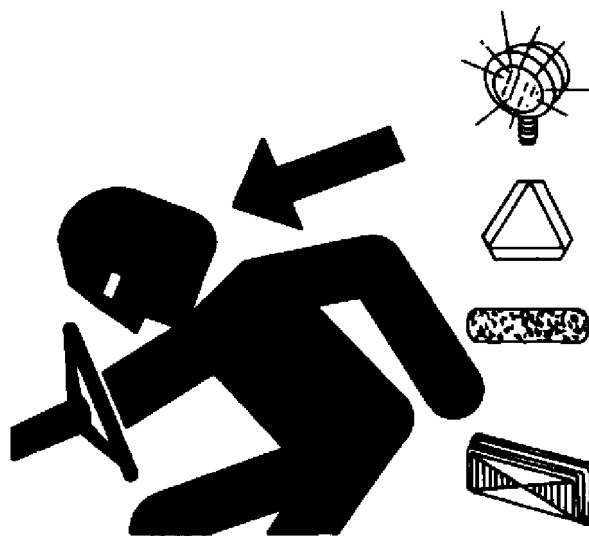

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>