

4890
Self-Propelled
Windrower

John Deere Ottumwa Works
OME87943 Issue B7

LITHO IN U.S.A.
ENGLISH

Contents

	Page		Page
Safety	05-1	Lights and Signals	
Break-In	10-1	Lights	
Operator's Station		Cab Interior	20-1
Cab Instruments and Controls	15-1	Control Switch	20-2
Overhead Instruments and Controls	15-2	Field Work	20-3
Control and Switch Colors	15-2	Field Work (Optional)	20-4
Armrest Control Panel	15-3	Turn Signal	20-5
Platform Function Controls	15-4	Hazard	20-6
Hydrostatic Drive Control Lever	15-5	Transporting and Daytime Running	20-7
Platform Drive Engage Switch	15-5	Auxiliary Lights Connector	20-8
Platform Drive Reversing Switch	15-6	Prestarting Checks	25-1
Platform Float Pressure Adjust	15-6	Operating the Engine	
Engine Speed Adjust	15-7	Prestarting Checks	30-1
Ground Speed Adjust	15-7	Checking Warning Lights	30-2
Corner Post Instrument Display	15-8	Engine Warm-up Period	30-3
Warning Display Panel	15-9	Starting the Engine	30-3
Fuel Gauge	15-9	After the Engine Starts	30-5
Engine Coolant Temperature Gauge	15-10	Stopping the Engine	30-6
Digital Tachometer and General		Battery	30-6
Information	15-10	Starting Fluid	30-7
Digital Display Operation	15-11	Hot Weather Operation	30-7
Heater and Air Conditioner Controls	15-12	Transporting the Windrower	
Air Louver Adjustment	15-12	Driving the Windrower	35-2
Windshield Wiper Switch	15-13	Towing the Windrower	35-7
Light Control Switch	15-13	Detaching and Attaching the Platform	
Cab Interior Lights	15-13	Detaching the Platform	40-1
Start Switch	15-14	Attaching the Platform	40-6
Horn	15-14	Operating the Windrower	
Turn Signals	15-15	Preparing for the Field	45-1
Steering Wheel Height Adjust	15-15	Raising and Lowering the Platform	45-3
Steering Column Tilt Adjust	15-16	Adjusting	
Storage Tray / Cab Air Filter	15-16	Caster Wheel Width	45-4
Operator's Manual Storage	15-16	Swath Flaps	45-5
Cab Storage Box	15-17	Platform Float	45-7
Cab Door Lock	15-17	Platform Guard Angle	45-9
Emergency Exit	15-17		
Cup Holder	15-18		
Personal Posture Air Suspension Seat	15-18		
Seat Belts	15-20		
Fire Extinguisher Recommendations	15-21		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME87943 B7-19-29SEP97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Engaging the Platform Drive	45-10	Engine	
Reversing the Platform	45-10	Compartment Door	65-1
Parking the Windrower	45-11	Tool Storage	65-1
Adding Ballast / 18' Platform	45-12	Drive Belt Shield	65-2
		Cleaning Compartment	65-2
Attachments (Optional)		Fuel Tank	
Field Lights	50-1	Fuel Tank, Cap and Breather	65-3
Windshield Wiper	50-1	Shutting Off Fuel Supply	65-3
AM/FM Stereo Radio	50-1	Draining Fuel Tank	65-4
		Fuel Delivery System	
Fuels—Coolants—Lubricants		Do Not Modify Fuel System	65-4
Diesel Fuel	55-1	Fuel Transfer Pump	65-5
Lubricity of Diesel Fuels	55-1	Draining Water From Fuel Filter	65-5
Fill Fuel Tank	55-2	Bleeding Fuel Filter	65-6
Fuel Storage	55-3	Changing Fuel Filter	65-7
Engine Coolant	55-4	Bleeding Pressure Line	65-7
Supplemental Coolant Additives	55-5	Bleeding Fuel Lines	65-8
Operating In Warm Temperature Climates	55-7	Checking And Setting Engine Speed	65-9
Testing Diesel Engine Coolant	55-7	Checking Fuel Injection Nozzles	65-10
Diesel Engine Oil	55-8	Engine Oil	
Oil Filters	55-8	Checking Oil Level and Adding Oil	65-10
Engine Break-in Oil	55-9	Changing Engine Oil	65-10
Hydrostatic/Hydraulic Oils	55-9	Changing Engine Oil Filter	65-11
Final Drives Lubricant	55-10	Air Filters	
Mixing of Lubricants	55-10	Cleaning Air Precleaner	65-11
Greases	55-11	Removing Air Filters	65-12
Capacities	55-11	Clean and Inspect Primary Filter	65-13
Lubricant Storage	55-12	Cooling System	
Alternative/Synthetic Lubricants	55-12	Filling Radiator	65-14
Filter Replacement Numbers	55-13	Winterizing Cooling System	65-15
		Flushing Cooling System	65-15
Lubrication and Maintenance		Thermostat	65-17
Lubrication Symbols	60-1	Cleaning Screen, Oil Cooler, Condenser and Radiator	65-18
Service Interval Display	60-2	Miscellaneous	
Service Intervals		Checking Engine Valve Clearance	65-19
Periodic Maintenance Label	60-3	Removing And Installing Serpentine Belt	65-20
Periodic Lubrication Label	60-4	Electrical System	
As Required	60-5	Observe Electrical Precautions	70-1
10 Hours	60-6	Fuse and Circuit Breaker Label	70-1
50 Hours	60-7	Component Location and Identification	70-2
100 Hours	60-8	Electrical System	
200 Hours	60-9	Circuit Breakers and Relays	70-6
250 Hours	60-10	Fuse and Relay Panel (Power Center)	70-7
400 Hours or Each Season	60-11	Electrical Connector Handling	70-8
600 Hours or Each Season	60-12	Starter Relay	70-9
800 Hours or Each Season	60-13	Starter	70-9
Each Season	60-14	Battery	70-10
2000 Hours or Every Other Season	60-15		
2000 Hours	60-16		

Continued on next page

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Electrical System—Continued		Steering—Brakes—Continued	
Power Source	70-10	Adjusting Steering/Hydrostatic Linkage	80-4
Alternator, Checking and Servicing	70-11	Parking Brake	80-6
Bulb Replacement		Rear Axle	
Replacing Bulbs (General)	70-12	Adjusting Rear Caster Wheel Width	80-7
Dome and Console Light	70-12		
Gauge Lights	70-12	Air Conditioning and Heating System	
Function Warning Lights	70-13	Air Conditioning / Heating	
Turn Signal Indicator	70-14	General Information	85-1
Rear Turn Signal—Warning Light, Side		Precautions	85-2
Marker Lights and Rear Flood Lig	70-14	Cleaning Filters	85-2
Cab Head Lights	70-15	Removing Fresh Air Filter	85-3
Flood Light (Rear/Side Optional)	70-15	Removing Pre-Cleaner	85-3
Battery—Servicing		Removing Recirculating Filter	85-4
Preventing Explosions	70-16	Removing Evaporator Filter	85-4
Preventing Acid Burns	70-16	Cleaning Air Intake Panel	85-5
Preventing Damage to Electrical		Cleaning Condenser	85-5
System	70-17	Checking Compressor and Belt	85-6
Checking Specific Gravity	70-17	Checking Refrigerant Level	85-6
Connecting Battery Cables	70-18	High Pressure Switch	85-7
Charging Batteries	70-19	Low Pressure Switch	85-7
Connecting Booster Cables	70-19		
Battery Replacement	70-20	Service—Miscellaneous	
Hydraulic System		Platform Pump Drive Belt	
Valve/Component Location/Function		Adjusting	90-1
Hydraulic System	75-1	Replacing	90-1
Hydraulic System Cleanliness	75-2		
Accumulator, Float System	75-2	Troubleshooting	
Hydraulic Valve Function/Location		Engine	95-1
Label	75-3	Air Conditioning	95-5
Platform Drive, Lift and Float	75-4	Heater	95-9
Ground Drive System	75-7	Drive System	95-10
Component Function	75-8	Lift and Float System	95-13
Releasing Accumulator/Float Pressure	75-10	Electrical	95-14
Servicing		Power Screen Cleaner	95-16
Checking Hydraulic Oil Level	75-10	Steering and Ground Speed Controls	95-17
Adding Hydraulic Oil	75-11	Throttle	95-18
Changing Hydraulic filters	75-11	Tires	95-18
Draining Hydraulic Reservoir	75-12	Brakes	95-18
		Seat	95-18
Wheels—Steering—Brakes—Rear Axle		Digital Display and Speed Monitoring	
Wheels		System	95-19
Servicing Tires Safely	80-1	Radio	95-20
Tire Inflation	80-1		
Checking Wheels	80-2	Storage	
Steering—Brakes		End of Season	100-1
Steering/Hydrostatic Controls and		Beginning of Season	100-2
Linkage	80-3		
		Assembly	105-1

Continued on next page

Contents

Page

Specifications

Unified Inch Torque Values 110-1
Metric Torque Values 110-2
Tightening O-Ring Fittings 110-3
Tightening Flare Type Fittings 110-3
Tightening O-Ring Flat Face Fittings 110-4
Engine 110-5
Hydrostatic Drive 110-6
Charge and Platform Lift 110-6
Hydraulic Platform Drive 110-6
Capacities 110-7
Operator's Cab 110-7
Electrical-Circuit Breakers 110-8
Electrical-Starter Relay 110-8
Electrical-Fuses 110-9
Tire Sizes and Pressures 110-10
Weight 110-10
Ballast 110-10
Dimensions 110-11

Serial Numbers

Serial Numbers
Plate 115-1
Windrower 115-1
Engine 115-1
Platform 115-2

Crime Prevention Tips 120-1

John Deere Service Literature Available

John Deere Service Keeps You On The Job


Index

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

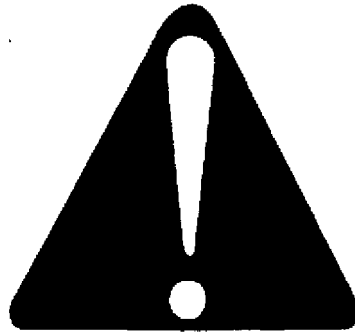

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

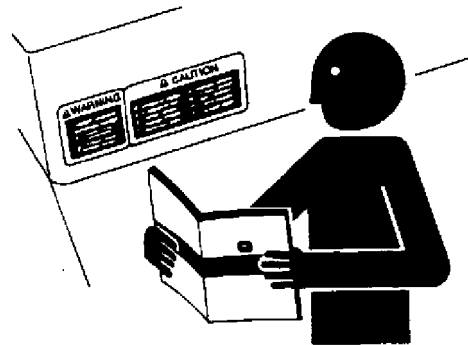

DX,READ -19-03MAR93

TS201 -UN-23AUG88




TRANSPORT WINDROWER WITH PLATFORM ATTACHED

For proper ballast and steering control, always drive the windrower with the platform attached.

Raise the platform before transporting platform.

Before moving the windrower, check surrounding area by machine for bystanders or obstructions. Use the horn as a warning immediately before driving away.

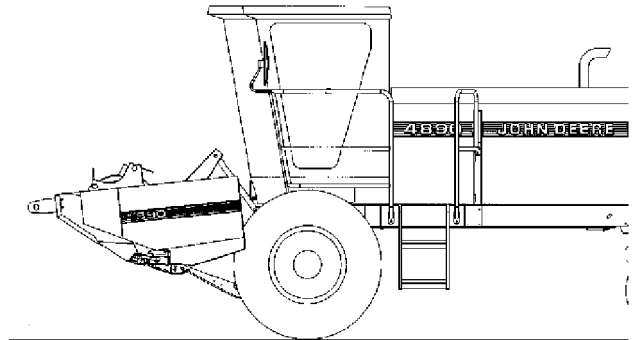


E41746 -UN-15NOV96

OME,4890,05,F -19-05FEB97

USE SEAT BELTS

Use the seat belt whenever you operate the windrower or ride as an observer.

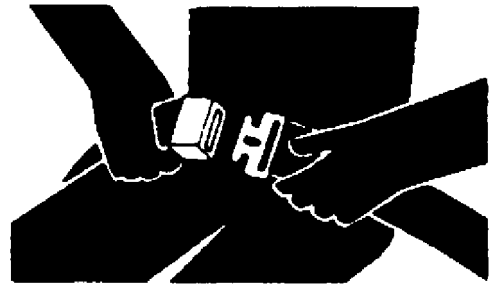

H47137

-UN-25OCT95
H47137

OME,4890,05,B -19-05FEB97




KEEP RIDERS OFF MACHINE

Keep riders off the machine.

Riders are subject to injury from being thrown off the machine into the platform or under the wheels.

Anyone riding must be in the observer's seat with seat belt fastened.

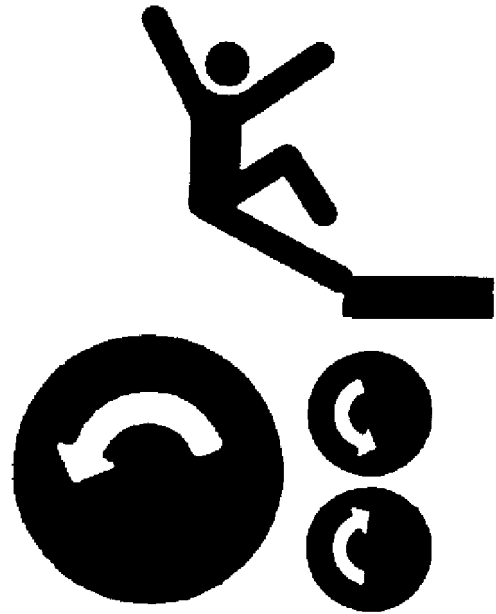


E41748 -UN-15NOV96

OME,4890,05,C -19-05FEB97

BALLAST FOR SAFE GROUND CONTACT

Operating, steering and braking performance of windrower can be considerable affected by the size of the platform used which alter the center of gravity of the windrower.

To maintain the proper ground contact, add ballast to the rear of the windrower as recommended for the platform in use.

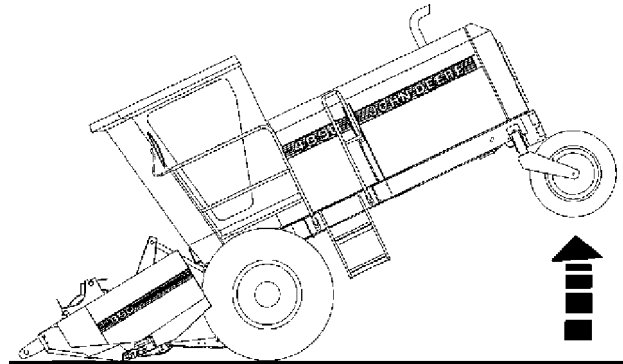

E41749 -UN-15NOV96

OME,4890,05,D -19-05FEB97




STAY CLEAR OF PLATFORM

Many moving parts such as the platform reel, cutterbar and augers cannot be completely shielded due to their function.

Stay clear of these moving parts during operation!

Always disengage platform drive, shut off the engine and remove the keys before servicing or unclogging the platform.

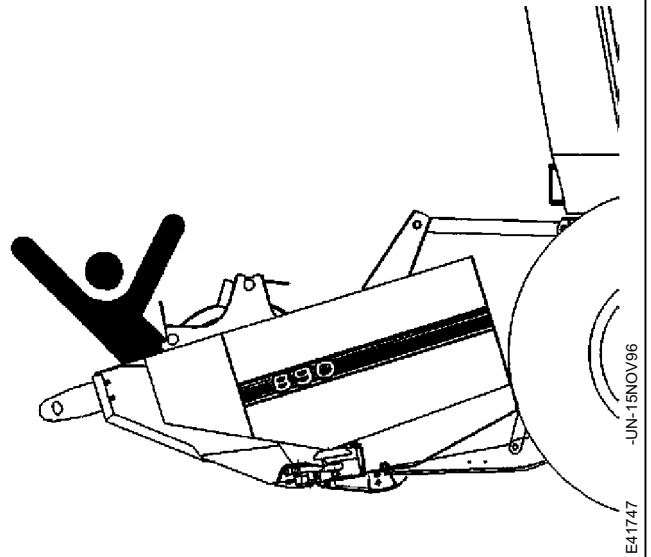

-UN-15NOV96

E41747

OME,4890,05,E -19-05FEB97

STAY CLEAR OF ROTATING DRIVELINE

Entanglement in rotating driveline can cause serious injury or death.

Keep shields covering the conditioner and engine drivelines in place at all times.

Wear close fitting clothing. Stop the engine, remove the keys and be sure driveline has stopped before servicing or making any adjustments to the drivelines or in the general area of the drivelines.



-UN-22AUG95

TS1644


OME,4890,05,G -19-05FEB97



PARK WINDROWER SAFELY


Before leaving the operator's station:

- Put hydrostatic drive lever in neutral.
- Disengage platform drive.
- Lower the platform to the ground.
- Turn off engine and remove keys.
- Check to see steering wheel is locked.
- Lock cab door.

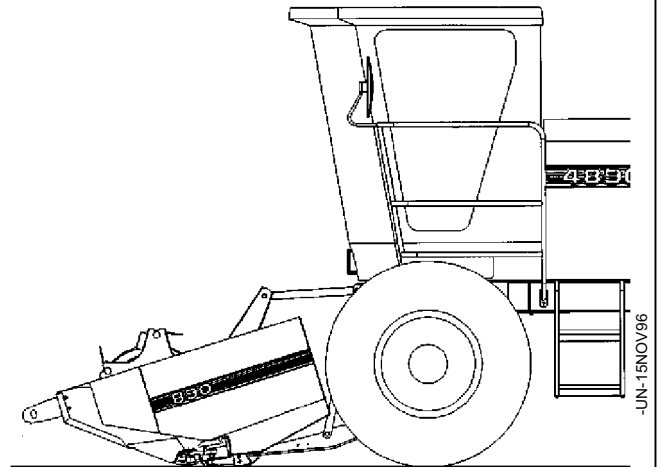

-UN-15NOV96

E41745

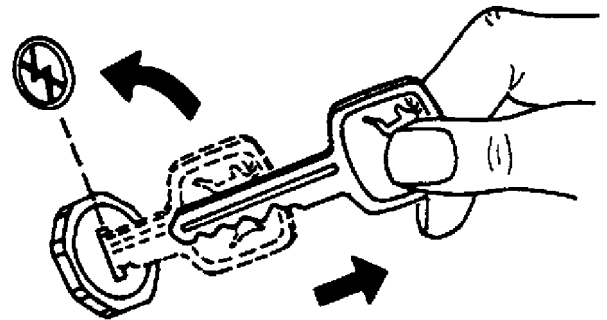

-UN-09MAY89


E25432

OME,4890,05,A -19-05FEB97

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

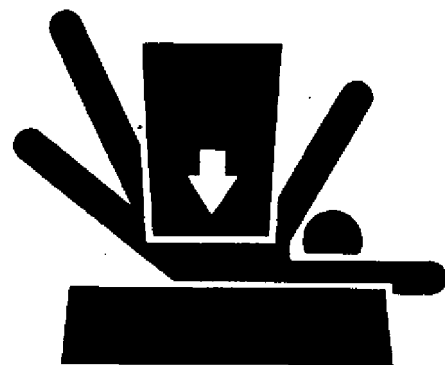

-UN-23AUG88

TS229

DX,LOWER -19-04JUN90




FREEING A MIRED MACHINE

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or cable failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a long chain or cable. Inspect the chain or cable for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

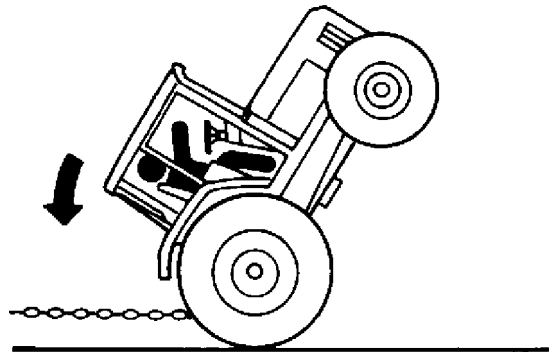

DX,MIRED -19-02OCT95

TS1645 -JUN-15SEP95

TS263 -JUN-23AUG88


TS177

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

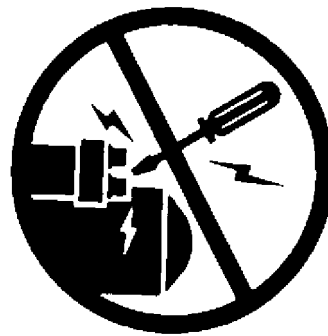

DX,BYPAS1 -19-03MAR93

TS177 -JUN-11JAN89



USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



-UN-08NOV69
TS779


DX,REPAIR -19-04JUN90

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

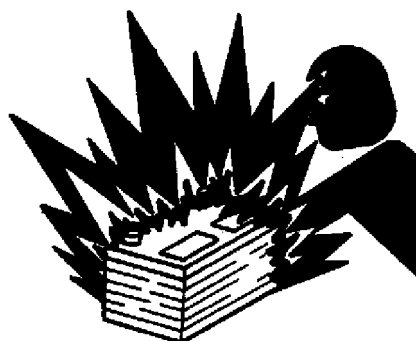

-UN-23AUG88
TS204

DX,SPARKS -19-03MAR93

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



-UN-23AUG88
TS202

DX,FIRE1 -19-03MAR93




PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

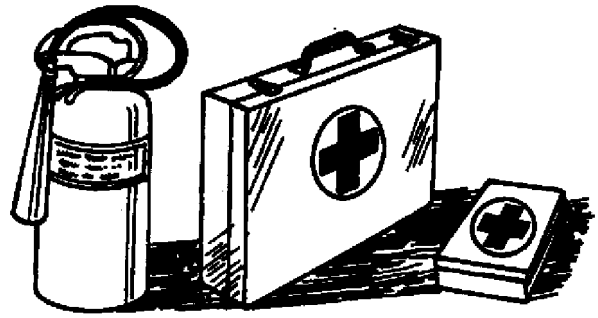

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG68

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92

TS1356 -UN-18MAR92



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

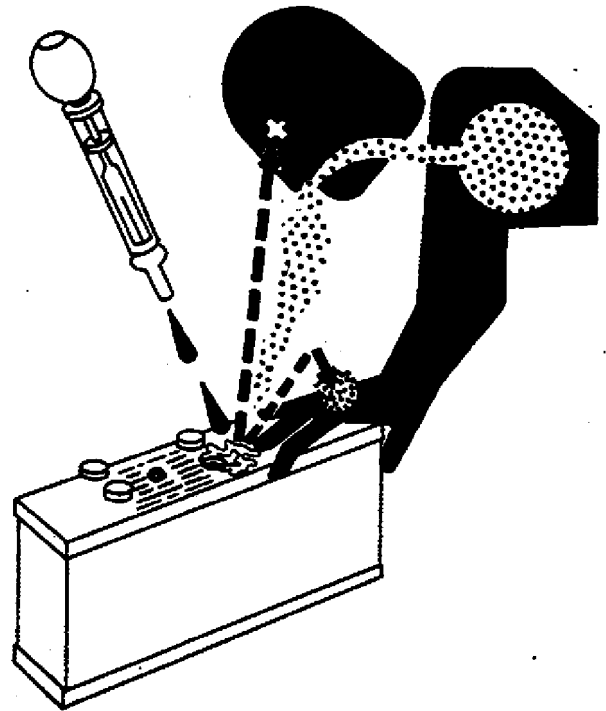

DX,POISON -19-21APR93

TSS203 -UN-23AUG88



SERVICE TIRES SAFELY


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

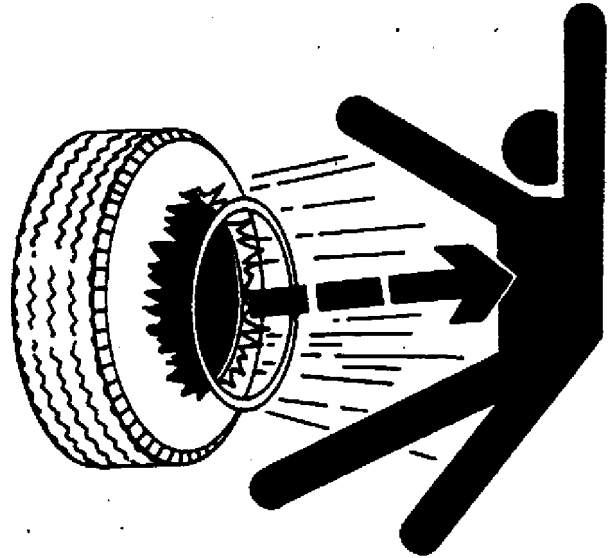

-UN-23AUG88

TS211

DX,RIM -19-24AUG90


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

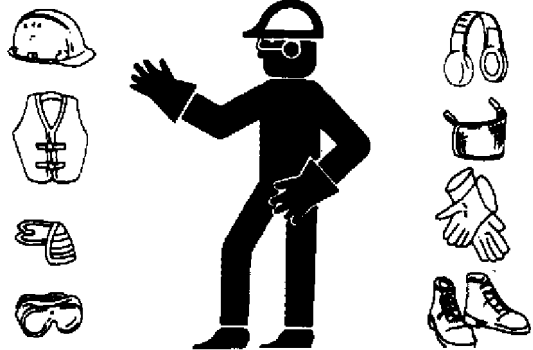

-UN-23AUG88

TS206

DX,WEAR -19-10SEP90



PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.




DX,NOISE -19-03MAR93

TS207 -UN-23AUG88

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

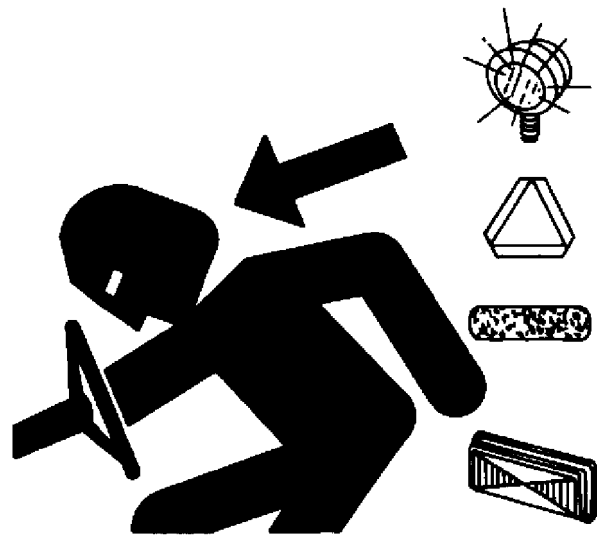

DX,FLASH -19-12SEP95

TS951 -UN-12APR90

SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP -19-04JUN90

TS281 -UN-23AUG88



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

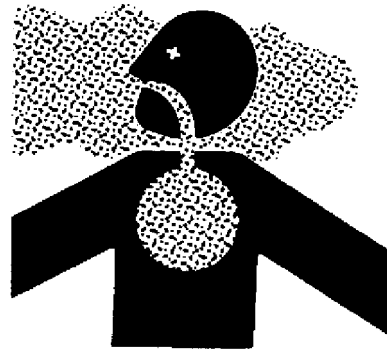

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

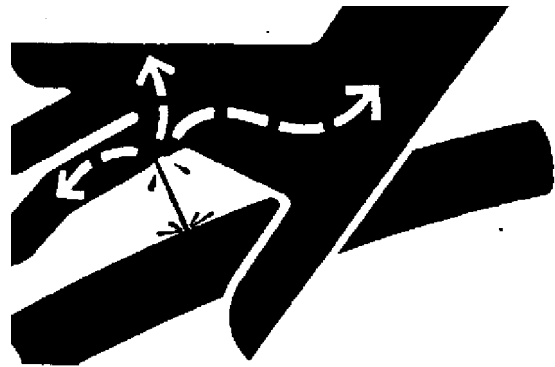

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88



DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

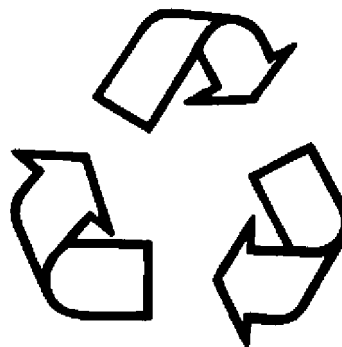

DX,DRAIN -19-03MAR93

TS1133 -UN-26NOV90

STORE ATTACHMENTS SAFELY


Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93

TS219 -UN-23AUG88

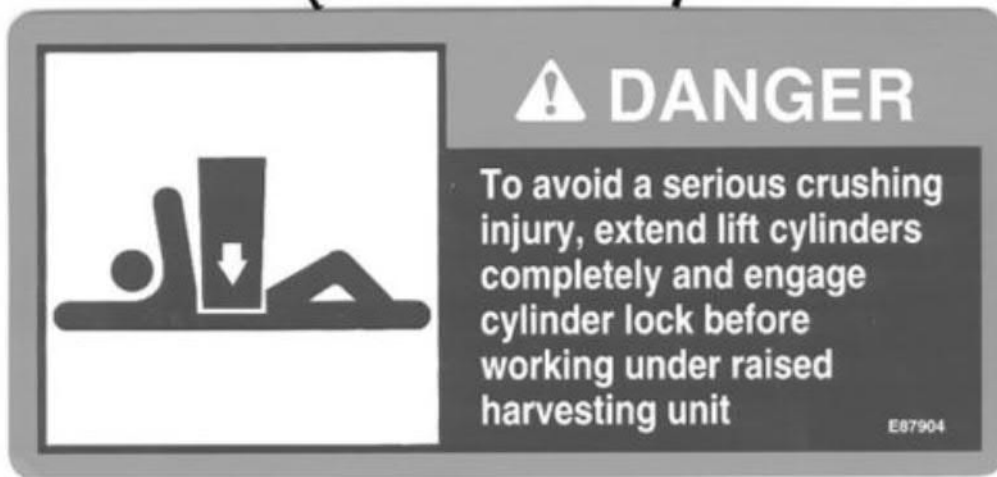

E39839 -19-07JAN97

OME,4890,005,B -19-05FEB97



! WARNING

1. Machine will move sideways if steering wheel is turned while engine is running, even though ground speed control lever is in neutral.
Be sure everyone is clear of machine before turning wheel.
2. Steering is opposite to normal when backing up. (Turn bottom of steering wheel in direction you want to go.)

E67906

! CAUTION

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet and clothing away from power-driven parts.

E62510

E39838 -19-07/JAN97

OME.4890.005.A -19-05FEB97



! WARNING

HELP PREVENT INJURY FROM UNEXPECTED MOVEMENT OF LIFT SYSTEM AND PLATFORM FROM FLOAT SYSTEM HYDRAULIC PRESSURE.

- Always relieve float system pressure before removing platform or servicing float system.



1. Lower platform to ground.
2. Reduce float system pressure until float pressure monitor is at zero.
3. Open float system accumulator bleed-off valve.



-19-07JAN97

E4-0502

OME.4890.005.F -19-05FEB97

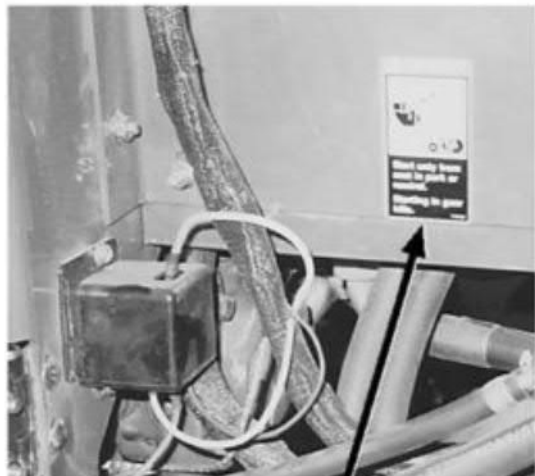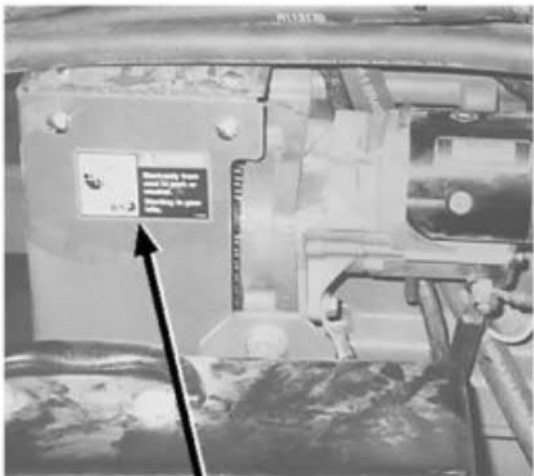

OME,4890,005,C -19-05FEB97

E39840 -19-07JAN97



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



E39841 -19-07 JAN97

OME,4890,005,D -19-05FEB97



OME,4890,005,E -19-05FEB97

E39842 -19-05FEB97

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>