

**6010, 6110, 6210,
6310 and 6410
Tractors**

**John Deere Werke Mannheim
OMAL116289 Issue E8**

Printed in Germany
ENGLISCH

Contents

	Page		Page
Identification Views	00-1	Seat belt	25-2
Safety	05-1	Operator's seat	25-3
Safety Decals	10-1	Windshield wiper	25-7
Controls and Instruments		Blower and air louvers	25-8
Vehicle controls	15-1	Heater	25-9
PTO and creeper controls	15-2	Air-conditioning system	25-9
Attachment controls	15-2	Cooling cans of drink	25-9
Heater and air conditioning controls	15-2	Storage rack	25-10
Operating the digital display	15-2	Dome and console lights	25-10
Indicator lights	15-3	Adjusting the steering wheel	25-10
Fuel gauge	15-4	Beacon light	25-10
Coolant temperature gauge	15-5	Adjusting the access step	25-11
Digital display	15-6	Cool box	25-11
Travel speed	15-7	Monitor installation	25-11
Engine speed	15-7	Cigarette lighter and ashtray	25-13
PTO speed	15-8	Roof hatch	25-13
Time of day (clock)	15-8	Break-In Period	
Operating hours	15-8	After the first 4 and 8 hours of operation	30-1
Gear	15-9	Within the first 100 hours of operation	30-1
Performance monitor	15-10	After the first 100 hours of operation	30-3
Data entry	15-11	Prestarting Checks	35-1
Operating	15-12	Operating the Engine	
Calibration	15-13	Starting the engine	40-1
Wheel slip	15-14	Electrical starting aid	40-2
Vehicle speed	15-15	Coolant heater	40-2
Service	15-16	Booster battery	40-3
Backlight brightness	15-17	Fuel preheater	40-3
Lights		Towing the tractor	40-5
H4 farm headlights	20-2	Parking the tractor	40-5
Light switch	20-2	Stopping the engine	40-6
Hazard warning lights	20-3	Operating the Tractor	
Turn signals and horn	20-4	Reduce fuel consumption	45-1
Work lights	20-4	Correct ground travel speed	45-3
Operator's Platform and Cab			
Roll-over protective structure	25-1		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAL116289 E8-19-01MAY98

COPYRIGHT© 1998
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1997 Deere & Company

Contents

	Page		Page
Travel speeds, SyncroPlus transmission	45-4	Tire combinations with front-wheel drive	65-18
Shifting SyncroPlus transmission	45-7		
Travel speeds, PowrQuad transmission	45-9	Additional Equipment	
Shifting PowrQuad transmission	45-15	Selective control valves	70-1
Shift positions, PowrQuad transmission	45-16	Control lever	70-3
Shifting PowrQuad Plus transmission	45-17	Couplers	70-5
Shifting AutoQuad transmission	45-18	Maximum permissible oil withdrawal	70-6
Engaging creeper transmission	45-19	Additional oil reservoir	70-8
Engaging front-wheel drive	45-20	Power Beyond valve	70-9
Differential lock	45-21	Remote hydraulic cylinder	70-9
Foot brakes	45-21	Swinging drawbar	70-11
		Trailer hitches	70-11
		Pick-up hitch	70-14
Rockshaft and Three-Point Hitch			
Operating the rockshaft	50-1	Transport	75-1
With Headland Management System			
(HMS)	50-2	Fuel, Lubricants, Hydraulic Oil and Coolant	
Remote control	50-3	Fuel	80-1
Depth adjustment	50-4	Engine oil	80-2
Three-point hitch	50-8	Transmission/hydraulic oil	80-3
Draft links	50-8	FWD axle oil	80-3
Attaching implements	50-10	Grease	80-4
Center link	50-11	Coolant	80-5
Lift links	50-12		
Sway blocks	50-13	Lubrication and Periodic Service	
		Opening hood	85-2
Power Take-Off		Removing grille screens	85-2
PTO guard	55-1	Access to battery	85-3
Operating the PTOs	55-2	Access to fuses	85-3
Changing speed of shiftable rear PTO	55-6	Alternator	85-4
Attaching PTO-driven equipment	55-7	Service chart	85-5
		Service intervals	85-6
Ballast			
Ballast	60-1	Service / Daily or Every 10 Hours	
Measuring rear wheel slip	60-2	Engine crankcase oil level	90-1
Rear wheel weights	60-2	Checking the lights	90-2
Filling tires with liquid ballast	60-4	Other service jobs	90-3
Pre-assembling the pick-up weight	60-5		
Attaching to three-point hitch (rear-end		Service / Every 250 Hours	
attachment)	60-7	Changing engine oil	95-1
Attaching to basic weight	60-8	Changing engine crankcase filter element	95-2
Attaching to three-point hitch (front-end		Checking transmission oil level	95-2
attachment)	60-10	Battery service	95-2
Front weights	60-11	Lubricating front axle	95-3
		Checking oil level in FWD axle	95-5
Wheel Tread, Tires		Three-point hitch	95-6
Front wheel tread adjustment	65-1	Trailer hitches	95-6
Adjusting the fenders	65-7	Checking neutral start circuit	95-7
Rear wheel tread adjustment	65-10		
Tires	65-17		

Continued on next page

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Service / Every 500 Hours		Serial Numbers	140-1
Changing the fuel filter	100-1	Index	
Lubricating rear axle	100-1		
Air intake hoses	100-2		
 Service / Every 750 Hours			
Checking engine speeds	105-1		
Changing transmission oil filters	105-1		
 Service / Every 1500 Hours or 2 Years			
Changing coolant	110-1		
Changing oil in FWD axle	110-3		
Changing transmission oil	110-5		
 Service / As Required			
Engine air cleaner	115-1		
Secondary (safety) element	115-2		
Cab air filters	115-4		
Service - air conditioning system	115-5		
Adjusting the handbrake	115-5		
Bleeding the hydraulic brakes	115-6		
Fuel filter	115-11		
Bleeding the fuel system	115-11		
Operator's seat	115-12		
Starting motor	115-13		
Fuses	115-13		
 Troubleshooting			
Hydraulic system	120-1		
Engine	120-2		
Electrical system	120-4		
 Diagnostic Codes	125-1		
 Storage			
Storage for a lengthy period	130-1		
Taking tractor out of storage	130-2		
 Specifications			
Engine	135-1		
PTO power output	135-2		
Axle loads and weights	135-5		
Electrical system	135-6		
Capacities	135-6		
Sound level	135-7		
Tire loading limits	135-7		
Safety note regarding electrical appliances	135-11		

Contents

Identification Views



LX,OMTYP 013424-19-01MAY98

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

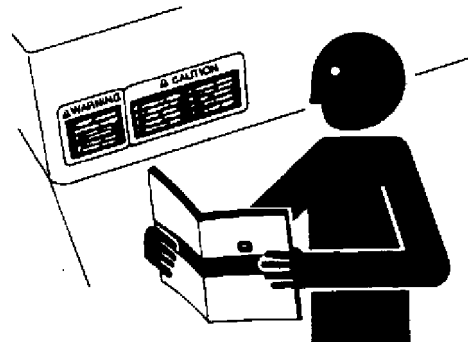

DX,READ -19-03MAR93

TS201 -UN-23AUG88




PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

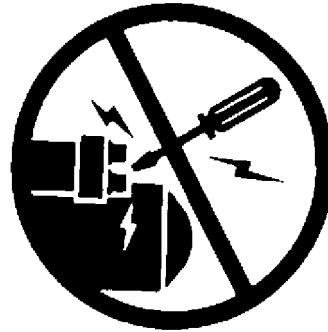


DX,BYPAS1 -19-03MAR93

TS177 -UN-11JAN89

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

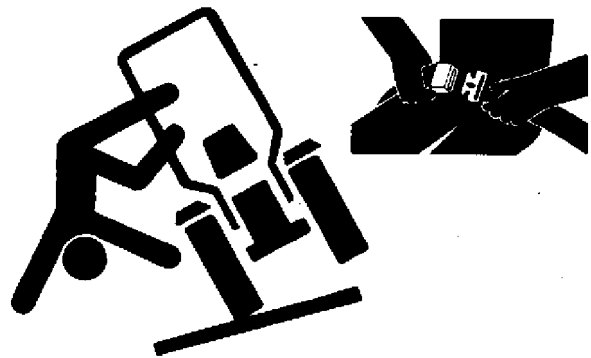


DX,ROPS1 -19-03MAR93

TS205 -UN-23AUG88

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

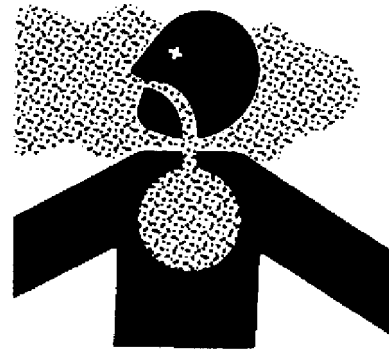

DX,AIR -19-04JUN90

TS220 -UN-23AUG88



DRIVING THE TRACTOR SAFELY

Always check the road and general operating safety of the machine before using.

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.

Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. When driving down slopes, never depress the clutch and change gear!

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away.



When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides.

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Never drive near the edge of a gully or steep embankment — it might cave in!

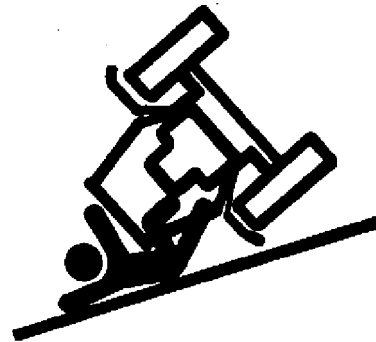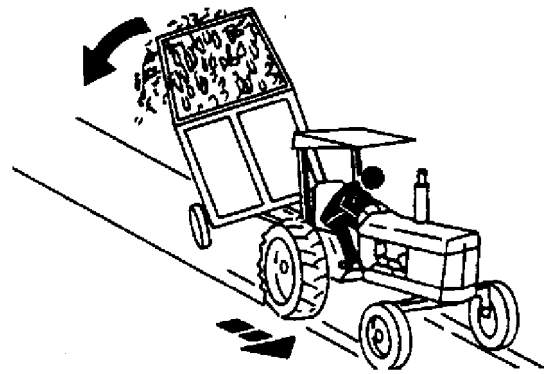

-UN-23AUG68

TS216

-UN-07DEC88

RW13093


LX,DRIVE -19-01JUN92



OPERATING THE TRACTOR SAFELY



TS213 -JUN-23AUG88

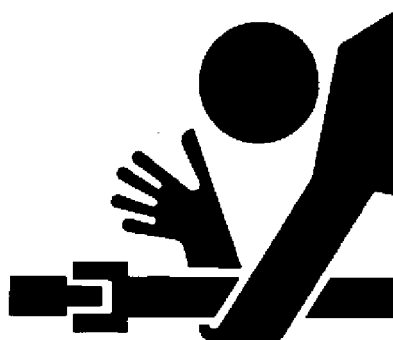

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95




KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

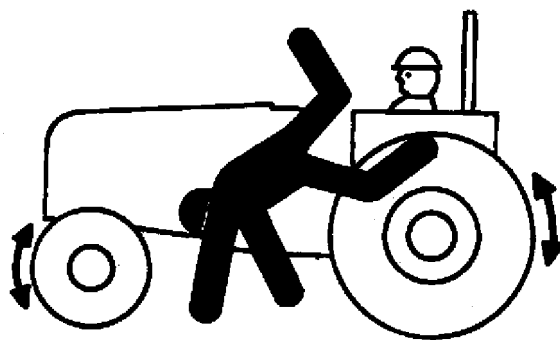

-UN-23AUG68

TS290

LX,OMITF 002146-19-01FEB92


PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake and parking lock, remove main switch key and lock the operator's cab (if equipped). Put chock blocks in position.

Never leave tractor unattended while the engine is still running.

Never leave the operator's platform/cab when driving.

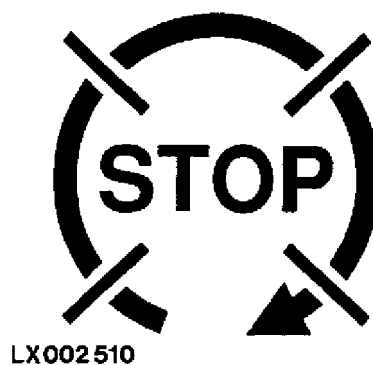

LX002510


-UN-17JAN95

LX002510

LX,PARK -19-07DEC96

AVOID EYE CONTACT WITH RADAR

Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

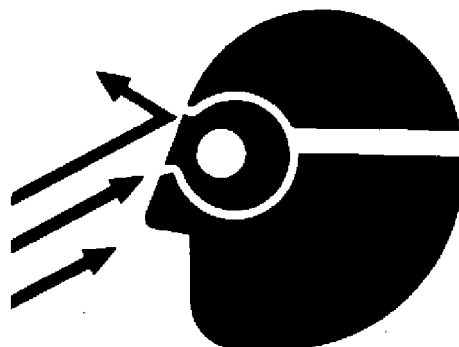

-UN-23AUG88

TS266

RX,SAFTY,RADAR1-19-21SEP92



HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

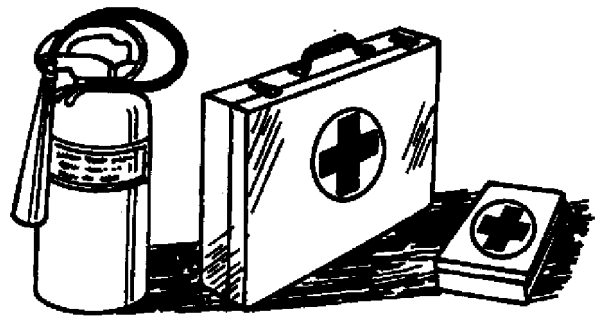

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

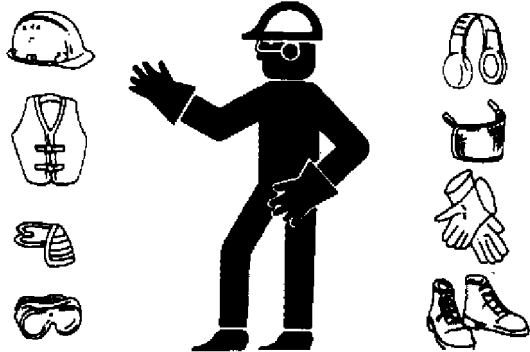

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88





AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

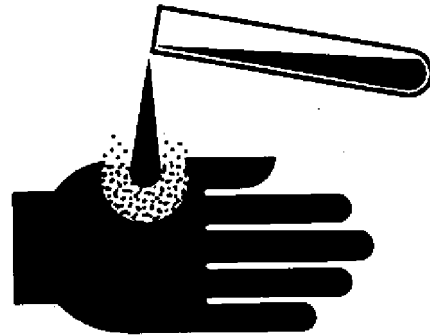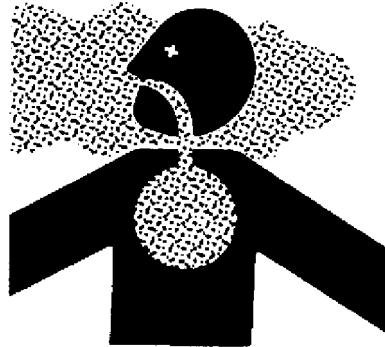

DX,CABS -19-03MAR93

-UN-23AUG68

TS220

-UN-23AUG68

TS272

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95

-UN-22AUG95


TS1644



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

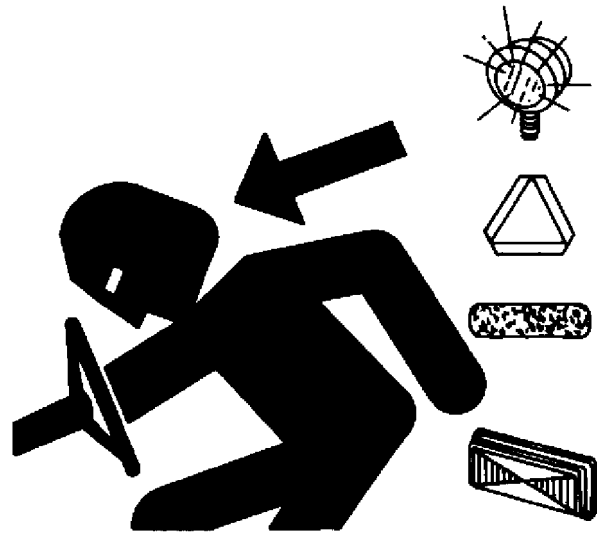


DX,FLASH -19-12SEP95

TS951 -UN-12APR90

SAFELY TRANSPORTING THE TRACTOR

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier.

Never tow a tractor at a speed greater than 16 km/h (10 mph). An operator must steer and brake the tractor under tow.

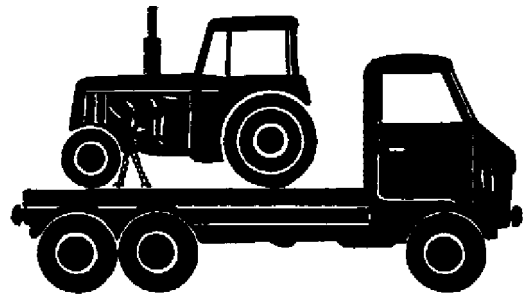

LX,OTRANS003525-19-01SEP92

RW13090 -UN-07DEC88




TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

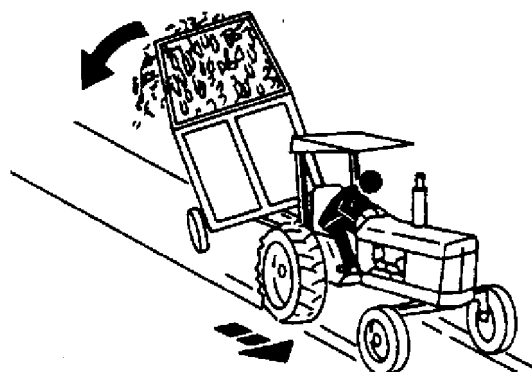

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

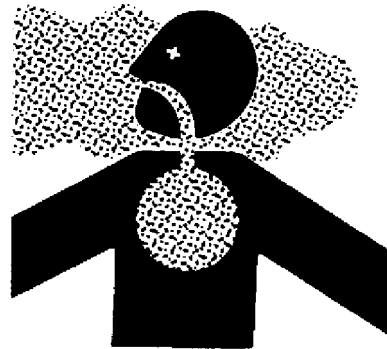

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

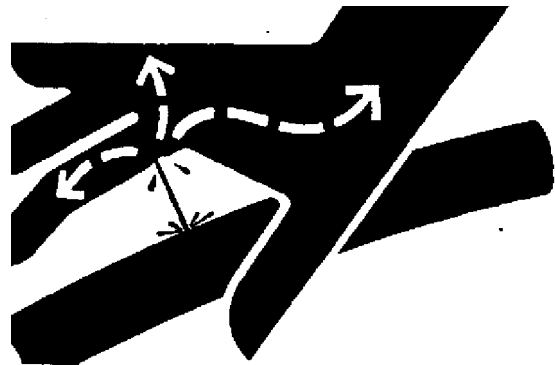


DX,FLUID -19-03MAR93

X9811 -UN-23AUG88

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

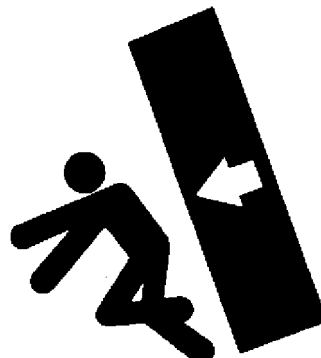

DX,STORE -19-03MAR93

TS219 -UN-23AUG88



SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to relieve pressure before removing completely.

Add coolant only when the engine is shut off.




LX,RCAP -19-01SEP95

TS281 -UN-23AUG68

RETIGHTEN WHEEL NUTS

Retighten machine wheel nuts at the intervals specified in section "Break-In Period" and "Service".

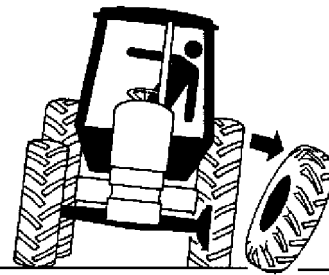

L124 516

LX,WHEEL1 -19-01MAY91

L124516 -UN-03JAN95



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

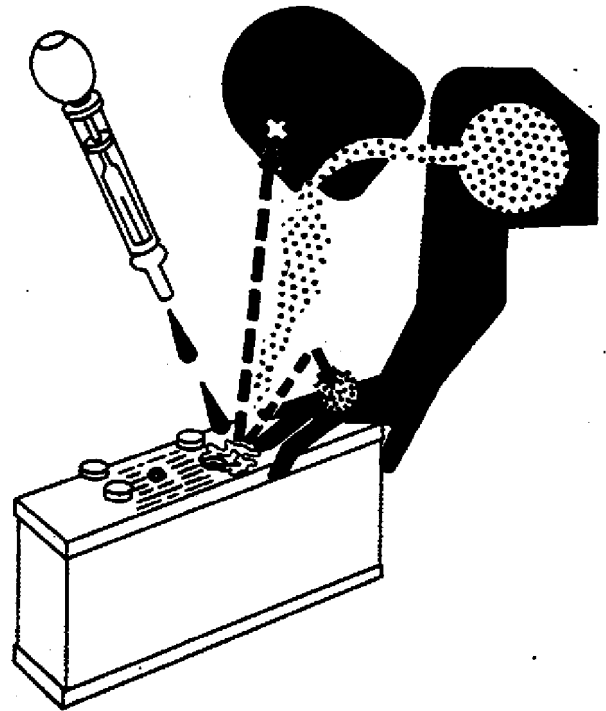

DX,POISON -19-21APR93


-UN-23AUG88

TS203

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

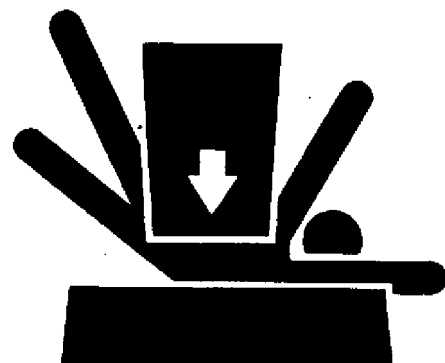

DX,LOWER -19-04JUN90


-UN-23AUG88

TS229



SERVICE FRONT-WHEEL DRIVE TRACTOR SAFELY

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission/hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

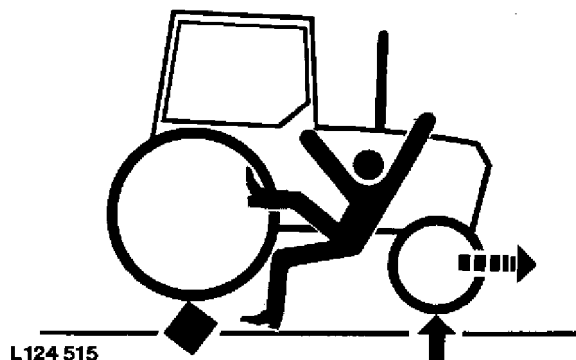

L124 515

L124515 -UN-06AUG94

LX,MFWD2 -19-01MAY91

SERVICE TIRES SAFELY


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

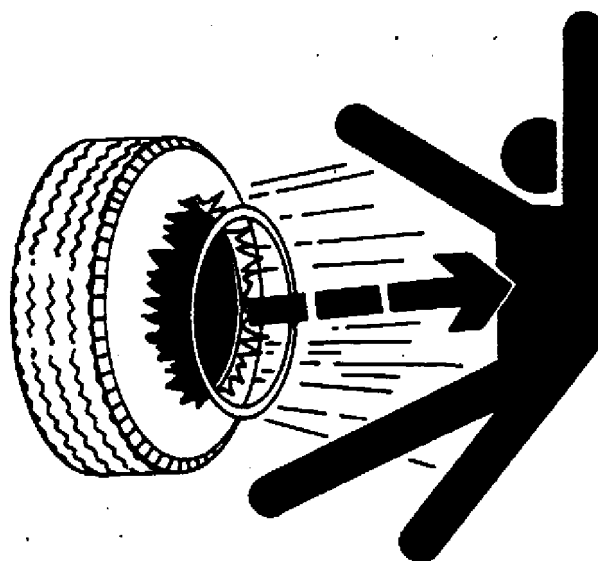

TS211 -UN-23AUG88

DX,RIM -19-24AUG90

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>