

# **SE Tractors 6510 and 6610**

**John Deere Werke Mannheim**  
**OMAL117821 Issue L9**  
**(This manual replaces OMAL117821 H8)**  
European Version  
Printed in Germany  
**ENGLISCH**

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	00-1	<b>Break-In Period</b>	
<b>Safety</b> . . . . .	05-1	After the first 4 and 8 hours of operation . . . . .	30-1
<b>Safety Decals</b> . . . . .	10-1	Within the first 100 hours of operation . . . . .	30-1
		After the first 100 hours of operation . . . . .	30-3
<b>Controls and Instruments</b>		<b>Prestarting Checks</b> . . . . .	35-1
Vehicle controls . . . . .	15-1	<b>Operating the Engine</b>	
PTO and creeper controls . . . . .	15-2	Starting the engine . . . . .	40-1
Attachment controls . . . . .	15-2	Electrical starting aid . . . . .	40-2
Heater and air conditioning controls . . . . .	15-2	Coolant heater . . . . .	40-3
Indicator lights . . . . .	15-3	Booster battery . . . . .	40-3
Fuel gauge . . . . .	15-4	Fuel preheater . . . . .	40-3
Coolant temperature gauge . . . . .	15-4	Towing the tractor . . . . .	40-4
Hour meter . . . . .	15-4	Parking the tractor . . . . .	40-5
		Stopping the engine . . . . .	40-5
<b>Lights</b>		<b>Operating the Tractor</b>	
Light switch . . . . .	20-1	Reduce fuel consumption . . . . .	45-1
Hazard warning lights . . . . .	20-2	Correct ground travel speed . . . . .	45-3
Turn signals and horn . . . . .	20-2	Travel speeds, SyncroPlus transmission . . . . .	45-4
Work lights . . . . .	20-2	Shifting SyncroPlus transmission . . . . .	45-7
		Travel speeds, PowrQuad transmission . . . . .	45-9
<b>Operator's Platform and Cab</b>		Shifting PowrQuad transmission . . . . .	45-11
Roll-over protective structure . . . . .	25-1	Shift positions, PowrQuad transmission . . . . .	45-12
Seat belt . . . . .	25-1	Engaging creeper transmission . . . . .	45-13
Operator's seat . . . . .	25-3	Engaging front-wheel drive . . . . .	45-13
Windshield wiper . . . . .	25-5	Differential lock . . . . .	45-14
Blower and air louvers . . . . .	25-5	Foot brakes . . . . .	45-14
Heater . . . . .	25-5	<b>Rockshaft and Three-Point Hitch</b>	
Air-conditioning system . . . . .	25-6	Operating the rockshaft . . . . .	50-1
Dome light . . . . .	25-6	Remote control . . . . .	50-2
Adjusting the steering wheel . . . . .	25-6	Depth adjustment . . . . .	50-4
Beacon light . . . . .	25-7	Three-point hitch . . . . .	50-7
Adjusting the access step . . . . .	25-7	Draft links . . . . .	50-7
Installation of additional controls . . . . .	25-7	Attaching implements . . . . .	50-9
Handbrake . . . . .	25-8	Center link . . . . .	50-10
Roof hatch . . . . .	25-8	Lift links . . . . .	50-11

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMAL117821 L9-19-01NOV99

COPYRIGHT© 1999  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1998 Deere & Company

Contents

	<b>Page</b>		<b>Page</b>
Sway blocks . . . . .	50-12	<b>Service / Daily or Every 10 Hours</b>	
<b>Power Take-Off</b>		Engine crankcase oil level . . . . .	90-1
PTO guard . . . . .	55-1	Checking the lights . . . . .	90-2
Operating the PTOs . . . . .	55-2	Other service jobs . . . . .	90-3
Changing speed of shiftable rear PTO . . . . .	55-5	<b>Service / Every 250 Hours</b>	
Attaching PTO-driven equipment . . . . .	55-6	Changing engine oil . . . . .	95-1
<b>Ballast</b>		Changing engine crankcase filter element . . . . .	95-2
Ballast . . . . .	60-1	Checking transmission oil level . . . . .	95-2
Measuring rear-wheel slip . . . . .	60-2	Battery service . . . . .	95-2
Rear wheel weights . . . . .	60-2	Lubricating front axle . . . . .	95-3
Filling tires with liquid ballast . . . . .	60-3	Checking oil level in FWD axle . . . . .	95-4
Front weights . . . . .	60-4	Three-point hitch . . . . .	95-4
<b>Wheel Tread, Tires</b>		Trailer hitches . . . . .	95-5
Front wheel tread adjustment . . . . .	65-1	Checking neutral start circuit . . . . .	95-6
Adjusting the fenders . . . . .	65-6	<b>Service / Every 500 Hours</b>	
Rear wheel tread adjustment . . . . .	65-8	Changing the fuel filter . . . . .	100-1
Tires . . . . .	65-10	Lubricating rear axle . . . . .	100-1
Tire combinations with front-wheel drive . . . . .	65-11	Air intake hoses . . . . .	100-2
<b>Additional Equipment</b>		<b>Service / Every 750 Hours</b>	
Selective control valves . . . . .	70-1	Checking engine speeds . . . . .	105-1
Couplers . . . . .	70-3	Changing transmission oil filters . . . . .	105-1
Maximum permissible oil withdrawal . . . . .	70-4	<b>Service / Once Every Year</b>	
Remote hydraulic cylinder . . . . .	70-6	Checking seat belt . . . . .	110-1
Swinging drawbar . . . . .	70-7	<b>Service / Every 1500 Hours or 2 Years</b>	
Trailer hitches . . . . .	70-7	Changing oil in FWD axle . . . . .	115-1
Pick-up hitch . . . . .	70-10	Changing transmission oil . . . . .	115-3
<b>Transport</b> . . . . .	75-1	<b>Service / Every 3000 Hours or 3 Years</b>	
<b>Fuel, Lubricants, Hydraulic Oil and Coolant</b>		Changing coolant . . . . .	120-1
Fuel . . . . .	80-1	<b>Service / As Required</b>	
Engine oil . . . . .	80-3	Engine air cleaner . . . . .	125-1
Transmission/hydraulic oil . . . . .	80-4	Secondary (safety) element . . . . .	125-2
FWD axle oil . . . . .	80-4	Cab air filters . . . . .	125-3
Multi-purpose grease . . . . .	80-5	Service - air conditioning system . . . . .	125-4
Coolant . . . . .	80-7	Adjusting the handbrake . . . . .	125-5
<b>Lubrication and Periodic Service</b>		Bleeding the foot brakes . . . . .	125-6
Opening hood . . . . .	85-1	Fuel filter . . . . .	125-9
Removing grille screens . . . . .	85-2	Bleeding the fuel system . . . . .	125-9
Access to battery . . . . .	85-2	Operator's seat . . . . .	125-10
Access to fuses . . . . .	85-2	Starter motor . . . . .	125-11
Alternator . . . . .	85-3	Fuses . . . . .	125-11
Service chart . . . . .	85-4		
Service intervals . . . . .	85-5		

Continued on next page

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page
<b>Troubleshooting</b>	
Hydraulic system . . . . .	130-1
Engine . . . . .	130-2
Electrical system . . . . .	130-4
<b>Storage</b>	
Storage for a lengthy period . . . . .	135-1
Taking tractor out of storage . . . . .	135-2
<b>Specifications</b>	
Engine . . . . .	140-1
Axle loads and weights . . . . .	140-3
Electrical system . . . . .	140-4
Capacities . . . . .	140-4
Sound level . . . . .	140-4
Tire loading limits . . . . .	140-5
Safety note regarding electrical appliances . . . . .	140-7
<b>Serial Numbers</b> . . . . .	145-1
<b>Index</b>	

*Contents*

# Identification Views




LX,OMTYP 017466-19-01AUG98

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

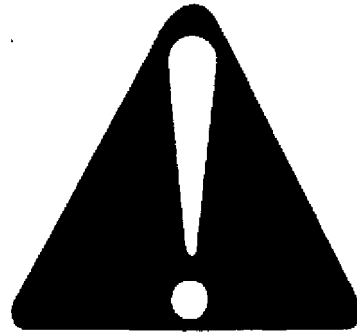

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

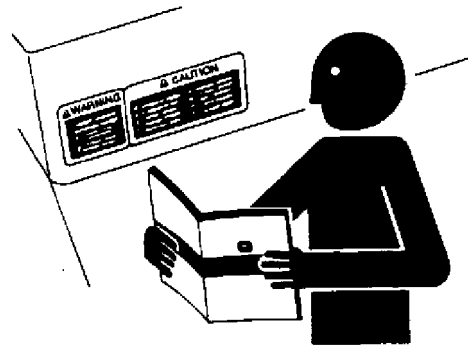

DX,READ -19-03MAR93

TS201 -UN-23AUG88




## PREVENT MACHINE RUNAWAY

 Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

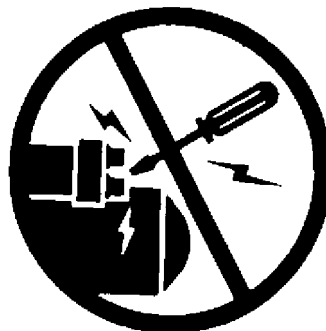

DX,BYPAS1 -19-29SEP98

TS177 -UN-11JAN89


## USE SEAT BELT PROPERLY

 Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

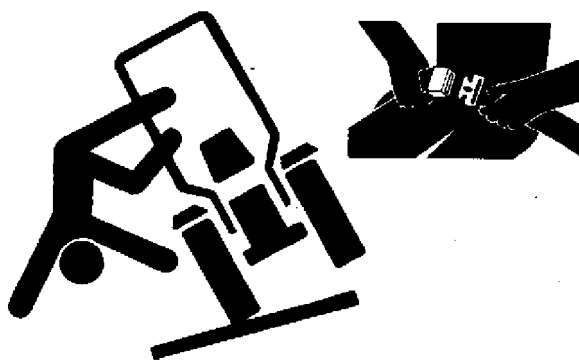


DX,ROPS1 -19-07JUL99

TS205 -UN-23AUG88

## WORK IN VENTILATED AREA

 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

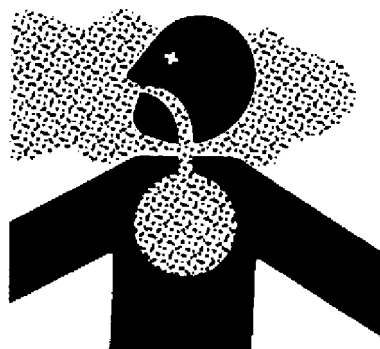

DX,AIR -19-04JUN90

TS220 -UN-23AUG88



## DRIVING THE TRACTOR SAFELY

Always check the road and general operating safety of the machine before using.

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.

Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. When driving down slopes, never depress the clutch and change gear!

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away.

 

When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides.

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Never drive near the edge of a gully or steep embankment — it might cave in!

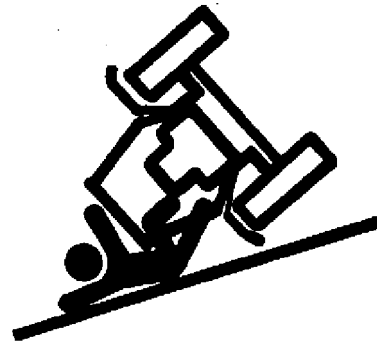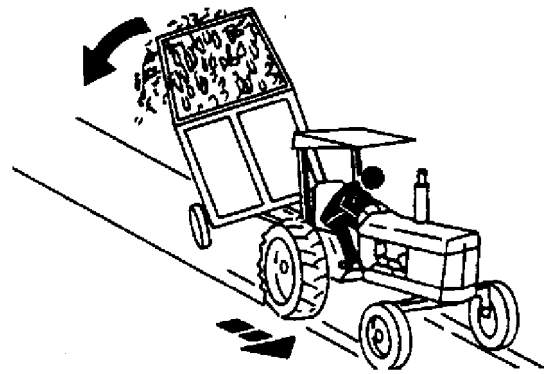

-UN-23AUG68

TS216


-UN-07DEC88

RW13093


LX,DRIVE -19-01JUN92



## OPERATING THE TRACTOR SAFELY

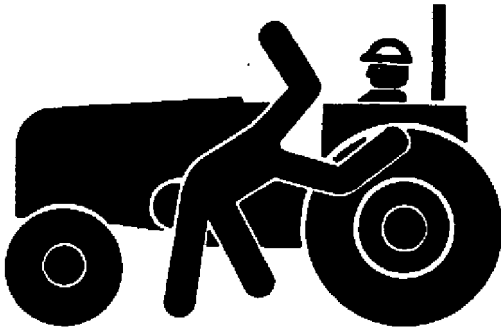 

TS213 -JUN-23AUG88

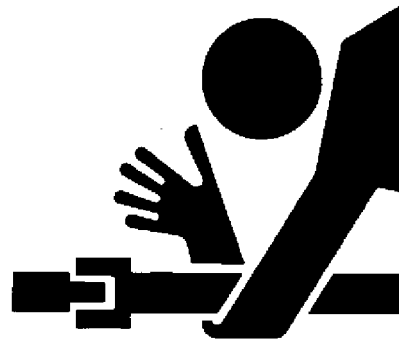 

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95




## KEEP RIDERS OFF MACHINE

 Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

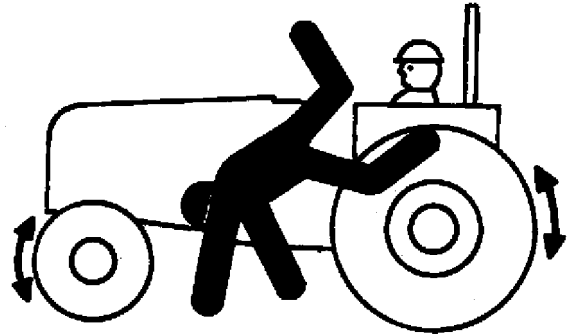

-UN-23AUG68

TS290

LX,OMITF 002146-19-01FEB92

## PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake and parking lock, remove main switch key and lock the operator's cab (if equipped). Put chock blocks in position.

Never leave tractor unattended while the engine is still running.

Never leave the operator's platform/cab when driving.



LX002510

-UN-17JAN95

LX002510

LX,PARK -19-07DEC96

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



-UN-23AUG88

TS202

DX,FIRE1 -19-03MAR93

 


## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

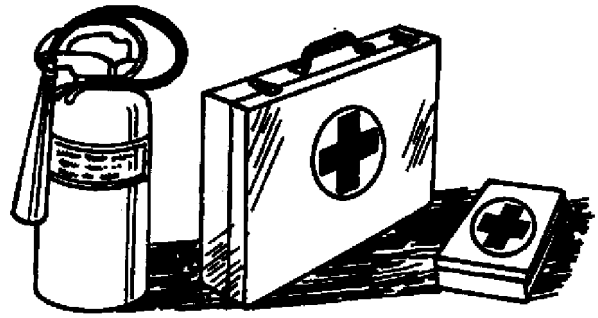

DX.FIRE2 -19-03MAR93

TS291 -UN-23AUG88


## WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

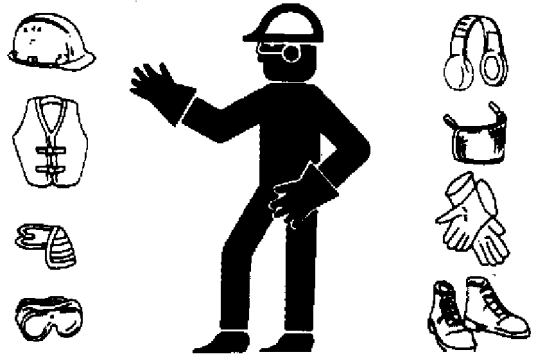

DX.WEAR -19-10SEP90

TS206 -UN-23AUG88





## AVOID CONTACT WITH PESTICIDES

 This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

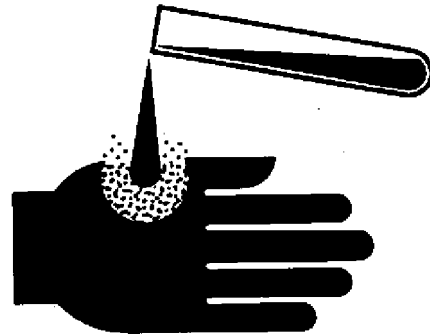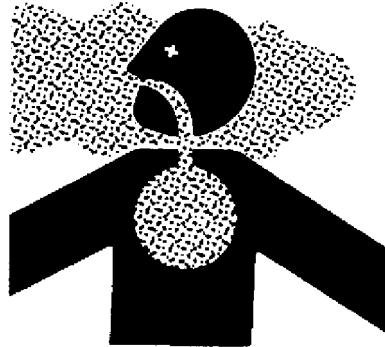

DX,CABS -19-03MAR93

-UN-23AUG68

TS220

-UN-23AUG68

TS272

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95

-UN-22AUG95


TS1644



## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

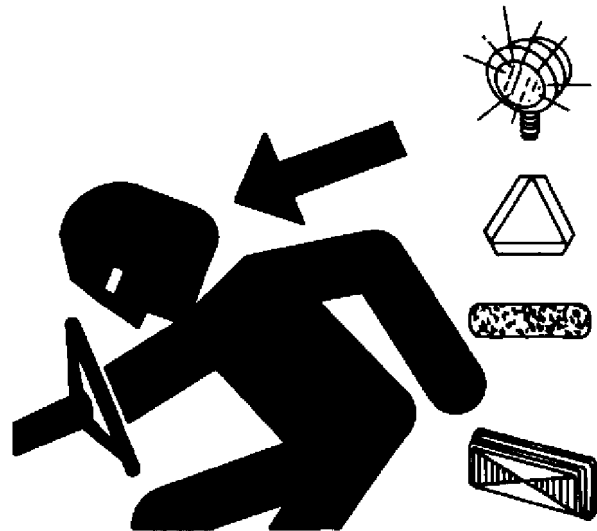


DX,FLASH -19-07JUL99

TS951 -UN-12APR90

## SAFELY TRANSPORTING THE TRACTOR

 A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier.

Never tow a tractor at a speed greater than 16 km/h (10 mph). An operator must steer and brake the tractor under tow.

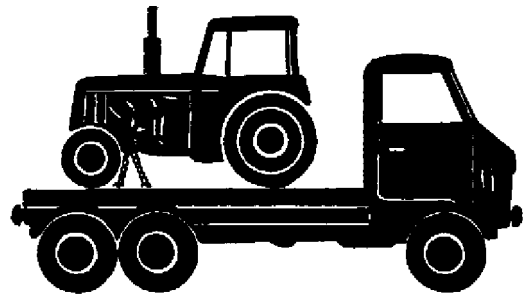

LX,OTRANS003525-19-01SEP92

RW13090 -UN-07DEC88



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



 
## TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

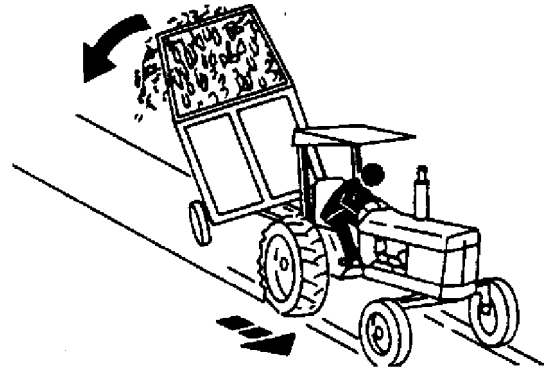

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95





## FREEING A MIRED MACHINE

  Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the rear drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

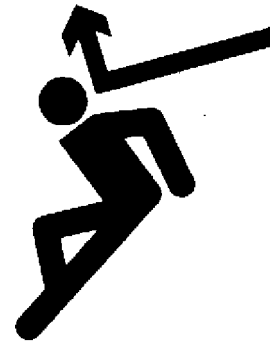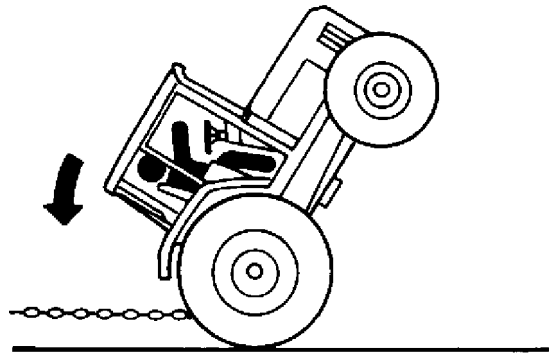

TS1645 -UN-15SEP95

TS263 -UN-23AUG88

TS263

DX,MIRED -19-07JUL99

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**