

6600, 6800
From Serial No. 140 000
and 6506, 6900
Tractors

John Deere Werke Mannheim
OMAL110182 Issue D7

Printed in Germany
ENGLISCH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification Views	00-1	Operator's Platform and Cab	
Safety	05-1	Roll-over protective structure	25-1
Safety Decals	10-1	Seat belt	25-1
Controls and Instruments		Operator's seat	25-4
Vehicle controls	15-1	Windshield wiper	25-8
PTO and creeper controls	15-2	Blower and air louvers	25-9
Attachment controls	15-2	Heater	25-10
Heater and air conditioning controls	15-2	Air-conditioning system	25-10
Operating the digital display	15-2	Cooling cans of drink	25-10
Indicator lights	15-3	Storage space	25-11
Fuel gauge	15-4	Dome and console lights	25-11
Coolant temperature gauge	15-5	Digital clock	25-12
Hour meter	15-5	Adjusting the steering wheel	25-12
Digital display	15-6	Door retainer	25-12
Travel speed	15-6	Beacon light	25-13
Engine speed	15-6	Adjusting the access step	25-13
PTO speed	15-7	Cool box	25-13
Operating hours	15-7	Monitor installation	25-14
Service interval	15-7	Cigarette lighter and ashtray	25-15
Performance monitor	15-8	Roof hatch	25-15
Data entry	15-9	Break-In Period	
Operating	15-10	After the first 4 and 8 hours of operation	30-1
Calibration	15-11	Within the first 100 hours of operation	30-1
Wheel slip	15-12	After the first 100 hours of operation	30-2
Vehicle speed	15-13	Prestarting Checks	35-1
Service	15-14	Operating the Engine	
Backlight brightness	15-15	Starting the engine	40-1
Lights		Electrical starting aid	40-2
H4 farm headlights	20-1	Coolant heater	40-2
Light switch	20-2	Booster battery	40-3
Hazard warning lights	20-3	Fuel preheater	40-3
Turn signals and horn	20-3	Towing the tractor	40-4
Work lights	20-4	Parking the tractor	40-4
Trailer socket	20-5	Battery cut-off switch	40-5
		Stopping the engine	40-5
		Chock block	40-5

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAL110182 D7-19-02APR97

COPYRIGHT© 1997
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996, 1995, 1994, 1993 Deere & Company

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Operating the Tractor		Ballast	
Reduce fuel consumption	45-1	Ballast	60-1
Correct ground travel speed	45-3	Ballasting rear wheels	60-1
Travel speeds, 6506 and 6600 tractors	45-4	Measuring rear wheel slip	60-2
Travel speeds, 6800 and 6900 tractors	45-8	Rear wheel weights	60-2
Shifting PowrQuad transmission	45-11	Filling tires with liquid ballast	60-3
Shift positions, PowrQuad transmission	45-12	Pre-assembling the pick-up weight	60-4
Engaging creeper transmission	45-13	Attaching to three-point hitch (rear-end attachment)	60-6
Engaging front-wheel drive	45-14	Attaching to basic weight	60-7
Differential lock	45-15	Attaching to three-point hitch (front-end attachment)	60-9
Foot brakes	45-15	Front weights	60-10
Hydraulic trailer brake	45-16	Additional 180 kg (400 lb) weight package	60-10
Air brake on trailer	45-17		
Rockshaft and Three-Point Hitch		Wheel Tread, Tires	
Operating the rockshaft	50-1	Front wheel tread adjustment	65-1
With Headland Management System (HMS)	50-2	Limiting the steering angle	65-2
Remote control	50-3	Tightening front wheel attaching nuts	65-3
Height adjustment	50-3	Checking front wheel toe-in	65-3
Transporting mounted implements	50-4	Adjusting	65-3
Adjusting rate of implement drop	50-5	Adjusting the fenders	65-4
Depth adjustment	50-5	Rear wheel tread adjustment	65-8
Load/depth adjustment	50-5	Tread widths	65-9
Depth control	50-6	Tires	65-10
Mixed control	50-6	Tire combinations	65-11
Load control	50-7		
Float position	50-7	Additional Equipment	
Direct actuation	50-8	Selective control valves	70-1
Three-point hitch	50-9	Pressure adjustment, 300 series	70-2
Draft links	50-9	Control levers	70-3
Attaching implements	50-11	Multi-function lever	70-4
Center link	50-12	Couplers	70-5
Lift links	50-13	Maximum permissible oil withdrawal	70-6
Sway blocks	50-15	Oil withdrawal with hydraulic motor	70-7
Stabilizing chain	50-15	Power Beyond couplers, 6506 and 6600	70-8
Stabilizing system	50-16	Pressure-free return circuit, 6506 and 6600	70-8
Adjusting spreading dimension	50-17	Additional oil reservoir, 6506 and 6600	70-8
		Power Beyond application valve	70-9
Power Take-Off		Remote hydraulic cylinder	70-9
PTO guard	55-1	Swinging drawbar	70-11
PTO options	55-1	Lengthwise adjustment	70-11
PTO speeds	55-2	Drawbar for three-point hitch	70-11
Operating the PTOs	55-3	Front jaw hitch	70-12
By remote control	55-4	Height-adjustable trailer hitch	70-12
Reversing rear PTO shafts	55-5	Pick-up hitch	70-14
Changing speed of shiftable rear PTO	55-6	Lockable tank filler cap	70-17
Attaching PTO-driven equipment	55-7		

Continued on next page

Contents

	Page		Page
Transport	75-1	Air intake hoses	100-2
Fuel, Lubricants, Hydraulic Oil and Coolant		Service / Every 750 Hours	
Fuel	80-1	Checking engine speeds	105-1
Engine oil	80-2	Changing transmission oil filters	105-1
Transmission/hydraulic oil	80-3	Service / Every 1500 Hours or 2 Years	
FWD axle oil	80-4	Changing coolant	110-1
Grease	80-4	Changing oil in FWD axle	110-2
Coolant	80-6	Changing transmission oil	110-4
Lubrication and Periodic Service		Service / As Required	
Service intervals	85-1	Cleaning cab air filters	115-1
Opening hood	85-2	Engine air cleaner	115-1
Removing grille screens	85-2	Secondary (safety) element	115-3
Removing fan guard	85-2	Cab air filters	115-4
Access to battery	85-2	Radiator screen	115-4
Access to fuses	85-3	Service - air conditioning system	115-5
Alternator	85-4	Adjusting the handbrake	115-5
Service chart	85-5	Bleeding the brakes, 6506 and 6600	115-7
Service intervals - daily or every 10 hours	85-6	Bleeding the brakes, 6800 and 6900	115-10
After the first 100 hours	85-7	Checking the brakes, 6800 and 6900	115-13
Every 250 hours	85-8	Fuel filter	115-14
Every 500 hours	85-9	Bleeding the fuel system	115-14
Every 750 hours	85-9	Operator's seat	115-15
Every 1500 hours or every 2 years	85-10	Checking specific gravity of battery	115-15
As required	85-11	Starting motor	115-16
Service / Daily or Every 10 Hours		Fuses	115-16
Engine crankcase oil level	90-1	Replacing drive belt	115-26
Compressed air trailer brake system	90-1	Troubleshooting	
Checking the lights	90-1	Hydraulic system	120-1
Other service jobs	90-2	Engine	120-2
Service / Every 250 Hours		Electrical system	120-3
Changing engine oil	95-1	Storage	
Changing engine crankcase filter element	95-1	Storage for a lengthy period	125-1
Checking transmission oil level	95-2	Taking tractor out of storage	125-2
Battery service	95-3	Specifications	
Lubricating front axle	95-3	Engine	130-1
Checking oil level in FWD axle	95-3	PTO power output	130-2
Checking oil level in MFWD final drives	95-4	Transmission	130-2
Checking brakes, 6800 and 6900	95-4	Hydraulic system	130-2
Three-point hitch	95-5	Axle loads and weights	130-3
Trailer hitch	95-5	Electrical system	130-4
Checking neutral start circuit	95-7	Capacities	130-4
Service / Every 500 Hours		Sound level	130-4
Changing the fuel filter	100-1	Tire loading limits	130-5
Lubricating rear axle	100-1		
Lubricating draft link support	100-1		

Continued on next page

Contents

	Page
Safety note regarding electrical appliances . .	130-8
Serial Numbers	135-1
Lubrication and Maintenance Records . . .	140-1
Index	

Identification Views



LX.OTYPE 007023-19-01OCT94

Identification Views



LX 006653

LX006653 -JUN-07AUG95



LX011651

LX011651 -JUN-26SEP95

 
LX,OTYPE 004867-19-01SEP95

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

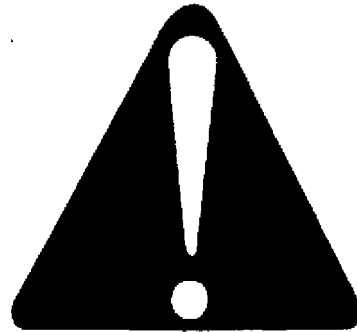

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

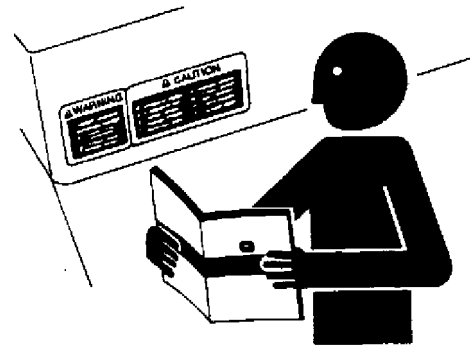

DX,READ -19-03MAR93

TS201 -UN-23AUG88

 


PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

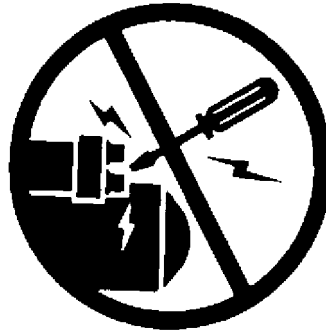


DX,BYPAS1 -19-03MAR93

TS177 -UN-11JAN89

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

 Do not use a seat belt if operating without a ROPS or cab.

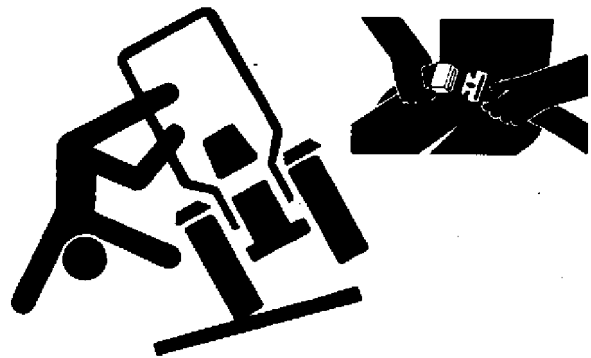


DX,ROPS1 -19-03MAR93

TS205 -UN-23AUG88

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

 If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

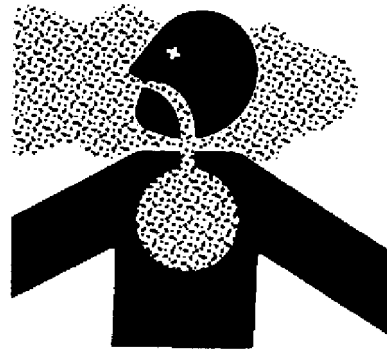

DX,AIR -19-04JUN90

TS220 -UN-23AUG88



DRIVING THE TRACTOR SAFELY

Always check the road and general operating safety of the machine before using.

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.

Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. When driving down slopes, never depress the clutch and change gear!

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away.

 
 
When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides.

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Never drive near the edge of a gully or steep embankment — it might cave in!

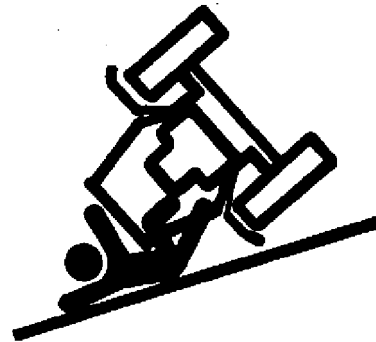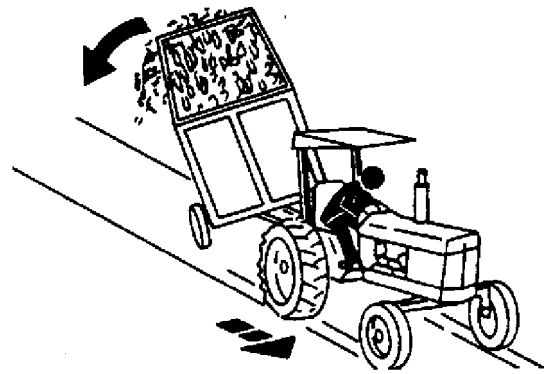

-UN-23AUG68

TS216

-UN-07DEC88

RW13093


LX,DRIVE -19-01JUN92



OPERATING THE TRACTOR SAFELY



 TS213 -JUN-23AUG88

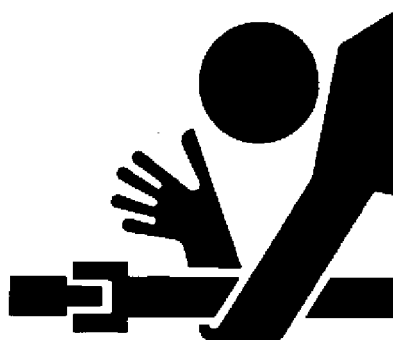

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95

 


KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

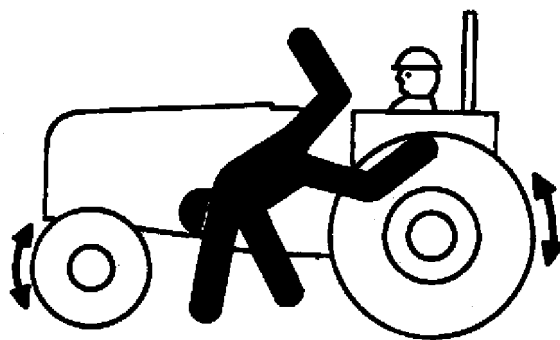

-UN-23AUG68

TS290

LX,OMITF 002146-19-01FEB92

PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake and parking lock, remove main switch key and lock the operator's cab (if equipped). Put chock blocks in position.

Never leave tractor unattended while the engine is still running.

Never leave the operator's platform/cab when driving.



LX002510


-UN-17JAN95

LX002510

LX,PARK -19-07DEC96

AVOID EYE CONTACT WITH RADAR

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

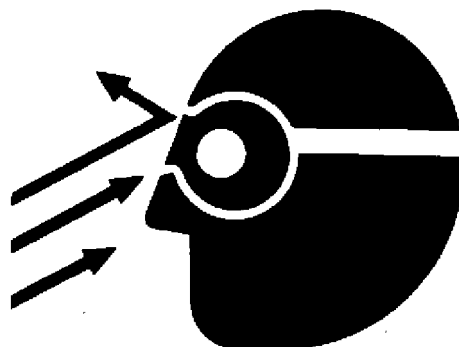

-UN-23AUG88

TS266

RX,SAFTY,RADAR1-19-21SEP92



HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

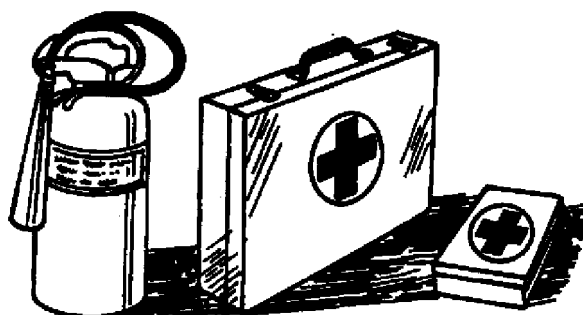

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

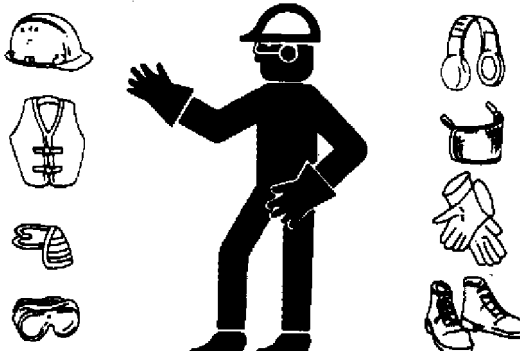

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

 
 


AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

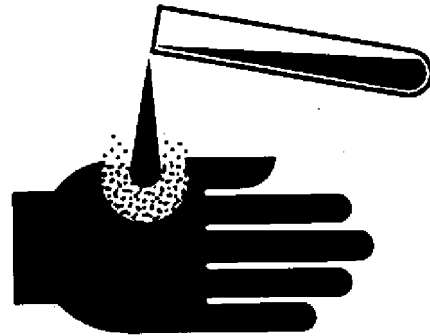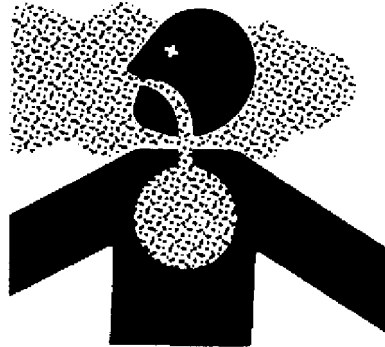

DX,CABS -19-03MAR93

-UN-23AUG68

TS220

-UN-23AUG68

TS272

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95

-UN-22AUG95


TS1644



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

 Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

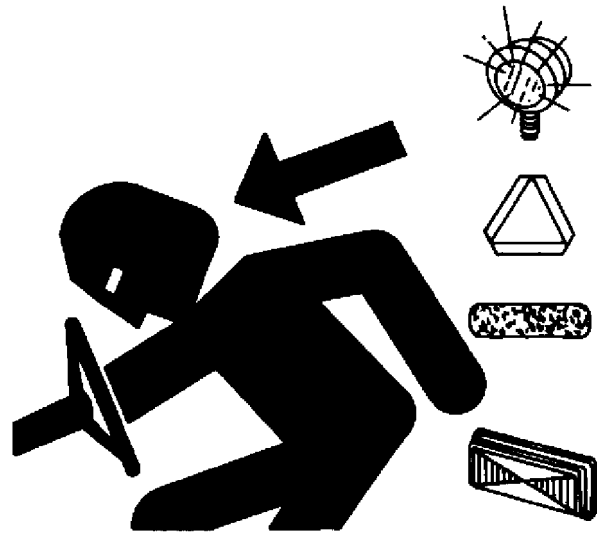


DX,FLASH -19-12SEP95

TS951 -UN-12APR90

SAFELY TRANSPORTING THE TRACTOR

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier.

 Never tow a tractor at a speed greater than 16 km/h (10 mph). An operator must steer and brake the tractor under tow.

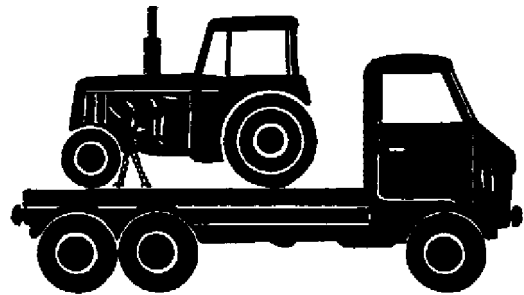

LX,OTRANS003525-19-01SEP92

RW13090 -UN-07DEC88

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>