

# AMT 600 ALL MATERIAL TRANSPORTER



 
JOHN DEERE

## OPERATORS MANUAL AMT 600 ALL MATERIAL TRANSPORTER

OMW38914 E7 English

JOHN DEERE WELLAND WORKS  
OMW38914 E7

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

**Thank you** for purchasing a John Deere product.

**Read this manual** carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

**This manual should be considered** a permanent part of your machine and should remain with the machine when you sell it.

**Measurements** in this manual are U.S. customary units and their metric equivalents.

**Right-hand and left-hand** sides are determined by facing in the direction of forward travel.

**Write product identification numbers** in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

**Warranty** is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual.

The warranty does not cover:

 
A—Products which have been altered or modified in ways not approved by John Deere, including setting fuel delivery above specifications or otherwise over-powering of products.

B—Depreciation or damage caused by normal wear, accident, lack of reasonable and necessary maintenance as specified in this manual, improper maintenance, improper protection in storage, or improper use or abuse.

C—Normal maintenance and replacement of service items such as filters, spark plugs, belts, and brake linings, unless such items are defective.

D—Transportation, mailing and service call charges for warranty service.

**The tire manufacturer's** warranty supplied with your machine may not apply outside the U.S.

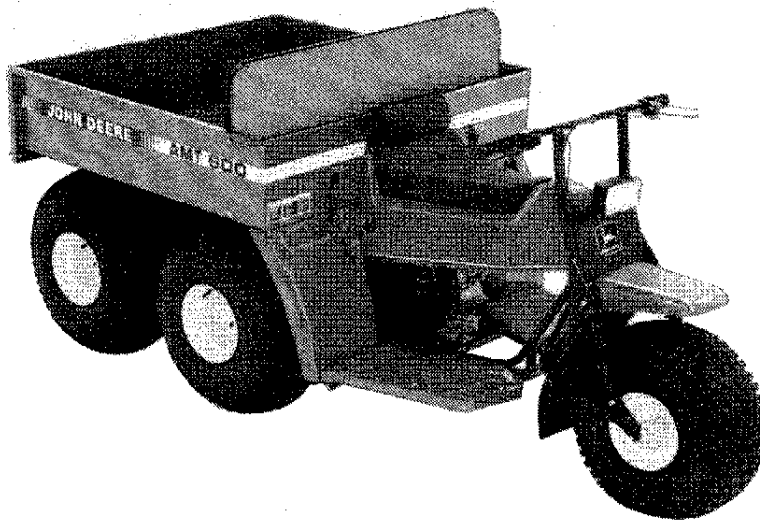

*All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.*

U18;W38899 IFC 240387

U19;JFC 4 240387

# Contents

|   | Page |  | Page |
|---|------|--|------|
| <b>Safety</b> .....                     | 1    | <b>Service/Before Each Use</b>                                     |      |
| <b>Controls</b> .....                   | 11   | Check Engine Oil Level .....                                       | 37   |
| <b>Prestarting Checks</b> .....         | 12   | Cleaning Blower Screen .....                                       | 38   |
| <b>Operating the Engine</b>             |      | <b>Service/Break-In</b>  |      |
| Starting the Engine .....               | 13   | Changing Engine Oil .....  | 39   |
| Warming and Idling Engine .....         | 14   | Checking Belt Tension .....  | 39   |
| Stopping Engine .....                   | 15   | Checking Drive Chain Tension .....                                 | 39   |
| <b>Driving the Transporter</b>          |      | Tightening Lug Nuts .....  | 40   |
| Before Driving .....                    | 16   | <b>Service/10 Hours</b> .....                                      | 41   |
| Operating Brake Lever .....             | 16   | <b>Service/25 Hours</b>  |      |
| Using Park Brake .....                  | 17   | Checking Tire Pressure .....                                       | 42   |
| Using Gear Shift Lever .....            | 17   | Checking and Cleaning Pre-Cleaner<br>and Air Cleaner Element ..... | 42   |
| Using Differential Lock Pedal .....     | 18   | <b>Service/50 Hours</b>  |      |
| Using Throttle Lever .....              | 18   | Cleaning Drive Clutch .....  | 44   |
| Using Headlight Switch .....            | 18   | Checking Drive Chain Tension .....                                 | 44   |
| No Driving on Roads .....               | 19   | Checking Belt Tension .....  | 45   |
| Operating Tips .....                    | 19   | Adjusting Belt Tension .....                                       | 45   |
| Using Correct Tires and Inflation ..... | 20   | Checking and Cleaning Battery .....                                | 46   |
| Reading Terrain .....                   | 20   | Checking Electrolyte Level .....                                   | 47   |
| Climbing or Descending a Hill .....     | 21   | <b>Service/100 Hours</b>   |      |
| Traversing a Slope .....                | 22   | Changing Engine Oil .....  | 48   |
| Riding Through Water .....              | 22   | Checking Transaxle Oil .....                                       | 48   |
| Carrying a Load .....                   | 23   | Lubricating Driven Pulley .....                                    | 49   |
| Distributing a Load .....               | 23   | Lubricating Drive Chain .....                                      | 50   |
| Towing a Load .....                     | 23   | Checking Spark Plug .....  | 50   |
| <b>Transporting</b> .....               | 24   | <b>Service/Yearly</b>  |      |
| <b>Fuels and Lubricants</b> .....       | 25   | Cleaning Battery .....   | 51   |
| <b>Checkout Procedure</b> .....         | 28   | Cleaning Engine Fins .....   | 52   |
| <b>Machine Diagnosis</b> .....          | 30   | Testing Safety Systems .....                                       | 53   |
| <b>Periodic Service</b>                 |      | <b>Service/As Necessary</b>  |      |
| Additional Service Information .....    | 34   | Charging Battery .....   | 54   |
| Servicing Transporter Safely .....      | 34   | Jump-Starting Engine .....   | 55   |
| Maintaining Transporter Regularly ..... | 34   | Replacing Headlight .....  | 56   |
| Using Service Records .....             | 35   | Adjusting Headlight .....  | 56   |
| Before Each Use .....                   | 35   | Replacing Drive Belt .....   | 57   |
| Break-In .....                          | 35   | Adjusting Drive Chain Tension .....                                | 58   |
| 10 Hours .....                          | 35   | Service Tires Safely .....   | 59   |
| 25 Hours .....                          | 36   | <b>Storage</b> .....   | 60   |
| 50 Hours .....                          | 36   | <b>Crime Prevention Tips</b> .....                                 | 62   |
| 100 Hours .....                         | 36   | <b>Assembly</b> .....  | 64   |
| Yearly .....                            | 36   | <b>Specifications</b> .....  | 68   |

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

 
The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

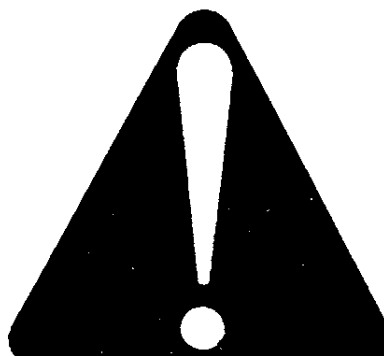

AB6;T81389 053;ALERT 071085

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



AB6;TS187 053;SIGNAL 071085

## FOLLOW SAFETY INSTRUCTIONS

 
Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

Keep safety signs in good condition. Replace missing or damaged safety signs.



AB6;TS188 053;SIGNS 071085

## TRANSPORTER SAFETY SIGNS

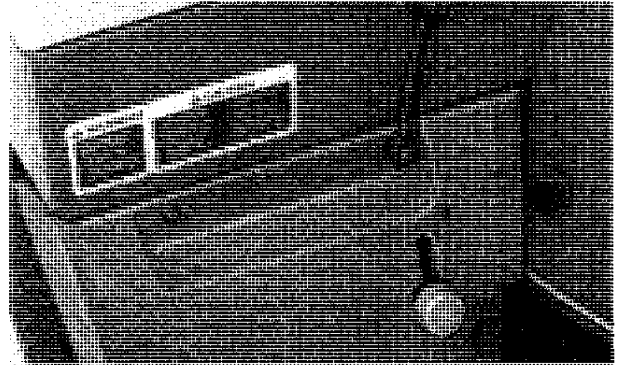

### **WARNING**

#### HELP PREVENT INJURY OR DEATH FROM MACHINE OVERTURN

1. Reduce load when operating over rough or hilly terrain.
2. Reduce speed when turning or when operating around obstacles, on rough ground, or on slopes.
3. Use of a helmet is recommended when operating in rough terrain.

### **CAUTION**

1. Read Operators Manual before operating vehicle.
2. Keep all riders off.
3. This machine intended for off road use only.
4. Keep loadguard and all shields in place.
5. Inflate tires to 5 PSI (35 kPa). Overinflation or underinflation could adversely affect control of machine.
6. The maximum pay load capacity is 600 lb. (272 kg).
7. Securely anchor all loads.
8. Stop engine before refueling.
9. Stop engine, set parking brake, and shift to neutral before dismounting.
10. Remove key if leaving vehicle unattended.

AP9;RW1218 1,RW1272 3 U18;WARN DECAL 040587



 
**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**


**Thank you so much for reading**

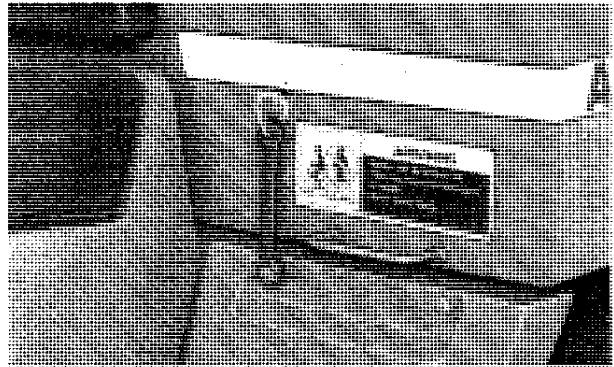

**⚠ WARNING**

- Riders can be thrown off. This can cause serious injury or death.
- Never carry riders.

 AP9;RW1237 6,RW1237 7 U18;RIDER DECAL 080587

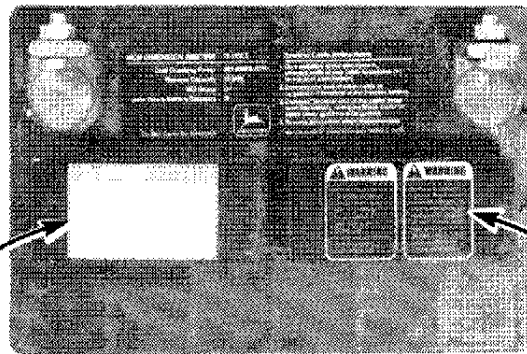

**⚠ DANGER**

Explosive gases. Keep sparks, flames and cigarettes away. Shield eyes and face. Follow recommended charging and jump-starting procedures. Keep vent caps tight and level. Blindness or serious injury could result from an exploding battery.

**⚠ WARNING**

SPARKS AND FLAMES CAN CAUSE BATTERY PACK EXPLOSION. WEAR EYE PROTECTION AND AVOID CONTACT WITH EYES. IF CONTACT OCCURS, RINSE WITH WATER FOR 15 MINUTES. CALL PHYSICIAN IF NECESSARY.

**⚠ WARNING**

FLAME AND BATTERY PACK EXPLOSION CAN CAUSE BURNING AND SERIOUS INJURY. IF CONTACT OCCURS, RINSE WITH WATER FOR 15 MINUTES. CALL PHYSICIAN IF NECESSARY.

 
AP9;M40269 U18;ACID WARN 240387

### LEARN MACHINE SAFETY

Carefully read this manual. Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate this machine without proper instruction.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

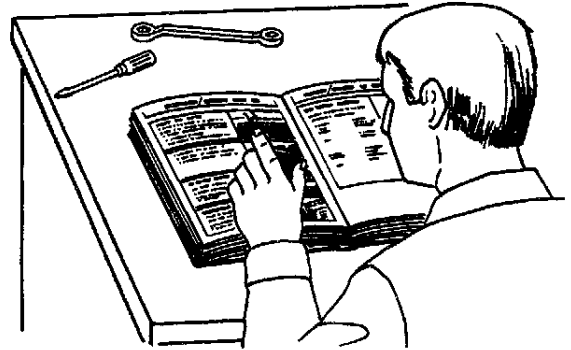


AB6;TS183 053;READ2 080785

### KEEP OFF ROADWAYS

 This machine intended for off road use only.

Do not operate transporter on a roadway.

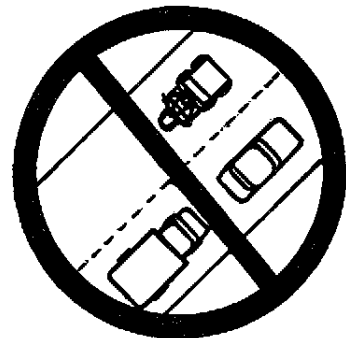

AP9;RW1218 4 U18;SAFE OPER 060187

### KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



AB6;TS173 053;RIDER 261184

 
### PROTECT CHILDREN

The transporter is NOT a toy. It should be used only by operators mature enough to read, understand, and follow the instructions in this manual.

NEVER carry children in cargo area. Do NOT let children ride on transporter or any attachment.

Keep children and others away when you operate machine.

Before you back up or turn, look behind and around transporter for children.

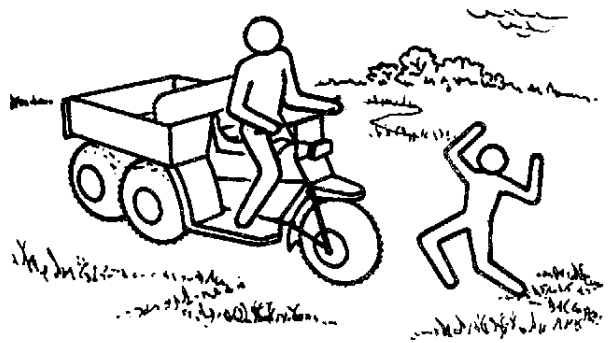

AP9;RW1218 8 U18;KEEP CHILD 060187

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**