

OPERATOR'S MANUAL

DISC PLOUGH

**DP5203, DP5205, DP5304, DP5403, DP5404,
DP5503, DP5504**

DISC HARROW

**DH7205, DH7206, DH7207, DH7305, DH7406,
DH7407, DH7508**

GREENSYSTEM™

OPERATOR'S MANUAL

DISC PLOUGH



DISC HARROW



Introduction:

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers Section.


Accurately record all the numbers to help in tracing the machine should it be stolen. File the identification

numbers in a secure place; do not keep them on the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

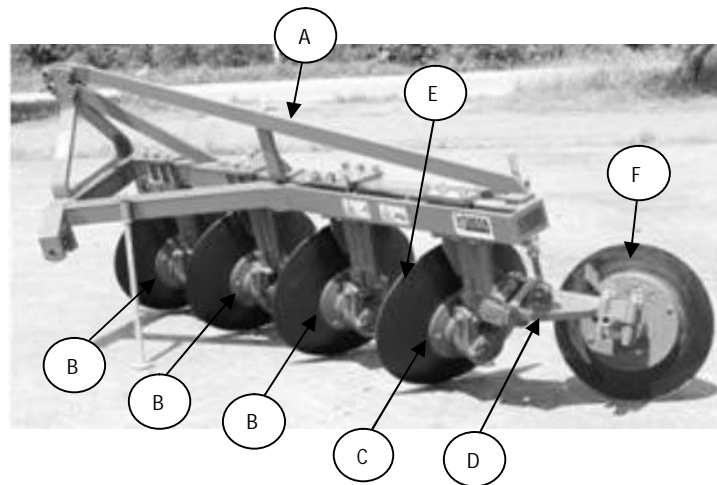

A = Main Frame

B = Front Arm Assy

C = Rear Arm Assy

D = Swing Tail Assy

E = Disc

F = Disc Furrow Assy

<https://www.ebooklibonline.com>


Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

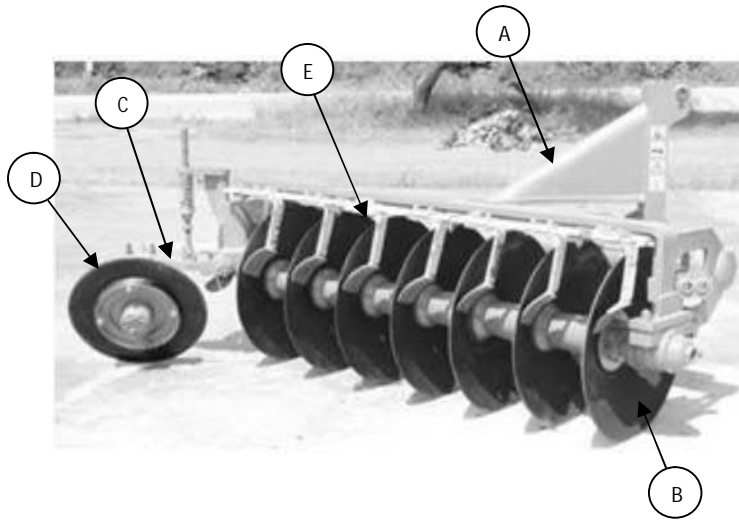

A = Main Frame

B = Disc Assy

C = Swing Tail Assy

D = Disc Furrow Assy

E = Scraper Frame Assy



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

A Message to Our Customers

We appreciate the confidence placed in us by your purchase of this machine. Before this machine was brought to the market, countless hours were spent designing and testing to ensure that its performance would be at the highest level. To achieve maximum performance, it is imperative this machine be operated in accordance with the procedures outlined in this manual. Information in this manual is divided into sections. These sections are identified at the top of each page. Specific information within each section is organized into modules. These modules are encased in boxes

with principle modules identified with a heading at the top left side of the box. Two-part page numbers identify both the section and page of that section.

By reviewing this manual often, one will quickly learn which section to go to for specific information. For instance, machine adjustments would be found in the Operating Machine section, lubrication intervals in the Lubrication section, opener maintenance in the Service section, etc. A detailed Table of Contents is found immediately behind this page.

Thank you very much for purchasing this machine.

Customer Responsibility

It is the Customer or Operator's responsibility to read the Operator's Manual, to operate, lubricate, maintain and store the product in accordance with all instructions and safety procedures. Failure of the operator to read the Operator's Manual is a misuse of this equipment.


It is the Customer's or Operator's responsibility to inspect the product and to have any parts repaired or replaced when continued operation would cause damage or excessive wear to other parts or cause safety hazards.

It is the Customer's responsibility to deliver the product to Authorized Dealer, from whom they purchased it, for service or replacement of defective parts which are covered by warranty. Repairs to be submitted for warranty consideration must be made within thirty days (30) of failure.

It is the Customer's responsibility for any cost incurred by the Dealer for travelling to or hauling of the product for the purpose of performing a warranty obligation or inspection.

Contents

	Page		Page
Inspection Checklists			
Pre-Delivery Inspection	7	Attaching and Detaching Disc Plough / Disc Harrow	
Owner's Record.....	7	Use Your Tractor Operator's Manual	21
Delivery Inspection	7	Tractor Requirement.....	21
After-Sales Inspection	8	Attaching Disc Plough / Disc Harrow planter to	
Inspection Before Each Day of Operation	8	Tractor.....	21
Inspection Before Each Seas.....	8	Detaching Disc Plough / Disc Harrow planter from	
Installation Instruction.....	8	Tractor	22
Equipment matching	9		
Safety			
Recognize safety information.....	10	Transporting	
Understand Signal Words.....	10	Transport Safely	25
Follow Safety Instructions.....	10	Operating Disc Plough / Disc Harrow	
Operate Machine Safely	11	Operating Instruction.....	26
Keep Riders Off Machine	11	Parking	26
Avoid rollover accident.....	11	Field Operation	26
Wear Protective Clothing.....	12	Adjustments	
Prepare for Emergencies.....	12	Adjustment	28
Use Safety Lights and Devices.....	12	Lubrication and Maintenance	
Transport Safety	13	Safe Lubrication and Maintenance	30
Tow Loads Safely	14	Lubrication and Maintenance Procedures	30
Comply with the Transport Speed Limit.....	14	Grease.....	31
Service Machine Safely	14	Lubrication Symbols	31
Practice Safe Maintenance.....	15	Alternative Lubricants	31
Remove Paint Before Welding or Heating.....	15	Greasing Points of Disc Plough	31
Store Attachments Safely	16	Greasing Points of Disc Harrow.....	32
Dispose of Waste Properly	16	Daily Maintenance before and after Work	34
		Every 100, 1000 Hours Work	34
Safety Signs		Practice Safe Maintenance.....	35
Safety Sign Locations.....	17	Bolt and Screw Torque Required.....	36
Caution - Read Operator Manual		Supporting Raised Machine	38
And safety operation.....	18	Maintenance of Disc Plough / Disc Harrow.....	38
		Storage	39
Preparing the Tractor		Troubleshooting	
Use Your Tractor Operator's Manual	20	Disc Plough / Disc Harrow Trouble shooting.....	40
Front Counterweight	20	Serial Number.....	42
Rear Wheel Counterweight	20	Keep Machined Secure.....	42
Determine Front End Ballast W/O Implement		Specifications Chart and Compatibility Chart	43
Codes.....	20	Warranty Statement.....	44
Tightening	20	Acknowledgement.....	45
		Pre-Delivery Inspection report	46

 

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>