

# CORN HEADS

CH2112

CH2208



# Introduction

## Introduction



READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual and safety signs on your machine may also be available in other languages. (See your Frontier dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen.

Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of Frontier's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that Frontier will back its products where defects appear within the warranty period. In some circumstances, Frontier also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

# Index

Item	Page
12-Row Auger Adjustment Only .....	45-11
50, 60 and 70 Series Combines with Variable Speed Feeder House .....	35-3
9400, 9410, 9500, 9510, 9600 and 9610 Combines With Variable-Belt-Drive Feeder House .....	35-3

## A

Active Header Control Display .....	40-2
Adjust Corn Head Properly .....	35-1
Adjusting and Leveling Gatherer Points .....	45-1
Adjusting Auger .....	45-10
Adjusting Auger Drive Chain .....	45-12
Adjusting Deck Plates .....	45-4
Adjusting Gatherer Chain Flights .....	45-3
Adjusting Gatherer Chain Tension .....	45-3
Adjusting Row Unit Drive Chain .....	45-7
Adjusting Row Unit Drive Sprockets With (ONLY) Fixed Speed Drive (Combines) .....	45-8
Adjusting Row Unit Drive Sprockets With (ONLY) Fixed Speed Drive (Corn Huskers) .....	45-10
Adjusting Row Unit Drive Sprockets With (ONLY) Fixed Speed Drive (Forage Harvesters) .....	45-9
Adjusting Slip Clutches .....	45-7
Adjusting Trash Knives .....	45-2
Adjust Row Spacing .....	45-5
Alternative and Synthetic Lubricants .....	50-2
Annually or Every 200 Hours of Operation .....	55-3
Armrest Functions .....	40-1
Attaching and Detaching Corn Head to Forage Harvester or Corn Husker .....	20-10
Attaching Corn Head to Feeder House .....	20-1
Attaching Corn Head to Pre 60 Series Combine .....	25-1
Auger .....	35-12
Auger Floor Clean Out Door .....	55-2

## B

Beginning of Season Service .....	70-2
-----------------------------------	------

## C

Calibration Error Codes .....	40-1
Center Gatherer Shields .....	30-1
Chopping Gear Cases (Optional) .....	35-10
Combines With Fixed Speed Feeder House ....	35-4
Corn Head Drive Speeds .....	35-2
Corn Head Engage/Disengage Drive .....	35-2
Corn Head Grease .....	50-1
Corn Head Safety Features .....	05-1
Coupling the Chain .....	45-11

Item	Page
<b>D</b>	
Deck Plate Control Display .....	40-3
Description of Automatic Header Height Control System .....	40-4
Detaching Corn Head from Feeder House .....	20-6
Drive and Operate Carefully .....	35-1

## E

Ear Savers .....	35-8
End of Season Service .....	70-1
Every 1000 Hours of Operation .....	55-6

## F

Feeder House Latching Pins (Cleanout) .....	20-9
Feeder House Manual Unlatching .....	20-10

## G

Gatherers .....	35-5
Grease .....	50-1

## H

Harvesting Corn With Weakened or Broken Stalks .....	35-4
Harvesting Popcorn .....	35-4
Header Warning Light Bulb Replacement .....	65-8
Height Sensing and Active Header Float Pressure Sensitivity (Automatic Functions) .....	40-5
Hydraulic Adjustable Deck Plates .....	35-9
Hydraulic Cylinder Safety Stop .....	55-1, 65-1

## K

Keep Machines Secure .....	75-2
----------------------------	------

## L

Latching Cable Shear Screw Location .....	20-10
Level Land Feeder House Lower End Cable — Adjusting .....	20-9
Lowering ACTIVE HEADER CONTROL Ground Sensors (Optional) .....	35-7
Lubricant Storage .....	50-2
Lubrication Symbols .....	55-2

## M

Machines Equipped with Button Lock Multi-couplers .....	20-3
Machines Equipped with Slide Lock Multi-couplers .....	20-3
Manual Raise/Lower Speed (Manual Functions) .....	40-6

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Index

Item	Page	Item	Page
<b>O</b>		<b>S</b>	
Outer Gatherer Extensions .....	35-12	Safety Decal Locations .....	15-1
Outer Gatherer Shields.....	30-2	Serial Number .....	75-2
<b>P</b>		Single Point Latching — Adjusting .....	20-7
Proof of Ownership .....	75-2	Specifications .....	75-1
<b>R</b>		Stalk Rolls .....	35-9
Raising and Removing Center Gatherer Shields and Points .....	35-5	Starting in the Field .....	35-1
Raising and Tilting End Fenders and Points .....	35-7	Stubble Light Bulb Replacement .....	65-7
Remove and Install Oil Pan .....	65-6	Stubble Lights .....	35-12
Remove and Install Stalk Rods .....	65-1	<b>T</b>	
Removing, Flipping, and Installing Chopping Knife Blades .....	35-11	Transporting Corn Head on a Trailer .....	30-1
Replacing Gatherer Chain .....	65-5	Troubleshooting .....	60-1
Reversing Gatherer Chains and Sprockets for Additional Wear .....	65-4	Troubleshooting - Active Header Control (AHC) .....	60-4
Row Units .....	35-8	Torque Charts.....	75-3, 75-4
		<b>W</b>	
		Wear Strips .....	65-7
		When to Calibrate .....	40-1

# Contents

<i>Item</i>	<i>Page</i>	<i>Item</i>	<i>Page</i>
<b>Corn Head Safety Features</b>		<b>Retrofit Head to Pre 60 Series Combine</b>	
Corn Head Safety Features .....	05-1	Attaching Corn Head to Pre 60 Series Combine .....	25-1
<b>Safety</b>		<b>Transporting</b>	
Recognize Safety Information.....	10-1	Transporting Corn Head on a Trailer .....	30-1
Understand Signal Words.....	10-1	<b>Operating Header</b>	
Wear Protective Clothing .....	10-1	General Information .....	35-1
Follow Safety Instructions.....	10-2	Starting in the Field.....	35-1
Prepare for Emergencies.....	10-2	Adjust Corn Head Properly .....	35-1
Store Attachments Safely .....	10-2	Drive and Operate Carefully .....	35-1
Ballasting for Safe Ground Contact .....	10-3	Corn Head Engage/Disengage Drive .....	35-2
Parking and Leaving the Combine.....	10-3	Corn Head Drive Speeds.....	35-2
Avoid Contact With Moving Parts .....	10-3	50, 60 and 70 Series Combines with Variable Speed Feeder House.....	35-3
Use Safety Lights and Devices.....	10-4	9400, 9410, 9500, 9510, 9600 and 9610 Combines With Variable-Belt-Drive Feeder House .....	35-3
Road Transport Disconnect Switch (Black) ...	10-4	Combines With Fixed Speed Feeder House .....	35-4
Transport Combine With Header Safely .....	10-5	Harvesting Corn With Weakened or Broken Stalks.....	35-4
Stay Clear of Header .....	10-5	Harvesting Popcorn .....	35-4
Avoid Tanglement .....	10-5	Gatherers.....	35-5
Stay Clear of Rotating Drivelines.....	10-6	Raising and Removing Center Gatherer Shields and Points .....	35-5
Practice Safe Maintenance .....	10-6	Lowering ACTIVE HEADER CONTROL Ground Sensors (Optional).....	35-7
Service Machines Safely .....	10-7	Raising and Tilting End Fenders and Points..	35-7
Guards and Shields .....	10-7	Ear Savers .....	35-8
Support Machine Properly .....	10-8	Row Units .....	35-8
Avoid High Pressure Fluids.....	10-8	Stalk Rolls.....	35-9
Remove Paint Before Welding or Heating .....	10-9	Hydraulic Adjustable Deck Plates .....	35-9
Avoid Heating Near Pressurized Fluid Lines .	10-9	Chopping Gear Cases (Optional) .....	35-10
Dispose of Waste Properly .....	10-10	Removing, Flipping, and Installing Chopping Knife Blades .....	35-11
Replace Safety Signs .....	10-10	Auger .....	35-12
<b>Safety Decal Locations</b>		Stubble Lights .....	35-12
Safety Decal Locations .....	15-1	Outer Gatherer Extensions .....	35-12
<b>Attaching and Detaching</b>		<b>Calibration and Programming</b>	
Attaching Corn Head to Feeder House.....	20-1	When to Calibrate .....	40-1
Machines Equipped with Slide Lock Multi-couplers .....	20-3	Calibration Error Codes .....	40-1
Machines Equipped with Button Lock Multi-couplers .....	20-3	Armrest Functions.....	40-1
Detaching Corn Head from Feeder House .....	20-6	Active Header Control Display.....	40-2
Single Point Latching — Adjusting.....	20-7	Deck Plate Control Display .....	40-3
Level Land Feeder House Lower End Cable — Adjusting .....	20-9		
Feeder House Latching Pins (Cleanout).....	20-9		
Feeder House Manual Unlatching .....	20-10		
Latching Cable Shear Screw Location.....	20-10		
Attaching and Detaching Corn Head to Forage Harvester or Corn Husker .....	20-10		

 
*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

## Contents

<i>Item</i>	<i>Page</i>	<i>Item</i>	<i>Page</i>
Description of Automatic Header Height Control System .....	40-4	<b>Lubrication and Maintenance</b>	
Height Sensing and Active Header Float Pressure Sensitivity (Automatic Functions) .....	40-5	Hydraulic Cylinder Safety Stop .....	55-1
Manual Raise/Lower Speed (Manual Functions) .....	40-6	Lubrication Symbols .....	55-2
<b>Adjustments</b>		Auger Floor Clean Out Door .....	55-2
Adjusting and Leveling Gatherer Points .....	45-1	Annually or Every 200 Hours of Operation ....	55-3
Adjusting Trash Knives .....	45-2	Every 1000 Hours of Operation .....	55-6
Adjusting Gatherer Chain Tension .....	45-3	<b>Troubleshooting</b>	
Adjusting Gatherer Chain Flights .....	45-3	Troubleshooting .....	60-1
Adjusting Deck Plates .....	45-4	Active Header Control (AHC) .....	60-4
Adjust Row Spacing .....	45-5	<b>Service</b>	
Adjusting Slip Clutches .....	45-9	Hydraulic Cylinder Safety Stop .....	65-1
Adjusting Row Unit Drive Chain .....	45-9	Remove and Install Stalk Rods .....	65-1
Adjusting Row Unit Drive Sprockets With (ONLY) Fixed Speed Drive (Combines) .....	45-10	Reversing Gatherer Chains and Sprockets for Additional Wear .....	65-4
Adjusting Row Unit Drive Sprockets With (ONLY) Fixed Speed Drive (Forage Harvesters) .....	45-11	Replacing Gatherer Chain .....	65-5
Adjusting Row Unit Drive Sprockets With (ONLY) Fixed Speed Drive (Corn Huskers) .....	45-12	Remove and Install Oil Pan .....	65-6
Adjusting Auger .....	45-12	Wear Strips .....	65-7
12-Row Auger Adjustment Only .....	45-13	Stubble Light Bulb Replacement .....	65-7
Coupling the Chain .....	45-13	Header Warning Light Bulb Replacement .....	65-8
Adjusting Auger Drive Chain .....	45-14	<b>Storage</b>	
<b>Lubrication</b>		End of Season Service .....	70-1
Corn Head Grease .....	50-1	Beginning of Season Service .....	70-2
Grease .....	50-1	<b>Specifications</b>	
Lubricant Storage .....	50-2	Specifications .....	75-1
Alternative and Synthetic Lubricants .....	50-2	Serial Number .....	75-2
		Keep Proof of Ownership .....	75-2
		Keep Machines Secure .....	75-2
		Unified Inch Bolt and Screw Torque Values ...	75-3
		Metric Bolt and Screw Torque Values .....	75-4

# Corn Head Safety Features

## Corn Head Safety Features

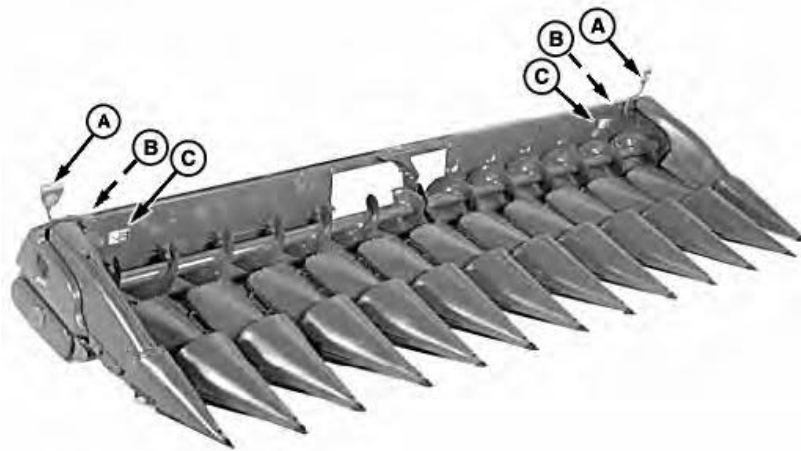

A - Warning Lights

B - Reflective Materials

C - Safety Decals

In addition to the safety features shown here, safety signs on the corn head, and safety messages and instructions in the operator's manual contribute to the safe operation of this corn head when combined with the care and concern of a capable operator.

# Safety

## Recognize Safety Information

This is a safety alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



## Understand Signal Words

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

**DANGER**

**WARNING**

**CAUTION**

 
## Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

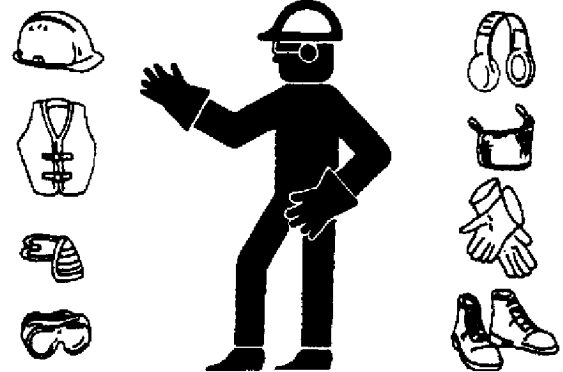


### Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your dealer.

Learn how to operate the equipment and how to use controls properly. Do not let anyone operate without instruction.

Keep your equipment in proper working condition. Unauthorized modifications to the equipment may impair the function and/or safety and affect equipment life.

 If you do not understand any part of this manual and need assistance, contact your dealer.

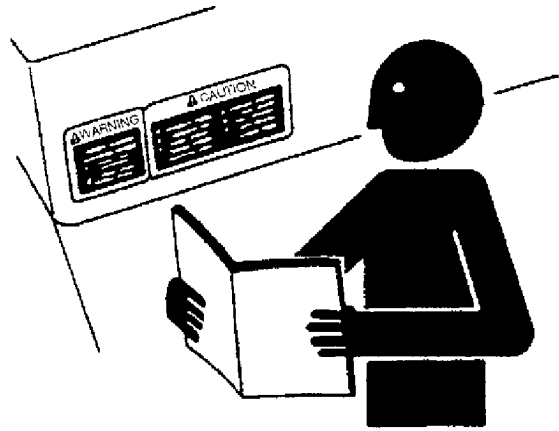


### Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

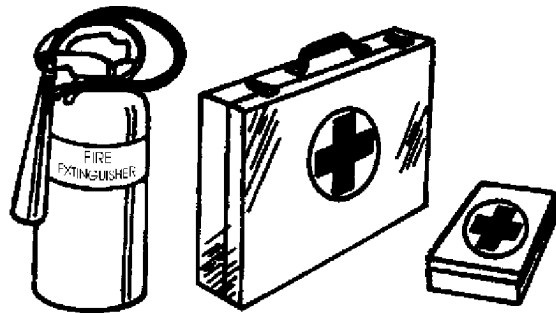

### Store Attachments Safely

 
Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



### Ballasting for Safe Ground Contact

Operating, steering and braking performance of the combine can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the combine at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

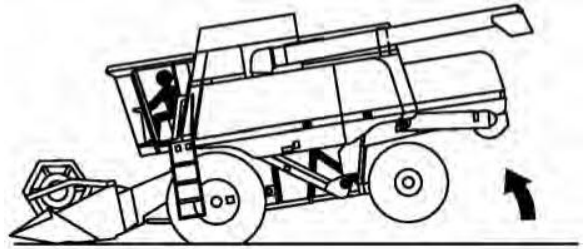


### Parking and Leaving the Combine

Lower harvesting unit to the ground.

Before leaving the combine, disengage harvesting unit and separator. Shut off engine and move gear shift lever to neutral. Apply parking brake, remove key and lock the operator's cab.

Never leave combine unattended as long as engine is running.

 Never leave the operator's cab when driving.

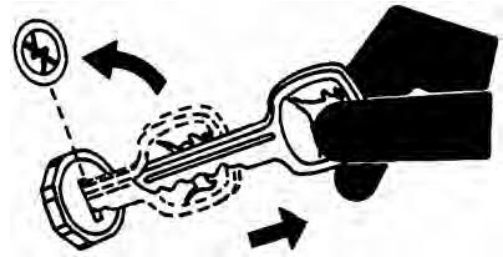

### Avoid Contact With Moving Parts

 
Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.



## Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your dealer.

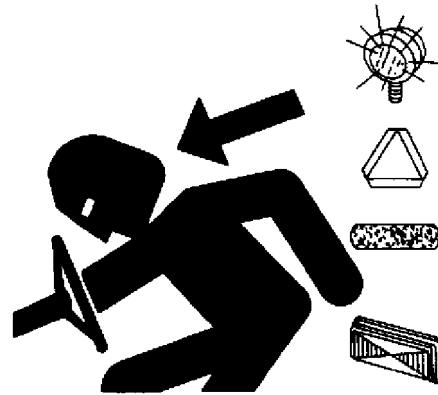


## Road Transport Disconnect Switch (Black)

Road transport disconnect switch (A) must be in road position when transporting machine on roadway.

When road transport disconnect switch is pressed, indicator light (B) will turn ON indicating switch is in road position. Road transport disconnect switch will prevent the following functions:

 - Header Height Resume
- Header Height Sensing
- CONTOUR MASTER
- Reel Raise/Lower and Reel Fore/Aft
- Unloading Auger
- Auger Swing
- Power Folding Auger (If Equipped)
- Separator Engage
- Header Engage
- Header Raise/Lower

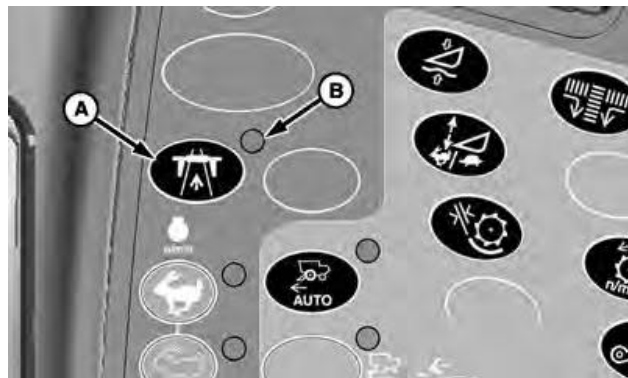

To reengage functions for field operation, press road transport disconnect switch again and indicator light will turn OFF allowing the desired function switches to operate again.

### Transport Combine With Header Safely

Whenever possible avoid transporting on public roadways when the header is attached.

If the combine must be transported with the header attached, make sure that the flashing warning lights on the header are operating and the reflective material is clean and visible.

The use of a spotter or pilot vehicle is recommended on busy, narrow or hilly roads and when crossing bridges.

Drive at a speed that is safe for conditions.



### Stay Clear of Header

Stalk rolls of the corn head, etc., cannot be completely shielded by constructional measures due to their function. Always stay clear of these moving elements during operation! Always disengage header drive, shut off the engine and remove key before servicing or unclogging header.



### Avoid Tanglement

To avoid entanglement, do not feed crop material into machine by hand or attempt to manually unplug machine while it is running. The stalk rolls can feed the crop material in faster than you can release your grip on the material.



### Stay Clear of Rotating Drivelines

Entanglement in backshaft rotating driveline can cause serious injury or death.

Keep driveline shields in place at all times.

Wear close fitting clothing. Stop the combine engine and be sure driveline is stopped before making adjustments, connections, or cleaning out header or its drive components.



### Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust engine while it is running. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow engine to cool.

Securely support any engine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

 
On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



### Service Machines Safely

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

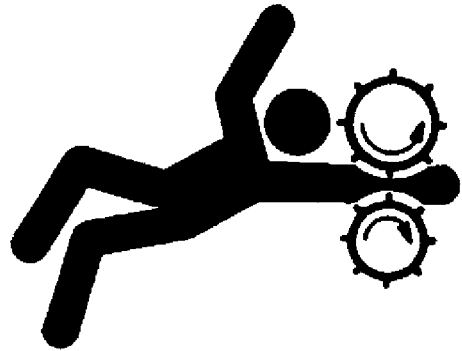

### Guards and Shields

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.



### Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.



### Avoid High Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.



### Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

 
Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

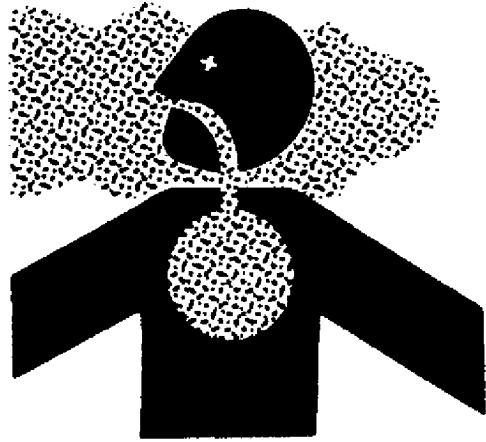

### Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.





**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

### Dispose of Waste Properly

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with Frontier equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.


Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your Frontier dealer.

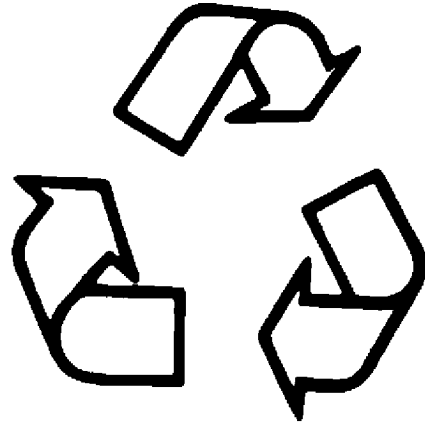


### Replace Safety Signs

 Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

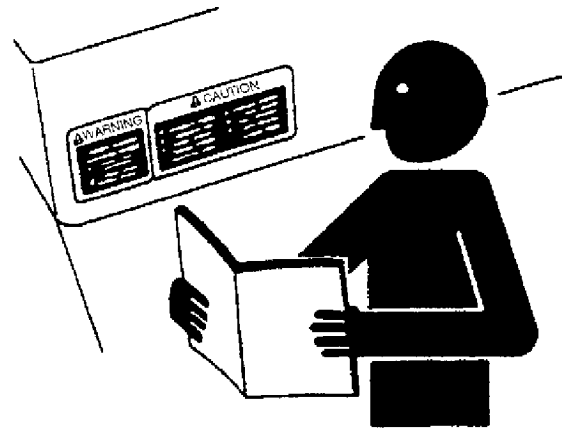

# Safety Decal Locations
 
## Safety Decal Locations

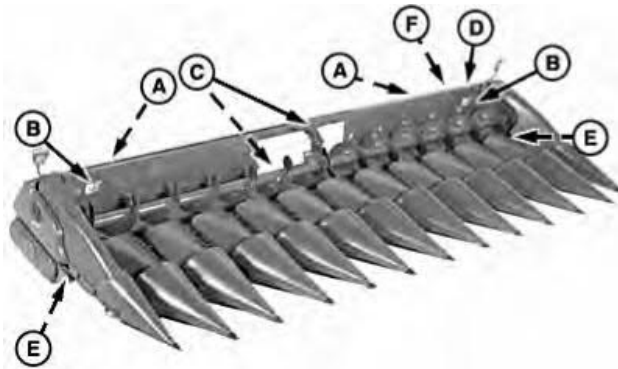

A



D



B



E



C

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**