




ASSEMBLY & OPERATING INSTRUCTIONS

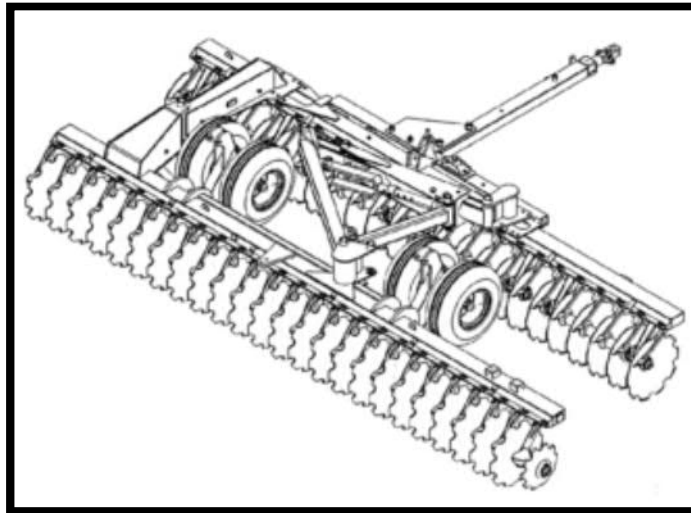

MODELS DH4218 AND DH4221

HINGE-WHEEL OFFSET DISK HARROW

FORM NO.: 5RPMAN332AO

PUBLISHED: 06-08

Printed in USA

Contents

| | |
|---|-------|
| Introduction | 2 |
| Contents | 3-5 |
| Product Information | 6-9 |
| Reference Assembly, Model OD2118..... | 6,7 |
| Reference Assembly, Model OD2118..... | 8,9 |
| General Information | 10 |
| Checklists | 11-13 |
| Pre-Delivery..... | 11 |
| Delivery..... | 12 |
| After Sale..... | 13 |
| Each Morning of Operation..... | 13 |
| Before Each Season..... | 13 |
| Safety Signs | 14-17 |
| Safety | 18-26 |
| Recognize Safety Information..... | 18 |
| Understand Signal Words..... | 18 |
| Follow Safety Instructions..... | 18 |
| Use Seat Belt Properly..... | 19 |
| Operate Safely..... | 19 |
| Keep Riders Off Machine..... | 20 |
| Prepare For Emergencies..... | 20 |
| Wear Protective Clothing..... | 20 |
| Protect Against Noise..... | 20 |
| Use Safety Lights And Devices..... | 21 |
| Use A Safety Chain..... | 21 |
| Transport Safety..... | 22 |
| Tow Loads Safely..... | 22 |
| Practice Safe Maintenance..... | 23 |
| Remove Paint Before Welding Or Heating..... | 24 |
| Avoid Heating Near Pressured Fluid Lines..... | 24 |
| Avoid High-Pressure Fluids..... | 25 |
| Avoid Harmful Asbestos Dust..... | 25 |
| Store Attachments Safely..... | 26 |
| Dispose Of Waste Properly..... | 26 |
| Preparing The Tractor | 27 |
| Positioning Drawbar..... | 27 |
| Preparing The Disk | 28 |
| Checking And Lubricating Disk..... | 28 |
| Adjusting Rigid Scrapers..... | 28 |
| Notes..... | 29 |
| Attaching And Detaching | 30-35 |
| Attaching Disk To Tractor..... | 30 |
| Attaching Safety Chain To Tractor..... | 30 |

Contents

| | |
|--|-------|
| Attaching And Detaching continued | 31-35 |
| Attaching Hydraulic Hoses..... | 31 |
| Attaching Warning Light Plug..... | 31 |
| Detaching Disk From Tractor..... | 32 |
| Checking Transport Control Operation..... | 33 |
| Checking Leveling Adjustment..... | 34 |
| Notes:..... | 35 |
| Transporting Machine | 36-38 |
| Guidelines For Use..... | 36 |
| Positioning Tractor Drawbar For Transport (Four Wheel Drive Tractors)..... | 37 |
| Positioning Jack For Transport..... | 37 |
| Attach Safety Chain To Tractor..... | 37 |
| Install Transport Locking Devices..... | 38 |
| Attaching Warning Light Plug..... | 38 |
| Transporting The Machine..... | 38 |
| Operating The Machine | 39-48 |
| Caution: Safety Guidelines..... | 39 |
| Guidelines For Use..... | 40 |
| Tighten Hardware..... | 40 |
| Operating Speed..... | 40 |
| Offset Bar Height Adjustment..... | 41 |
| Positioning Drawbar Angling Selecting Bolt..... | 41 |
| Positioning Drawbar On Offset Bar..... | 42 |
| Positioning Drawbar On Offset Bar To Reduce Draft On Tractor..... | 43 |
| Gang Angle Adjustment..... | 44 |
| Side Adjustment Of Gang Carriers..... | 45 |
| Hydraulic Control..... | 46 |
| Hydraulic Control Schematic..... | 47 |
| Preparing Harrow For Transport..... | 48 |
| Scraper Adjustment..... | 48 |
| Lubrication | 49,50 |
| Lubricate Storage..... | 49 |
| Lubricate Gang Bearings..... | 49 |
| Lubricate Wheel Bearings..... | 49 |
| Daily Inspection And Lubrication..... | 50 |
| Maintenance | 51-59 |
| Caution: Safety Guidelines..... | 51 |
| Checking Wheel Bolts And Bearings..... | 52 |
| Repack Wheel Hub Bearings Annually..... | 52 |
| Gang Bearings..... | 53 |
| Disk Gangs..... | 53 |
| Hydraulic Hoses..... | 53 |
| Fasteners / Bolt Torque Chart..... | 53 |

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>

Contents

| | |
|--|-------|
| Maintenance continued | 54-59 |
| Removing Hydraulic Cylinders..... | 54 |
| Bleeding Transport Cylinders..... | 54 |
| Servicing Disk Gangs..... | 55 |
| Assembling Disk Spacers..... | 55 |
| Gang Axle Nut Wrenches..... | 55 |
| Tighten Gang Axle Nuts..... | 56 |
| Attaching Disk Gangs To Standards..... | 57 |
| Service Tires Safely..... | 58 |
| Checking Tire Pressure..... | 58 |
| Tire Pressure Chart..... | 59 |
| Storage | 60 |
| Beginning Of Season Maintenance..... | 60 |
| End Of Season Maintenance..... | 60 |
| Assembly | 61-83 |
| Caution: Safety Guidelines..... | 61 |
| Check All Parts On Packing List..... | 62 |
| Step 1. Assembling Gangs..... | 62,63 |
| Step 2. Installing Gangs On Gang Carriers..... | 64 |
| Step 3. Joining Gang Carriers..... | 64 |
| Step 4. Installing Stabilizers And Latch Groups..... | 65,66 |
| Step 5. Attaching Offset Bar..... | 67 |
| Step 6. Attaching Drawbar..... | 68 |
| Step 7. Install Scrapers..... | 69 |
| Step 8. Install Hydraulic Control Group..... | 69-74 |
| Attachment Assembly | 80-83 |
| General..... | 80 |
| Install Safety Chain..... | 80 |
| Bearing Wear Plate..... | 80 |
| Install Warning Lights..... | 81-83 |
| Specifications | 84,85 |
| Suggested Repair Parts Stock For Models DH4218 And DH4221..... | 84 |
| Manuals - Operators and Repair Parts..... | 84 |
| Specs, Features & Standard Equipment For Models DH4218 And DH4221..... | 85 |

PRODUCT IDENTIFICATION

REFERENCE ASSEMBLY

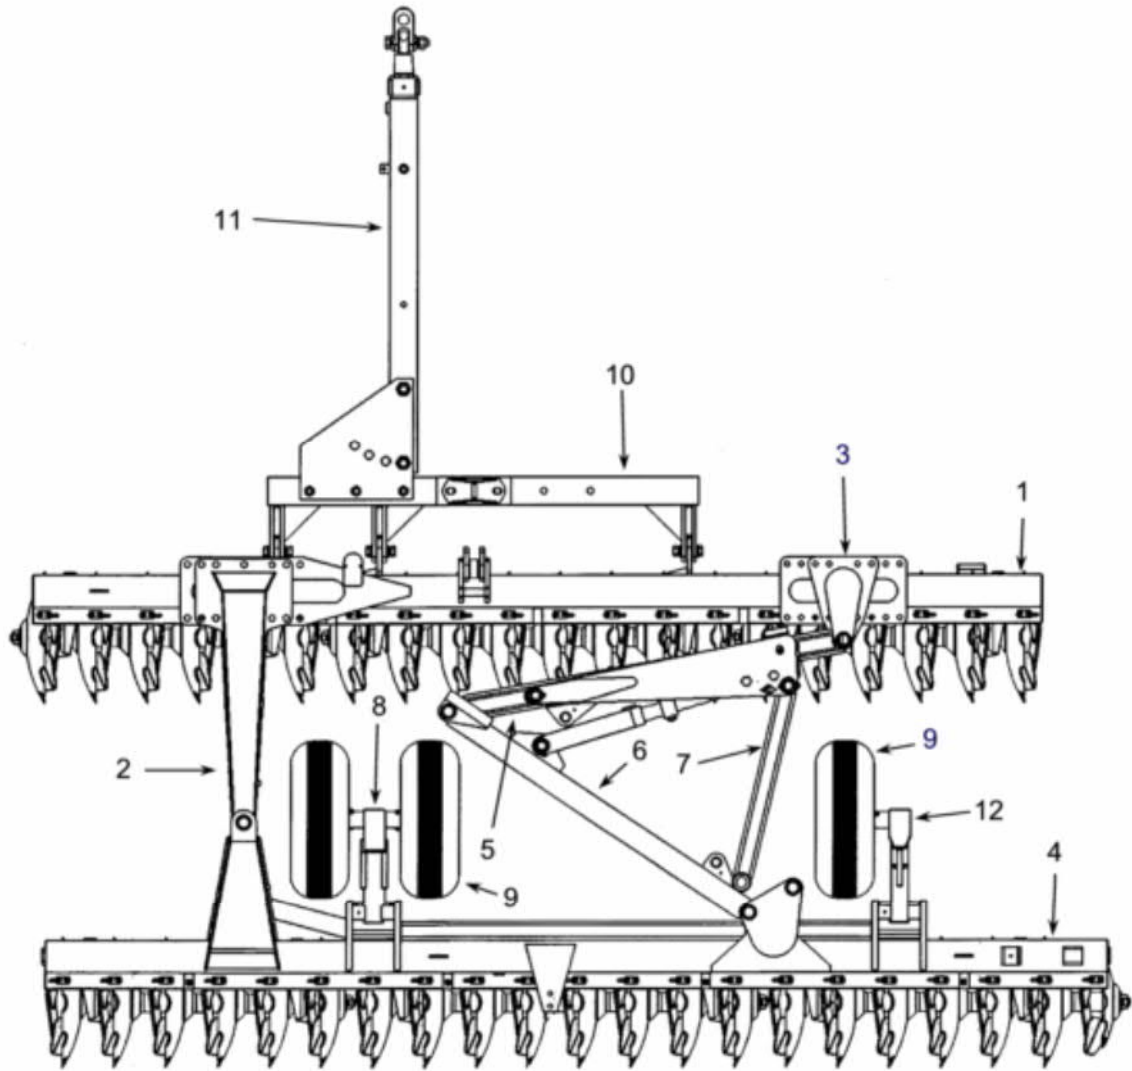



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

FRONTIER MODEL DH4218

HINGE-WHEEL TYPE OFFSET DISK HARROW

PRODUCT IDENTIFICATION


| REF NO. | PART NO. | PART NAME | QTY. |
|----------------|-----------------|-------------------------------|-------------|
| 1 | #5RP3007114 | FRONT GANG CARRIER | 1 |
| 2 | 5RP3007772 | FRONT PIVOT HINGE | 1 |
| 3 | 5RP3007413 | FRONT STABILIZER HINGE | 1 |
| 4 | #5RP3054743 | REAR GANG CARRIER | 1 |
| 5 | 5RP3007432A | FRONT STABILIZER ASSEMBLY | 1 |
| 6 | 5RP3007430 | REAR STABILIZER ASSEMBLY | 1 |
| 7 | 5RP3007440 | LATCH SUPPORT ASSEMBLY | 1 |
| 8 | 5RP3005834A | DUAL WHEEL TRANSPORT ASSEMBLY | 1 |
| 9 | 5RP3005232 | TIRE AND WHEEL ASSEMBLY | 3 |
| 10 | 5RP3006176 | OFFSET BAR ASSEMBLY | 1 |
| 11 | 5RP3008209 | DRAWBAR ASSEMBLY | 1 |
| 12 | 5RP30005833A | SINGLE WHEEL ASSEMBLY | 1 |

FRONTIER MODEL DH4218

HINGE-WHEEL TYPE OFFSET DISK HARROW

PRODUCT IDENTIFICATION

REFERENCE ASSEMBLY

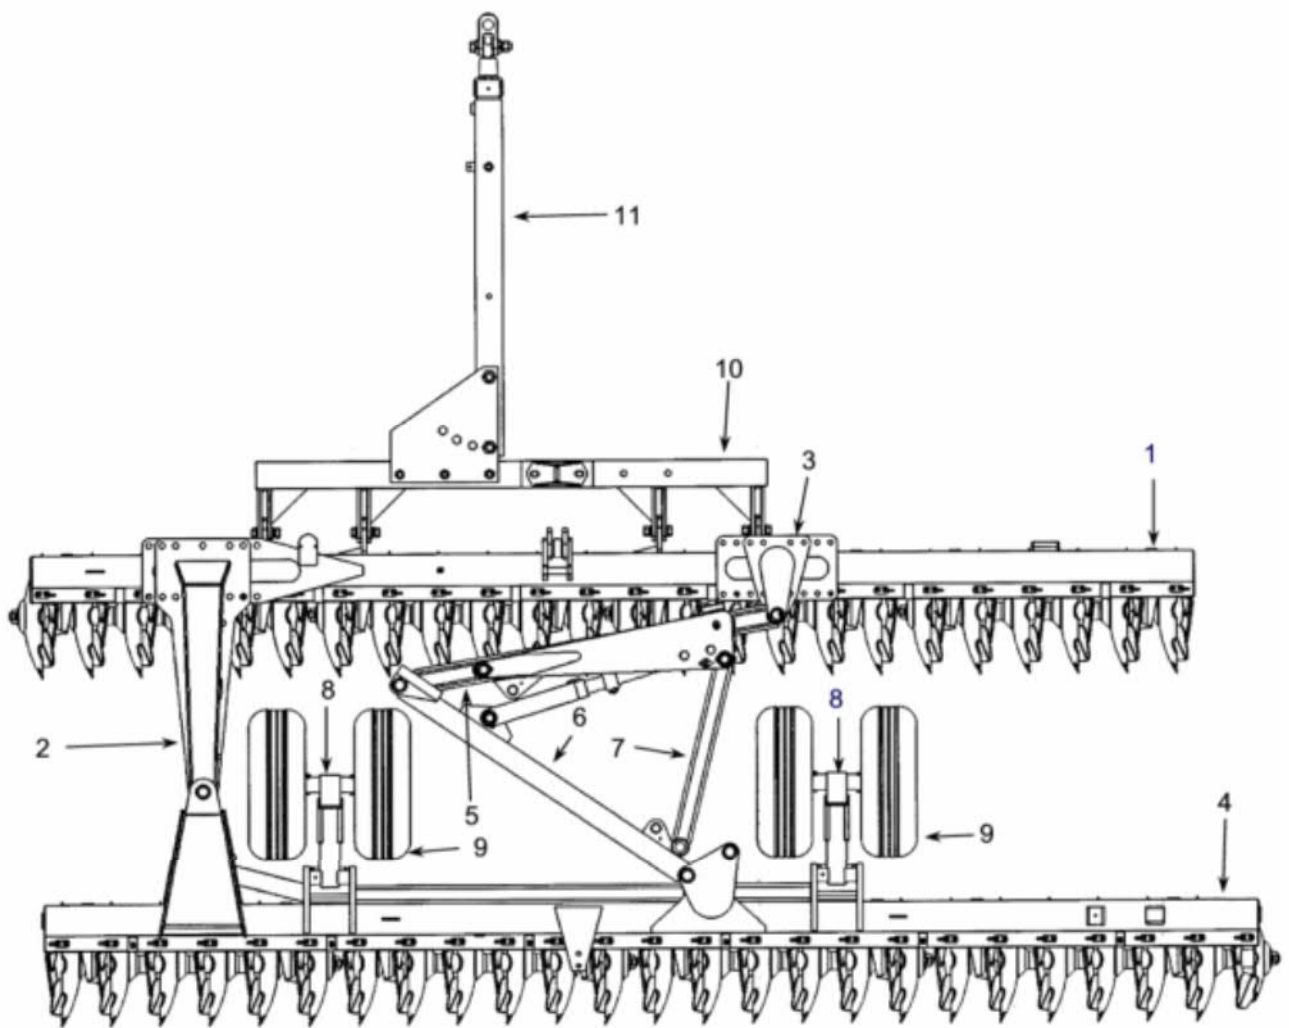

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>