

OPERATOR'S MANUAL

TANDEM AGRICULTURAL DISKS

TM5129-TM5132



5KBTSMANW (7/4/2011)



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may be ordered from your John Deere dealer.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in customary U.S. units. Only use the correct replacement parts and fasteners.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE DOWN PRODUCT IDENTIFICATION NUMBERS. Accurately record all the numbers to help in tracing the machine should it be stolen. Your John Deere dealer also needs these numbers when you order parts. File the identification numbers in a secure place away from the machine.

WARRANTY coverage is provided by John Deere according to the terms of the Construction, Utility, and Forestry Products Standard Warranty Statement. Carefully read the warranty statement on the back of your original purchase order for details on coverage and limitations of this warranty.

This warranty provides you the assurance that Frontier will back its products where defects appear within the warranty period. In some circumstances, Frontier also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused or modified to change its performance beyond the original factory specifications, or if the equipment is used for a purpose other than that which it was designed for, the warranty will become void and field improvements may be denied.

THE TIRE MANUFACTURERS warranty is separate and apart from the equipment warranty and may not apply outside the U.S.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

Introduction	1
General Arrangement	4
General Information	5
Pre-Delivery Checklist	6
Delivery Checklist	6
After Sale Checklist	7
Daily Checklist	7
Seasonal Checklist	7
Decal Identification and Placement	8
Safety First	9
Attaching the Disc to the Tractor	10
Transporting the Disc	10
Adjusting the Transport Leveling Control Arm	11
Transport and Operating Safety	12
Operating the Disk	
General Operating Guidelines	13
Adjust the Leveling Control Arm	13
Service and Maintenance Safety	14
Lubricate the Disk	15
Check the Oil-Bath Bearings	16
Adjusting the Scrapers	16
Repack and Pre-Load Wheel Hub Bearings	17
Fluid and Fastener Specifications	
Disc Gang Assembly Axles	18
Fastener Torque Values	18
Oil-Bath Bearing Oil	18
Tire and Wheel Service	18
Keep Gang Assemblies Tight	19
Assembly Safety	20
Assemble the Disk	21
Hydraulic Lift Cylinder Schematic	27
Hydraulic Fold Cylinder Schematic	28
Hydraulic Fold Cylinder Schematic c/w Wing Control	29
Mount Wing Control and Shut-Off Valves	30
Using Disc with Optional Wing Control	31
Light Kit Component Installation	32
Light Kit Schematic	33
Detailed Parts Diagrams	34
Hitch Bridle Assembly	35
Center Frame and Transport Assembly	36
Right Hand Wing Frame and Transport Assembly	37
Left Hand Wing Frame and Transport Assembly	38

Control Arm Assemblies	39
Gang Bars and Scrapers	40
Gang Assembly (1-5/8" Axle)	41
Gang Assembly (2-1/8" Axle)	42
Oil-Bath Bearing Assembly (1-5/8" Axle)	43
Oil-Bath Bearing Assembly (2-1/8" Axle)	44
12" Hydraulic Cylinder	45
42" Hydraulic Cylinder	46
8-Bolt Hub	47
Tire and Wheel Assembly	48
Hydraulic Lift Cylinders and Hose Assembly	49
Hydraulic Fold Cylinders and Hose Assembly	50
Hydraulic Fold Cylinders and Hose Assembly c/w Wing Control	51
Light Kit Components	52
Light Kit Cables	53
Decals, Reflectors and Logos	54
Specifications	55
Storage	56