

OPERATOR'S MANUAL

HIGH-CAPACITY WHEEL RAKE

WR2110

WR2112

WR2114



FRONTIER
EQUIPMENT™

OMUS00W21 (09/14/12)

INTRODUCTION

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your Frontier dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS

(P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of Frontier's support program for customers who operate and maintain their equipment as described in this manual.

This warranty provides you the assurance that Frontier will back its products where defects appear within the warranty period. In some circumstances, Frontier also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

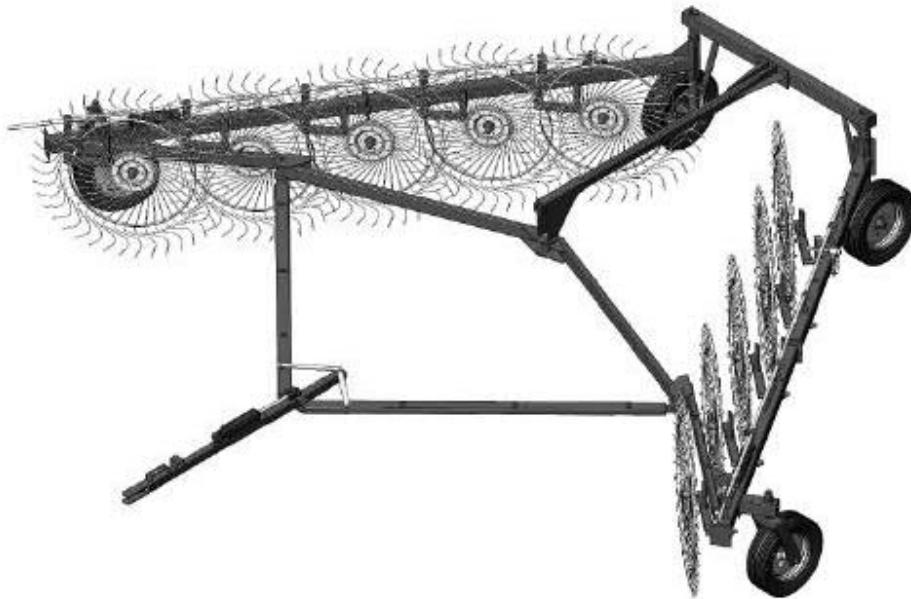 


TABLE OF CONTENTS

	Page
SAFETY	4
PREPARING THE TRACTOR	
Positioning Tractor Drawbar	14
Using Drawbar Shield	14
Making Drawbar Shield	15
Three-Point Hitch Position	15
Checking Ballast, Wheel Spacing, and Tire Inflation	15
PREPARING THE RAKE	
Checking Tire Inflation Pressure	16
Checking Wheel Nut Torque	16
ATTACHING AND DETACHING	
Attaching Rake to Tractor Drawbar.....	17
Attaching to Tractor Hydraulic System	18
Detaching Rake from Tractor	19
TRANSPORTING	
Preparing Rake For Transport.....	21
OPERATING THE RAKE	
Prestarting Checks.....	25
Preparing Rake for Field Operation.....	25
Operating the Rake.....	28
Adjusting Windrow Width	29
Setting Working Width	30
Adjusting Raking Wheel Height	31
ATTACHMENTS Center Kicker Wheels	32
LUBRICATION AND MAINTENANCE	
Perform Lubrication and Maintenance	33
Observe Lubrication Symbols	33
Alternative and Synthetic Lubricants.....	34
Grease.....	34
Lubricant Storage.....	35
Every 10 Hours	35
Every 50 Hours	36
Every 100 Hours.....	37
Every 200 Hours.....	38
Annually	39
As Required	40
TROUBLESHOOTING.....	41-42
SERVICE	
Servicing Tires Safely.....	43

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

Servicing Rake Safely	43
Replacing Wheel Tines.....	44
Identifying Left-Hand and Right-Hand Rake Wheels	44
STORAGE	
End of Season	45
Beginning of Season	45
CHECKLISTS	
Dealers Record	46
Predelivery	46
Delivery	47
ASSEMBLY	
Uncrating Machine.....	48
Assembly rear frame.....	48
Assembly side frames.....	49
Assembly opening arms and drawbar.....	51
Assembly lift tubes.....	54
Assemblyadjustable windrow width rake arms.....	56
Assembly lift cylinders.....	57
Install Rake Wheels	59
Install SMV Emblem	60
Install transport lights.	61
INSTALLING CENTER KICKER WHEEL.....	61-65
FINAL INSPECTION AND LUBRICATION	
Final Inspection and Lubrication	66
SPECIFICATIONS	
High-Capacity Wheel Rake	67
Record Product Identification Number	68
Tightening Flare Type Tube Fittings	68
Unified Inch Bolt and Cap Screw Torque Values	69
Metric Bolt and Cap Screw Torque Values	70
SPARE PARTS.....	71-97
INDEX.....	98

SAFETY

SAFETY ALERT SYMBOL



This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!

Carefully read and follow the safety message accompanying this symbol.

Why is SAFETY important to you?

- 3 BIG REASONS
- ACCIDENTS DISABLE AND KILL
 - ACCIDENTS COST
 - ACCIDENTS CAN BE AVOIDED

SIGNAL WORDS

Note the use of the signal words DANGER, WARNING, and CAUTION with safety messages. The appropriate signal word for each message has been selected using the following guidelines:



DANGER – Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING – Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It is also used to alert against unsafe practices.



CAUTION – Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It is also used as a reminder of good safety practices.

SAFETY

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your Frontier dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your Frontier dealer.

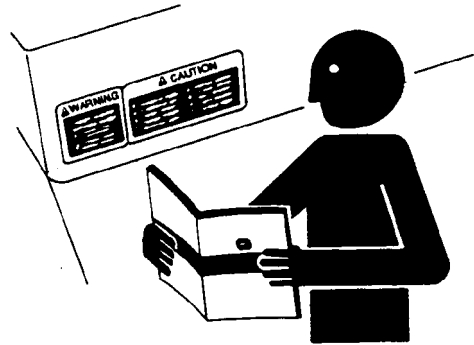

OPERATE RAKE SAFELY

All machinery should be operated by responsible persons who have been properly instructed and delegated to do so.

Before each use, inspect entire machine. Check tightness of all hardware.

Stop the tractor engine and engage parking brake before leaving tractor operator's station to adjust, lubricate, clean or unclog the machine.

Never hand feed material into the machine.

Do not lean against, sit, or stand on rake.

Make sure bystanders are clear of machine before lowering rake wheels.

SAFETY

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

 


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.


Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

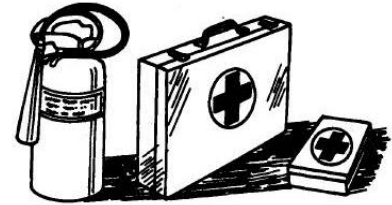

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

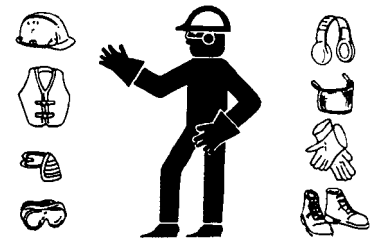

SAFETY

HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with Frontier equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

 
(See your Frontier dealer for MSDS's on chemical products used with Frontier equipment.)



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

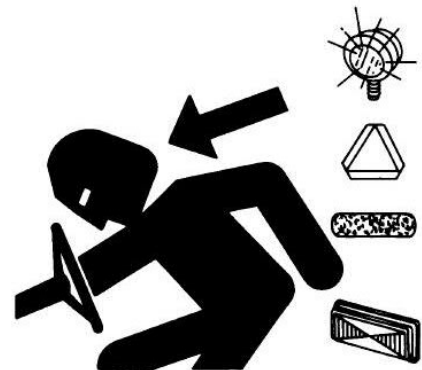


SAFETY

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your Frontier dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

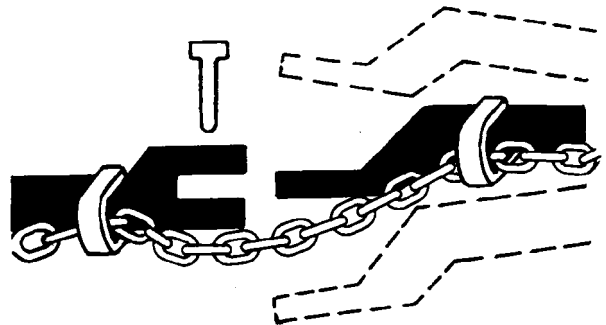


TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

 Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

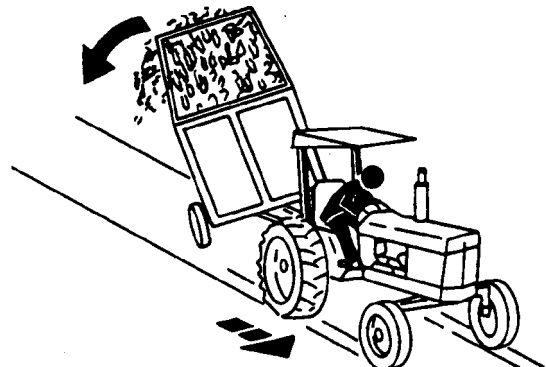



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

SAFETY

SERVICE RAKE SAFELY

To help prevent injury caused by unexpected movement, be sure to service machine on level surface.

 
Lower rake wheels before servicing or adjusting rake.

If machine is connected to a tractor:

- Engage tractor parking brake and/or place transmission in "Park."
- Shut off engine and remove key.

If machine is detached from tractor, block wheels and use safety stands to prevent movement.

To avoid eye injuries, cuts and bruises, take care when working around raised wheels. Do not service or adjust machine with rake wheels raised.

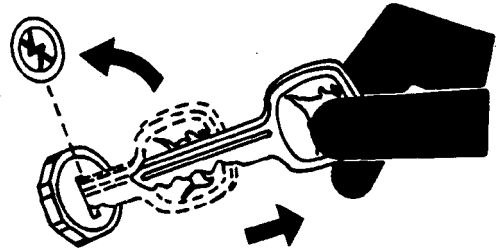

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



SAFETY

REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

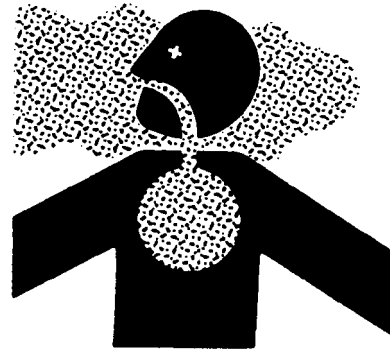

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>