

# **SideHill 9500 Combine**

**John Deere Harvester Works  
OMH161696 Issue C7  
(This manual replaces OMH156903 B7)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

## CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



H44205

-UN-20APR92

H44205

HX,H161696,IFC -19-04APR97

# Contents

	Page		Page
<b>Safety Page</b> .....	05-1	<b>Monitors</b> .....	100-1
<b>Safety</b> .....	10-1	<b>Hydraulic System</b> .....	105-1
<b>Safety Decal Location</b> .....	15-1	<b>SideHill Leveling System</b> .....	110-1
<b>Operators Station</b> .....	20-1	<b>Ground Drive and Rear Axle Service</b> . . . .	115-1
<b>Lights and Signals</b> .....	25-1	<b>Air Conditioning and Heater Service</b> . . . .	120-1
<b>Prestarting Checks</b> .....	30-1	<b>Trouble Shooting</b> .....	125-1
<b>Operating the Engine</b> .....	35-1	<b>Storage</b> .....	130-1
<b>Transporting</b> .....	40-1	<b>Specifications</b> .....	135-1
<b>Crop Settings and Seed Loss Charts</b> . . . . .	45-1	<b>Machine Identification Numbers</b> . . . . .	140-1
<b>Combine Cleanout</b> .....	50-1	<b>Crime Prevention Tips</b> .....	145-1
<b>Feeder House</b> .....	55-1	<b>John Deere Service Literature Available</b> . .	150-1
<b>Shields</b> .....	60-1	<b>Index</b>	
<b>Separator</b> .....	65-1		
<b>Straw Chopper and Spreader</b> . . . . .	70-1		
<b>Grain Tank and Unloading System</b> . . . . .	75-1		
<b>Fuels and Lubricants</b> .....	80-1		
<b>Lubrication and Maintenance</b> . . . . .	85-1		
<b>Engine Service</b> .....	90-1		
<b>Electrical System Service</b> . . . . .	95-1		

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMH161696 C7-19-04APR97

COPYRIGHT 1997  
 DEERE & COMPANY  
 Moline, Illinois  
 All rights reserved  
 A John Deere ILLUSTRATION Manual  
 Previous Editions  
 Copyright1996,1995,1992,1991 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

 
Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# Safety Page

## COMBINE SAFETY FEATURES

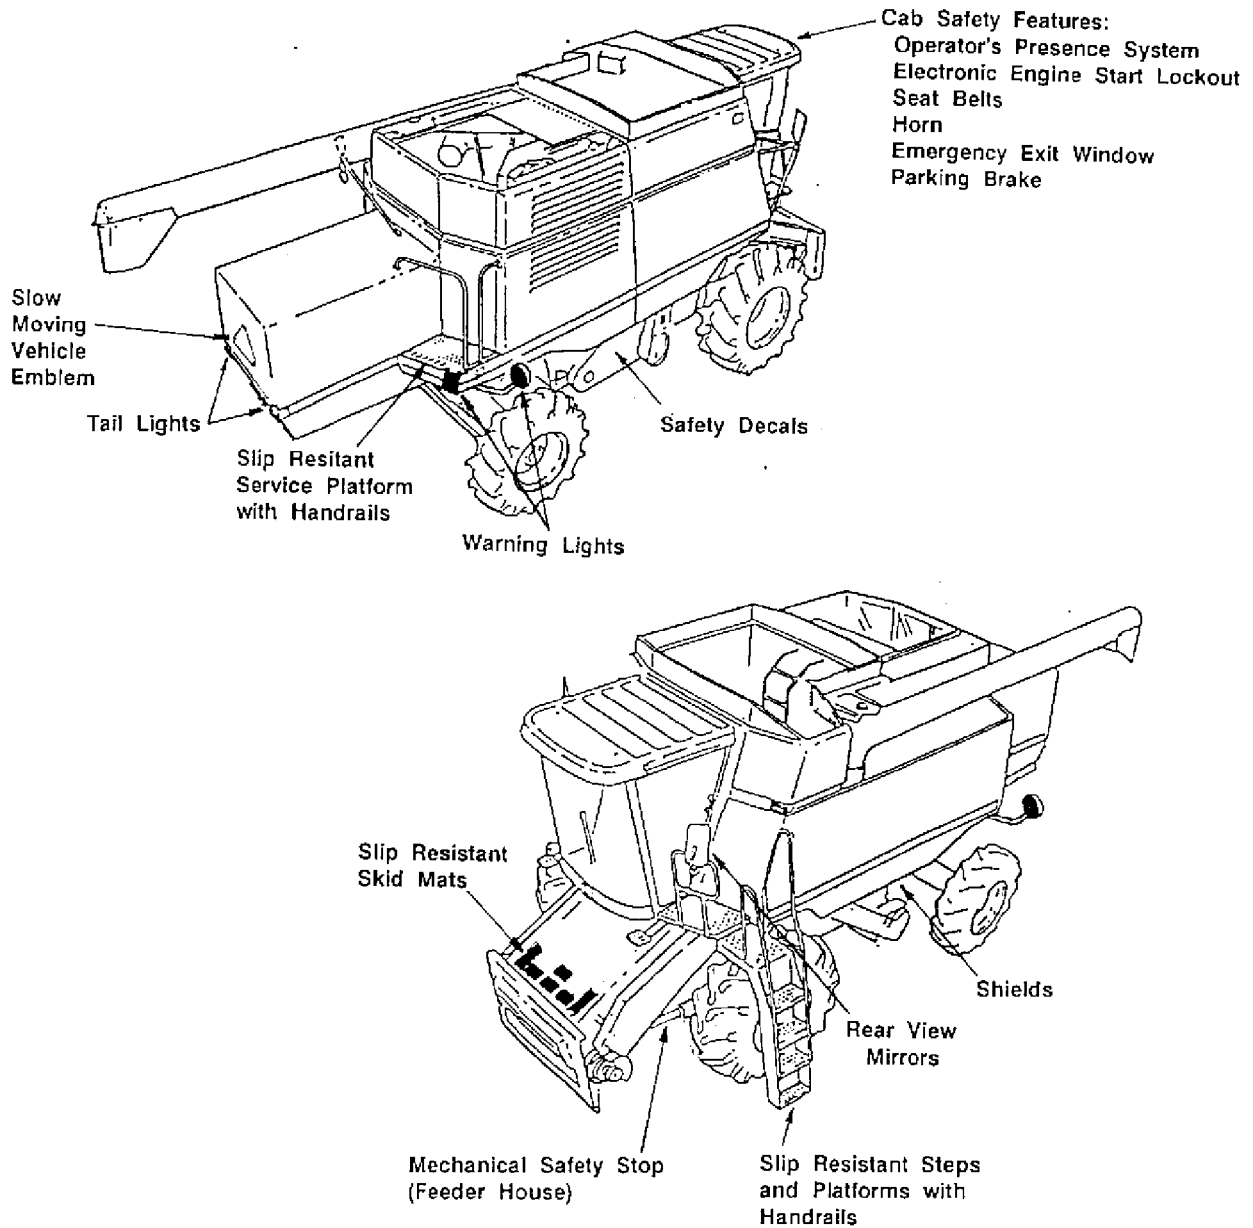

In addition to the safety features shown here, other components and systems, safety signs on the machine, and safety messages and instructions in the operator's manual contribute to the safe operation of this combine when combined with the care and concern of a capable operator.

H48061

-19-17SEP96

H48061

HX,9000SP,A -19-17SEP96

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-03MAR93

TS201 -UN-23AUG88



## DRIVING THE COMBINE

Operate combine only when all guards are fitted and in their correct position.

Before driving away, check immediate vicinity of machine (e.g. for children). Use the horn as a warning immediately before driving away.

Attach headers to combine with extreme care.

HX,S9500SA,A -19-18MAR93

## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders are subject to injury such as being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.



HX,S9500SA,B -19-18MAR93


TS253 -UN-23AUG88

## BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of combine can be considerably affected by heavy front end attachments which alter the center of gravity of the combine.

To maintain the necessary ground contact, ballast the combine at the rear end as necessary.

 Observe the maximum permissible axle loads and total weights.

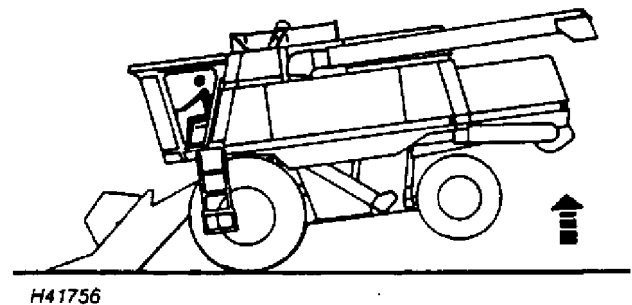

HX,S9500SA,C -19-18MAR93


H41756 -UN-10MAR90



## AVOID ELECTRICAL POWER LINES

 Put the grain tank unloading auger in transport position before driving on public roads.

Secure radio aerial in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

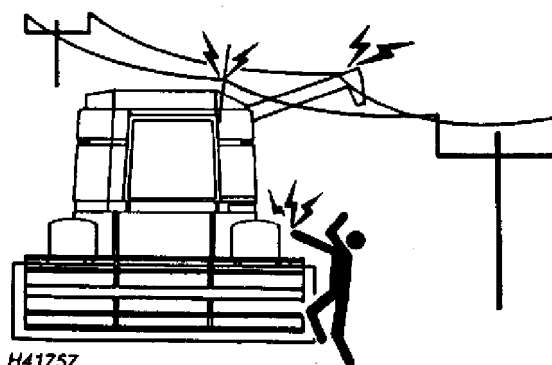


HX,S9500SA,D -19-18MAR93

H41757 -UN-10MAR90

## PARK THE COMBINE SAFELY

 Lower headers or other equipment to the ground before leaving the combine. Set park brake, turn off engine and remove keys.

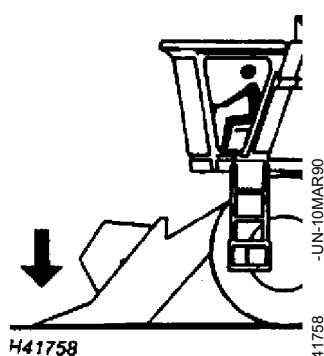


HX,S9500SA,E -19-18MAR93

H41758 -UN-10MAR90

## OPERATE THE ENGINE OUTDOORS

 Never operate the engine in a closed building.

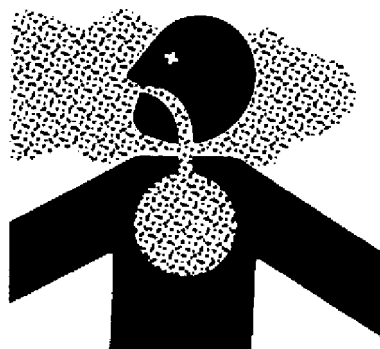

HX,S9500SA,F -19-18MAR93

TS220 -UN-23AUG88

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88




## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

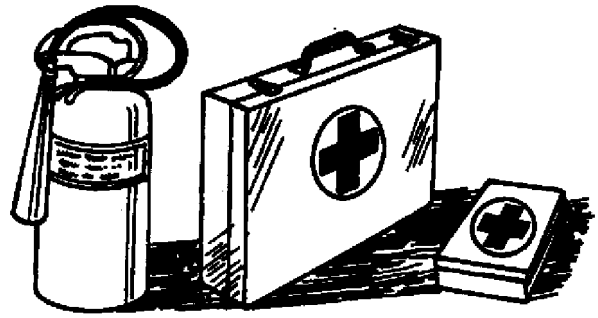

DX.FIRE2 -19-03MAR93

TS291 -UN-23AUG68

## HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.




DX.FIRE3 -19-16APR92

TS1356 -UN-18MAR92

## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

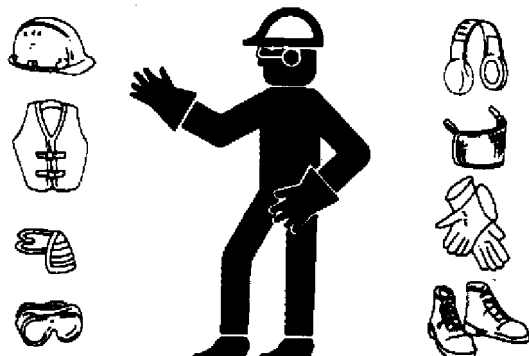

DX.WEAR2 -19-03MAR93

TS206 -UN-23AUG68




## HANDLE CHEMICAL PRODUCTS SAFELY

 Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

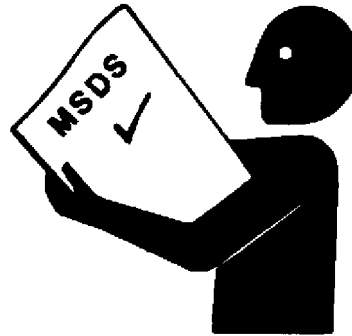

DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

## STAY CLEAR OF HEADER

Cutting platform auger, reel, gatherer chain and stalk rolls of the corn head, etc., cannot be completely shielded due to their function. Stay clear of these moving elements during operation! Always disengage header drive, shut off the engine and remove key before servicing or unclogging header.



H42442

HX,S9500SA,G -19-18MAR93

H42442 -UN-10JAN91

## KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on header unless separator is disengaged, engine shut off and key removed.

Everyone must be clear of the combine before starting the engine



HX,S9500SA,H -19-18MAR93

 
T5254 -UN-23AUG88



## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

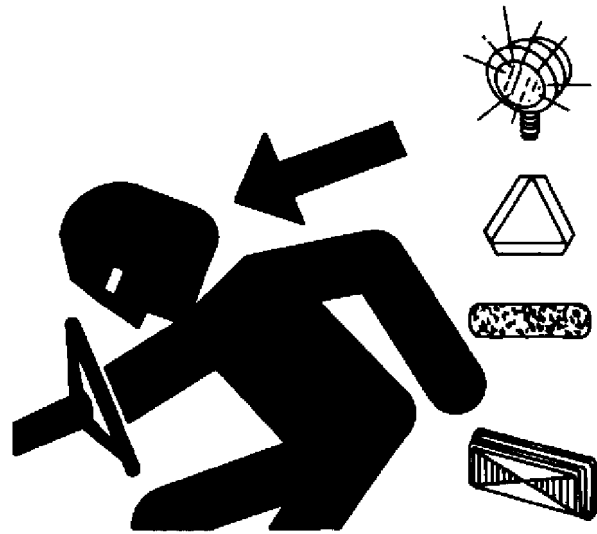


DX,FLASH -19-12SEP95

TS951 -UN-12APR90

## USE SEAT BELTS

 Use the seat belt whenever you operate the combine or ride as an observer.

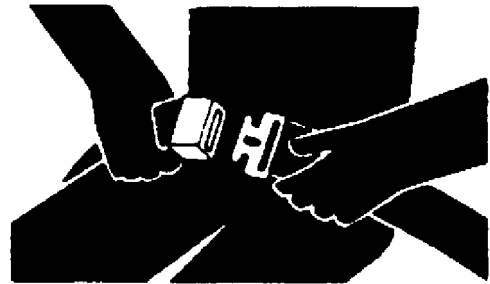


H47137

HX.9000SA,K -19-25OCT95

-UN-25OCT95 H47137

## TRANSPORT COMBINE WITH HEADER SAFELY

 Before driving combine on public roads, raise the header. It must not, however, obstruct operator's view of the road.

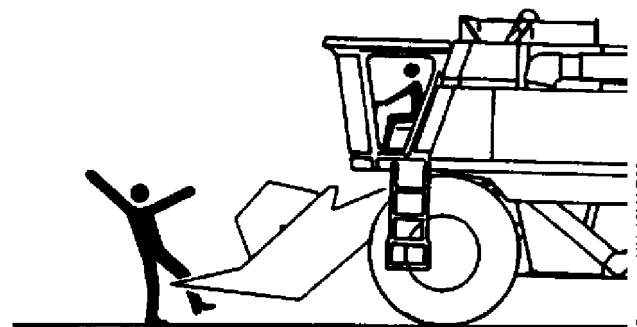

H41755

HX.S9500SA,I -19-18MAR93

-UN-10MAR90 H41755



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

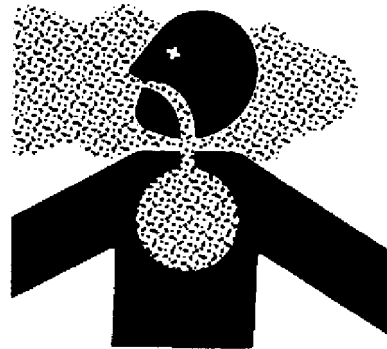

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MA Y90

## AVOID CONTACT WITH MOVING PARTS

Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.



HX,S9500SA,J -19-18MAR93

TS256 -UN-23AUG88

 
## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

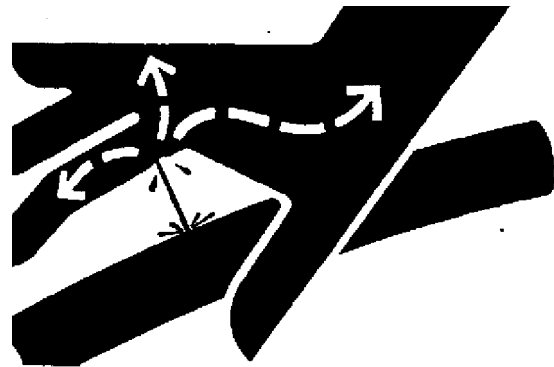

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88



## PROTECT AGAINST HIGH PRESSURE SPRAY

Spray from high pressure nozzles can penetrate the skin and cause serious injury. Keep spray from contacting hands or body.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.



DX,SPRAY -19-16APR92

TS1343 -UN-18MAR92

## DISPOSE OF WASTE PROPERLY

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

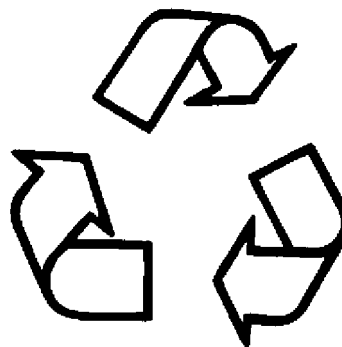

DX,DRAIN -19-03MAR93

TS1133 -UN-26NOV90



## SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP

-19-04JUN90

TS281  
-UN-23AUG68

# Safety Decal Location



-UN-06FEB97

H48233

HX,S9500SS,A -19-17FEB97

Safety Decal Location



 
H48230

H43494

-JUN-30-JAN97

H48230

H01.9000SS.B -19-17FEB97

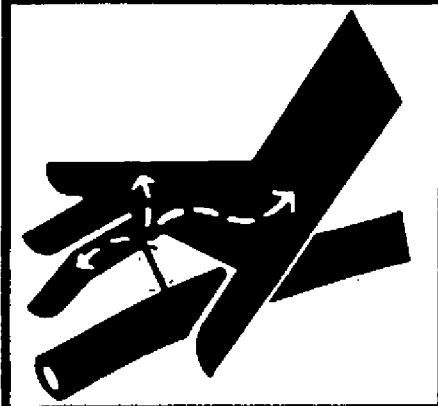


**⚠ WARNING**

Avoid bodily injuries from hydraulic oil and gas under pressure.

Before removing, disassembling or changing accumulator:

1. With feederhouse or header on the ground or in a supported position, open hand valve.
2. Start engine and hold header height control to lower position for 5 seconds to relieve system hydraulic pressure.
3. Stop engine.

 Use only DRY NITROGEN for recharging accumulator. See your John Deere dealer

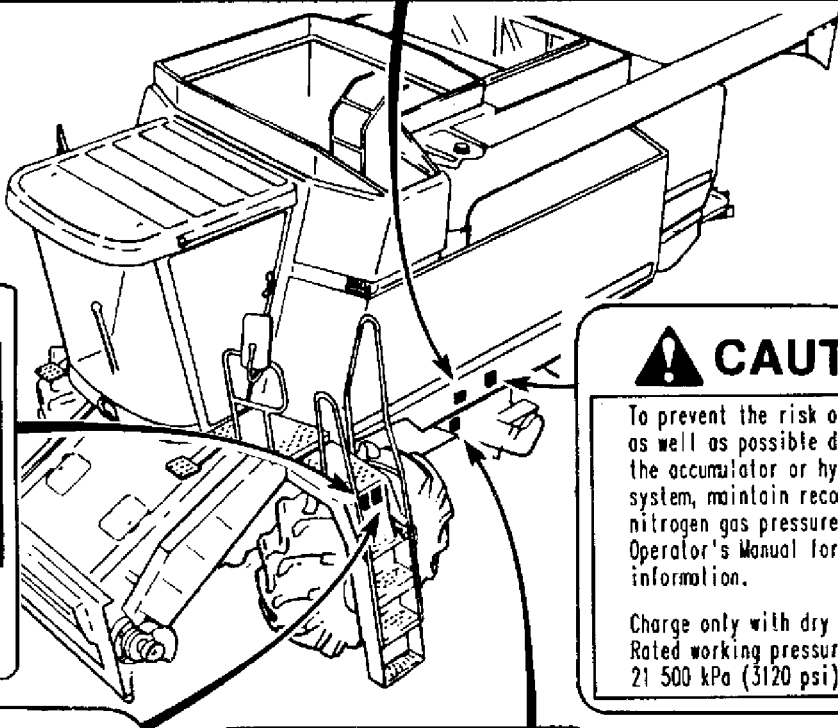

**⚠ WARNING**



Do not ride ladder while combine is moving.

**⚠ CAUTION**

 
To prevent the risk of injury, as well as possible damage to the accumulator or hydraulic system, maintain recommended nitrogen gas pressure. See Operator's Manual for additional information.

Charge only with dry nitrogen. Rated working pressure is 21 500 kPa (3120 psi)

**⚠ CAUTION**

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet, and clothing away from power-driven parts.

**⚠ WARNING**

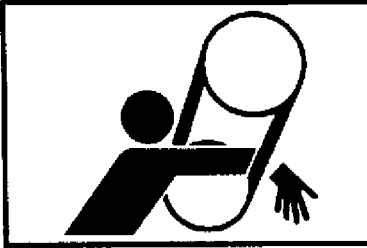

Never raise shield with the engine running. Stop engine and remove key.

H48053

-19-12AUG96  
H48053


HX,S9500SS,C -19-17FEB97

**⚠ WARNING**

 


Chopper rotates in windrow position.

**⚠ DANGER**



Rest the header on the ground or set the safety stop, located on the feeder house lift cylinder, before getting under header.

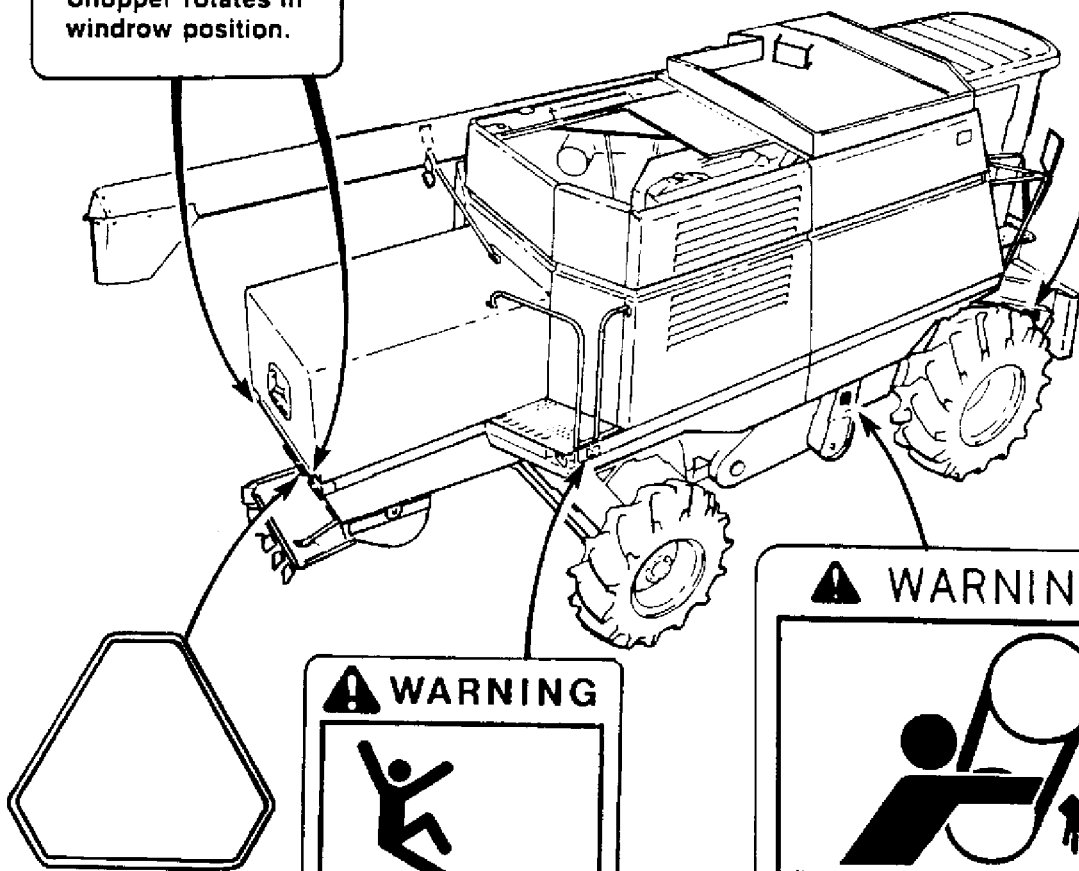


**⚠ WARNING**



Do not ride ladder while combine is moving.

**⚠ WARNING**



Never raise shield with the engine running. Stop engine and remove key.

H48054

-19-12AUG96

H48054

HX,S9500SS,D -19-17FEB97



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

**WARNING**



Avoid bodily injury from rotating fan and screen components:  
Shut engine off and remove key before opening rotary screen door.

**WARNING**

Pressure cooling system  
Remove cap slowly

**DANGER**



DO NOT enter grain tank when engine is running.

**WARNING**



 
Stay clear while engine is running.

**WARNING**

Lower sheave of variable speed drive contains spring under load. To avoid bodily injury from spring action when disassembling sheave, relieve spring load as follows:

1. Set variable speed drive at low speed position (lower sheaves closed)
2. Loosen bolt on outer end of shaft but DO NOT REMOVE
3. Release outer sheave half from shaft taper (by lapping or with a puller) so that spring forces bearing against bolt head.
4. Remove bolt

See detailed instructions in the Operator's Manual.

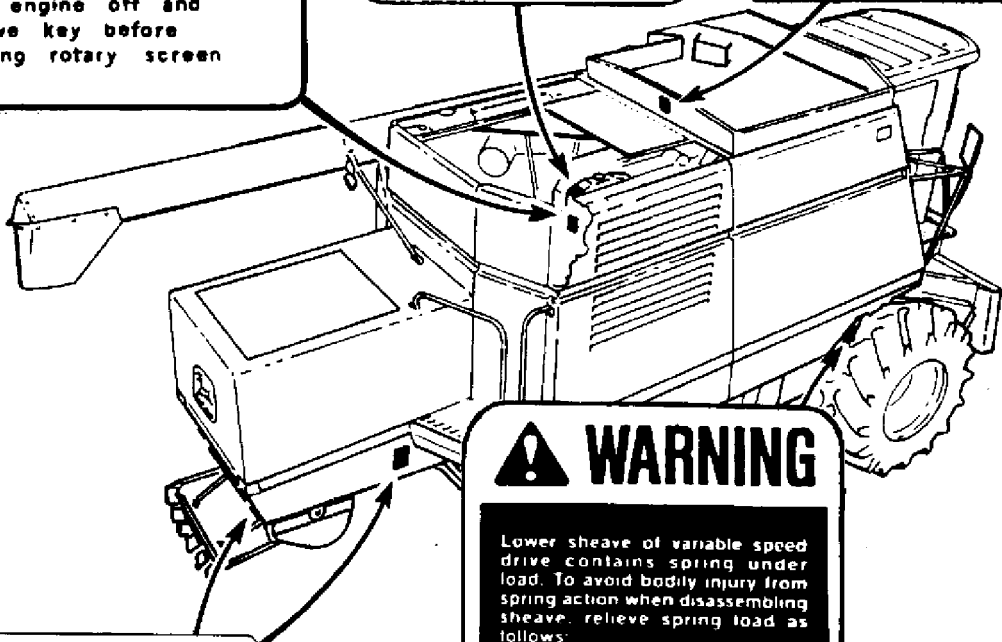

H44207


-19-20MAR92

H44207

HX,S9500SS,E -19-18MAR93

# Operators Station
 
## INSTRUMENTS AND CONTROLS IDENTIFICATION

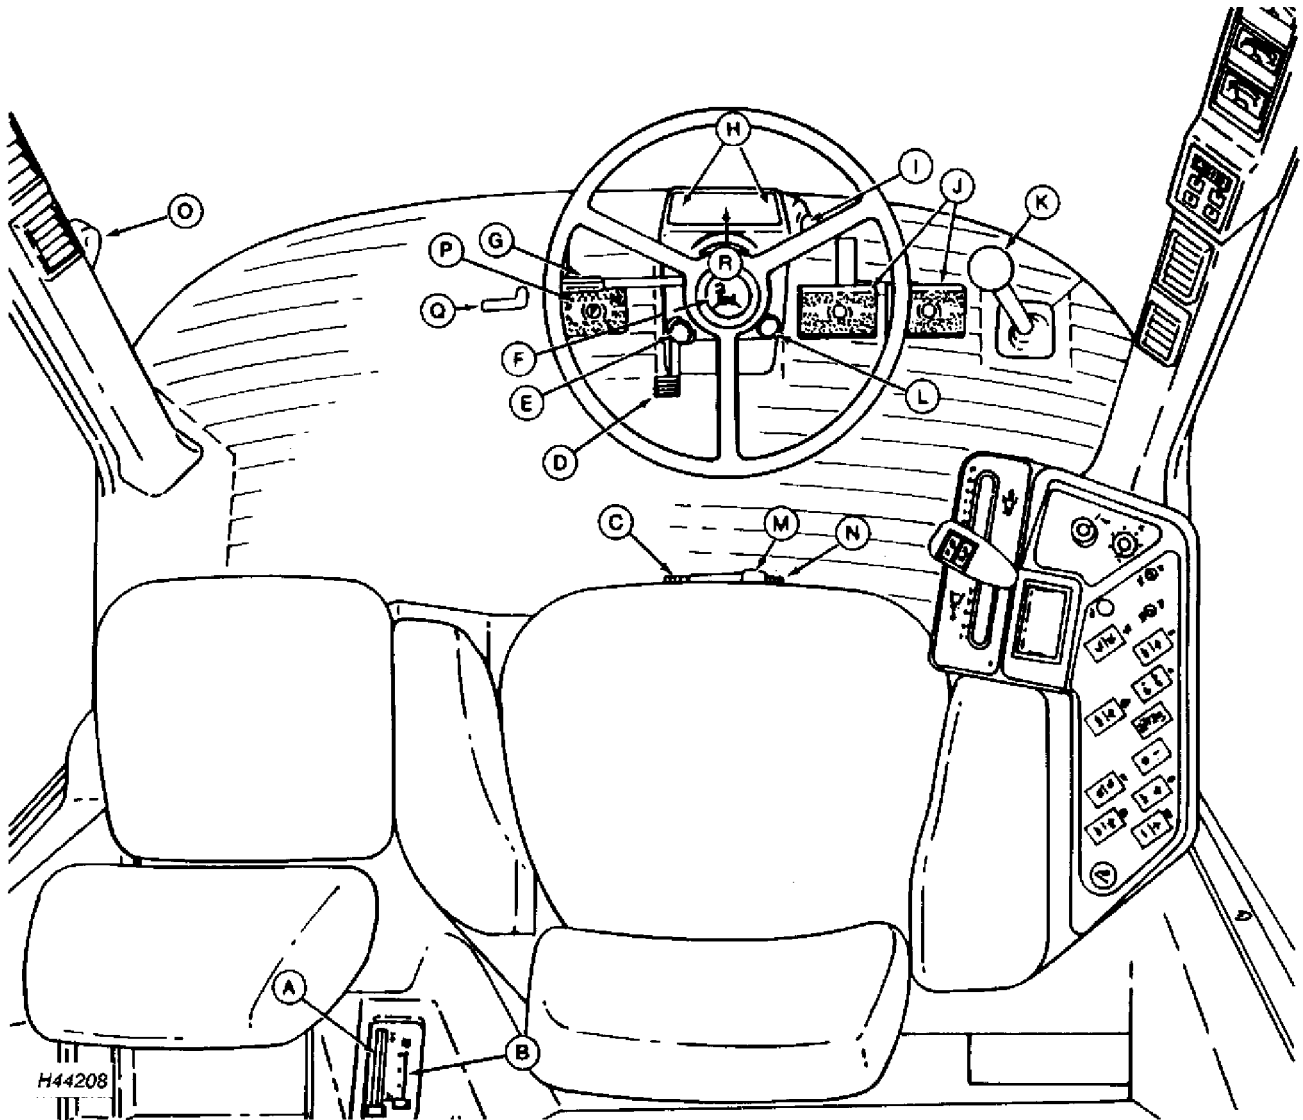

A—Air Conditioning/Heater,  
Temperature Control  
B—Cab Fan Speed Control  
C—Reverser Control  
D—Steering Column Tilt  
Pedal

E—Ether Aid Button  
F—Steering Wheel Lock  
Knob  
G—Turn Signal Lever  
H—Turn Signal Indicators  
I—Start Switch

J—Brake Pedals  
K—Gearshift Lever  
L—Horn Button  
M—Seat Position Lever  
N—Seat Height Lever  
O—Accumulator Gauge  
(Optional)

P—Manual Park Brake Pedal  
Q—Park Brake Disengage  
Pedal  
R—Maximum Tilt Indicator  
Light

HX,S9500OS,A -19-17FEB97

H44208 -UN-20APR92

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**