

Combine W440

Operator's Manual Combine W440

OM5SR814480 ISSUE B1 (ENGLISH)

CONTENTS

Introduction	4
Pre Delivery Inspection	5
Safety	6
Safety Decals	27
Type Marking	41
Acceptance Inspection	42
Opening of the Guards	43
Structure and Functions of the Combine	48
Cut-away Picture of the Combine	49
Operator Controls and Instruments	52
Key to the Symbols	53
Operation and Adjustment	54
Threshing Equipment	66
Engine, Source Of Power	90
Comvision	96
Automatic cutting height control (ahc)	105
Driving and Threshing Instructions	112
Approximate Settings	119
Service and Maintenance	120
Engine	142
Transmission	165
Hydraulics	168
Electrical Equipment	171
Lubrication	178
Summary of Periodical Maintenance Procedures	181
Storage when Not in Use	182
Recommended Tools and Accessories	184
Screw Joints	184
Discarding of the Combine	185
Technical Specifications	186
Conformity to the EU Directives	189
Troubleshooting of the Engine	190
Engine Control System Fault Codes	195

INTRODUCTION

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.


THIS COMBINE IS DESIGNED SOLELY for use in customary agricultural or similar operations (“INTENDED USE”). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS COMBINE SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this combine will relieve the manufacturer of all liability for any resulting damage or injury.

This manual provides descriptions of as well as operating and maintenance instructions for several models in the series. Every combine does not have all the described features. The actual structure as well as the number of accessories and optional equipment depend on what was agreed in the delivery contract. This is to be kept in mind when reading the manual.

The Manufacturer reserves the right to modify the structure, adjustments or accessories of the combine as well as the service and maintenance instructions without further notification.

Identification View

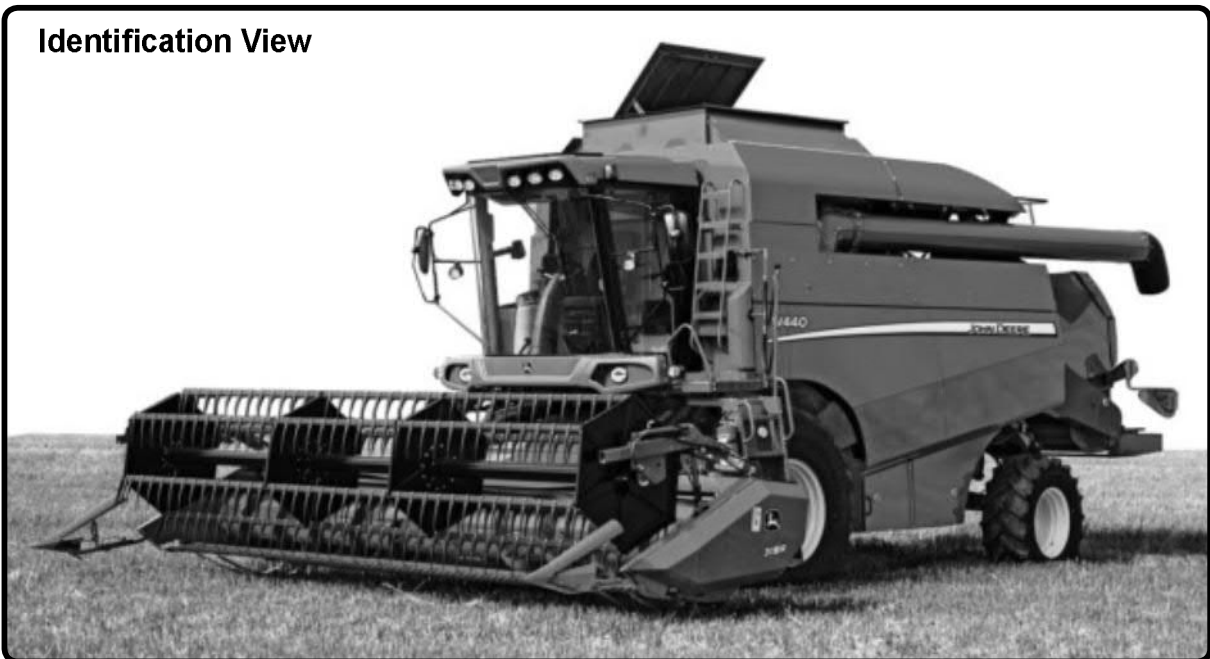

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SAFETY

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



T81389—UN—28JUN13

DX,ALERT -19-29SEP98-1/1

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



TS187—19—30SEP88

DX,SIGNAL -19-03MAR93-1/1

Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

TS201—UN—15APR13

DX,READ -19-16JUN09-1/1

Replace Safety Signs

Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.



TS201—UN—15APR13

DX,SIGNS -19-18AUG09-1/1

Driving the Machine


Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.

Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with full grain tank.

Follow instructions in header Operator's Manual when attaching or detaching the header.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the machine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

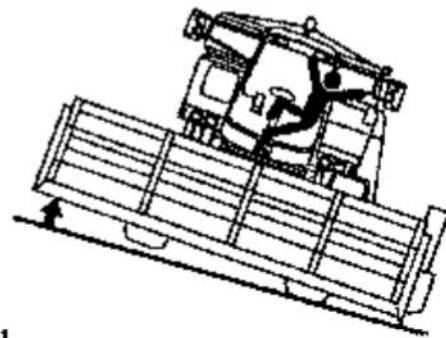

ZX002461

ZX002461—UN—16JUN05

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the combine to tip, particularly on hillsides.

OUO6075,0000AB7 -19-21FEB07-1/1

Observe Road Traffic Regulations

Always observe local road traffic regulations when using public roads.

OUO6075,0000032 -19-22JAN01-1/1

Check Machine Safety

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91-1/1

Keep Riders and Children Off Machine

Only allow the operator on the machine. Keep riders off the machine except for periods of training or short periods of observation.

Riders are subject to injury such as being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

Children should never be allowed on the machine or in the combine cab when the engine is running.

The instructional seat should only be used for instruction or short periods of machine observation, and not for the accommodation of children.



TS253—UN—23AUG88


HX,AG,SF6904 -19-22JUL99-1/1

Ballasting for Safe Ground Contact

Operating, steering and braking performance of combine can be considerably affected by heavy front end attachments which alter the center of gravity of the combine.

To maintain the necessary ground contact, ballast the combine at the rear end as necessary.

Observe the maximum permissible axle loads and total weights.

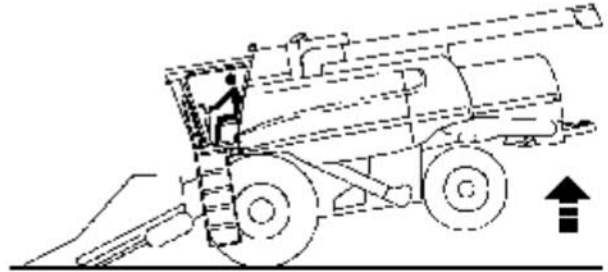

H51907—UN—10FEB89

HX,AG,SF6782 -19-05FEB99-1/1

Roadway Transport with Header Attached

Observe national and local laws regarding operation of the combine on public roadways.

This combine has been approved for roadway transport in Germany with a Geringhoff 8 row folding header and


a Kemper 8 row folding header. Roadway transport in Germany with other heads must be approved by your local TUEV to achieve a road permission.

OUC6075,0003B9B -19-03NOV04-1/1

Avoid Electrical Power Lines

Put the grain tank unloading auger in transport position and lower the grain tank access handrail before driving on public roads.

Secure radio aerial in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

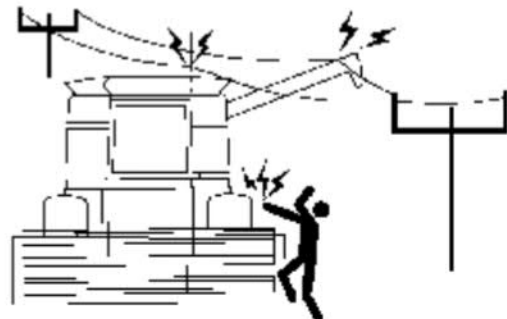

H52022—UN—14APR89

HX,STSSA,D -19-22JUL99-1/1


Parking and Leaving the Machine

Lower harvesting unit to the ground.

Before leaving machine, disengage harvesting unit and separator. Move multi-function lever to neutral position and shut OFF machine. Apply parking brake, remove key, and lock the operator's cab.

Never leave machine unattended as long as engine is running.

Never leave the operator's cab when driving.

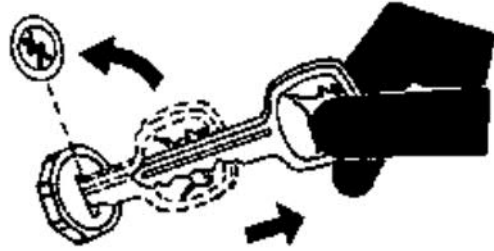

TS230—UN—24MAY89

OUC6075,0000AEB -19-30JUN11-1/1

Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.



TS220—UN—15APR13

DX,AIR -19-17FEB99-1/1

Handle Fuel Safely—Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.



TS202—UN—23AUG88

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1 -19-12OCT11-1/1

In Case of Fire

Stop harvesting immediately at first sign of fire. This may be the smell of smoke or the sight of smoke or flames.

Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.

If fire can be safely extinguished, proceed carefully and follow these guidelines:

1. Remove fire extinguisher from bracket and carry to area of fire.
2. Approach area of fire with wind to your back.
3. Pull safety pin from top of extinguisher.
4. Hold extinguisher upright by handles and aim hose at base of flames.
5. Squeeze handles to discharge fire extinguisher.
6. Move nozzle back and forth, covering flames with a cloud of powder or water.



TS227—UN—15APR13


OUC6075,00001DE -19-18SEP08-1/1

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

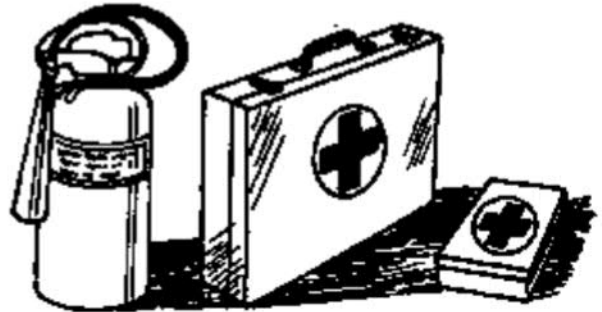

TS291—UN—15APR13

DX,FIRE2 -19-03MAR93-1/1

Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



TS1356—UN—18MAR92

DX,FIRE3 -19-16APR92-1/1

Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.



TS206—UN—15APR13

DX,WEAR2 -19-03MAR93-1/1

Stay Clear of Harvesting Units

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine, set parking brake and remove key before servicing or unclogging machine.



ES118704—UN—21MAR95

OUC6075,00009E5 -19-28SEP10-1/1

Keep Hands Away From Knives

Never attempt to clear obstructions in front of or on header unless separator is disengaged, parking brake is set, engine is shut off and key is removed.

Everyone must be clear of machine before starting engine.




TS254—UN—23AUG88

OUC6075,00009E6 -19-28SEP10-1/1

Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean and in good working order. Replace or repair lighting and marking that has been damaged or lost.

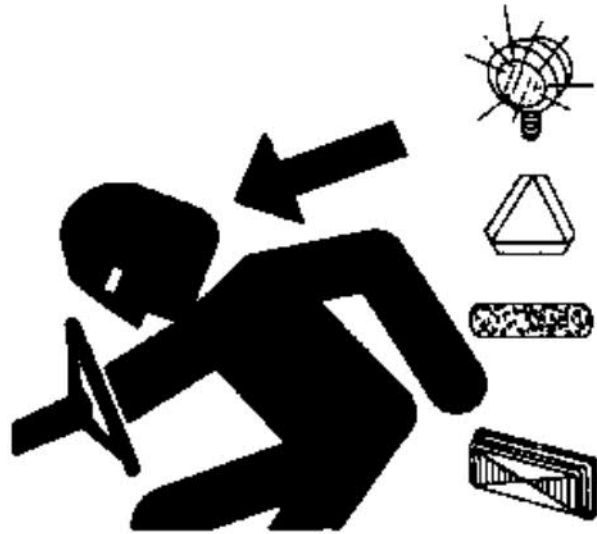

TS8951 —UN—12APR90

HX,STSSA,O -19-22JUL99-1/1

Use Seat Belts

Use the seat belt whenever you operate the combine or ride as an observer.



H47137

H47137 —UN—25OCT95

HX,STSSA,I -19-22JUL99-1/1


Transport Combine With Header Safely

Whenever possible avoid transporting on public roadways with the header attached.

If the combine must be transported with the header attached, make sure that the flashing warning lights on the header are operating and the reflective material is clean and visible.

The use of a spotter or pilot vehicle is recommended on busy, narrow or hilly roads and when crossing bridges.

Drive at a speed that is safe for conditions.

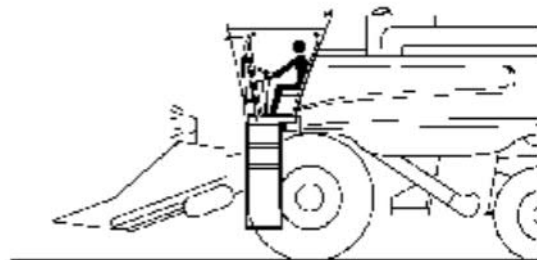

H51909 —UN—07MAY99

OOU6075,0000034 -19-22JAN01-1/1

Prevent Machine Runaway or Unexpected Movement

Avoid injury or death from unexpected movement of machine or components.

Do not start engine by shorting across starter or solenoid terminals. Machine or components may move if the normal circuitry is bypassed.



H58737—UN—08JUL99

AG,OUO1035,792 -19-08JUL99-1/1

Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



T5218—UN—23AUG88

DX,SERV -19-17FEB99-1/1

Welding Near Electronic Control Units

IMPORTANT: Do not jump-start engines with arc welding equipment. Currents and voltages are too high and may cause permanent damage.

1. Disconnect the negative (-) battery cable(s).
2. Disconnect the positive (+) battery cable(s).
3. Connect the positive and negative cables together. Do not attach to vehicle frame.
4. Clear or move any wiring harness sections away from welding area.
5. Connect welder ground close to welding point and away from control units.



6. After welding, reverse Steps 1—5.

DX,WW,ECU02 -19-14AUG09-1/1

TS963—UN—15MAY90

Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.


Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

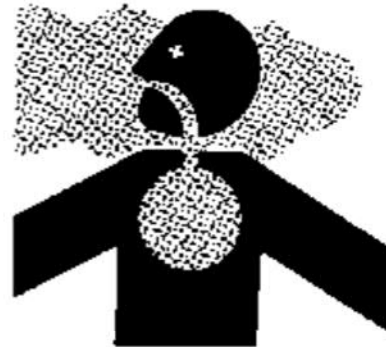

DX,PAINT -19-24JUL02-1/1

TS220—UN—15APR13

Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.



DX,TORCH -19-10DEC04-1/1

TS963—UN—15MAY90

Avoid Contact With Moving Parts

Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.



TS256—UN—23AUG88

H01,9000SA,E -19-15JUN90-1/1

Cleaning Grain Tank and Removal of Blockages Safely

Avoid serious injury or death from entanglement in the grain tank cross augers. For functional purposes the cross augers cannot be completely covered. Do not enter the grain tank when the engine is running. Before entering the tank to clean out residual grain, always shut off the engine, set parking brake and remove the key.

If grain bridges and fails to flow into the cross augers, shut off the engine, remove the key and from a position on the engine compartment door use a rod, broom or shovel to break the bridge and restore grain flow.



TS256—UN—23AUG88

OOU6043,00015E2 -19-24MAY04-1/1

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep all shields in place at all times. Make sure rotating shields turn freely.

Wear close-fitting clothing. Stop the engine and be sure that all rotating parts and drivelines are stopped before making adjustments, connections, or performing any type of service on engine or machine driven equipment.



TS1644—UN—22AUG95

DX,ROTATING -19-18AUG09-1/1

Install All Shields and Guards

Rotating fans, belts, pulleys, and drives can cause serious injury.

Keep all shields and guards in place at all times during operation.

Wear close-fitting clothes. Stop the engine and be sure fans, belts, pulleys, and drives are stopped before making adjustments, connections, or cleaning near fans and their drive components.



TS677 —UN—21SEP89

OUC6075,0000C23 -19-03MAY11-1/1

Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar



with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

X9811 —UN—23AUG88

DX,FLUID -19-12OCT11-1/1

Do Not Open High-Pressure Fuel System

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)



TS1343 —UN—18MAR92

DX,WW,HPCR1 -19-07JAN03-1/1

Service Accumulator Systems Safely

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.

Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.



TS281—UN—16APR13

DX,WW,ACCLA2 -19-22AUG03-1/1

Protect Against High Pressure Spray

Spray from high pressure nozzles can penetrate the skin and cause serious injury. Keep spray from contacting hands or body.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.



TS1343—UN—18MAR92

DX,SPRAY -19-16APR92-1/1

Service Tires Safely

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.



TS000011—UN—88APR010AXR

DX,WW,RIMS -19-19AUG09-1/1

Dispose of Waste Properly


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

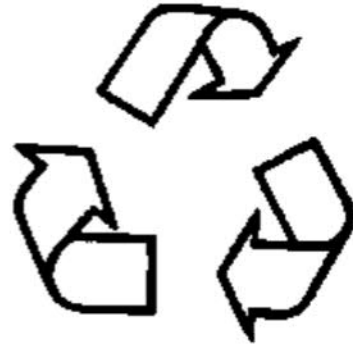

TS1133—UN—15APR13

DX,DRAIN -19-03MAR93-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine, set parking brake and remove key. Allow system to cool before opening cap. Slowly loosen cap to relieve pressure before removing completely.



TS281—UN—15APR13

OOU6075,0000ABC -19-21FEB07-1/1

Remove Accumulated Crop Debris

The build up of chaff and crop debris in the engine compartment, on the engine, and near moving parts is a fire hazard. Check and clean these areas frequently. Before performing any inspection or service, shut off the engine, set the parking brake and remove the key.



TS227—UN—15APR13

HX,9010SA,B -19-23AUG97-1/1

Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.



TS229—UN—23AUG88

DX,LOWER -19-24FEB00-1/1

Store Attachments Safely

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



TS219—UN—23AUG88

DX,STORE -19-03MAR93-1/1

Service Drive Belts Safely

When servicing drive belts always observe these precautions:

- Avoid serious injury from hand or arm entanglement. Never attempt to clean, check or adjust belts while the machine is running. Always shut off the engine, set the parking brake and remove the key.
- Do not attempt to clean belts with flammable cleaning solvents.



TS285—UN—23AUG88

OJ06075,00026A4 -19-06FEB03-1/1

Handle Electronic Components and Brackets Safely

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.



TS249 —UN—23AUG88

DX,WW,RECEIVER -19-24AUG10-1/1

Avoid Backover Accidents

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.



PC10857XW —UN—15APR13

DX,AVOID,BACKOVER,ACCIDENTS -19-30AUG10-1/1



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

Handling Batteries Safely

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.


If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

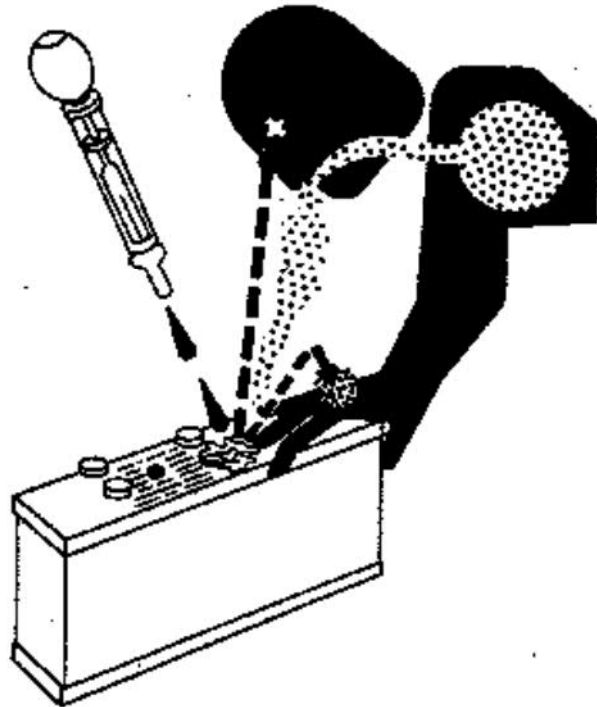

TS204—UN—15APR13

TS203—UN—23AUG88

DX,WWW,BATTERIES -19-02DEC10-1/1

Avoid Hot Exhaust

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.



RG17488 —UN—21AUG09

DX.EXHAUST -19-20AUG09-1/1

Read And Understand The Safety Instructions And Remarks In The Engine Chapter.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>