

## OPERATOR'S MANUAL

# CARTED WHEEL RAKE

WR6008

WR6010

WR6012



**FRONTIER**

OMUS00W6F (07/04/13)

## INTRODUCTION

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your Frontier dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


### WRITE PRODUCT IDENTIFICATION NUMBERS

(P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

**WARRANTY** is provided as part of Frontier's support program for customers who operate and maintain their equipment as described in this manual.

This warranty provides you the assurance that Frontier will back its products where defects appear within the warranty period. In some circumstances, Frontier also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

**THE TIRE MANUFACTURER'S** warranty applicable to your machine may not apply outside the U.S.

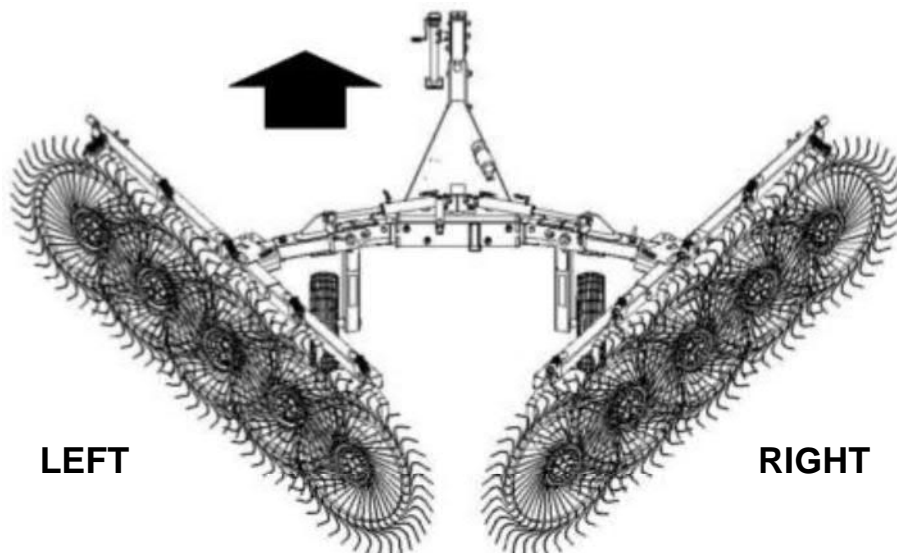

**IMPORTANT!** - Determine the right or left side of the machine by viewing it from the rear.

## TABLE OF CONTENTS

	Page
SAFETY .....	4
PREPARING THE TRACTOR	
Positioning Tractor Drawbar .....	15
Using Drawbar Shield .....	15
Making Drawbar Shield .....	16
Three-Point Hitch Position .....	16
Checking Ballast, Wheel Spacing, and Tire Inflation .....	16
PREPARING THE RAKE	
Checking Tire Inflation Pressure .....	17
Checking Wheel Nut Torque .....	17
ATTACHING AND DETACHING	
Attaching Rake to Tractor Drawbar.....	18
Attaching to Tractor Hydraulic System .....	19
Detaching Rake from Tractor .....	20
TRANSPORTING	
Preparing Rake For Transport.....	22
OPERATING THE RAKE	
Prestarting Checks.....	24
Preparing Rake for Field Operation.....	25
Operating the Rake.....	27
Setting Working Width .....	28
Adjusting Raking and Windrow Width .....	29
Adjusting Raking Wheel Ground Pressure .....	31
Flip-up-Raking.....	32
Raking a Single Windrow or Swath .....	35
ATTACHMENTS Center Kicker Wheel .....	36
LUBRICATION AND MAINTENANCE	
Perform Lubrication and Maintenance .....	37
Observe Lubrication Symbols .....	37
Alternative and Synthetic Lubricants.....	38
Grease.....	38
Lubricant Storage.....	39
Every 10 Hours .....	39
Every 50 Hours .....	39
Every 100 Hours.....	40
Annually .....	41
As Required .....	42
TROUBLESHOOTING.....	43
SERVICE	
Servicing Tires Safely.....	44

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## TABLE OF CONTENTS

Servicing Rake Safely .....	44
Replacing Wheel Tines.....	45
Identifying Left-Hand and Right-Hand Rake Wheels .....	45
STORAGE	
End of Season .....	46
Beginning of Season .....	46
CHECKLISTS	
Dealers Record .....	47
Predelivery .....	47
Delivery .....	47
ASSEMBLY.....	48-67
FINAL INSPECTION AND LUBRICATION	
Final Inspection and Lubrication .....	68
SPECIFICATIONS	
WR60 Carted Wheel Rake .....	69
Record Product Identification Number .....	70
Tightening Flare Type Tube Fittings .....	70
Unified Inch Bolt and Cap Screw Torque Values .....	70
Metric Bolt and Cap Screw Torque Values .....	72
SPARE PARTS.....	73-94
INSTALLING CENTER KICKER WHEEL.....	95-99
INDEX.....	100



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

## SAFETY



This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

ATTENTION!  
BECOME ALERT!  
YOUR SAFETY IS INVOLVED!

Carefully read and follow the safety message accompanying this symbol.

Why is SAFETY important to you?

3 BIG REASONS

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS COST
- ACCIDENTS CAN BE AVOIDED

### SIGNAL WORDS

Note the use of the signal words DANGER, WARNING, and CAUTION with safety messages. The appropriate signal word for each message has been selected using the following guidelines:



**DANGER** – Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



**WARNING** – Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It is also used to alert against unsafe practices.



**CAUTION** – Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It is also used as a reminder of good safety practices.

## **SAFETY**

### **FOLLOW SAFETY INSTRUCTIONS**

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



### **OPERATE RAKE SAFELY**

All machinery should be operated by responsible persons who have been properly instructed and delegated to do so.

Before each use, inspect entire machine. Check tightness of all hardware.

Stop the tractor engine and engage parking brake **before leaving tractor operator's station** to adjust, lubricate, clean or unclog the machine.

Never hand feed material into the machine.

Do not lean against, sit, or stand on rake.

Make sure bystanders are clear of machine before lowering rake wheels.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**