

Timberjack
240C
Skidder

F284060_02



**Operator and
Maintenance Manual**


Serial Number 10EA1070 -

Timberjack

ENG

Timberjack

Operator and Maintenance Manual

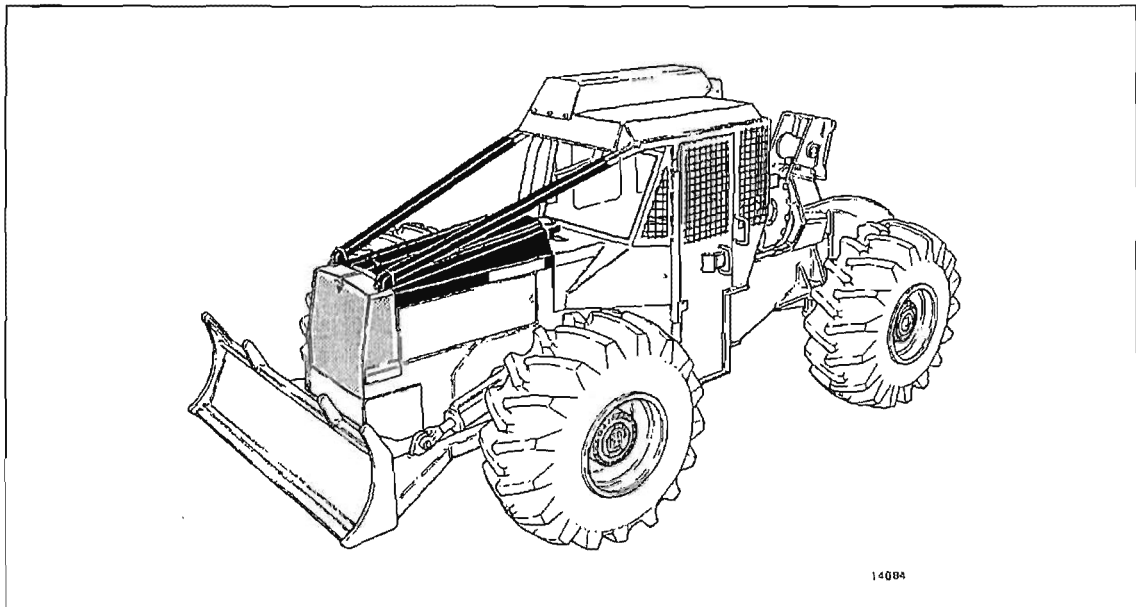

240C Series Skidders

Timberjack Inc.
P.O. Box 160
925 Devonshire Avenue
Woodstock, Ontario, Canada
N4S 7X1

Telephone: (519) 537-6271
Service Dept. Fax: (404) 629-1379
Parts Dept. Fax: (404) 629-9911
Product Support Fax: (519) 537-2664

03/00

Table of Contents

Section	Description
1	Introduction
2	Warranty
3	Safety Rules
4	Description
5	Operation
6	Lubrication and Maintenance
7	Hydraulic System
8	Electrical System
9	Troubleshooting
10	Specifications
11	Miscellaneous

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Section 1 - Introduction

1.1 Foreword	1 - 2
1.2 Model and Serial Number Record	1 - 3
1.3 Modifications to Roll-over Protective Structures (ROPS)	1 - 4
1.4 Non-approved Field Product Changes	1 - 6

Section 2 - Warranty

2.1 Warranty Certificate - Timberjack Forestry Machines	2 - 2
2.2 Items Not Covered By Warranty:	2 - 3

Section 3 - Safety Rules

3.1 General	3 - 3
3.2 Safety Symbol	3 - 3
3.3 Understanding Signal Words	3 - 3
3.4 General Safety Precautions	3 - 4
3.5 Operating Safety Precautions	3 - 7
3.6 Servicing Safety Precautions	3 - 11
3.7 Driving/Transporting on Public Roads	3 - 19
3.8 Fire Prevention	3 - 20
3.9 What to Do if the Machine Catches Fire	3 - 21

Section 4 - Description

4.1 Introduction	4 - 2
4.2 Equipment Nomenclature	4 - 2
4.2.1 Major Components	4 - 2
4.3 Controls and Instrumentation	4 - 4
4.3.1 Operator Controls and Instruments	4 - 4
4.3.2 Switches and Gauges	4 - 6
4.3.3 Driving/Operating Controls	4 - 10
4.3.4 Safety Items	4 - 13
4.3.5 Miscellaneous Items	4 - 14

Section 5 - Operation

5.1	Driving the Skidder	5 - 2
5.1.1	Engine Break-In Procedure	5 - 2
5.1.2	Pre-Start Checks	5 - 2
5.1.3	Before Starting the Engine	5 - 2
5.1.4	Starting/Operating the Engine	5 - 3
5.1.5	Stopping the Engine	5 - 5
5.1.6	Operating the Driving Controls	5 - 6
5.1.7	Parking the Skidder	5 - 11
5.2	Using the Implements	5 - 12
5.2.1	Operating the Decking Blade	5 - 12
5.2.2	Operating the Working Lights	5 - 12
5.2.3	Operating the Winch	5 - 13
5.3	Skidding Technique	5 - 16
5.3.1	Cable Skidding	5 - 16
5.4	Roading the Skidder	5 - 18
5.5	Transporting the Skidder	5 - 19
5.6	Towing the Skidder	5 - 20
5.6.1	Towing a Short Distance: (Up to 500 Yards)	5 - 20
5.6.2	Towing a Long Distance: (Over 500 Yards)	5 - 20

Section 6 - Lubrication and Maintenance

6.1 Skidder Maintenance Schedule	6 - 2
6.2 Maintenance Procedures	6 - 6
6.2.1 Maintenance - 8 Hours	6 - 6
6.2.2 Maintenance - 50 Hours	6 - 12
6.2.3 Maintenance - 250 Hours	6 - 22
6.2.4 Maintenance - 500 Hours	6 - 27
6.2.5 Maintenance - 1000 Hours	6 - 30
6.2.6 Maintenance - 1500 Hours	6 - 35
6.2.7 Maintenance - 4000 Hours	6 - 37
6.2.8 Unscheduled Maintenance	6 - 38
6.3 Fluids and Lubricants	6 - 42
6.3.1 Fluid and Lubricant Specifications	6 - 42
6.3.2 Engine Oil Viscosity	6 - 44
6.3.3 Gear Oil Viscosity	6 - 44
6.3.4 Recommended Hydraulic Fluids	6 - 45

Section 7 - Hydraulic System

7.1 Main Hydraulic System Schematic	7 - 2
7.2 T40-D Winch Schematic	7 - 4

Section 8 - Electrical System

8.1 Main Electrical System Schematic	8 - 2
--	-------

Section 9 - Troubleshooting

9.1 General	9 - 2
9.2 Engine	9 - 2
9.3 Drive Train	9 - 7
9.4 Electrical System	9 - 8
9.5 Hydraulic System	9 - 9
9.6 Brake System	9 - 11
9.6.1 Parking Brake	9 - 11
9.6.2 Service Brake	9 - 11
9.7 T40-D Winch	9 - 12

Section 10 - Equipment Specifications

10.1 Machine Dimensions	10 - 2
10.2 Equipment Specifications	10 - 3

Section 11 - Miscellaneous

11.1 Measurement Conversions	11 - 3
11.1.1 Miscellaneous Conversions	11 - 4
11.1.2 Metric and Imperial Unit Expressions	11 - 4
11.2 Wood Measurement Equivalents	11 - 5
11.3 Weights of Commercially Important Woods	11 - 6
11.4 General Bolt Torque Values	11 - 7



Suggest:


For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

1. Introduction

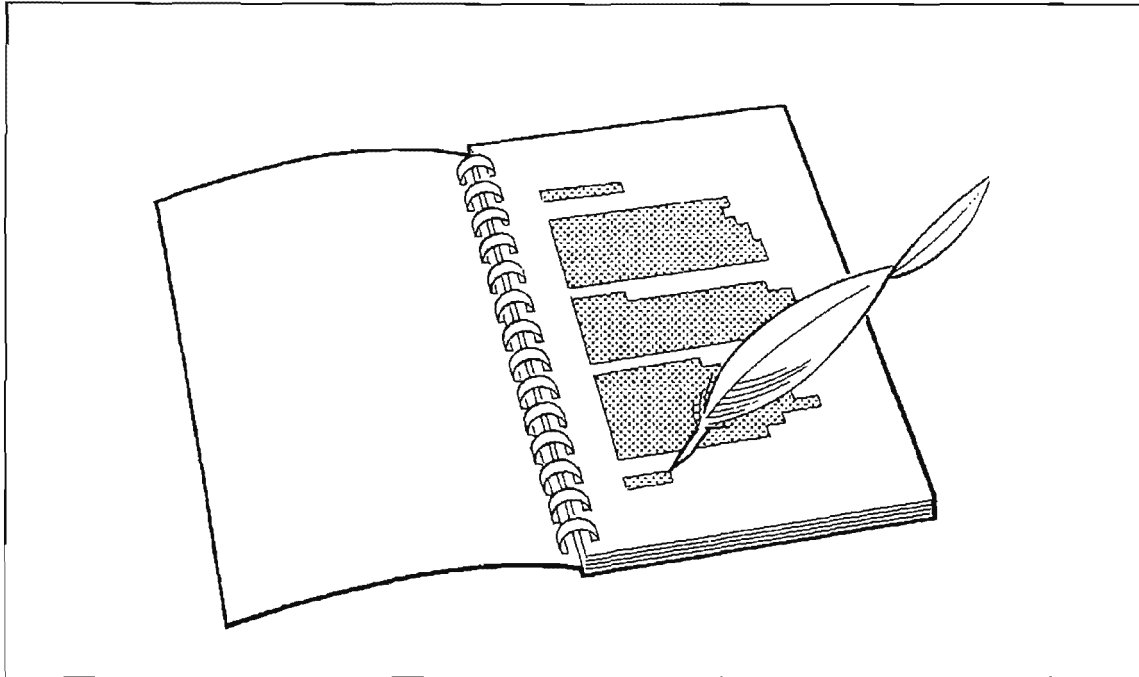

1.1 Foreword	1 - 2
1.2 Model and Serial Number Record	1 - 3
1.3 Modifications or Repairs to Roll-over Protective Structures (ROPS)	1 - 4
1.4 Non-approved Field Product Changes	1 - 6

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>