



NEW HOLLAND



TRACTOR REPAIR MANUAL

170–190–210–240 hp TRACTORS

CONTENTS

SECTION 10 – ENGINES

CHAPTER 1 – ENGINE AND LUBRICATION SYSTEM

SECTION	DESCRIPTION	PAGE
10 000	SPECIFICATIONS	2
	SPECIAL TOOLS	14
	DESCRIPTION OF OPERATION	15
	TROUBLESHOOTING	24
	OVERHAUL	
10 101	CYLINDER HEAD	29
10 106	ENGINE TIMING GEARS	41
10 102	OIL PAN	43
10 105	PISTONS AND CONNECTING RODS	44
10 001	CYLINDER BLOCK	48
10 103	CRANKSHAFT BEARINGS AND FLYWHEEL	54
10 102	LUBRICATION OIL PUMP	58
10 106	CAMSHAFT	65
10 106	ENGINE TIMING	67
10	COMPRESSION TESTING	68

CHAPTER 2 – COOLING SYSTEM

SECTION	DESCRIPTION	PAGE
10 400	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	3
	TROUBLESHOOTING	5
	OVERHAUL	
10 406	RADIATOR	6
10 402	THERMOSTAT	8
10 414	SENDER	9
10 414	FAN BLADES	9
10 414	VISCOUS CLUTCH	10
10 414	BELT TENSIONER	10
10 414	IDLER PULLEY	11
10 402	WATER PUMP	13

CHAPTER 3 – INDUCTION SYSTEM

SECTION	DESCRIPTION	PAGE
10 200	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	
	AIR CLEANER	3
	TURBO CHARGER	5
	INTERCOOLER	8
	TROUBLESHOOTING	9
	INTERCOOLER LEAK TEST	11
	OVERHAUL	
10 202	AIR CLEANER	12
10 250	TURBO CHARGER	14
10 250	INTERCOOLER	21

CHAPTER 4 – FUEL SYSTEM

SECTION	DESCRIPTION	PAGE
10 000	SPECIFICATIONS	2
	SPECIAL TOOLS	3
	DESCRIPTION AND OPERATION	4
10 200	TESTING AND DIAGNOSIS	
	LOW PRESSURE SYSTEM	16
	HIGH PRESSURE FUEL SYSTEM	22
	INJECTION TIMING CHECK	22
	FUEL INJECTORS	25
	FUEL SHUT OFF	30
10 220	ADJUSTMENTS	32
	REMOVAL AND INSTALLATION	
10 210	FUEL LIFT PUMP	35
10 223	FUEL SHUT OFF SOLENOID	36
10 210	FUEL INJECTION PUMP	37
10 218	FUEL LINES	44
10 206	FUEL FILTER	48
10 218	FUEL INJECTION	50

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SECTION 21 – TRANSMISSION

CHAPTER 1 – OPERATION AND OVERVIEW

SECTION	DESCRIPTION	PAGE
21 000	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	4
	TROUBLESHOOTING AND DIAGNOSIS	33

CHAPTER 2 – SEPARATING THE TRANSMISSION FROM THE ENGINE AND FRONT AXLE

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	1
	SPECIAL TOOLS	1
	DISASSEMBLY	2

CHAPTER 3 – SEPARATING THE TRANSMISSION FROM THE REAR AXLE

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS	1
	SPECIAL TOOLS	2
	DESCRIPTION OF OPERATION	2
	DISASSEMBLY	3

CHAPTER 4 – MECHANICAL SYSTEM (16X9 AND 18X9 TRANSMISSION OVERHAUL)

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS	2
	SPECIAL TOOLS	4
	DESCRIPTION OF OPERATION	4
	TROUBLESHOOTING AND DIAGNOSIS	7
	OVERHAUL	
	DISASSEMBLY AND REPAIR	8
	REAR HOUSING AND DIRECTIONAL CLUTCH REMOVAL	9
	FRONT HOUSING AND SPEED CLUTCH REMOVAL	13
	SPEED CLUTCH DISASSEMBLY	17
	DIRECTIONAL CLUTCH DISASSEMBLY	24
	SPEED/DIRECTIONAL CLUTCH REASSEMBLY	27
	INPUT GEAR AND OIL SEAL REPLACEMENT	30
	CLUSTER GEARS REPAIR	31
	FRONT AND REAR HOUSING REPAIR	31
	TORQUE LIMITER REPAIR	33
	TRANSMISSION REASSEMBLY	34
	TRANSMISSION SHIMMING	37
	CREEPER GEAR	40
	TRANSMISSION INSTALLATION	44

CHAPTER 5 – HYDRAULIC SYSTEM (18x9 TRANSMISSION)

SECTION	DESCRIPTION	PAGE
21 136	SPECIFICATIONS	2
	SPECIAL TOOLS	3
	DESCRIPTION OF OPERATION	4
	TROUBLESHOOTING AND DIAGNOSIS	10
	ADJUSTMENTS AND PRESSURE TESTING	11
	TRANSMISSION PROGRAMMING	17
	TRANSMISSION CALIBRATION	21
21 136	OVERHAUL	27
	REMOVAL	27
	DISASSEMBLY	29
	SPEED/DIRECTIONAL VALVES	30
	MODULATOR VALVE	31
	REGULATOR VALVE	33
	LUBRICATION RELIEF VALVE	35
	INSPECTION	36
	REASSEMBLY	36
	INSTALLATION	37

CHAPTER 6 – ELECTRICAL SYSTEM

SECTION	DESCRIPTION	PAGE
21 136	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	3
	TROUBLESHOOTING AND FAULT CODES	8
	FAULT CODES	9
	TRANSMISSION SOLENOID AND PRESSURE TESTING	10
21 136	DISASSEMBLY AND REPAIR	
	CONTROL VALVE SOLENOIDS	11
	SPEED SENSORS	12
	CHASSIS CONTROL MODULE (CCM)	13
	INCHING PEDAL SWITCHES	14
	TRANSMISSION SHIFT CONTROL	16
	LIMP HOME HARNESS AND PROCEDURE	24

SECTION 23 – DRIVE LINES

**CHAPTER 1 – FRONT WHEEL DRIVE MECHANICAL CONTROL
(FOUR WHEEL DRIVE CLUTCH)**

SECTION	DESCRIPTION	PAGE
23 202	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	2
	TROUBLESHOOTING	6
	OVERHAUL	7
	PRESSURE TESTING	22

SECTION 25 – MECHANICAL DRIVE

CHAPTER 1 – LIVE FRONT AXLE (FOUR WHEEL DRIVE AXLE)

SECTION	DESCRIPTION	PAGE
25 000	SPECIFICATIONS	2
25 000	SPECIAL TOOLS	7
25 000	DESCRIPTION OF OPERATION	9
25 000	TROUBLESHOOTING	18
25 000	LUBRICATION AND MAINTENANCE	19
41 106	STEERING ADJUSTMENTS	23
25 100	OVERHAUL	25
25 100	FRONT AXLE REMOVAL	26
41 216	STEERING CYLINDERS	29
25 108	PLANETARY REDUCTION	32
25 106	HUB	38
25 108	SWIVEL HOUSING AND SWIVEL BEARING	41
25 108	DRIVE SHAFT	45
25 102	DIFFERENTIAL	50

CHAPTER 2 – SUPERSTEER™ LINKAGE

SECTION	DESCRIPTION	PAGE
25 100	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	2
	ADJUSTMENT	5
	OVERHAUL	6

SECTION 27 – REAR MECHANICAL DRIVE

CHAPTER 1 – REAR AXLE ASSEMBLY

SECTION	DESCRIPTION	PAGE
27 000	SPECIFICATIONS	2
27 000	SPECIAL TOOLS	4
27 000	AXLE ADJUSTMENT SUMMARY	10
27 000	DESCRIPTION OF OPERATION	12
27 000	TROUBLE SHOOTING	21
	OVERHAUL	
27 100	AXLE ASSEMBLY . – REMOVE	29
	INSTALLATION	37
27 120	AXLE HOUSING – 170 HP MODEL	40
	DISASSEMBLY	41
	RE-ASSEMBLY	47
	AXLE SHAFT BEARING PRELOAD	50
27 120	AXLE HOUSING – 190 – 210 – 240 HP MODELS	55
	DISASSEMBLY	56
	RE-ASSEMBLY	62
	AXLE SHAFT BEARING PRELOAD ADJUSTMENT	65
27 120	PLANETARY REDUCTION GEAR	71
	— DISASSEMBLY	73
	RE-ASSEMBLY	75
	AXLE SHAFT SEAL REPLACEMENT	77
	TOP COVER REMOVAL AND INSTALLATION	79
27 106	DIFFERENTIAL ASSEMBLY	81
	DISASSEMBLY	82
	REASSEMBLY	91
	DIFFERENTIAL BEARING PRELOAD ADJUSTMENTS ...	97
	RING GEAR TO CHAIN WHEEL BACKLASH ADJUSTMENTS	102
27 106	PINION ASSEMBLY	107
	DISASSEMBLY	108
	REASSEMBLY	115
	PINION MESH AND PRELOAD ADJUSTMENTS	116
27 110	SOLENOID CHECKS	125
	PRESSURE TESTING	128

SECTION 31 – POWER TAKE-OFF SYSTEM

CHAPTER 1 – MECHANICAL SYSTEM

SECTION	DESCRIPTION	PAGE
31 100	SPECIFICATIONS	2
	SPECIAL TOOLS	3
	DESCRIPTION OF OPERATION	4
	TROUBLESHOOTING	9
	OVERHAUL	10
31 114	PTO REMOVAL AND INSTALLATION	10
	UPPER PTO INPUT SHAFT	16
	PTO OUTPUT SHAFT AND GEARS (170 HP)	20
	PTO OUTPUT SHAFT AND GEARS (190-240 HP)	31
	PTO CLUTCH PACK AND CONTROL VALVE	39

CHAPTER 2 – ELECTRO-HYDRAULIC SYSTEM

SECTION	DESCRIPTION	PAGE
31 100	SPECIFICATIONS	2
	SPECIAL TOOLS	3
	DESCRIPTION OF OPERATION	4
	OIL FLOWS	11
	ELECTRICAL CIRCUIT	14
	TROUBLESHOOTING	22
	ADJUSTMENTS	33
31 114	OVERHAUL	34
	PTO SOLENOID	34
	PTO CONTROL VALVE	37
	PTO SYSTEM PRESSURE TESTING	43
	PILOT CIRCUIT	44
	CLUTCH APPLY CIRCUIT	45
	LUBRICATION CIRCUIT	46

SECTION 33 – BRAKES

CHAPTER 1 – POWER BRAKES

SECTION	DESCRIPTION	PAGE
33 202	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	3
	TROUBLESHOOTING	16
	ADJUSTMENTS	19
	POWER BRAKE VALVE – OVERHAUL	23
	REAR AXLE BRAKE OVERHAUL	36

CHAPTER 2 – PARKING BRAKES

SECTION	DESCRIPTION	PAGE
33 110	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	2
	TROUBLESHOOTING	2
	ADJUSTMENTS	3
	OVERHAUL	4

SECTION 35 – HYDRAULIC SYSTEM

CHAPTER 1 – SYSTEM OVERVIEW

SECTION	DESCRIPTION	PAGE
35 000	DESCRIPTION OF OPERATION	
	INTRODUCTION	2
	HYDRAULIC PUMPS	17
	PRIORITY VALVE	35
	REMOTE CONTROL VALVES	39
	HYDRAULIC (EDC) LIFT SYSTEM	65
	TRAILER BRAKING SYSTEM	91
	TROUBLE SHOOTING	
	PRELIMINARY CHECKS	103
	TANDEM GEAR PUMP	104
	AXIAL PISTON PUMP	105
	PRIORITY VALVE	107
	REMOTE CONTROL VALVES	108
	HYDRAULIC (EDC) LIFT	111

CHAPTER 2 – LOW-PRESSURE SYSTEM

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS	2
35 260	REMOVAL, DISASSEMBLY AND REASSEMBLY	
27 170	HYDRAULIC PUMP INLET SCREEN	3
27 170	CHARGE PRESSURE REGULATOR VALVE	3
21 102	FILTERS	5
21 102	FILTER HEAD	6
21 136	COOLER BYPASS VALVE	7
10 408	HYDRAULIC OIL COOLER	8
33 202	ACCUMULATOR	12
27 170	HYDRAULIC PUMP DRIVEN GEAR CASE	13

CHAPTER 3 – TANDEM GEAR PUMP

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS	2
	SPECIAL TOOLS	2
35 105	OVERHAUL	
	REMOVAL	3
	DISASSEMBLY	4
	INSPECTION OF PARTS	9
	REASSEMBLY	12
	BENCH PERFORMANCE TESTING	19
	INSTALLATION	20
	PRESSURE AND FLOW TESTING – SEE CHAPTER 9	

CHAPTER 4 – AXIAL PISTON PUMP

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS	2
	SPECIAL TOOLS	2
35 106	OVERHAUL	3
	REMOVAL	4
	HAND TOOLS REQUIRED	5
	DISASSEMBLY	5
	INPUT SHAFT SEAL REPLACEMENT	6
	SEAL INSTALLATION	7
	COMPENSATOR VALVE DISASSEMBLY	8
	MAIN PUMP DISASSEMBLY	2
	SWASH PLATE REMOVAL	17
	INPUT SHAFT	20
	REASSEMBLY	22
	ROTATING GROUP ASSEMBLY	26
	FLOW AND PRESSURE COMPENSATOR VALVES	30
	PUMP INSTALLATION	32
	PRESSURE AND FLOW TESTING – SEE CHAPTER 9	

CHAPTER 5 – PRIORITY VALVE

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS	1
41 200	REMOVAL	2
	DISASSEMBLY	3
	REASSEMBLY	4

CHAPTER 6 – REMOTE CONTROL VALVES

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS	2
	SPECIAL TOOLS	2
	REMOVAL AND INSTALLATION	3
35 204	SECTION OVERHAUL	14
35 204	POWER-BEYOND APPLICATION	25

CHAPTER 7 – HYDRAULIC LIFT SYSTEM (ELECTRONIC DRAFT CONTROL)

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS	2
	OVERHAUL	
35 120	3 POINT LINKAGE	3
35 134	CROSS SHAFT	5
35 116	LIFT CYLINDERS	9
35 204	HYDRAULIC VALVES	14
	ELECTRICAL AND ELECTRONIC SYSTEM	
55 440	FAULT CODES	23
	COMPONENT REPLACEMENT	24
	EDC CALIBRATION PROCEDURES	28

CHAPTER 8 – TRAILER BRAKE VALVE

SECTION	DESCRIPTION	PAGE
35.000	SPECIFICATIONS AND SPECIAL TOOLS	1
33.220	TRAILER BRAKE VALVE OVERHAUL	
	BRAKE VALVE REMOVAL	2
	BRAKE VALVE DISASSEMBLY AND INSPECTION	3
	BRAKE VALVE REASSEMBLY	6
	BLEEDING THE BRAKING SYSTEM	7
	PRESSURE TESTING	8

CHAPTER 9 – PRESSURE AND FLOW TESTING

SECTION	DESCRIPTION	PAGE
35 000	DESCRIPTION OF OPERATION	2
	SPECIFICATIONS	3
	SPECIAL TOOLS	5
35 105	LOW PRESSURE SYSTEM TESTING	
	CHARGE PRESSURE	6
	CONTROL PRESSURE	7
	TANDEM GEAR PUMP FLOW	7
35 106	HIGH PRESSURE TESTING	
	LOW PRESSURE STANDBY	9
	HIGH PRESSURE STANDBY	10
	LEAD SENSE PRESSURE	11
	CASE DRAIN	12
	CCLS PUMP FLOW	13
	MEGAPUMP FLOW	14
	STEERING PRIORITY VALVE	17
35 204	REMOTE VALVE	19
	DETENT RELEASE	20
35 120	HYDRAULIC LIFT (EDC)	21

SECTION 41 – STEERING**CHAPTER 1 – HYDROSTATIC STEERING**

SECTION	DESCRIPTION	PAGE
41 204	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	5
	TROUBLESHOOTING	14
	STEERING MOTOR OVERHAUL	
	MOTOR REMOVAL	19
	DISASSEMBLY	20
	INSPECTION	25
	RE-ASSEMBLY	26
	MOTOR INSTALLATION	33

SECTION 44 – TWO WHEEL DRIVE AXLE AND WHEELS

CHAPTER 1 – TWO WHEEL DRIVE FRONT AXLE

SECTION	DESCRIPTION	PAGE
44 101	SPECIFICATIONS	2
44 101	SPECIAL TOOLS	2
44 101	DESCRIPTION AND OPERATION	3
44 101	TROUBLE SHOOTING	4
44 106	ADJUSTMENTS	8
44 101	DISASSEMBLY AND REPAIR	15

CHAPTER 2 – REAR WHEEL REMOVAL/REPLACEMENT

SECTION	DESCRIPTION	PAGE
44 520	SPECIFICATIONS	1
	SPECIAL TOOLS	1
	DESCRIPTION OF OPERATION	2
	DISASSEMBLY	2
	INSTALLATION	5

SECTION 50 – AIR CONDITIONING

CHAPTER 1 – CONTROL SYSTEMS

SECTION	DESCRIPTION	PAGE
50 200	INTRODUCTION	2
	SPECIFICATIONS	3
	DESCRIPTION OF OPERATION	6
	TROUBLESHOOTING AND SERVICING	28
	COMPONENT REMOVAL AND INSTALLATION	58

SECTION 55 – ELECTRICAL SYSTEM

CHAPTER 1 – ELECTRONIC INSTRUMENT CLUSTER (EIC)

SECTION	DESCRIPTION	PAGE
55 418	DESCRIPTION OF OPERATION	2
	SERVICE DIAGNOSTIC MODES	30
	MODE 1, OPERATOR CALIBRATIONS	31
	MODE 2, VIEW STORED FAULT CODES	40
	MODE 3, ALL MODULE INPUT PARAMETERS	43
	MODE 4, EIC OUTPUT DIAGNOSTICS	46
	MODE 5, RHC OUTPUT DIAGNOSTICS	47
	MODE 6, EDC OUTPUT DIAGNOSTICS	48
.....	MODE 7, ETC OUTPUT DIAGNOSTICS	49
	MODE 8, EIC FULL DISPLAY TEST	50
	MODE 9, HARDWARE/SOFTWARE REVISION LEVEL ..	51
	MODE 10, TRANSMISSION CALIBRATION REVIEW AND PROGRAMING	53
	MODE 11, 3PT HITCH AND EDC CALIBRATION	56
	MODE 12, TRACTOR FEATURES CONFIGURATION	58

CHAPTER 2 – FAULT CODES AND DIAGNOSTICS

SECTION	DESCRIPTION	PAGE
55-000	BASIC TROUBLESHOOTING AND DIAGNOSTICS	1
	FAULT CODES F001 TO F099, HYDRAULIC LIFT/EDC ...	9
	FAULT CODES F100 TO F199, RIGHT HAND CONTROLS	81
	FAULT CODES F200 TO F299, EIC MODULE	103
	FAULT CODES F300 TO F399, ETC TRANSMISSION CONTROL	126
	FAULT CODES F400 TO F499, ENGINE CONTROL	275

CHAPTER 3 – STARTING SYSTEMS

SECTION	DESCRIPTION	PAGE
55 201	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	2
	TROUBLESHOOTING AND DIAGNOSTIC	8
	OVERHAUL	11



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

CHAPTER 4 – CHARGING SYSTEMS

SECTION	DESCRIPTION	PAGE
55 301	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	2
	TROUBLESHOOTING AND DIAGNOSTIC	4
	OVERHAUL	11

CHAPTER 5 – CONTROLS, COMPONENTS, AND HARNESSSES

SECTION	DESCRIPTION	PAGE
55 404	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	4
	FRONT CONSOLE CONTROLS	5
	ROOF CONSOLE CONTROLS	10
	RIGHT HAND CONSOLE	12
	ELECTRONIC MODULES	12
	AUXILIARY POWER	14
	STARTER	16
	BATTERY	16
	ALTERNATOR	16
	DAM CONNECTOR	17
	MAIN FUSES	17
	DISTRIBUTION PANEL	18
	HARNESSES	20
	TROUBLE SHOOTING	21
	DISASSEMBLY AND REPAIR	23

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>