

**SERVICE
MANUAL**

**B90B
B90BLR
B100B
B100BLR
B100BTC
B110B
B110BTC
B115B**

Backhoe Loaders

Print No. 84428663A1

SERVICE MANUAL

**B90B / B90BLR / B100B / B100BLR / B100BTC
B110B / B110BTC / B115B**

Backhoe Loaders

Print No. 84428663A1



Hello

Thank you very much for your download.

In the last page of this PDF document.

There is a link.

Please click on that link and return to our website.

Then you can get the complete manual immediately.

No need to wait.

Thanks for continuing to read the documentation.

Best wishes.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

PREVENT ACCIDENTS

The majority of accidents and injuries which occur in the workshop, at the worksite or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason most accidents can be prevented by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against, without interfering with reasonable accessibility and efficient operation.

A careful operator and / or technician is the best insurance against accidents.

The careful observance of this single safety rule would be sufficient to prevent serious injuries:

Never attempt to clean, lubricate or adjust a machine while it is in motion.

⚠ WARNING ⚠

Before carrying out any maintenance operation, adjustment and or repair on machines equipped with attachments, controlled hydraulically or mechanically, make sure that the attachment is lowered and safely set on the ground. If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and /or mechanical device used for controlling the equipment.

CNH ITALIA S.p.A.
Technical Information
Viale delle Nazioni, 55
41100 MODENA - Italy

All rights reserved. Reproduction of text or illustrations, in whole or in part, is strictly prohibited.

LOADER BACKHOE MODELS

The complete range of Loader Backhoe models described in this manual are identified below:

	B90B B90BLR	B100B B100BLR B100BTC	B110B B110BTC	B115B
Powershift	/	/	●	●
Powershuttle	●	●	●	/
Stabilizer sideshift	●	●	●	●
Stabilizer center pivot	/	/	●	●
Cab	●	●	●	●
Rops	●	/	/	/
2WD	●	/	/	/
4WD	●	●	●	●
4WS	/	/	/	●
“Pilot” backhoe attachment controls	●	●	●	●
Backhoe attachment mechanical controls	●	●	●	●
Engine Iveco 72 kW - 97 HP model F4GE9484C*601 (mechanical)	●	/	/	/
Engine Iveco 72 kW - 97 HP model F4HE0484G*J102 (electronic)	/	●	/	/
Engine 82 kW - 110 HP model F4HE9484C*J102 (electronic)	/	/	/	/
Engine 82 kW - 110 HP (4WS) model F4HE9484C*J103 (electronic)	/	/	/	●
Short backhoe dipper	●	●	/	/
Long backhoe dipper	/	●	●	●

INDEX

SECTION 00 - SAFETY RULES

FOREWORD.....	4
SAFETY INSTRUCTIONS	6
PREVENTION OF FIRE OR EXPLOSIONS.....	8
PREVENTION OF BURNS	9
PRECAUTIONS FOR WASTE DISPOSAL.....	10

SECTION 01 - MAINTENANCE

SECTION 02 - TECHNICAL SPECIFICATIONS

MODELS.....	3
IDENTIFICATION OF MAIN COMPONENTS.....	4
TECHNICAL SPECIFICATIONS.....	7
DIESEL ENGINE	7
TRANSMISSION.....	10
AXLES	11
BRAKES	11
STEERING.....	12
HYDRAULIC SYSTEM	12
FRONT COUNTERWEIGHT	13
NOISE AND VIBRATION LEVELS	13
BUCKETS.....	13
TYRES.....	14
DIMENSIONS AND PERFORMANCE.....	15
DIMENSIONS - 2WS SIDESHIFT	15
DIMENSIONS - 2WS CENTER PIVOT.....	16
DIMENSIONS - 2WS TC - SIDESHIFT	17
DIMENSIONS - 4WS SIDESHIFT	18
DIMENSIONS - 4WS CENTER PIVOT.....	19
LOADER ATTACHMENT PERFORMANCE.....	20
PERFORMANCE OF LOADER ATTACHMENT WITH FORKS	30
BACKHOE ATTACHMENT PERFORMANCE.....	35
BACKHOE ATTACHMENT LIFTING CAPACITY	55
MAXIMUM LIFTING LOADS.....	61
LOADER ATTACHMENT MAXIMUM LIFTING LOAD TABLE	61
BACKHOE ATTACHMENT MAXIMUM LIFTING LOAD TABLE	62
SUPPLY SUMMARY TABLE	63

SECTION 21 - TRANSMISSION

POWERSHUTTLE TRANSMISSION.....	3
TECHNICAL SPECIFICATIONS.....	4
HYDRAULIC DIAGRAM.....	7
CONTROLS.....	13
LUBRICATION.....	17
GREASING.....	20
REMOVAL FROM MACHINE.....	22
DISASSEMBLY AND ASSEMBLY.....	23
TROUBLESHOOTING.....	148
REPAIR TIMES.....	152
SPECIAL TOOLS.....	153
 POWERSHIFT TRANSMISSION.....	 154
TECHNICAL SPECIFICATIONS.....	154
CONTROLS.....	165
LUBRICATION.....	167
GREASING.....	169
REMOVAL FROM MACHINE.....	170
DISASSEMBLY AND ASSEMBLY.....	171
TROUBLESHOOTING.....	335
REPAIR TIMES.....	339
SPECIAL TOOLS.....	340

SECTION 25 - FRONT AXLES

2WD - 2WS FRONT AXLE.....	3
TECHNICAL SPECIFICATIONS.....	3
LUBRICATION AND GREASING.....	4
REMOVAL FROM MACHINE.....	6
DISASSEMBLY AND ASSEMBLY.....	7
TROUBLESHOOTING.....	7
 4WD - 2WS FRONT AXLE.....	 10
TECHNICAL SPECIFICATIONS.....	10
LUBRICATION AND GREASING.....	11
REMOVAL FROM MACHINE.....	13
DISASSEMBLY AND ASSEMBLY.....	14
TROUBLESHOOTING.....	57
SPECIAL TOOLS.....	61
 4WS FRONT AXLE.....	 62
TECHNICAL SPECIFICATIONS.....	62
LUBRICATION AND GREASING.....	63
REMOVAL FROM MACHINE.....	65
DISASSEMBLY AND ASSEMBLY.....	66
TROUBLESHOOTING.....	131
REPAIR TIMES.....	137
SPECIAL TOOLS.....	138

SECTION 27 - REAR AXLE

2WS REAR AXLE (B90B - B100B - B100BTC)	3
TECHNICAL SPECIFICATIONS.....	3
LUBRICATION AND GREASING	5
REMOVAL FROM MACHINE	7
DISASSEMBLY AND ASSEMBLY.....	8
TROUBLESHOOTING.....	61
REPAIR TIMES.....	67
SPECIAL TOOLS.....	68
2WS REAR AXLE (B110B - B110BTC).....	69
TECHNICAL SPECIFICATIONS.....	69
LUBRICATION AND GREASING	71
REMOVAL FROM MACHINE	73
DISASSEMBLY AND ASSEMBLY.....	74
TROUBLESHOOTING.....	127
REPAIR TIMES.....	133
SPECIAL TOOLS.....	134
4WS REAR AXLE (B115B).....	135
TECHNICAL SPECIFICATIONS.....	135
LUBRICATION AND GREASING	138
REMOVAL FROM MACHINE	140
DISASSEMBLY AND ASSEMBLY.....	141
TROUBLESHOOTING.....	219
REPAIR TIMES.....	225
SPECIAL TOOLS.....	227

SECTION 33 - BRAKE SYSTEM

PARKING BRAKE.....	3
TECHNICAL SPECIFICATIONS.....	3
OPERATION.....	3
ADJUSTMENT.....	4
DISASSEMBLY AND ASSEMBLY.....	5
SERVICE BRAKE	14
TECHNICAL SPECIFICATIONS.....	14
OPERATION.....	14

SECTION 35 - HYDRAULIC SYSTEM

HYDRAULIC DIAGRAMS	3
HYDRAULIC DIAGRAM - 2WS SIDESHIFT MECHANICAL MODELS.....	3
HYDRAULIC DIAGRAM - 2WS SIDESHIFT PILOT MODELS	5
HYDRAULIC DIAGRAM - 2WS CENTER PIVOT PILOT MODELS	7
HYDRAULIC DIAGRAM - 4WS SIDESHIFT MECHANICAL MODELS.....	9
HYDRAULIC DIAGRAM - 4WS SIDESHIFT PILOT MODELS	11
HYDRAULIC DIAGRAM - 4WS CENTER PIVOT PILOT MODELS	13

HYDRAULIC PUMP	15
HYDRAULIC FIXED-FLOW-RATE GEAR PUMP	15
HYDRAULIC VARIABLE-FLOW-RATE PISTON PUMP	26
CONTROL VALVES.....	40
LOADER CONTROL VALVE	49
BACKHOE ATTACHMENT CONTROL VALVE.....	53
RELIEF VALVES.....	65
BACKHOE ATTACHMENT CONTROL VALVE PILOT SOLENOID VALVE	74
ACCUMULATOR “GLIDE RIDE” PARKER.....	77
TECHNICAL SPECIFICATIONS.....	77
MAINTENANCE	77
SAFETY	77
CHECKING AND ADJUSTING THE PRECHARGE PRESSURE	78
HYDRAULIC SWING SYSTEM	80
OPERATION	80
HYDRAULIC CYLINDERS.....	83
LOADER ATTACHMENT BOOM CYLINDER.....	84
LOADER BUCKET CYLINDER.....	91
4X1 LOADER BUCKET CYLINDER	97
BACKHOE BOOM CYLINDER	100
BACKHOE ATTACHMENT DIPPER CYLINDER	104
BACKHOE BUCKET CYLINDER.....	108
TELESCOPIC CYLINDER	112
STABILIZER CYLINDER - CENTER PIVOT.....	116
STABILIZER CYLINDER - SIDESHIFT	120
SWING CYLINDER.....	124
BACKHOE ATTACHMENT LOCK CYLINDER - SIDESHIFT	128
SPECIAL TOOLS.....	129
HYDRAULIC CONTROL LEVERS.....	130
TECHNICAL SPECIFICATIONS.....	130
CONTROLS AND OPERATION	131
COMPONENTS	132
DISASSEMBLY AND ASSEMBLY.....	134
CONTROL LEVER VALVE	137
TROUBLESHOOTING	139
PRELIMINARY CHECKS.....	139
TROUBLESHOOTING (WITH “REXROTH” CONTROL VALVES).....	140
SWING	142
HYDRAULIC PUMP	143

SECTION 39 - CHASSIS

DESCRIPTION.....	3
REMOVAL AND INSTALLATION OF COMPONENTS.....	6
COMPONENTS WITHIN THE CHASSIS.....	6
COMPONENTS OF THE LOWER PART OF THE CHASSIS	7
COMPONENTS ATTACHED OUTSIDE THE CHASSIS	11

COMPONENTS OF THE UPPER PART	12
------------------------------------	----

SECTION 41 - STEERING SYSTEM

DESCRIPTION	3
2WS STEERING SYSTEM	4
4WS STEERING SYSTEM	7
POWER STEERING	11
TECHNICAL SPECIFICATIONS.....	11
COMPONENTS	13
DISASSEMBLY.....	15
ASSEMBLY.....	18

SECTION 50 - CAB HEATING AND AIR CONDITIONING

TECHNICAL SPECIFICATIONS.....	3
GENERAL.....	3
CAB HEATING.....	5
CONTROLS	5
OPERATION.....	6
OVERHAUL	9
TROUBLESHOOTING.....	11
AIR CONDITIONING	12
PRINCIPLES OF AIR CONDITIONING	12
CONTROLS	17
OPERATION.....	18
TROUBLESHOOTING AND TESTING.....	25
FLUSHING THE SYSTEM.....	44
DRAINING THE SYSTEM	46
CHARGING THE SYSTEM.....	47
OVERHAUL	48
COMPRESSOR	53
TECHNICAL SPECIFICATIONS.....	53
REMOVAL AND INSTALLATION	54
DISASSEMBLY AND ASSEMBLY.....	57
TROUBLESHOOTING.....	66

SECTION 55 - ELECTRIC SYSTEM

ELECTRIC DIAGRAMS	3
ELECTRIC DIAGRAMS - POWERSHUTTLE ROPS (B90B)	3
ELECTRIC DIAGRAMS - POWERSHUTTLE CAB (B90B)	19
ELECTRIC DIAGRAMS - POWERSHUTTLE CAB (B100B - B100BTC - B110B - B110BTC)	36
ELECTRIC DIAGRAMS - POWERSHIFT CAB (B110B - B110BTC)	52
ELECTRIC DIAGRAMS - 4WS POWERSHIFT CAB (B115B)	70
CONTROLS AND INSTRUMENTS	88

FRONT INSTRUMENT PANEL	88
SIDE INSTRUMENT CLUSTER PANEL (B90B)	91
SIDE INSTRUMENT CLUSTER PANEL (B100B - B100BTC - B110B - B110BTC - B115B).....	93
SIDE INSTRUMENT CLUSTER (B90B)	95
SIDE INSTRUMENT CLUSTER (B100B - B100BTC - B110B - B110BTC - B115B).....	97
ANTI-START SYSTEM	99
DIAGNOSTIC DISPLAY (B100B - B100BTC - B110B - B110BTC - B115B).....	100
SYMBOLS.....	102
SETUP MENU.....	103
PROCEDURE ABOUT SELF TEST.....	104
ON BOARD ERROR CODE RETRIEVAL.....	105
BACKLIGHTING AND DIMMING.....	106
WORK HOURS.....	107
OPERATION.....	108
WARNING SYSTEM.....	112
MAINTENANCE.....	113
WARNING MESSAGES.....	114
STARTING SYSTEM	121
OPERATION.....	121
STARTER MOTOR.....	124
TROUBLESHOOTING.....	129
ALTERNATOR.....	131
TECHNICAL SPECIFICATIONS.....	131
OPERATION.....	131
COMPONENTS	133
REMOVAL.....	134
PRELIMINARY CHECKS AND TESTS.....	135
TROUBLESHOOTING.....	144
BATTERY.....	145
TECHNICAL SPECIFICATIONS.....	145
OPERATION.....	145
REPLACEMENT	146
CHARGE AND ELECTROLYTE LEVEL CHECK	147
CONNECTING A BOOSTER BATTERY	148
BATTERY MASTER SWITCH	148
TROUBLESHOOTING	149

SECTION 82 - LOADER

LOADER ATTACHMENT CONTROLS.....	4
LOADER ATTACHMENT OPERATION.....	4
4x1 LOADER BUCKET CONTROL (Optional).....	7
LOADER ATTACHMENT CONTROL LOCK (Specific to certain countries).....	8
LOADER BUCKET SELF-LEVELLING	9
LOADER ATTACHMENT SAFETY STRUT.....	12
LOADER ATTACHMENT SAFETY STRUT	

(B90B - B100B - B110B).....	12
LOADER ATTACHMENT SAFETY STRUT	
(B100BTC - B110BTC - B115B)	14
REMOVAL AND INSTALLATION OF LOADER BUCKET	15
LOADER BUCKET (B90B - B100B - B110B)	15
LOADER BUCKET (B100BTC - B110BTC - B115B).....	16
LOADER BUCKET WITH FORKS (Optional)	17
BUCKET TEETH REPLACEMENT.....	18
LOADER REMOVAL.....	19
LOADER ATTACHMENT (B90B - B100B - B110B)	19
LOADER ATTACHMENT	
(B100BTC - B110BTC - B115B)	21

SECTION 84 - BACKHOE

DESCRIPTION AND OPERATION.....	3
BACKHOE ATTACHMENT CONTROLS.....	6
BACKHOE ATTACHMENT MECHANICAL CONTROLS	7
BACKHOE ATTACHMENT HYDRAULIC CONTROLS	17
BACKHOE ATTACHMENT SIDESHIFT (Sideshift version)	23
BACKHOE ATTACHMENT DISASSEMBLY	25
CENTER PIVOT BACKHOE ATTACHMENT DISASSEMBLY	25
SIDESHIFT BACKHOE ATTACHMENT DISASSEMBLY.....	28
BACKHOE BUCKET REPLACEMENT	30
BUCKET TEETH REPLACEMENT.....	31
DIPPER REMOVE	32
TELESCOPIC DIPPER REVISION.....	35
OVERHAUL	35
BACKHOE ATTACHMENT HYDRAULIC HANDLING	38
CONTROLS	38
HYDRAULIC DIAGRAM	38
HANDLING CYLINDER	39
DISASSEMBLY AND ASSEMBLY.....	40

B90B - B90BLR

B100B - B100BLR - B100BTC

B110B - B110BTC

B115B



SECTION 00 - SAFETY RULES



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>