

SERVICE MANUAL

E60C Mini Excavator

Part number 51452122

English
July 2018





SERVICE MANUAL

E60C Cab - Tier IV final engine

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.101] Cylinder heads	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.216] Fuel tanks	10.6
[10.206] Fuel filters	10.7
[10.218] Fuel injection system.....	10.8
[10.202] Air cleaners and lines	10.9
[10.254] Intake and exhaust manifolds and muffler	10.10
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.11
[10.400] Engine cooling system	10.12
[10.414] Fan and drive	10.13
[10.304] Engine lubrication system.....	10.14
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.359] Main control valve.....	35.4
[35.357] Pilot system	35.5
[35.355] Hydraulic hand control	35.6
[35.356] Hydraulic foot control.....	35.7
[35.352] Hydraulic swing system	35.8
[35.353] Hydraulic travel system	35.9
[35.354] Hydraulic central joint	35.10

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

[35.736] Boom hydraulic system	35.11
[35.737] Dipper hydraulic system.....	35.12
[35.738] Excavator and backhoe bucket hydraulic system.....	35.13
[35.734] Tool quick coupler hydraulic system	35.14
[35.360] Hammer and rotating bucket hydraulic system	35.15
[35.739] Swing arm hydraulic system	35.16
[35.741] Dozer blade cylinders	35.17
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Tracks and track suspension.....	48
[48.130] Track frame and driving wheels.....	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls.....	55.3
[55.015] Engine control system.....	55.4
[55.201] Engine starting system	55.5
[55.301] Alternator.....	55.6
[55.302] Battery.....	55.7
[55.011] Fuel tank system	55.8
[55.014] Engine intake and exhaust system.....	55.9
[55.012] Engine cooling system	55.10

[55.013] Engine oil system	55.11
[55.640] Electronic modules	55.12
[55.512] Cab controls	55.13
[55.036] Hydraulic system control	55.14
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket)	55.15
[55.518] Wiper and washer system	55.16
[55.404] External lighting	55.17
[55.514] Cab lighting	55.18
[55.408] Warning indicators, alarms, and instruments	55.19
[55.DTC] FAULT CODES	55.20
Booms, dippers, and buckets	84
[84.910] Boom	84.1
[84.912] Dipper arm	84.2
[84.100] Bucket	84.3
Dozer blade and arm	86
[86.110] Dozer blade	86.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.120] Mechanically-adjusted operator seat	90.2
[90.100] Engine hood and panels	90.3
[90.105] Machine shields and guards	90.4



INTRODUCTION

Foreword - Important notice regarding equipment servicing

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your NEW HOLLAND CONSTRUCTION Sales and Service Networks.

Safety rules

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Safety rules - General information

Cleaning

Clean the metal parts with cleaning solution that meets the standard and steam cleaning. (except for bearings)

After cleaning, dry well, and inject oil in all parts.

Also inject oil into the bearings after drying.

Inspection

When disassembling parts, check all the parts.

If there are any worn or damaged parts, replace them.

Inspect carefully to prevent initial breakdowns.

Bearing

Replace any loose bearings.

Air dry bearings before installing them.

Needle bearing

When inserting needle bearings, be very careful not to damage them.

Apply grease to the section where the needle bearing will be inserted.

Gear

Check that there is no wear and no damage.

Oil seal, O-ring, gasket

Always install new oil seals, O-rings, and gaskets.

Apply grease to sections where oil seals and O-rings will be inserted.

Shaft

Check that there is no wear and no damage.

Check the bearings and check for damaged oil seals on the shaft.

Service parts

Install NEW HOLLAND CONSTRUCTION genuine service parts.

When placing an order, check the parts catalog. It contains the NEW HOLLAND CONSTRUCTION genuine part numbers.

Any breakdowns arising from the installation of non-genuine parts are not covered by the warranty.

Lubricants (fuel, hydraulic oil)

Use the oil from the specified company or specified in the operator's manual or service Manual.

Any breakdowns arising from any fuel or hydraulic oil other than those specified are not covered by the warranty.



SERVICE MANUAL

Engine

E60C Cab - Tier IV final engine

Engine - Remove

⚠ WARNING

Avoid injury!

Shut off the engine, remove the key, and make sure all machine motion stops before you service the machine.

Failure to comply could result in death or serious injury.

W1128B

⚠ WARNING

Chemical hazard!

Use caution when opening the quick coupler cap from the load port. There may be product left in the port.

Failure to comply could result in death or serious injury.

W1039A

⚠ WARNING

Crushing hazard!

The lifting systems must be operated by qualified personnel who are aware of the correct procedures to follow. Make sure all lifting equipment is in good condition, and all hooks are equipped with safety latches.

Failure to comply could result in death or serious injury.

W0256A

⚠ WARNING

Heavy objects!

Lift and handle all heavy components using lifting equipment with adequate capacity. Always support units or parts with suitable slings or hooks. Make sure the work area is clear of all bystanders.

Failure to comply could result in death or serious injury.

W0398A

⚠ WARNING

Burn hazard!

Before performing any service on the hydraulic system, you must allow it to cool. Hydraulic fluid temperature should not exceed 40 °C (104 °F).

Failure to comply could result in death or serious injury.

W0241A

⚠ WARNING

Escaping fluid!

Hydraulic fluid or diesel fuel leaking under pressure can penetrate the skin and cause infection or other injury. To prevent personal injury: Relieve all pressure before disconnecting fluid lines or performing work on the hydraulic system. Before applying pressure, make sure all connections are tight and all components are in good condition. Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose. If injured by leaking fluid, see your doctor immediately.

Failure to comply could result in death or serious injury.

W0178A

⚠ WARNING

 
Chemical hazard!

When handling fuel, lubricants, and other service chemicals, follow the manufacturer's instructions. Wear Personal Protective Equipment (PPE) as instructed. Do not smoke or use open flame. Collect fluids in proper containers. Obey all local and environmental regulations when disposing of chemicals.

Failure to comply could result in death or serious injury.


W0371A

1. Set the battery disconnect switch to O position (OFF position) to cut off any power supply in the electrical system of the machine. For details, see **Mechanical battery isolator - Dynamic description (55.302)**.
2. Tilting the cab (refer to **Cab tilting system - Service instruction (90.150)**)
3. Discharge the air conditioning system (refer to **Air conditioning - Discharging (50.200)**)
4. Remove the counterweight (refer to **Counterweight - Remove (39.140)**)
5. Remove the engine hood (refer to **Engine hood - Remove (90.105)**)
6. Remove the exhaust muffler (refer to **Exhaust muffler - Remove (10.254)**)
7. Use a wrench [**13 mm**] to remove the six bolts (1) and then remove the under cover (2) engine.

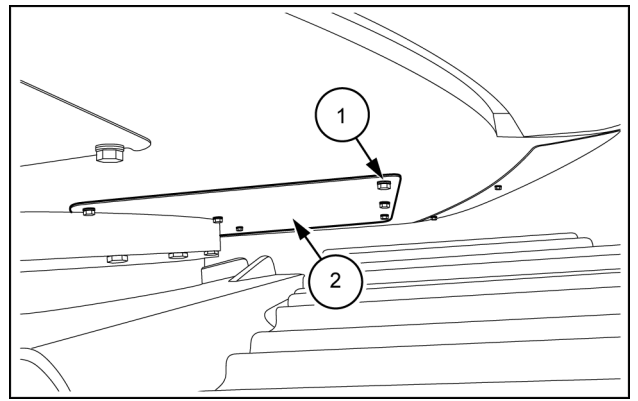


SMIL16MEX3700AB 1

 8. Use a wrench [**17 mm**] to remove the two bolts (3), and then remove the battery panel (4).

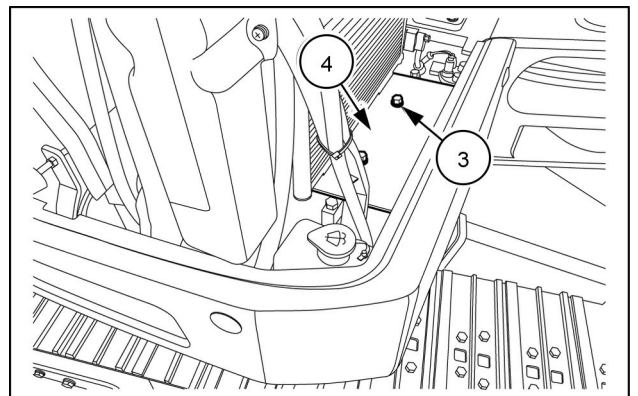


SMIL16MEX1101AB 2

 9. Remove the protective caps.
10. Use a wrench [**13 mm**] to remove the seven bolts (1), and then remove the right-hand side panel (2).

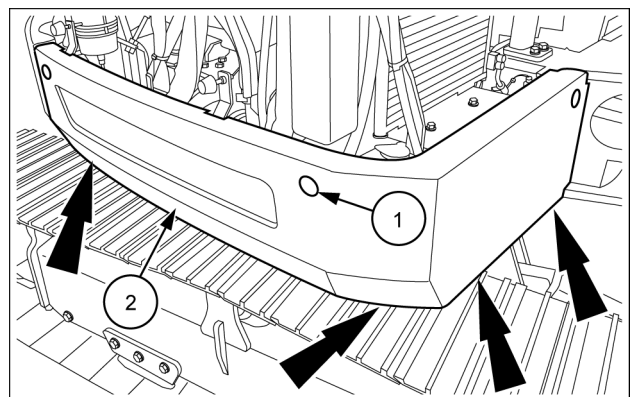


SMIL16MEX3680AB 3

 11. Cut-off the negative-terminal cable (-) **(2)**.
Next, cut-off the positive-terminal cable (+) **(1)**.

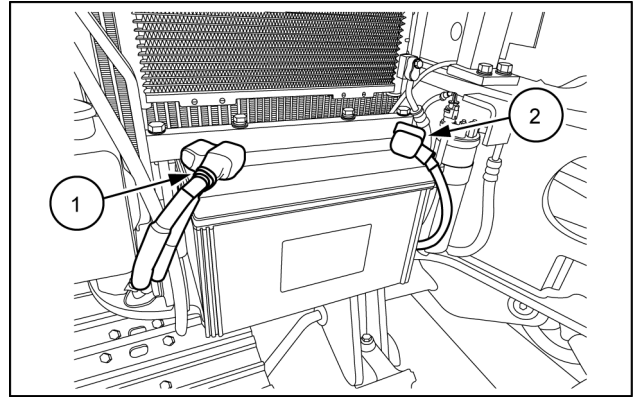


SMIL16MEX3701AB 4

 12. Use a wrench [**17 mm**] to remove the bolt **(1)** and then separate the bracket engine hood **(2)** from the oil reservoir.
13. Use a wrench [**19 mm**] to remove the four bolts **(3)**.

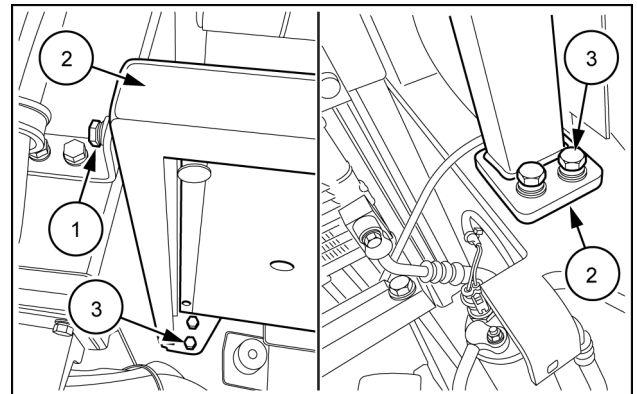


SMIL16MEX3698AB 5

 14. Install the two hooks into the lift bracket engine hood, and then use the wire rope or chain and lift-crane to secure the bracket engine hood.
15. Remove the bracket engine hood **(1)**.

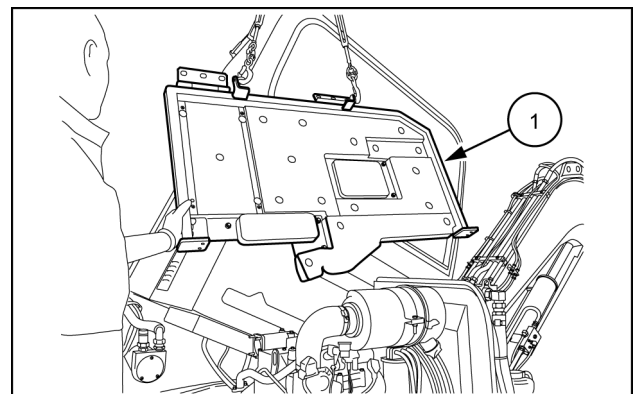


SMIL16MEX3699AB 6

 16. Use a wrench [**19 mm**] to remove the three bolts **(1)** then remove the fan-guard **(2)**.

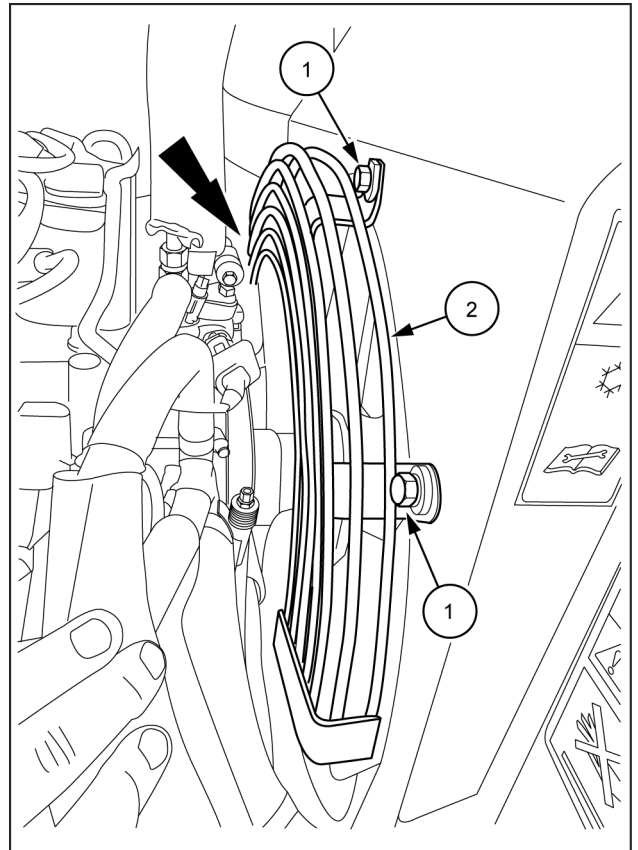


SMIL16MEX3684BB 7

 17. Loosen the clamps and remove the cab heating hoses **(1)**.

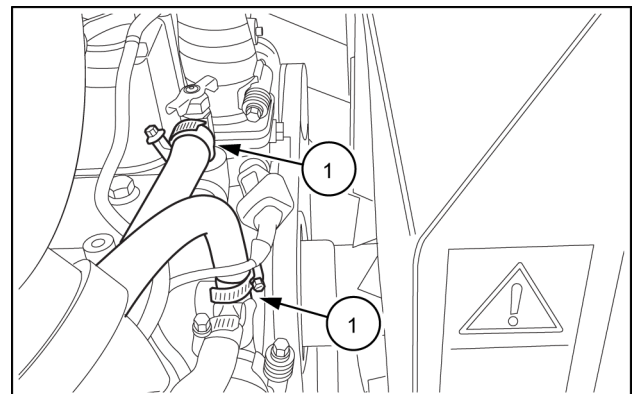


SMIL16MEX3702AB 8

 18. Use a wrench [**13 mm**] to remove the two bolts (1) and then remove the screen (2).

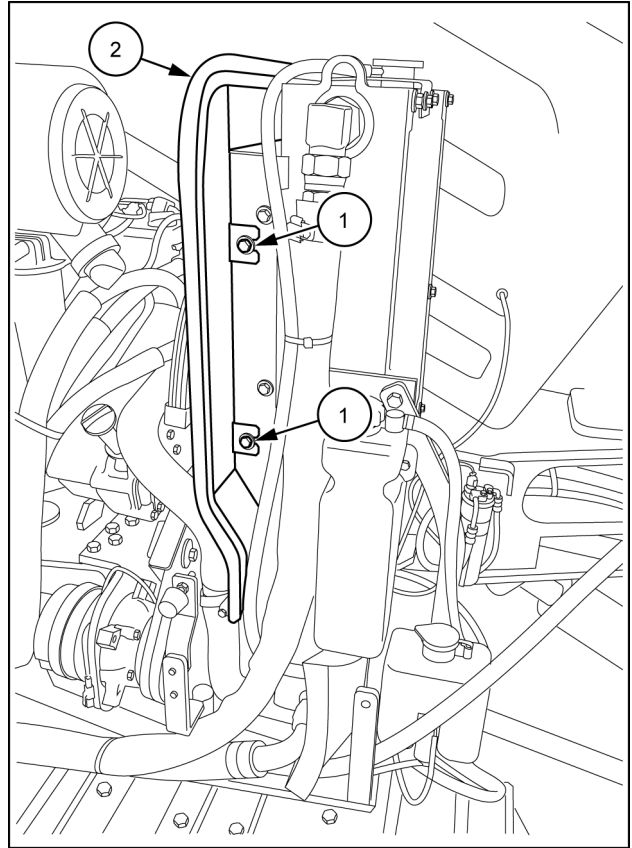


SMIL16MEX3703BB 9

 19. Use a wrench [**13 mm**] to remove the two bolts (1) and then remove the top screen (2).
20. Loosen the clamp to disconnect the cooling hose (3) from the radiator.

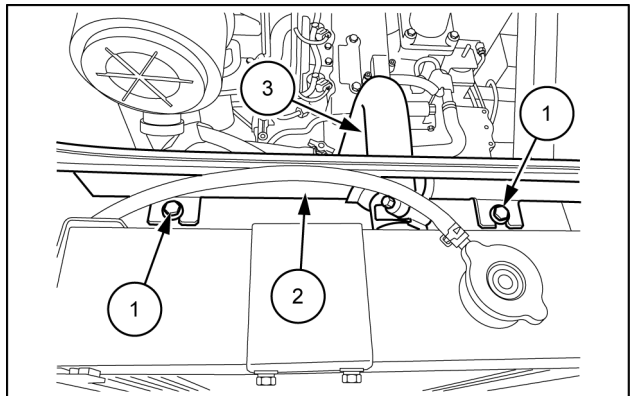


SMIL16MEX3704AB 10

 21. Loosen the clamp (1) to disconnect the cooling hose (2) from the radiator.

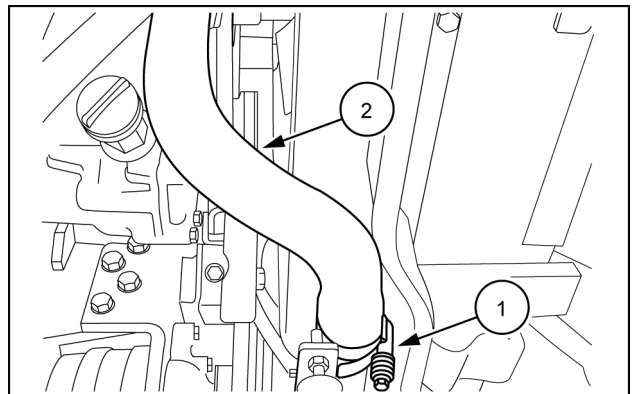


SMIL16MEX3705AB 11

 22. Loosen the clamp and remove the fuel hose (1) from the fuel filter (2).

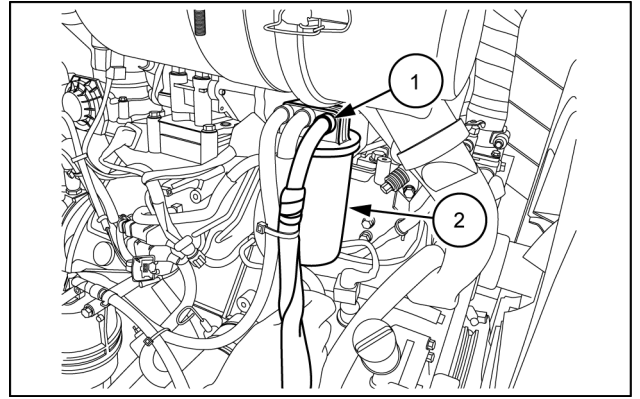



SMIL16MEX3706AB 12

 23. Close the fuel pre-filter cock (1).
 24. Loosen the clamp and remove the fuel pre-filter hose (2) from the fuel pre-filter (3).
 25. Use a wrench [13 mm] to loosen the bolts (3), and then remove the fuel pre-filter (4).

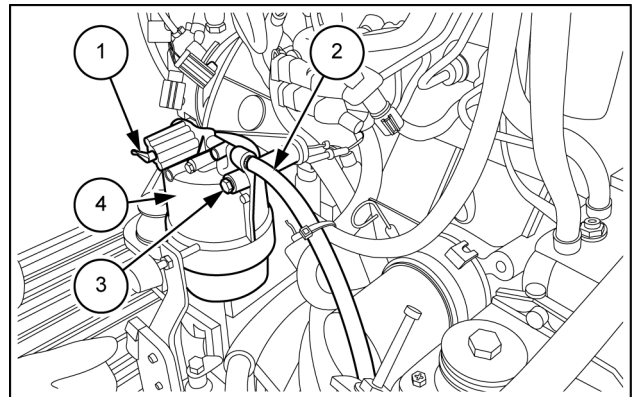

SMIL16MEX3707AB 13

  26. Use a wrench [17 mm] to disconnect the two hoses (1) from the air conditioning compressor (4).
 27. Disconnect the electrical connector CN-28 (2) from the air conditioning compressor (4).
 28. Remove the screw then remove the electrical connector (3) from the air conditioning compressor (4).

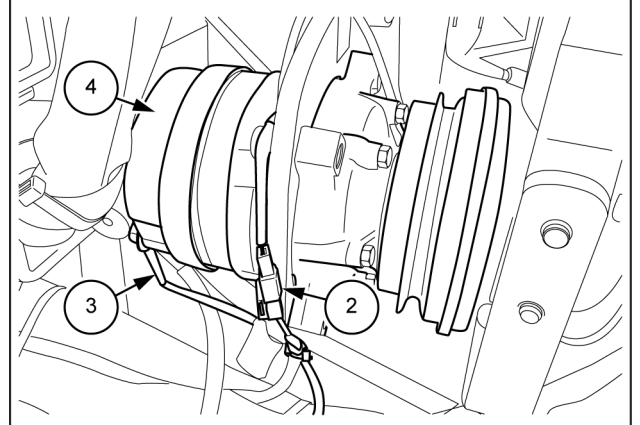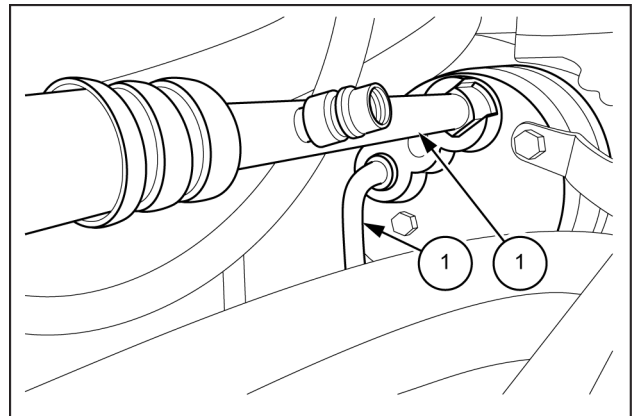

SMIL16MEX3708BB 14



Suggest:

If the above button click is invalid.


Please download this document

first, and then click the above link

to download the complete manual.


Thank you so much for reading

29. Disconnect the electrical connector **CN-145 (1)** of the electrical fuel feed pump.

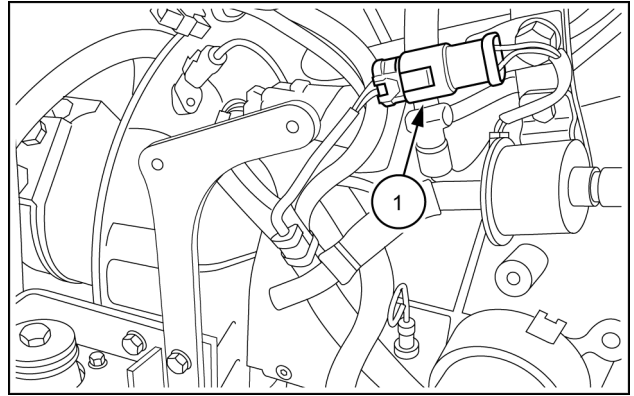


SMIL16MEX3709AB 15

30. Disconnect the electrical connector **CN-302 (1)**.
31. Disconnect the electrical connector **CN-304 (1)**.
32. Disconnect the electrical connector **CN-301 (3)**.
33. Disconnect the electrical connector **CN-303 (4)**.

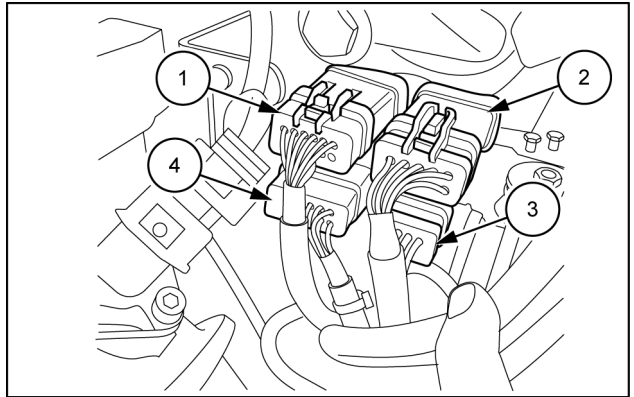


SMIL16MEX3556AB 16

34. Disconnect the electrical connector **CD-18 (1)** of the engine oil pressure.

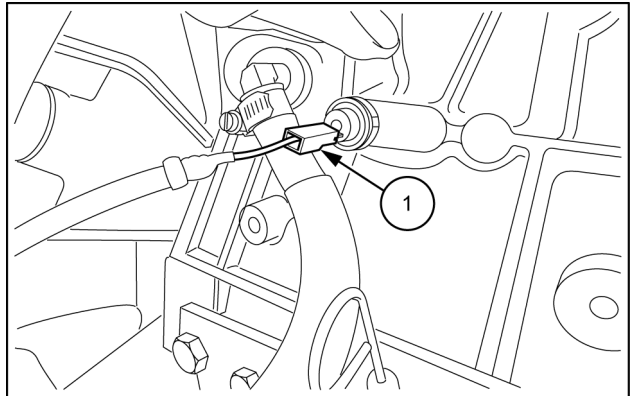

SMIL16MEX3557AB 17

35. Disconnect the electrical connector **CN-80 (1)** of the pre-heater glow plugs.

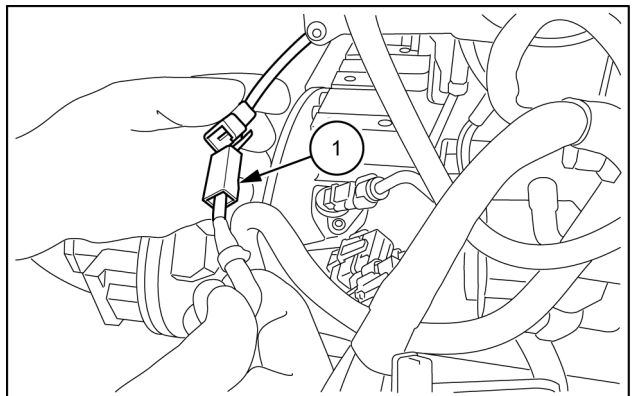

SMIL16MEX3558AB 18

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>