
L160, L170 REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION.....	3
SECTION 10 - ENGINE.....	4
SECTION 27 - REAR DRIVE AXLE (GEARBOXES).....	6
SECTION 29 - HYDROSTATIC TRANSMISSION.....	6
SECTION 33 - BRAKES AND CONTROLS.....	8
SECTION 35 - HYDRAULIC SYSTEM.....	9
SECTION 37 - TOWING HOOKS AND BALLASTING.....	11
SECTION 39 - FRAMES.....	11
SECTION 44 - AXLES AND WHEELS.....	12
SECTION 50 - CAB CLIMATE CONTROL.....	12
SECTION 55 - ELECTRICAL SYSTEM.....	13
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE).....	15
SECTION 88 - ACCESSORIES.....	16
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS.....	17

The following pages are the collation of the contents pages from each section and chapter of the L160, L170 Repair Manual. Complete Repair Manual part # 87634733.

The sections used through out all New Holland product Repair Manuals may not be used for each product. Each Repair Manual will be made up of one or several books.

Each book will be labeled as to which sections are in the overall Repair Manual and the sections that each book contains.

The sections listed above are the sections utilized for the L160, L170 Skid Steer.

SECTION 00 – GENERAL INFORMATION

BOOK 1 - 87634735

CONTENTS

Section	Description	Page
	Introduction	00-2
	About Improvements	00-2
	Company Policy	00-3
	Parts and Accessories	00-3
	Model Codes	00-3
	Precautionary Statements	00-4
	Safety Precaution Information	00-5
	General Safety Information	00-7
	Machine Model and Serial Number Location	00-9
	Engine Model and Serial Number Location	00-9
	Hardware Torque Specifications	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings	00-12
	Pipe Thread Fitting Torque	00-13
	Lubricants and Coolants	00-13
	Sealants	00-13
	Properly Support a Raised Machine	00-14
	Properly Support Boom on Boom Lock Pins	00-14
	Raising Boom Without Hydraulic Oil Flow	00-14
	Raising Boom Without Battery Voltage (12V)	00-16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	00-17
	Major Unit Overhaul	00-18
	Cab and Boom Tilt Procedure	00-19
	Craning the Skid Steer	00-25
	Special Tools	00-28
	Specifications	00-29
	Dimensions	00-35
	Cab and Boom Tilt Procedure (Cab Upgrade Machines Only).....	00-37

SECTION 10 – ENGINE

BOOK 1 - 87634735

Chapter 1 – L160 - N844, L170 - N844T

CONTENTS

Section	Description	Page
10 000	General Engine Information	10-3
	General Description	10-3
	Engine Component Descriptions	10-3
	Engine Model and Serial Number Location	10-5
	Turbocharger Lubrication	10-5
	Safety Precautions	10-6
	General Engine Specifications	10-7
	Troubleshooting	10-11
	L170 - Excessive Oil Consumption	10-15
	Specifications - Service Standards	10-17
	Torque Specifications	10-21
	Engine Components Electrical Diagram	10-22
10 001 10	Engine Removal	10-23
10 001 53	Engine Disassembly Sequence	10-28
	Engine Component Maintenance	10-36
10 101 55	Valve Seat	10-39
10 101 56	Cylinder Block	10-41
10 105 22	Piston and Piston Rings	10-42
	Connecting Rod	10-45
10 103 10	Bearing Holder	10-47
	Front Crankshaft Bearing (Bushing)	10-48
10 103 30	Crankshaft	10-50
10 103 76	Flywheel and Ring Gear	10-52
10 106 40	Camshaft Assembly	10-52
10 106 66	Camshaft Gear and Bearing Assembly	10-53
	Timing Gear	10-54
10 304 41	Oil Pump	10-54
10 304 10	Oil Filter	10-55
10 402 28	Water Pump Assembly and Thermostat Housing	10-55
10 402 30	Thermostat	10-55
10 230 24	Governor	10-57
	Governor Operation	10-59

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

10	304	38	Engine Reassembly Sequence	10-61
			Crankshaft and Bearing Holder Assembly	10-62
			Rear Oil Seal	10-63
			Backplate/Flywheel Housing	10-63
			Flywheel	10-63
			Piston and Connecting Rod	10-64
			Oil Intake and Oil Strainer	10-64
			Oil Sump	10-64
			Dipstick and Tube	10-64
			Front Plate	10-64
			Idle Gear and Oil Pump Assembly	10-66
			Timing Gear Case Installation	10-66
			Crankshaft Pulley	10-66
			Injection Pump Installation	10-66
			Adjusting the Fuel Injection Timing	10-67
			Spill Timing Procedure	10-68
29	100	50	Reinstallation of Engine into Skid Steer Frame	10-75
			How to Operate the Engine After Overhaul	10-77
			Cooling System	10-78
			Cooling System Operation	10-78
			Water Pump Assembly and Thermostat Housing	10-79
			Radiator	10-80
			Fuel System	10-82
			Fuel Specifications	10-82
			Diesel Fuel	10-82
			Diesel Fuel Storage	10-82
			Fuel System Components	10-83
			Fuel Gauge	10-84
			Cold Start Aid	10-85
			Fuel Filter System	10-85
			Priming the Fuel System	10-86
			Fuel System Testing	10-87
			Fuel System Components	10-90
10	236	08	Fuel Injection Timing	10-96
			Turbocharger - L170 N844T Engine	10-101
10	250	30	Turbocharger Removal	10-103
			Miscellaneous Engine Electrical	10-116
10	223	10	Shut-off Solenoid	10-117
			Special Tools	10-119
			Labor Guide	10-120

SECTION 27 – REAR DRIVE AXLE (GEARBOXES)

BOOK 2 - 87634738

Chapter 1 – Gearboxes

CONTENTS

Section	Description	Page
27 000	General Information	27-2
	Specifications	27-4
	Troubleshooting	27-5
	Testing	27-7
27 126	Gearboxes	27-8
27 126 40	Gearbox Removal and Inspection	27-8
27 126 48	Gearbox Disassembly	27-12
	Gearbox Parts Inspection	27-13
	Gearbox Resassembly	27-14
27 126 40	Gearbox Resinstallation	27-16
	Labor Guide	27-19

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87634738

Chapter 1 - Neutralizer, Pumps, Motors

CONTENTS

Section	Description	Page
29 100	General Information	29-3
	Operation	29-3
	Specifications	29-5
29 100 01	Troubleshooting	29-6
	Hydrostatic Drive System Testing	29-8
	Hydrostatic System Oil Flow	29-11
	Hydrostatic Charge System Pressure Test	29-14
	Hydrostatic Pump Case Drain Test	29-15
	Hydrostatic Pump High Pressure Test	29-18

	Hydrostatic Pump Efficiency Test	29-20
	Hydrostatic Motor Case Drain Test	29-22
	Hydrostatic Motor Efficiency Test	29-23
	Hydraulic, Hydrostatic System Air Ingress Test	29-25
	Hydrostatic Pumps	29-27
29 100 40	Hydrostatic Pump Removal	29-27
29 100 46	Hydrostatic Pump Disassembly	29-31
	Hydrostatic Pump Parts Inspection	29-36
	Hydrostatic Pump Reassembly	29-41
	Hydraulic System Pump Installation (Without High Flow)	29-47
	Hydraulic System Pump/High Flow Pump Installation	29-49
	Hydrostatic Pump Reinstallation	29-54
	Hydrostatic Motor	29-58
29 100 60	Hydrostatic Motor Removal	29-58
29 100 66	Hydrostatic Motor Disassembly	29-62
	Hydrostatic Motor Parts Inspection	29-67
	Hydrostatic Motor Reassembly	29-70
	Hydrostatic Motor Reinstallation	29-79
	Hydraulic System Cleaning Procedure	29-85
	Start-up Procedure After Rebuild (After Pump or Motor Replacement)	29-88
	Charge Check Valve	29-90
29 100 36	Charge Check Valve Removal and Replacement	29-90
29 100	Steering System	29-91
	Hydrostatic System Controls	29-91
29 130 30	Neutralizer Assembly	29-93
	Left Control Handle With No Boom Hand Control	29-97
29 100 10	Left Control Handle With No Boom Hand Control Removal	29-97
29 100 10	Left Control Handle With No Boom Hand Control Disassembly	29-97
	Left Control Handle With No Boom Hand Control Inspection	29-98
	Left Control Handle With No Boom Hand Control Reassembly	29-98
	Left Control Handle With No Boom Hand Control Reinstallation	29-98
29 100 11	Left Control Handle With Boom Hand Control	29-100
	Left Control Handle With Boom Hand Control Removal	29-100
29 100 10	Left Control Handle With Boom Hand Control Disassembly	29-101
	Left Control Handle With Boom Hand Control Inspection	29-102
	Left Control Handle With Boom Hand Control Reassembly	29-103
	Left Control Handle With Boom Hand Control Reinstallation	29-104
	Right Control Handle With Auxiliary or Bucket Control	29-106
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal	29-106

29 100 15	Right Control Handle With Auxiliary or Bucket Control Disassembly.....	29-107
	Right Control Handle With Auxiliary or Bucket Control Inspection.....	29-109
	Right Control Handle With Auxiliary or Bucket Control Reassembly.....	29-110
	Right Control Handle With Auxiliary or Bucket Control Reinstallation.....	29-113
29 130 06	Drive Control Adjustment Procedure.....	29-115
29 130 06	Neutral Adjustment.....	29-116
	Labor Guide.....	29-118
	Machines Equipped With ISO Pattern Pilot Controls.....	29-121
	Pilot Control Travel System Overview.....	29-121
	Specifications.....	29-142
	Troubleshooting.....	29-143
	Check 1 - Checking the DA Pressure.....	29-144
	Check 2 - Checking Charge Pressure/Flow.....	29-146
	Check 3 - Checking Circuit Relief Valve Pressure.....	29-147
	Pump Adjustments.....	29-148
	Pump Removal.....	29-149
	Pump Installation.....	29-153
	Pump Disassembly.....	29-156
	Pump Assembly.....	29-173
	Pilot Control Travel Lever Removal.....	29-189
	Pilot Control Travel Lever Installation.....	29-193
	Illustration - Hydrostatic System (Machines Equipped With Pilot Controls).....	29-195
	Procedure to Bleed Air From the Pilot Control Hydraulic System.....	29-196

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87634738

Chapter 1 - Parking Brake

Contents

Section	Description	Page
33 000	General Information.....	33-2
	Specifications.....	33-4
	Troubleshooting.....	33-5
	Testing.....	33-7
33 110	Parking Brake.....	33-8
	Parking Brake Removal and Installation.....	33-9
	Labor Guide.....	33-22

SECTION 35 - HYDRAULIC SYSTEM

BOOK -3 - 87634740

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

Contents

Section Description	Page
35 000 -	
General Information.....	35-3
Hydraulic System Compatibility.....	35-4
Boom Cylinder Pivot Pins.....	35-6
Boom Cylinder Pivot Pin Location and Machine Usage.....	35-6
Control Valve Power Beyond.....	35-7
Specifications.....	35-8
Troubleshooting.....	35-12
Auxiliary Boom Hydraulics Troubleshooting.....	35-16
Hydraulic System Testing.....	35-18
Hydraulic System Oil Flow.....	35-24
Control Valve - Bucket Spool Shifted.....	35-25
Control Valve - Boom Spool Shifted.....	35-26
Control Valve - Auxiliary Spool Shifted.....	35-27
35 710 02	
Main System Pressure Tests.....	35-28
Checking Main System Pressure at Boom Cylinders.....	35-30
Checking Main System Pressure at Bucket Cylinders.....	35-31
Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers.....	35-32
Boom Circuit Relief Valve Test.....	35-33
Gear Pump Flow Efficiency Test.....	35-35
Boom and Bucket Spool Lock Solenoid Test.....	35-39
Hydraulic, Hydrostatic System Air Ingress Test.....	35-41
Control Valve Specifications.....	35-43
35 724 50	
Control Valve Removal.....	35-44
Control Valve Disassembly and Inspection.....	35-45
Control Valve Parts Inspection.....	35-49
Control Valve Reassembly.....	35-50
Control Valve Reinstallation.....	35-53
Hydraulic Pump Specifications.....	35-54
35 710 10	
Hydraulic Pump Removal.....	35-55
35 710 20	
Hydraulic Pump Removal/Disassembly (Without High Flow).....	35-56
High Flow Pump Parts Inspection.....	35-58
Hydraulic Pump Parts Inspection.....	35-59
Hydraulic Pump Reassembly/Installation (Without High Flow).....	35-61
Hydraulic Pump and High Flow Pump Reassembly/Installation.....	35-64
New Hydraulic Pump Installation (Without High Flow).....	35-70
New Hydraulic Pump/High Flow Pump Installation.....	35-72
Gear Pump Start-up Procedure.....	35-78
Cylinders, Boom and Bucket.....	35-79
35 710 10	
Boom Cylinder Removal.....	35-81
35 730 18	
Boom Cylinder Disassembly.....	35-83
Boom Cylinder Parts Inspection.....	35-84
Boom Cylinder Reassembly.....	35-85
Boom Cylinder Reinstallation.....	35-87

35 730 10	Bucket Cylinder Removal.....	35-87
35 730 13	Bucket Cylinder Disassembly.....	35-88
	Bucket Cylinder Parts Inspection.....	35-89
	Bucket Cylinder Reassembly.....	35-90
	Bucket Cylinder Reinstallation.....	35-92
	Pedal Controls.....	35-93
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls).....	35-93
	Pedal Inspection (With Boom and Bucket Pedal Controls).....	35-93
	Pedal Reinstallation (With Boom and Bucket Pedal Controls).....	35-95
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls).....	35-98
	Pedal Inspection (With Boom and Bucket Hand Controls).....	35-99
	Pedal Reinstallation (With Boom and Bucket Hand Controls).....	35-100
35 300	Hydraulic Cooling, Filter, Reservoir System.....	35-103
	Filter System.....	35-104
	Filter Removal.....	35-104
35 705 05	Base Removal.....	35-104
	Reassembly.....	35-105
	Oil Cooler.....	35-105
35 300 10	Oil Cooler Removal.....	35-105
	Oil Cooler Reassembly.....	35-106
35 300	Oil Reservoir.....	35-106
35 300 10	Oil Reservoir Removal.....	35-107
	Oil Reservoir Reinstallation.....	35-108
	Adapting Attachments.....	35-109
	Labor Guide.....	35-110
Machines Equipped With Pilot Controls		
	Specifications.....	35-111
	Loader Function Troubleshooting.....	35-112
	Pilot Pressure Test.....	35-113
	Illustration - Loader Control.....	35-114
	Right Control Handle - Removal.....	35-115
	Right Control Handle - Installation.....	35-118
	Hydraulic Schematic - Frame 3 - (Mechanical Control Machines).....	35-120
	Hydraulic Schematic - Frame 4- (Mechanical Control Machines).....	35-121
	Hydraulic Schematic - Frame 5- (Pilot Control Machines).....	35-122
	Hydraulic Schematic - Frame 6- (Pilot Control Machines).....	35-123
	Hydraulic Schematic - Frame 7- (Pilot Control Machines).....	35-124
	Hydraulic Schematic - Frame 8- (Pilot Control Machines).....	35-125
	Hydraulic Schematic - Frame 9- (Pilot Control Machines).....	35-126

SECTION 37 – TOWING HOOKS AND BALLASTING

BOOK 3 - 87634740

Chapter 1 – Rear Counterweights

CONTENTS

Section	Description	Page
37 140 10	Rear Counterweights	37-2
37 140 12	Rear Counterweight Support Removal	37-2

SECTION 39 – FRAMES

BOOK 3 - 87634740

Chapter 1 – Lower Main, ROPS

CONTENTS

Section	Description	Page
	General Information	39-2
	ROPS	39-2
	ROPS Frame	39-2
90 152 46	ROPS Removal	39-2
	ROPS Reinstallation	39-8
	Labor Guide	39-11
	ROPS Removal (Cab Upgrade Machines Only).....	39-12
	ROPS Installation (Cab Upgrade Machines Only).....	39-24

SECTION 44 – AXLES AND WHEELS

BOOK 3 - 87634740

Chapter 1 – Axles

CONTENTS

Section	Description	Page
44 100	General Information	44-2
	Specifications	44-4
	Troubleshooting	44-5
	Testing	44-7
44 106	Axles	44-8
44 106 10	Axle Housing Assembly Removal	44-8
44 106 16	Axle Disassembly	44-9
	Axle Parts Inspection	44-11
	Axle Reassembly	44-12
	Axle Housing Reinstallation	44-14
	Final Drive	44-15
44 106 48	Drive Chain and Sprocket Removal	44-15
	Final Drive Parts Inspection	44-19
	Final Drive Reassembly	44-20
44 511	Tires/Wheels	44-22
	Tire and Track Installation	44-23
	Labor Guide	44-24

SECTION 50 - CAB CLIMATE CONTROL
CHAPTER 1 - HEATER/DEF ROSTER/AIR CONDITIONER
 Book 3 - 87634740
CONTENTS

Section	Description	Page
50 100	Heater/Defroster (Cab).....	50-2
	Labor Guide.....	50-8
	Air Conditioning System Special Tools.....	50-9
	Air Conditioning System General Specifications.....	50-11
	Air Conditioning System Discharging and Evacuate and Recovery.....	50-13
	Air Conditioning System Charging.....	50-19
	Compressor Removal.....	50-21
	Compressor Installation.....	50-23
	Compressor Oil Level Check.....	50-25
	Compressor Belt Measure and Tension Adjust.....	50-28
	Compressor Magnetic Clutch Disassemble.....	50-29
	Compressor Magnetic Clutch Assembly.....	50-37
	Air Conditioning System Removal.....	50-43
	Air Conditioning System Installation.....	50-45
	Air Conditioning System Condenser Removal.....	50-46
	Air Conditioning System Condenser Installation.....	50-47
	Air Conditioning System Evaporator Removal.....	50-48
	Air Conditioning System Evaporator Installation.....	50-49
	Receiver/Drier Removal and Installation.....	50-51
	Air Conditioning System Visual Inspection and Troubleshooting.....	50-53
	Air Conditioning System Testing.....	50-54
	Air Conditioning System Leakage Test.....	50-55
	Air Conditioning System Problem Solving.....	50-56
	Air Conditioning System Problem Solving.....	50-57

SECTION 55 - ELECTRICAL SYSTEM

Chapter 1 - Instrument Cluster, Circuits, Alternator, and Starter Book 4 - 87634741

Contents

Section	Description	Page
55 000	General Electrical Information	55- 4
	Definition of Terms	55-5
	Adapting Attachments Requiring 12V Electrical Power	55-7
	Specifications	55-8
	Wire Identification and Circuit Diagram Legend	55-12
	Electrical Diagram - Starting System	55-13
	Electrical Diagram - Power Distribution	55-14
	Electrical Diagram -Safety Interlock and Fuel Supply System	55-15
	Electrical Diagram - Instrument Cluster Monitoring System	55-16
	Electrical Diagram - Standard Lamps	55-17
	Electrical Diagram - Loader Arm Auxiliary Electrical Control Box (Optional).	55-18
	Electrical Diagram - Loader Arm Auxiliary Electric Power Controls (Optional)	55-19
	Electrical Diagram - Flasher and Turn Signals North America Electrical	55-20
	Electrical Diagram - Main Electrical European On-Road Regulations.	55-21
	Electrical Diagram - Boom/Rear Electrical European On-Road Regulations	55-22
	Electrical Diagram - Right-Hand Handle (Option) Electrical Multifunction Adaptation.	55-23
	Electrical Diagram - Left-Hand Handle (Options)	55-24
	Electrical Diagram - Right-Hand Handle (Options)	55-25
	Electrical Diagram - Glow Plugs	55-26
	Electrical Diagram - Rotating Beacon (Optional).	55-27
	Electrical Diagram - Two Speed (Optional).	55-28
	Electrical Diagram - Horn (Optional)	55-29
	Electrical Diagram - Accessory Outlet (Optional)	55-30
	Electrical Diagram - Back-up Alarm (Optional)	55-31
	Electrical Diagram - Wiper/Washer (Optional).	55-32
	Electrical Diagram - Auxiliary Hydraulics (Optional)	55-33
	Electrical Diagram - High Flow (Optional)	55-34
	Electrical Diagram - Hydraulic Coupler (Optional).	55-35
	Electrical Diagram - Heating and Air Conditioning (Optional)	55-36
	Electrical Diagram - Pilot Hydraulic Controls.	55-37
	Electrical Diagram - Ground Connections	55-38
	Electrical Diagram - Ground Connections	55-39
	Wire Identification and Circuit Diagram Legend (Cab Upgrade Machines).	55-40
	Electrical Diagram - Starting System (Cab Upgrade Machines)	55-41
	Electrical Diagram - Power Distribution (Cab Upgrade Machines)	55-42
	Electrical Diagram -Safety Interlock and Fuel Supply System (Cab Upgrade Machines)	55-43
	Electrical Diagram - Instrument Cluster Monitoring System (Cab Upgrade Machines).	55-44
	Electrical Diagram - Standard Lamps (Cab Upgrade Machines).	55-45
	Electrical Diagram - Loader Arm Auxiliary Electrical Control Box (Optional) (Cab Upgrade Machines)	55-46
	Electrical Diagram - Loader Arm Auxiliary Electric Power Controls (Optional) (Cab Upgrade Machines)	55-47

	Electrical Diagram - Flasher and Turn Signals North America Electrical (Cab Upgrade Machines)	55-48
	Electrical Diagram - Main Electrical European On-Road Regulations (Cab Upgrade Machines)	55-49
	Electrical Diagram - Boom/Rear Electrical European On-Road Regulations (Cab Upgrade Machines)	55-50
	Electrical Diagram - Work Lamps (Cab Upgrade Machines).	55-51
	Electrical Diagram - Control Lever Interface (Cab Upgrade Machines)	55-52
	Electrical Diagram - Left-Hand Handle (Options) (Cab Upgrade Machines)	55-53
	Electrical Diagram - Right-Hand Handle (Options) (Cab Upgrade Machines).	55-54
	Electrical Diagram - Grid Heater System (Cab Upgrade Machines)	55-55
	Electrical Diagram - Rotating Beacon (Optional) (Cab Upgrade Machines)	55-56
	Electrical Diagram - Two Speed (Optional) (Cab Upgrade Machines)	55-57
	Electrical Diagram - Horn (Optional) (Cab Upgrade Machines)	55-58
	Electrical Diagram - Accessory Outlet (Optional) (Cab Upgrade Machines).	55-59
	Electrical Diagram - Back-up Alarm (Optional) (Cab Upgrade Machines).	55-60
	Electrical Diagram - Wiper/Washer/Door Switch (Optional) (Cab Upgrade Machines). . .	55-61
	Electrical Diagram - Auxiliary Hydraulics (Optional) (Cab Upgrade Machines).	55-62
	Electrical Diagram - High Flow (Optional) (Cab Upgrade Machines)	55-63
	Electrical Diagram - Hydraulic Mount Plate (Optional) (Cab Upgrade Machines).	55-64
	Electrical Diagram - Heating and Air Conditioning (Optional) (Cab Upgrade Machines) .	55-65
	Electrical Diagram - Pilot Hydraulic Controls.	55-66
	Electrical Diagram - Ground Connections (Cab Upgrade Machines)	55-67
	Electronic Instrument Cluster (EIC) Panel.	55-68
	Electronic Instrument Cluster (EIC) Panel (Cab Upgrade Machines)	55-69
	Electronic Instrument Cluster Operating Instructions	55-70
	Electronic Instrument Cluster Troubleshooting	55-73
	Advanced Instrument Cluster (AIC) Panel (Optional)	55-77
	Advanced Instrument Cluster (AIC) Panel (Optional) (Cab Upgrade Machines).	55-78
	Advanced Instrument Cluster Operating Instructions	55-79
	Advanced Instrument Cluster Troubleshooting	55-86
55 100	Removal, Installation and Wiring of Electrical Components	55-90
55 301 40	Battery Removal and Installation.	55-91
	Cab Fuse Block and Panel Removal and Installation	55-92
55 201 15	Seat Switch Removal	55-93
	Seat Switch Installation	55-94
55 201 14	Seat Belt Buckle and Switch Assembly Removal and Installation	55-94
55 404 20	Road Light and Work Light Switch Removal and Installation.	55-95
	Engine Fuse and Relay Panel	55-96
55 100 34	Start Interlock Relay Removal and Installation.	55-97
	Engine Fuse Block Removal and Installation.	55-98
55 100 34	Preheat Relay Removal and Installation	55-99
55 201 76	Preheat Glow Plug Removal and Installation	55-100
	Fuel System Components	55-101
	Electric Fuel Pump	55-102
10 210 21	Electric Fuel Pump Removal	55-104

55

10 223	Fuel Shutoff Solenoid	55-104
	Fuel Shutoff Solenoid Testing	55-104
10 223 10	Replacement of Fuel Shutoff Solenoid	55-105
55 414 14	Air Filter Restriction Indicator Switch Removal and Installation	55-106
55 414 10	Engine Coolant Temperature Sender Removal and Installation	55-106
55 414 12	Engine Oil Pressure Switch Removal and Installation	55-107
55 414 28	Hydrostatic Charge Pressure Switch Removal and Installation	55-107
55 414 24	Hydraulic Oil Filter Restriction Switch Removal and Installation	55-108
55 414 20	Hydraulic Oil Temperature Sender Removal	55-108
	Hydraulic Oil Temperature Sender Installation	55-109
35 724 90	Boom/Bucket Control Valve Spool Lock Solenoid Removal and Installation	55-110
55 404	Road/Work Lights	55-111
55 301	Alternator (55 Amp Version)	55-114
	Alternator Service Specifications	55-116
	Alternator - System Testing and Troubleshooting	55-117
	Initial Tests	55-120
55 301 10	Alternator Removal	55-125
55 301 12	Alternator Disassembly	55-126
	Alternator Installation	55-132
55 201	Starter	55-133
	Starter Motor Troubleshooting	55-134
55 201 50	Starter Motor Removal	55-135
	Starter Motor Disassembly	55-140
	Starter Motor Inspection and Repair	55-144
	Starter Motor Reassembly	55-150
	Starter Motor Installation	55-153
	Miscellaneous Engine Components	55-154
	Glow Plugs and Glow Plug Troubleshooting	55-154
	Oil Pressure Switch	55-155
	Fuel Shutoff Solenoid	55-155
	Labor Guide	55-156

SECTION 82 – FRONT LOADER (BOOM AND MOUNTING PLATE)

BOOK 4 - 87634741

Chapter 1 – Buckets

CONTENTS

Section	Description	Page
82 100	General Information	82-2
	Buckets	82-2
82 100 77	Boom Lock Pins and Linkage	82-3
	Boom	82-3
82 100 70	Attachment Mounting Plate	82-4
	Boom and Cylinder Pivot Pins	82-4
	Boom and Cylinder Pivot Pin Location and Machine Usage	82-4
	Boom and Cylinder Pivot Pins Size	82-5
82 100 30	Pallet Fork	82-6
82 100 20	Utility Fork	82-7
82 100 12	Bucket Cutting Edge (Replacement)	82-8
82 100	Bucket Latch Plate Installation Procedure	82-9
82 100	Dirt Tooth Kit Installation	82-11
	Bucket Tooth Spacing	82-13
	Boom Lock Pin/Linkage	82-15
82 100 77	Boom Lock Pin/Linkage Removal	82-15
	Boom Lock Pin/Linkage Reinstallation	82-16
	Boom, Upper and Lower Link	82-18
	Boom, Upper and Lower Link Removal	82-18
82 100 70	Front Boom Mounting Plate Pivot Hub Replacement	82-24
	Boom, Upper and Lower Link Reinstallation	82-25
	Attachment Mounting Plate	82-29
82 100 70	Attachment Mounting Plate Removal	82-29
	Repair/Rebuild Mounting Plate	82-30
82 100 74	Latch Lever and Pin Removal/Repair	82-30
	Attachment Mounting Plate Parts Inspection	82-32
	Checking Procedure for Buckets and Attachments	82-36
	Checking Procedure	82-38
	Checking the Loader Faceplate	82-39
	Labor Guide	82-41



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

SECTION 88 – ACCESSORIES

BOOK 4 - 87634741

Chapter 1 – Dealer Installed Options

CONTENTS

Section	Description	Page
88 100	General Information	88-2
	Adapting Attachments Requiring 12V Electrical Power	88-2
	Hydraulic System Compatibility	88-5
90 000	Arm Pads For Cab Side Panels	88-7
90 000	Armrests for Deluxe Seat	88-7
90 000	Forearm Rests	88-8
55 000	Back-up Alarm	88-9
10 300	Block Heater (Engine)	88-10
55 000	Electric Power Supply (12 Volt, 15 Amp)	88-11
10 254	Exhaust (Engine)	88-12
10 254	Aspirator Precleaner Muffler	88-12
35 000	High Flow Hydraulics	88-14
	High Flow Hydraulics Troubleshooting	88-16
	High Flow Hydraulics Component Replacement	88-18
55 000	Horn	88-25
90 000	Shoulder Belt (Seat)	88-26
88 000	Slow-moving Vehicle (SMV) Sign Kit	88-27
55 000	Warning Light (Rotary Beacon)	88-28
55 000	Warning Lights (Four-way Flashers/Turn Signal/Horn)	88-31
	Labor Guide	88-35

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>