

SERVICE MANUAL

T4.80F
T4.90F
T4.100F
T4.110F
T4.80LP
T4.90LP
T4.100LP
T4.110LP
Tractor

PIN ZHLH00094 and above

Part number 51523358

English
August 2018





SERVICE MANUAL

**T4.100F With cab [ZHLH01567 -], T4.100F Without cab [ZHLH01600 -],
T4.100LP With cab [ZHLH04188 -], T4.100LP Without cab [ZHLH00502 -
], T4.110F With cab [ZHLH00094 -], T4.110F Without cab [ZHLH01580 -],
T4.110LP With cab [ZHLH01989 -], T4.110LP Without cab [ZHLH02201 -],
T4.80F With cab [ZHLH01907 -], T4.80F Without cab [ZHLH01219 -], T4.80LP
With cab [ZHLH04222 -], T4.80LP Without cab [ZHLH03674 -], T4.90F With
cab [ZHLH01868 -], T4.90F Without cab [ZHLH01862 -], T4.90LP With cab
[ZHLH03821 -], T4.90LP Without cab [ZHLH04739 -]**

Link Product / Engine

Product	Market Product	Engine
T4.100F With cab [ZHLH01567 -]	Europe	F5DFL413K*C001
T4.100F With cab [ZHLH01567 -]	Asia Pacific	F5DFL413K*C001
T4.100F With cab [ZHLH01567 -]	Middle East Africa	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Asia Pacific	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Europe	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Middle East Africa	F5DFL413K*C001
T4.110F With cab [ZHLH00094 -]	Middle East Africa	F5DFL413J*C002
T4.110F With cab [ZHLH00094 -]	Asia Pacific	F5DFL413J*C002
T4.110F With cab [ZHLH00094 -]	Europe	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Middle East Africa	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Asia Pacific	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Europe	F5DFL413J*C002
T4.80F With cab [ZHLH01907 -]	Asia Pacific	F5DFL413B*H001
T4.80F With cab [ZHLH01907 -]	Europe	F5DFL413B*H001
T4.80F With cab [ZHLH01907 -]	Middle East Africa	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Middle East Africa	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Europe	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Asia Pacific	F5DFL413B*H001
T4.90F With cab [ZHLH01868 -]	Asia Pacific	F5DFL413L*C001
T4.90F With cab [ZHLH01868 -]	Europe	F5DFL413L*C001
T4.90F With cab [ZHLH01868 -]	Middle East Africa	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Middle East Africa	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Europe	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Asia Pacific	F5DFL413L*C001
T4.100LP With cab [ZHLH04188 -]	Middle East Africa	F5DFL413K*C001
T4.100LP With cab [ZHLH04188 -]	Asia Pacific	F5DFL413K*C001
T4.100LP With cab [ZHLH04188 -]	Europe	F5DFL413K*C001
T4.100LP Without cab [ZHLH00502 -]	Europe	F5DFL413K*C001
T4.100LP Without cab [ZHLH00502 -]	Asia Pacific	F5DFL413K*C001
T4.100LP Without cab [ZHLH00502 -]	Middle East Africa	F5DFL413K*C001
T4.110LP With cab [ZHLH01989 -]	Europe	F5DFL413J*C002
T4.110LP With cab [ZHLH01989 -]	Asia Pacific	F5DFL413J*C002
T4.110LP With cab [ZHLH01989 -]	Middle East Africa	F5DFL413J*C002

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Product	Market Product	Engine
T4.110LP Without cab [ZHLH02201 -]	Europe	F5DFL413J*C002
T4.110LP Without cab [ZHLH02201 -]	Asia Pacific	F5DFL413J*C002
T4.110LP Without cab [ZHLH02201 -]	Middle East Africa	F5DFL413J*C002
T4.80LP With cab [ZHLH04222 -]	Asia Pacific	F5DFL413B*H001
T4.80LP With cab [ZHLH04222 -]	Europe	F5DFL413B*H001
T4.80LP With cab [ZHLH04222 -]	Middle East Africa	F5DFL413B*H001
T4.80LP Without cab [ZHLH03674 -]	Middle East Africa	F5DFL413B*H001
T4.80LP Without cab [ZHLH03674 -]	Europe	F5DFL413B*H001
T4.80LP Without cab [ZHLH03674 -]	Asia Pacific	F5DFL413B*H001
T4.90LP With cab [ZHLH03821 -]	Middle East Africa	F5DFL413L*C001
T4.90LP With cab [ZHLH03821 -]	Asia Pacific	F5DFL413L*C001
T4.90LP With cab [ZHLH03821 -]	Europe	F5DFL413L*C001
T4.90LP Without cab [ZHLH04739 -]	Middle East Africa	F5DFL413L*C001
T4.90LP Without cab [ZHLH04739 -]	Asia Pacific	F5DFL413L*C001
T4.90LP Without cab [ZHLH04739 -]	Europe	F5DFL413L*C001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8
[21.160] Creeper	21.9

[21.162] Reverser	21.10
[21.168] Hi-Lo unit.....	21.11
[21.109] Transmission cooler and lines.....	21.12
[21.118] Transmission/Rear drive	21.13
[21.182] Differential.....	21.14
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.142] Front Power Take-Off (PTO) control	31.2
[31.146] Front Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2

[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves	35.3
[35.100] Main lift system.....	35.4
[35.114] Three-point hitch control valve	35.5
[35.124] Three-point hitch hydraulic adjustment	35.6
[35.160] Front hitch controls and lines	35.7
[35.162] Front hitch cylinders and lines	35.8
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.166] Front hitch linkage.....	37.3
[37.110] Rear three-point hitch	37.4
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3

[50.300] Cab pressurizing system	50.4
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.011] Fuel tank system	55.7
[55.010] Fuel injection system.....	55.8
[55.014] Engine intake and exhaust system.....	55.9
[55.989] Exhaust Gas Recirculation (EGR) electrical system	55.10
[55.640] Electronic modules	55.11
[55.513] Cab transmission controls.....	55.12
[55.024] Transmission control system.....	55.13
[55.021] Transmission pressure sensors and switches	55.14
[55.541] Cab Front-Wheel Drive (FWD) controls.....	55.15
[55.040] Four-Wheel Drive (4WD) control system.....	55.16
[55.542] Cab axle controls.....	55.17
[55.522] Cab Power Take-Off (PTO) controls	55.18
[55.048] Rear Power Take-Off (PTO) control system	55.19
[55.049] Front Power Take-Off (PTO) control system	55.20
[55.031] Parking brake electrical system	55.21
[55.032] Trailer brake electrical system	55.22
[55.512] Cab controls.....	55.23
[55.035] Remote control valve electric control	55.24
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.25
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.26

[55.523] Cab hitch controls	55.27
[55.130] Rear three-point hitch electronic control system	55.28
[55.518] Wiper and washer system.....	55.29
[55.404] External lighting	55.30
[55.405] External lighting switches and relays	55.31
[55.514] Cab lighting	55.32
[55.408] Warning indicators, alarms, and instruments	55.33
[55.DTC] FAULT CODES.....	55.34
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches	90.4
[90.110] Operator platform less cab	90.5
[90.118] Protections and footboards.....	90.6
[90.114] Operator protections	90.7
[90.120] Mechanically-adjusted operator seat.....	90.8
[90.124] Pneumatically-adjusted operator seat.....	90.9
[90.100] Engine hood and panels	90.10



INTRODUCTION

Contents

INTRODUCTION

Foreword - Important notice regarding equipment servicing	3
Note to the Owner WARNINGS FOR AIR CONDITIONING SYSTEM REPAIR OPERATIONS (*)	4
Safety rules (*)	5
Safety rules SAFETY REGULATIONS	6
Personal safety CAB AIR CONDITIONING SYSTEM (*)	9
Safety rules - Ecology and the environment	10
Engine cooling system - Basic instructions (*)	11
Basic instructions - Shop and assembly	13
Torque - Standard torque data for hydraulic connections	15
Capacities	22
Consumables	23
Plates - Product identification (*)	24
Product identification	26

(*) See content for specific models

Foreword - Important notice regarding equipment servicing

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your NEW HOLLAND Sales and Service Networks.

Safety rules

T4.100LP With cab [ZHLH04188 -]	APAC --- MEA --- WE
T4.100LP Without cab [ZHLH00502 -]	APAC --- MEA --- WE
T4.110LP With cab [ZHLH01989 -]	APAC --- MEA --- WE
T4.110LP Without cab [ZHLH02201 -]	APAC --- MEA --- WE
T4.80LP With cab [ZHLH04222 -]	APAC --- MEA --- WE
T4.80LP Without cab [ZHLH03674 -]	APAC --- MEA --- WE
T4.90LP With cab [ZHLH03821 -]	APAC --- MEA --- WE
T4.90LP Without cab [ZHLH04739 -]	APAC --- MEA --- WE


Personal safety





This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Safety rules SAFETY REGULATIONS

TO PREVENT ACCIDENTS

Most accidents or injuries that occur in workshops are the result of non-observance of simple and fundamental safety regulations.

For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED: by foreseeing possible causes and consequently acting with the necessary caution and care.

Accidents may occur with all types of vehicle, regardless of how well it was designed and built.

A careful and judicious service technician is the best guarantee against accidents.

Precise observance of the most basic safety rule is normally sufficient to avoid many serious accidents.

DANGER: Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

GENERAL

- Carefully follow specified repair and maintenance procedures.
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts.
It is advised to wear approved safety clothing, e.g: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.
- Operate the vehicle and use the implements exclusively from the driver's seat.
- Do not carry out operations on the vehicle with the engine running, unless specifically indicated.
- Stop the engine and ensure that all pressure is relieved from hydraulic circuits before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out using extreme care and attention.
- Service steps and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- Disconnect the batteries and label all controls to indicate that the vehicle is being serviced. Block the machine and all equipment which should be raised.
- Do not check or fill fuel tanks, accumulator batteries, nor use starting liquid when smoking or near naked flames, as these fluids are inflammable.
- Brakes are inoperative if manually released for repair or maintenance purposes.
In such cases, the machine should be kept constantly under control using blocks or similar devices.
- The fuel nozzle should always be in contact with the filling aperture. Maintain this position until filling operations are completed in order to avoid possible sparks caused by the accumulation of static electricity.
- Only use specified towing points for towing the tractor, connect parts carefully. Make sure that all pins and/or locks are secured in position before applying traction.
Never remain near the towing bars, cables or chains that are operating under load
- Transport vehicles that cannot be driven using a trailer or a low-loading platform trolley, if available.
- When loading or unloading the vehicle from the trailer (or other means of transport), select a flat area capable of sustaining the trailer or truck wheels, firmly secure the tractor to the truck or trailer and lock the wheels in the position.
- Electric heaters, battery-chargers and similar equipment must only be powered by auxiliary power supplies with efficient ground insulation to avoid electrical shock hazards.
- Always use suitable hoisting or lifting devices when raising or moving heavy parts.
- Take extra care if bystanders are present.
- Never pour gasoline or diesel oil into open, wide and low containers.
- Never use gasoline, diesel oil or other inflammable liquids as cleaning agents. Use non-flammable non-toxic proprietary solvents.
- Wear safety goggles with side guards when cleaning parts with compressed air.
- Limit the air pressure to a maximum of **2.1 bar (30.5 psi)**, according to local regulations.

- Do not run the engine in confined spaces without suitable ventilation.
- Do not smoke, use naked flames, or cause sparks in the area when fuel filling or handling highly inflammable liquids.
- Never use naked flames for lighting when working on the machine or checking for leaks.
- All movements must be carried out carefully when working under, on or near the vehicle and wear protective equipment: helmets, goggles and special footwear.
- When carrying out checks with the engine running, request the assistance of an operator in the driver's seat. The operator must maintain visual contact with the service technician at all times.
- If operating outside the workshop, position the vehicle on a flat surface and lock in position. If working on a slope, lock the vehicle in position and move to a flat area as soon as is safely possible.
- Damaged or bent chains or cables are unreliable. Do not use them for lifting or towing. Always use suitable protective gloves when handling chains or cables.
- Chains should always be safely secured. Ensure that fastening device is strong enough to hold the load foreseen. No persons should stop near the fastening point, trailing chains or cables.
- Maintenance and repair operations must be carried out in a CLEAN and DRY area, eliminate any water or oil spillage immediately.
- Do not create piles of oil or grease--soaked rags as they represent a serious fire hazard; store them in a closed metal container. Before starting the vehicle or implements, make sure that the driver's seat is locked in position and always check that the area is free of persons or obstacles.
- Empty pockets of all objects that may fall unobserved into the vehicle parts when disassembled.
- In the presence of protruding metal parts, use protective goggles or goggles with side guards, helmets, special footwear and gloves.
- Handle all parts carefully, do not put your hands or fingers between moving parts, wear suitable safety clothing -- safety goggles, gloves and shoes.

WELDING OPERATIONS

- When welding, use protective safety devices: tinted safety goggles, helmets, special overalls, gloves and footwear. All persons present in the area where welding is taking place must wear tinted goggles. NEVER LOOK AT THE WELDING ARC IF YOUR EYES ARE NOT SUITABLY PROTECTED.
- Where possible, remove the part or tool that requires arc welding from the tractor.
- Disconnect both battery leads. Isolate the cable ends to avoid contact with each other and the tractor.
- Position the welder ground clamp as near as possible to the area where welding is taking place.
- Remove the electronic control units located on the tractor if welding is to be carried out near these control units.
- Never allow welding cables to lay on, near or across any electrical wiring or electronic component while welding is in progress.
- Metal cables tend to fray with repeated use. Always use suitable protective devices (gloves, goggles, etc.) when handling cables.

START UP

- Never start the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
- Never place the head, body, limbs, feet, hands or fingers near fans or rotating belts.

ENGINE

- Always loosen the radiator cap slowly before removing it to allow any remaining pressure in the system to be discharged. Coolant should be topped up only when the engine is stopped or idle if hot.
- Never fill up with fuel when the engine is running, especially if hot, in order to prevent the outbreak of fire as a result of fuel spillage
- Never check or adjust fan belt tension when the engine is running. Never adjust the fuel injection pump when the vehicle is moving.



SERVICE MANUAL

Engine

**T4.100F With cab [ZHLH01567 -], T4.100F Without cab [ZHLH01600 -],
T4.100LP With cab [ZHLH04188 -], T4.100LP Without cab [ZHLH00502 -
], T4.110F With cab [ZHLH00094 -], T4.110F Without cab [ZHLH01580 -],
T4.110LP With cab [ZHLH01989 -], T4.110LP Without cab [ZHLH02201 -],
T4.80F With cab [ZHLH01907 -], T4.80F Without cab [ZHLH01219 -], T4.80LP
With cab [ZHLH04222 -], T4.80LP Without cab [ZHLH03674 -], T4.90F With
cab [ZHLH01868 -], T4.90F Without cab [ZHLH01862 -], T4.90LP With cab
[ZHLH03821 -], T4.90LP Without cab [ZHLH04739 -]**



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

Contents

Engine - 10

[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>