

---

# SECTION 00 - GENERAL INFORMATION

## BOOK 1

### Chapter 1 - General Information

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
00 000	Introduction .....	00-2
	Safety .....	00-3
	Technical Information .....	00-4
	Safety Precautions .....	00-5
	Safety Decals - TC35, 40, 45 .....	00-8
	Instruction Decals - TC35, 40, 45 .....	00-9
	Safety Decals - TC35D, 40D, 45D .....	00-12
	Instruction Decals - TC35D, 40D, 45D .....	00-13
	International Symbols .....	00-17
	Specifications - TC35, 40, 45 .....	00-18
	General Dimensions - TC35, 40, 45 .....	00-25
	Specifications - TC35D, 40D, 45D .....	00-31
	General Dimensions - TC35D, 40D, 45D .....	00-37
	Minimum Hardware Tightening Torques .....	00-41
	Special Tools .....	00-43
	Lubricants .....	00-44
00 400	Recommended Lubricants .....	00-44
	Adjustments .....	00-45
	Tire Inflation Pressure - Adjustments .....	00-45
00 100	Pre-Season and Pre-Delivery Checklist .....	00-46

---

# SECTION 10 - ENGINE

## BOOK 1

### Chapter 1 - Engine

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	10-3
	Metric Bolt Torque Specifications .....	10-12
	Special Tools .....	10-13
	General Information .....	10-15
	Description of Operation .....	10-15
	Troubleshooting .....	10-16
10 101	Cylinder Head Removal .....	10-53
10 106	Timing Gears and Camshaft Removal .....	10-57
10 102	Oil Sump Removal .....	10-58
10 110	Balancer Assembly-Removal .....	10-59
10 105	Connecting Rods, Bearings, and Pistons, Rings Removal .....	10-59
10 103	Flywheel .....	10-60
	Disassembly, Inspection, Fits, Clearances, and Assembly of Component Assemblies .....	10-61
10 101	Cylinder Head Disassembly .....	10-61
10 105	Pistons, Piston Rings, and Connecting Rods Disassembly and Inspection .....	10-67
10 103	Crankshaft .....	10-72
10 106	Timing Gear .....	10-76
10 103	Flywheel .....	10-77
10 102	Timing Gear Housing .....	10-78
	Engine Reassembly .....	10-79
10 103	Crankshaft and Bearing Holder Reassembly .....	10-79
10 105	Pistons and Connecting Rods .....	10-80
10 110	Balancer Assembly-Installation .....	10-81
10 106	Timing Gear Cover, Timing Gears, and Camshaft Assembly .....	10-82
10 106	Idle Gear, Oil Pump, and Injection Timing .....	10-83
10 101	Head Gasket Selection .....	10-86
10 106	Valve Clearance Adjustment .....	10-87
10 218	Fuel Piping .....	10-89
	Engine Lubrication System .....	10-91
10 304	Engine Lubrication System - Description of Operation .....	10-91
10 218	Fuel Piping .....	10-91
10 206	Oil Filter .....	10-95

---

10 304	Oil Pump .....	10-95
	Cooling System .....	10-99
10 400	Cooling System - Description of Operation .....	10-99
10 402	Thermostat .....	10-102
10 402	Water Pump .....	10-102
10 414	Cooling Fan .....	10-102
	Cooling System Overhaul .....	10-103
10 406	Radiator .....	10-103
10 402	Water Pump Removal .....	10-105
10 402	Thermostat Removal .....	10-108

## SECTION 10 - ENGINE

### BOOK 1

## Chapter 2 - Fuel Systems

### CONTENT

Section	Description	Page
	Specifications .....	10-112
	Torque Specifications .....	10-113
	Special Tools .....	10-113
10 242	Description of Operation .....	10-114
	Troubleshooting .....	10-116
10 244	Fuel Variation Mechanism .....	10-121
10 244	CTD (Compact Timing Device) .....	10-122
10 236	Pumping Elements .....	10-124
10 214	Delivery Valves .....	10-126
10 242	Injection Pump Removal .....	10-128
10 230	Timing and Governor Adjustments .....	10-131
	Spill-Timing Procedure .....	10-132
	Auto Bleed .....	10-137
	Bleeding to Fuel System .....	10-138
	Fuel Scre/High Idle Adjustment .....	10-138
10 230	Governor Operation .....	10-139
10 218	Injectors .....	10-145

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

---

# SECTION 18 - CLUTCH

## BOOK 1

### Chapter 1 - Clutch

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
18 000	Specifications .....	18-2
	Bolt Torque Specifications .....	18-3
	Special Tools .....	18-3
	Description of Operation .....	18-4
	Troubleshooting .....	18-6
	Overhaul .....	18-7
18 110	Clutch Removal .....	18-13
18 110	Clutch Installation .....	18-14
18 110	Clutch Related Components .....	18-21
	Clutch Linkage Components .....	18-24
18 100	Clutch Cross Shaft Bushings .....	18-24
	Clutch Pedal Adjustments .....	18-27
	Clutch Pedal Maximum Travel Adjustment .....	18-27

---

# SECTION 21 - TRANSMISSION

## BOOK 1

### Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

#### CONTENT

Section	Description	Page
	Specifications .....	21-2
	Metric Bolt Torque Specifications .....	21-3
	Special Tools .....	21-4
21 000	Description of Operation .....	21-5
	Powerflow .....	21-8
	Troubleshooting .....	21-12
	Overhaul .....	21-13
21 110 10	Overhaul - Removal .....	21-13
21 114	Separating at the Clutch Housing/Engine .....	21-13
	Clutch Housing Disassembly .....	21-19
21 148 63	Retainer Cover .....	21-23
21 148 63	Main Shift Rails and Shift Forks .....	21-24
21 148 63	Main Shaft .....	21-27
21 148 63	Range Shift Rail and Shift Fork .....	21-30
21 148 63	Range Gear Countershaft .....	21-31
21 148 63	Input Shaft .....	21-32
21 148 63	Reverse Idler Shaft .....	21-33
21 148 63	Shuttle Shift Rail and Fork .....	21-35
21 148 63	Main Countershaft .....	21-36
21 148 63	Synchronizers .....	21-38
21 148 63	Input Shaft .....	21-45
21 148 63	Main Countershaft End Float .....	21-46
21 148 63	Range Gear Countershaft .....	21-46
21 148 63	Range Shift Rail and Fork .....	21-47
21 148 63	Main Shaft .....	21-48
21 148 63	Main Shaft End Float .....	21-51
21 110 10	Clutch Housing .....	21-56
21 130	Transmission Shift Levers .....	21-67

---

# SECTION 23 - DRIVELINE

## BOOK 1

### Chapter 1 - Driveline

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
23 000	Bolt Torque Specifications .....	23-2
	Special Tools .....	23-3
	Description of Operation .....	23-4
	Front Wheel Drive Take Off Gearbox .....	23-4
	Sensitrack .....	23-5
	Troubleshooting .....	23-9
	Lubrication .....	23-9
	Overhaul .....	23-10
	Front Wheel Drive Take Off Gearbox .....	23-10
23 260	Sensitrack Removal .....	23-14
23 260	Sensitrack Installation .....	23-31

---

# SECTION 25 - 4WD FRONT AXLE, SUPERSTEER™ AND SENSITRACK™

## BOOK 2

### Chapter 1 - 4WD Front Axle, Supersteer™ and Sensitrack™

#### CONTENTS

Section	Description	Page
	Specifications .....	25-3
	Bolt Torque Specifications .....	25-6
	Special Tools .....	25-6
25 000	Description of Operation .....	25-7
	4WD Front Axle .....	25-7
	Troubleshooting .....	25-8
	Lubrication .....	25-10
	Overhaul .....	25-11
25 108	Disassembly .....	25-12
25 102	Front Axle and Differential .....	25-15
	Drive Pinion Disassembly .....	25-16
	Drive Pinion Inspection .....	25-17
	Drive Pinion Assembly .....	25-18
	Differential Gear Assembly .....	25-18
	Axle and Differential Assembly .....	25-19
	Differential Case Bearing Preload Check and Adjustment .....	25-20
	Ring Gear-to-Pinion Backlash Check and Adjustment .....	25-20
25 108	Gear Reduction Box Assembly .....	25-23
	Ring Gear-to-Pinion Backlash Check and Adjustment .....	25-25
	Bevel Gear-to-Pinion Backlash Check .....	25-26
25 100	Supersteer™ .....	25-27
	Supersteer™ Front Axle .....	25-30
	Overhaul .....	25-33
25 100	Supersteer™ Axle Removal .....	25-35
	Gear Reduction-Drop Box Disassembly .....	25-40
25 102	Front Axle and Differential Disassembly .....	25-42
	Drive Pinion Disassembly .....	25-43
	Inspection .....	25-44
	Drive Pinion Assembly .....	25-45
	Differential Gear Assembly .....	25-45
25 102	Axle and Differential Assembly .....	25-46

---

	Differential Case Bearing Preload Check and Adjustment .....	25-47
	Ring Gear-to-Pinion Backlash Check and Adjustment .....	25-47
25 108	Gear Reduction Box Assembly .....	25-50
	Bevel Gear-to-Pinion Backlash Check .....	25-52
	Supersteer™ Axle Installation .....	25-53

## SECTION 27 - DIFFERENTIAL, REAR AXLE

### BOOK 2

### Chapter 1 - Differential, Rear Axle

#### CONTENTS

Section	Description	Page
27 000	Specifications .....	27-2
	Bolt Torque Specifications .....	27-3
	Special Tools .....	27-3
	Description of Operation .....	27-4
27 110	Differential .....	27-5
27 110	Differential Lock .....	27-5
27 126	Rear Axle .....	27-6
27 106	Differential Overhaul .....	27-7
27 126	Rear Axle Overhaul .....	27-16
27 126	Final Pinion Overhaul .....	27-25

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

## BOOK 2

### Chapter 1 - Hydrostatic Transmission

#### CONTENT

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	29-2
	Metric Bolt Torque Specifications .....	29-4
	Special Tools .....	29-4
29 202	Description of Operation .....	29-5
29 212	Variable Displacement Pump Operation .....	29-11
29 212	Two Position Displacement Motor Operation .....	29-12
29 134	Hi/Lo Speed Control/Control Pod .....	29-13
29 200	Foot Control Pedals .....	29-13
	Troubleshooting .....	29-16
	Pressure Testing and Adjustments .....	29-19
	Separating the Tractor .....	29-23
	TC35D, TC40D, and TC45D w/HST Transmission .....	29-23
29 202	Hydrostatic Transmission Disassembly .....	29-44
29 130	Port Block Removal .....	29-47
29 218	Cylinder Block Assembly for Pump .....	29-50
29 218	Cylinder Block Assembly for Motor .....	29-51
29 130	Port Block Assembly .....	29-52
29 204	Check Valve .....	29-54
29 300	Hydrostatic Transmission Gearbox .....	29-55
	Gearbox Identification .....	29-56
29 214	Hi/Lo Solenoid Valve Assembly .....	29-68
	Cruise Control .....	29-76
	Electromagnet Air Gap Adjustment .....	29-77
29 200	HST Foot Control Pedals Neutral Adjustment .....	29-78

---

# SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

## BOOK 2

### Chapter 1 - Power Take-Off (PTO) Systems

#### CONTENT

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	31-2
	Metric Bolt Torque Specifications .....	31-3
	Special Tools .....	31-4
31 000	Description of Operation .....	31-5
31 110	Rear PTO-Power Flow Diagram - 12x12 Synchronized Shuttle Shift Transmission ...	31-6
31 110	Rear PTO-Power Flow Diagram - Hydrostatic Transmission (HST) .....	31-7
31 120	Mid PTO-Power Flow Diagram - Tractors Equipped with a Mid PTO Kit .....	31-8
31 104	Hydraulic Fluid Flow to the PTO Clutch Assembly .....	31-9
	Troubleshooting .....	31-12
	Pressure Testing .....	31-13
31 104 82	Overhaul .....	31-15
31 104 82	PTO Clutch Control Valve .....	31-18
31 114 62	PTO Clutch Assembly .....	31-23
31 114 68	PTO Clutch Disassembly .....	31-26
31 114 62	PTO Clutch Installation .....	31-34
31 114 42	PTO System Overhaul - 12x12 Synchronized Shuttle Shift Transmission .....	31-38
31 114 46	PTO Countershaft and Rear PTO Shaft .....	31-40
31 114 46	Countershaft Disassembly .....	31-42
31 114 00	PTO System Overhaul - Hydrostatic Transmission (HST) - Removal .....	31-47
31 114 42	PTO Input Shaft .....	31-47
31 114 46	PTO Countershaft and Rear PTO Shaft .....	31-49
31 114 42	PTO Countershaft and Rear PTO Shaft - Disassembly .....	31-53
31 114 19	PTO Countershaft and Rear PTO Shaft - Installation .....	31-57
31 120 00	Mid PTO Countershaft and Drop Box Overhaul .....	31-60

---

# SECTION 33 - BRAKES

## BOOK 2

### Chapter 1 - Brakes

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
33 000	Specifications .....	33-2
	Bolt Torque Specifications .....	33-3
	Description of Operation .....	33-4
33 120	Brakes .....	33-4
31 120	Brake Operation .....	33-5
33 110	Parking Brake .....	33-6
33 120	Overhaul .....	33-7
	Brake Adjustment .....	33-12

---

# SECTION 35 - HYDRAULIC SYSTEM

## BOOK 2

### Chapter 1 - Hydraulic System

#### CONTENT

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	35-2
	Metric Bolt Torque Specifications .....	35-3
	Special Tools .....	35-4
35 100	Description of Operation .....	35-5
35 180	Combination System Relief - Diverter Valve Manifold Assembly .....	35-8
35 200	Control Valve Assembly (HPL) .....	35-9
35 210	Neutral Position - Fluid Flow .....	35-10
35 210	Raising Position - Fluid Flow .....	35-11
35 210	Lowering Position - Fluid Flow .....	35-12
35 200	Bypass Spool - Fluid Flow - Closed Position .....	35-13
35 200	Bypass Spool - Fluid Flow - Open Position .....	35-13
35 183	Flow Control Valve .....	35-14
35 108	Linkage Operation - Single Lever - Position Control .....	35-14
35 108	Position Control Operation - Neutral Position to Raise .....	35-15
35 112	Linkage Operation - Dual Lever Position Control (Draft Control) .....	35-16
35 124	Linkage Operation - Combining Position and Draft Control Settings .....	35-18
	Troubleshooting .....	35-19
	Pressure Testing .....	35-21
35 110	Hydraulic System Overhaul .....	35-23
35 200	Hydraulic Control Valve .....	35-34
35 180	Combination System Relief and Diverter Valve Assembly .....	35-38
35 182	PTO System Diverter Valve .....	35-41
35 124	Adjustments .....	35-44
35 304	Hydraulic Pump and Filter .....	35-45
35 304	Hydraulic Pump .....	35-46
35 300	Sump Tube and Screen Filter .....	35-52
35 204	Remote Valves .....	35-55
35 184	Front (Double-Spool) Remote Control System .....	35-61
35 184	Fluid Flow - Bucket Control - Dumping and Lift Control - Neutral .....	35-62
35 184	Fluid Flow - Bucket Control - Dumping Regen and Lift Control - Neutral .....	35-63
35 184	Fluid Flow - Bucket Control - Roll Back and Lift Control - Neutral .....	35-64
35 184	Fluid Flow - Bucket Control - Neutral and Lift Control - Raising .....	35-65
35 184	Fluid Flow - Bucket Control - Neutral and Lift Control - Lowering .....	35-66
35 184	Fluid Flow - Bucket Control - Neutral and Lift Control - Float .....	35-67
35 204	Overhaul .....	35-68
35 184	Front (Double Spool) Remote Control Valve .....	35-70

---

# SECTION 41 - STEERING

## BOOK 3

### Chapter 1 - Steering

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
41 000	Specifications .....	41-2
	Bolt Torque Specifications .....	41-3
	Special Tools .....	41-4
	Description of Operation - Supersteer .....	41-5
	Description of Operation - Power Steering .....	41-7
41 204	Power Steering Control Motor .....	41-9
41 206	Power Steering Pump .....	41-10
41 216	Steering Cylinders .....	41-10
41 216	Power Steering Cylinders - 2WD and Standard 4WD .....	41-11
41 206	Power Steering Operation - Supersteer .....	41-12
41 200	Fluid Flow - Left Turn .....	41-13
41 200	Fluid Flow - Right Turn .....	41-14
41 200	Manual Operation .....	41-15
41 200	Power Steering Operation - 2WD and Standard 4WD .....	41-16
41 200	Fluid Flow - Left Turn .....	41-17
41 200	Fluid Flow - Right Turn .....	41-18
41 200	Manual Operation .....	41-19
	Troubleshooting .....	41-20
	Pressure Testing .....	41-22
	Lubrication .....	41-24
	Overhaul .....	41-25
41 204	Steering Control Motor Removal .....	41-25
41 204	Steering Control Motor .....	41-41
41 216	Steering Cylinder Removal - 4WD and Supersteer .....	41-42
41 216	Steering Cylinder Removal - 2WD .....	41-43
41 216	Steering Cylinder Installation - 4WD and Supersteer .....	41-52
41 216	Steering Cylinder Installation - 2WD .....	41-54
41 206	Power Steering Pump and Reservoir Tank .....	41-56
41 206	Pump Installation .....	41-58
	Steering Tubes .....	41-59

---

# SECTION 44 - 2WD FRONT AXLE

BOOK 3

## Chapter 1 - 2WD Front Axle

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
44 000	Specifications .....	44-2
	Bolt Torque Specifications .....	44-2
44 101	Description of Operation .....	44-3
	Troubleshooting .....	44-4
	Overhaul .....	44-5
44 103	Installation .....	44-12

# SECTION 55 - ELECTRICAL

BOOK 3

## Chapter 1 - Electrical

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Bolt Torque Specifications .....	55-3
	Introduction .....	55-4
55 100	Description .....	55-4
	Component Location and Function .....	55-4
55 100	Wire Harnesses .....	55-6
	Electrical System Components - Description and Testing .....	55-7
	Battery .....	55-7
	Main Fuse .....	55-9
	Fuse Block .....	55-10
	Key Switch .....	55-11
	Light Switch .....	55-13
55 404	Headlight .....	55-18

---

55 404	Taillight .....	55-19
	Rear Work Light (optional) .....	55-19
	Hazard Light Switch .....	55-20
	Hazard Light Switch Testing .....	55-21
55 408	Transmission Range Safety Switch .....	55-23
	Transmission Range Safety Switch Testing .....	55-24
55 408	Rear (Main) PTO Safety Switch .....	55-25
	Rear (Main) PTO Safety Switch Testing .....	55-25
55 408	Mid PTO Safety Switch .....	55-26
55 408	Seat Safety Switch .....	55-27
55 408	Parking Brake Safety Switch .....	55-29
	Relays .....	55-30
	Headlight and Neutral Start Relays .....	55-33
	Diodes .....	55-36
	Operator Safety Module .....	55-38
	Glow Plug Timer .....	55-40
55 201	Engine Glow Plugs .....	55-41
	NASO Hazard/Directional Signal Converter and Flasher Relay .....	55-44
55 410	Fuel Level Sending Unit .....	55-47
	Fuel Shutoff Solenoid .....	55-50
55 414	Engine Oil Pressure Switch .....	55-52
	Engine Coolant Temperature Switch (Economy) .....	55-53
	Engine Coolant Temperature Sending Unit (Deluxe) .....	55-53
	Hi/Low Transmission Range Switch .....	55-55
	Hi/Low Transmission Range Solenoid .....	55-58
	Electric Cruise Control Switch (Deluxe) .....	55-61
	Cruise Control Magnet (Deluxe) .....	55-63
	Cruise Control Brake Release Switch .....	55-65
	Instrument Panel - Component Operation and Servicing .....	55-67
	Instrument Panel (Economy) .....	55-68
	Instrument Panel (Deluxe) .....	55-69
	Instrument Panel Removal .....	55-70
	Instrument Panel Disassembly .....	55-70
	Fuel Gauge Removal .....	55-70
	Fuel Gauge Testing .....	55-70
	Temperature Gauge Removal (Deluxe) .....	55-72
	Temperature Gauge Testing .....	55-72
	Tachometer Removal .....	55-73
	Tachometer Testing .....	55-74

---

	PTO Speed Indicator Adjustment (Deluxe) .....	55-74
	Instrument Lights .....	55-75
	Circuit Diagrams and Troubleshooting .....	55-77
	Alternator Specifications .....	55-170
	Alternator Troubleshooting .....	55-171
	Charging System .....	55-173
55 301	Description of Operation .....	55-173
	Preliminary Alternator Tests .....	55-176
	Alternator Component Testing and Inspection .....	55-182
	Starter Motor Specifications .....	55-192
	Starter Motor Troubleshooting .....	55-193
55 201	Starting System .....	55-195
	Description of Operation .....	55-195
	Components .....	55-195
	Electrical Testing .....	55-205

## SECTION 90 - PLATFORM

### BOOK 3

## Chapter 1 - Platform

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
90 105	Hood .....	90-2
90 100	Rear Hood Side Panels .....	90-4
90 110	Dash Console .....	90-6
90 120	Seat .....	90-11
90 114	ROPS .....	90-30
	Fuel Tank .....	90-34
90 116	Fenders .....	90-36
90 115	Deck .....	90-40



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

---

# SECTION 00 - GENERAL INFORMATION

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
00 000	Introduction .....	00-2
	Safety .....	00-3
	Technical Information .....	00-4
	Safety Precautions .....	00-5
	Safety Decals - TC35, 40, 45 .....	00-8
	Instruction Decals - TC35, 40, 45 .....	00-9
	Safety Decals - TC35D, 40D, 45D .....	00-12
	Instruction Decals - TC35D, 40D, 45D .....	00-13
	International Symbols .....	00-17
	Specifications - TC35, 40, 45 .....	00-18
	General Dimensions - TC35, 40, 45 .....	00-25
	Specifications - TC35D, 40D, 45D .....	00-31
	General Dimensions - TC35D, 40D, 45D .....	00-37
	Minimum Hardware Tightening Torques .....	00-41
	Special Tools .....	00-43
	Lubricants .....	00-44
00 400	Recommended Lubricants .....	00-44
	Adjustments .....	00-45
	Tire Inflation Pressure - Adjustments .....	00-45
00 100	Pre-Season and Pre-Delivery Checklist .....	00-46

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**