

SERVICE MANUAL

TD95D HC Tractor

Part number 48013264
English
August 2016



Link Product / Engine

Product	Market Product	Engine
TD95D HC	Latin America	8045.45.747
TD95D HC	Australia New Zealand	8045.45.747
TD95D HC	Asia Pacific	8045.45.747
TD95D HC	Middle East Africa	8045.45.747
TD95D HC	Europe	8045.45.747

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.120] Gearbox.....	21.3
[21.160] Creeper	21.4
[21.162] Reverser	21.5
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.124] Final drive hub, steering knuckles, and shafts	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
Brakes and controls	33
[33.AAA] Brakes and controls generic sub-group	33.1
[33.202] Hydraulic service brakes	33.2

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

[33.110] Parking brake or parking lock	33.3
[33.220] Trailer brake hydraulic control.....	33.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.350] Safety and main relief valves	35.2
[35.525] Auxiliary hydraulic valves and lines	35.3
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning	50.2
Electrical systems.....	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.302] Battery.....	55.5
[55.512] Cab controls.....	55.6
[55.518] Wiper and washer system.....	55.7
[55.408] Warning indicators, alarms, and instruments	55.8
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.154] Cab doors and hatches	90.2



INTRODUCTION

Contents

INTRODUCTION

Note to the Owner	3
Safety rules	5
Safety rules	8
Consumables	9

Note to the Owner

General instructions

Important notice

All maintenance and repair operations described in this manual should be carried out exclusively by the NEW HOLLAND authorised workshops. All instructions detailed should be carefully observed and special equipment indicated should be used if necessary.

Everyone who carries out service operations described without carefully observing these prescriptions will be directly responsible of deriving damages.

Shimming

At each adjustment, select adjusting shims, measure them individually using a micrometer and then sum up recorded values. Do not rely on measuring the whole shimming set, which may be incorrect, or on rated value indicated for each shim.

Rotating shaft seals

To correctly install rotating shaft seals, observe the following instructions:

- Let the seal soak into the same oil as it will seal for at least half an hour before mounting.
- Thoroughly clean the shaft and ensure that the shaft working surface is not damaged.
- Place the sealing lip towards the fluid. In case of a hydrodynamic lip, consider the shaft rotation direction and orient grooves in order that they deviate the fluid towards the inner side of the seal.
- Coat the sealing lip with a thin layer of lubricant (oil rather than grease) and fill with grease the gap between the sealing lip and the dust lip of double lip seals.
- Insert the seal into its seat and press it down using a flat punch. Do not tap the seal with a hammer or a drift.
- Take care to insert the seal perpendicularly to its seat while you are pressing it. Once the seal is settled, ensure that it contacts the thrust element if required.
- To prevent damaging the sealing lip against the shaft, place a suitable protection during installation.

O-rings

Lubricate the O-rings before inserting them into their seats. This will prevent the O-rings from rolling over and twine during mounting which will jeopardise sealing.

Sealers

Apply one of the following sealers: RTV SILMATE, RHODORSIL CAF 1, or **LOCTITE® PIASTIC GASKET** over the mating surfaces marked with an X.

Before applying the sealer, prepare the surface as follows:

- Remove possible scales using a metal brush.
- Thoroughly degrease the surfaces using one of the following cleaning agent: trichlorethylene, petrol or a water and soda solution.

Bearings

It is advisable to heat the bearings to **80 - 90 °C (176 - 194 °F)** before mounting them on their shafts and cool them down before inserting them into their seats with external tapping.

Roll pins

When fitting straight roll pins, ensure that the pin notch is oriented in the direction of the effort to stress the pin. Coil roll pins can be installed in any position.

Notes for spare parts

Use exclusively genuine NEW HOLLAND spare parts.

Only genuine parts guarantee same quality, life, safety as original components as they are the same as mounted in production.

Only the NEW HOLLAND genuine spare parts can offer this guarantee.

All spare parts orders should be complete with the following data:

- Tractor model (commercial name) and frame number.
- Engine type and number.
- Part number of the ordered part, which can be found on the “Microfiches” or the “Spare parts catalogue”, which is the base for order processing.

Notes for equipment

Equipment which NEW HOLLAND proposes and shows in this manual are as follows:

- Studied and designed expressly for use on NEW HOLLAND tractors.
- Necessary to make a reliable repair.
- Accurately built and strictly tested to offer efficient and long-lasting working means.

We also remind the repair personnel that having these equipment means:

- Work in optimal technical conditions.
- Obtain best results.
- Save time and effort.
- Work more safely.

Notices

Wear limits indicated for some details should be intended as advised, but not binding values. The words “front”, “rear”, “right hand”, and “left hand” referred to the different parts should be intended as seen from the operator’s seat oriented to the normal sense of movement of the tractor.

How to move the tractor with the battery removed

Cables from the external power supply should be connected exclusively to the respective terminals of the tractor positive and negative cables using pliers in good condition which allow proper and steady contact.

Disconnect all services (lights, wind-shield wipers, etc.) before starting the tractor

If it is necessary to check the tractor electrical system, check it only with the power supply connected. At check end, disconnect all services and switch the power supply Off before disconnecting the cables.

Safety rules

Pay attention to this symbol



This warning symbol points out important messages involving personal safety. Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and safeguard your safety and personal integrity. In this manual you will find this symbol together with the following key-words:

WARNING – It gives warning about improper repair operations and deriving potential consequences affecting the service technician's personal safety.

DANGER – It gives specific warning about potential dangers for personal safety of the operator or other persons directly or indirectly involved.

To prevent accidents

Most accidents and personal injuries taking place in workshops are due from non-observance of some simple and essential prudential rule and safety precautions. For this reason, **IN MOST CASES THEY CAN BE AVOIDED**. It suffices to foresee possible causes and act consequently with necessary caution and care.

The possibility that an accident might occur with any type of machines should not be disregarded, no matter how well the machine in question was designed and built.

A wise and careful service technician is the best precautions against accidents.

Careful observance of this only basic precaution would be enough to avoid many severe accidents.

DANGER: Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

Safety rules

Generalities

- Carefully follow specified repair and maintenance procedures.
- Do not wear rings, wristwatches, jewels, unbuttoned or flapping clothing such as ties, torn clothes, scarves, open jackets or shirts with open zips which could get hold into moving parts. We advise to use approved safety clothing such as anti-slipping footwear, gloves, safety goggles, helmets, etc.
- Never carry out any repair on the machine if someone is sitting on the operator's seat, except if they are certified operators to assist in the operation to be carried out.
- Never operate the machine or use attachments from a place other than sitting at the operator's seat.
- Never carry out any operation on the machine when the engine is running, except when specifically indicated.
- Stop the engine and ensure that all pressure is relieved from hydraulic circuits before removing caps, covers, valves, etc.
- All repair and maintenance operations should be carried out with the greatest care and attention.
- Service stairs and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- Disconnect the batteries and label all controls to warn that the tractor is being serviced. Block the machine and all equipment which should be raised.
- Never check or fill fuel tanks and accumulator batteries, nor use starting liquid if you are smoking or near open flames as such fluids are flammable.
- Brakes are inoperative when they are manually released for maintenance purposes. In such cases, the machine should be kept constantly under control using blocks or similar devices.
- The fuel filling gun should remain always in contact with the filler neck. Maintain this contact until the fuel stops flowing into the tank to avoid possible sparks due to static electricity buildup.
- Use exclusively specified towing points for towing the tractor. Connect parts carefully. Ensure that foreseen pins and/or locks are steadily fixed before applying traction. Do not stop near towing bars, cables or chains working under load.



SERVICE MANUAL

Engine

TD95D HC



Engine - 10

Engine and crankcase - 001

TD95D HC

Contents

Engine - 10

Engine and crankcase - 001

SERVICE

Engine and crankcase

Remove	4
Install	11

 
Engine and crankcase - Remove

To access the clutch it is necessary to separate the engine complete with the front axle from the transmission.

ATTENTION: Lift and handle all heavy parts using suitable lifting equipment. Make sure that assemblies or parts are supported by means of suitable slings and hooks. Check that no one is in the vicinity of the load to be lifted.


ATTENTION: Always use suitable tools to align holes in parts. NEVER USE FINGERS OR HANDS.

1. Disconnect the negative battery lead.

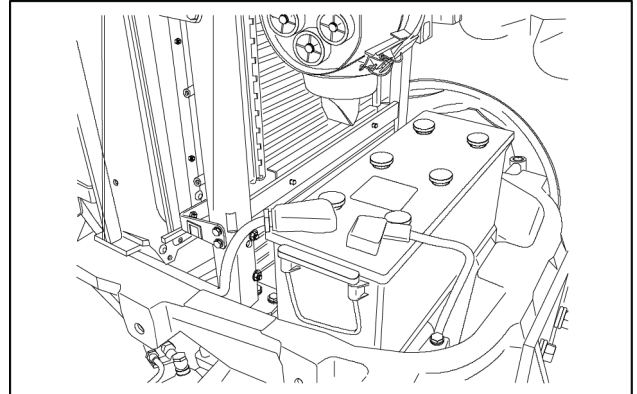


ANIL12TR00106AA 1

 2. Attach lifting chains to the bonnet (1) and attach the chain to the hoist.

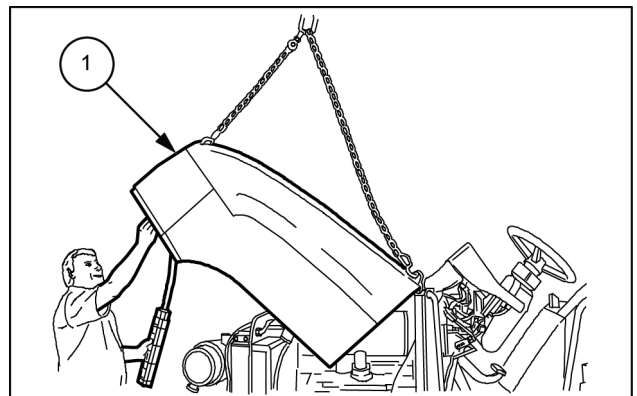


ANIL12TR00107AB 2

 3. Disconnect the electrical connection (1) of bonnet.

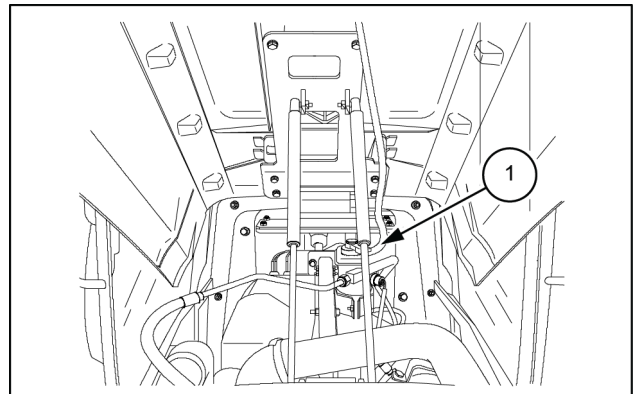


ANIL12TR00108AB 3

 4. Detach the gas struts (1) from the bonnet.

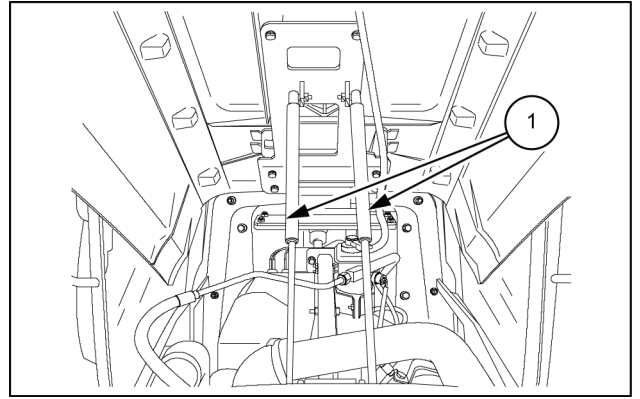


ANIL12TR00109AB 4

 5. Remove the four bonnet hinge bolts (1) and lift the bonnet clear.

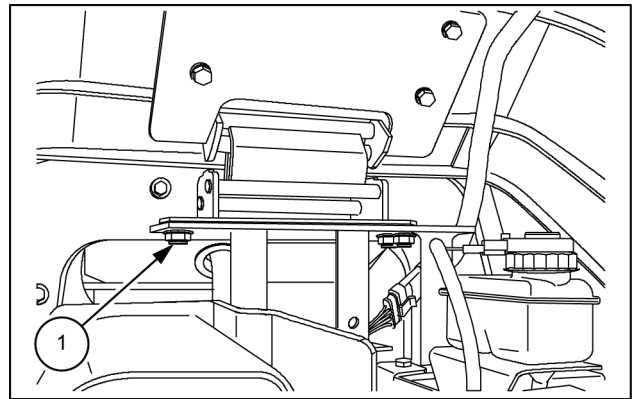


ANIL12TR00110AB 5

 6. Disconnect the power steering hoses (1).

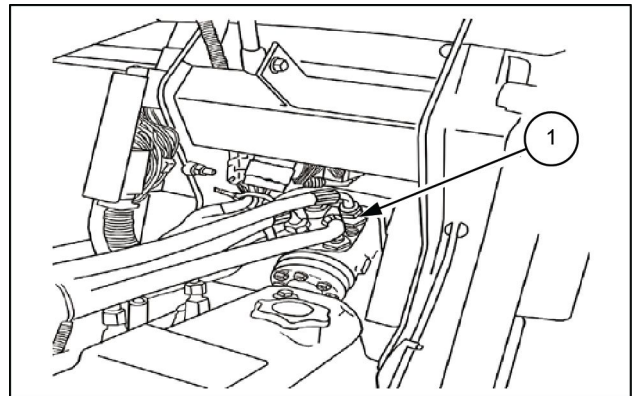


ANIL12TR00112AB 6

 7. Disconnect the electrical connectors (1).

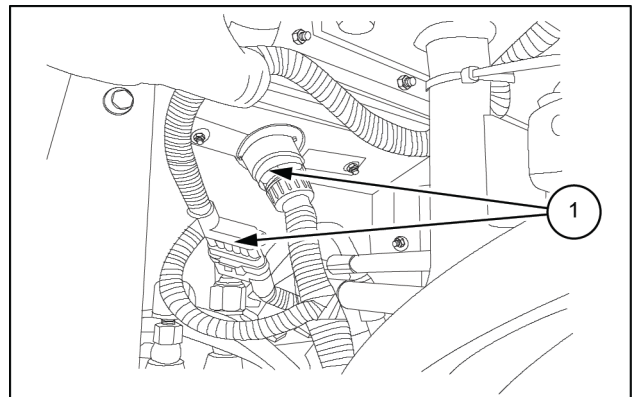


ANIL12TR00113AB 7

 8. Disconnect the delivery and return lines (1) to the power steering cylinders.

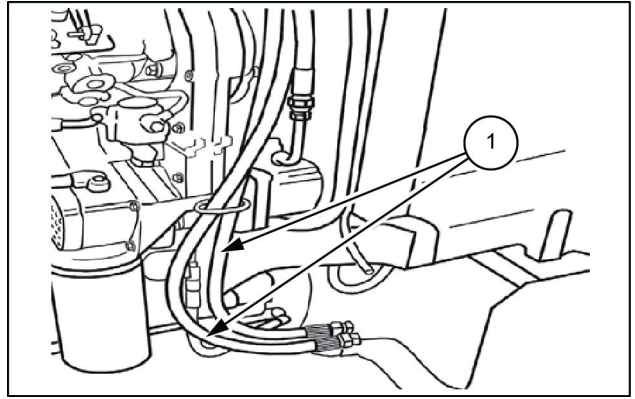


ANIL12TR00114AB 8

 9. Remove the hose (1) from the lift pump suction pipe.

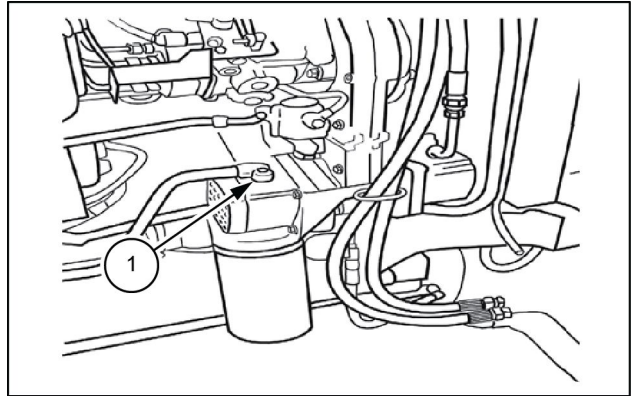


ANIL12TR00115AB 9

 10. Remove the hose (1) from the Power-Shuttle oil cooler pipe.

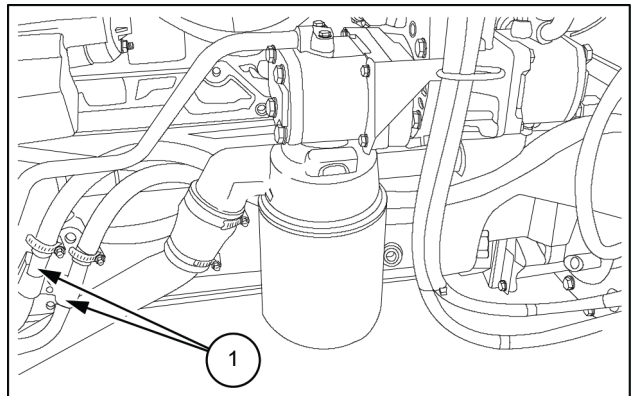


ANIL12TR00116AB 10

 11. Detach the lift pump delivery pipe (1).

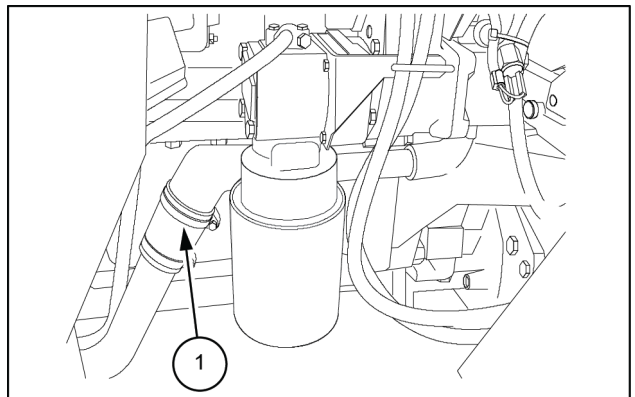


ANIL12TR00117AB 11

 12. After draining Off the coolant into suitable containers, unscrew the clamp **(1)** and remove the cab heating system intake pipe.

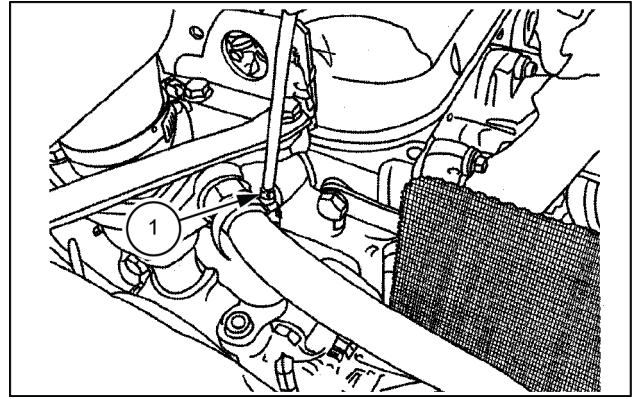


ANIL12TR00118AB 12

 13. Loosen the clamps **(1)** and remove the cab heater outlet pipes **(2)**. (Mark the hoses, before removal, to facilitate refitting in the correct position).

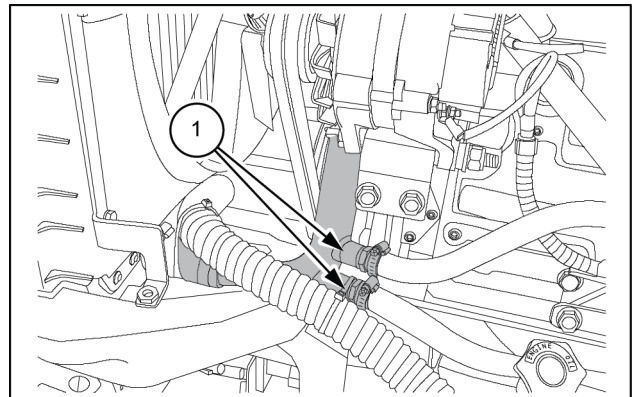


ANIL12TR00119AB 13

 14. Remove the bolts **(1)** and remove the footstep.
15. Remove the bolt **(2)** which secure the fuel tank and lower the tank.

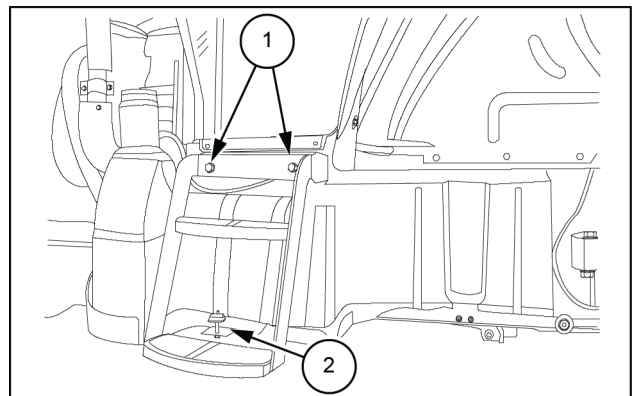

ANIL12TR00120AB 14

 16. Loosen the clamps and remove the inlet and return pipes **(1)** from the fuel tank. Remove the sender line **(2)**. (if necessary)

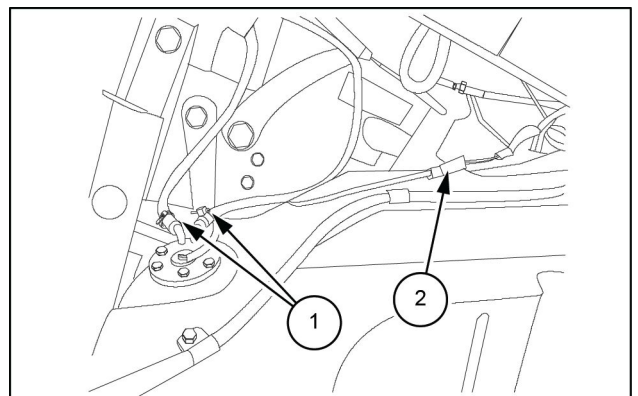

ANIL12TR00121AB 15



Suggest:

If the above button click is invalid.

 
Please download this document

first, and then click the above link

to download the complete manual.


Thank you so much for reading

17. Remove the front, centre and rear retaining bolts from the front axle drive shaft guard and remove the guard.

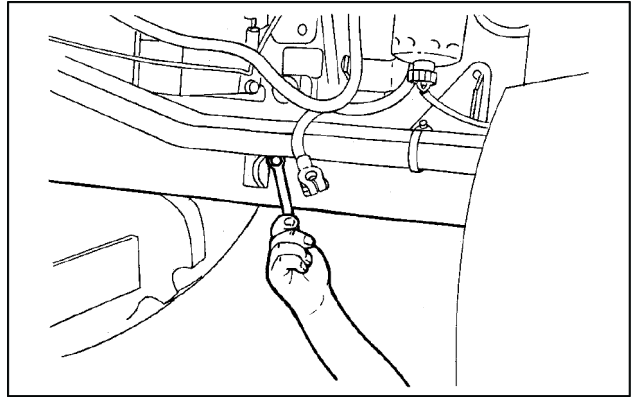


ANIL12TR00123AA 16

 18. Remove the circlip (2) from the front of the prop shaft and slide the sleeve (1), in the direction shown by the arrow, until it is free of the splines on the front axle.

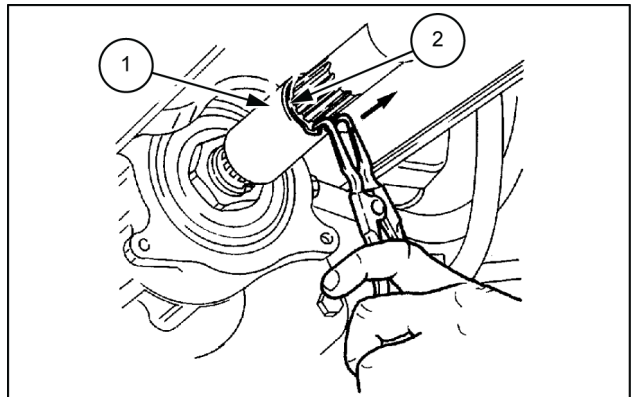


ANIL12TR00124AB 17

 19. Remove the circlip (2) from the rear of the prop shaft and slide the sleeve (1), in the direction shown by the arrow, until it is free of the splines on the crankshaft.

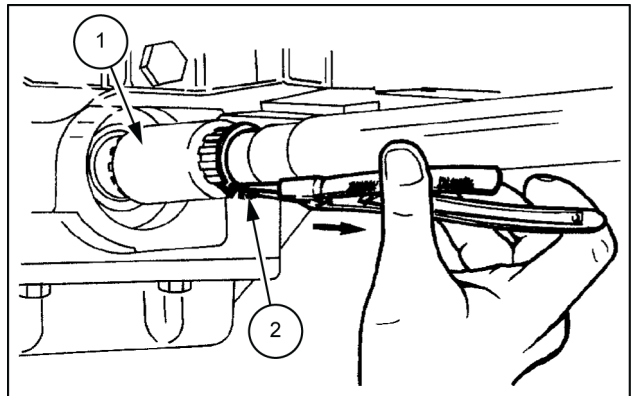

ANIL12TR00125AB 18

 20. Remove the middle support bolts (1) from the propeller shaft and remove the shaft complete with support.

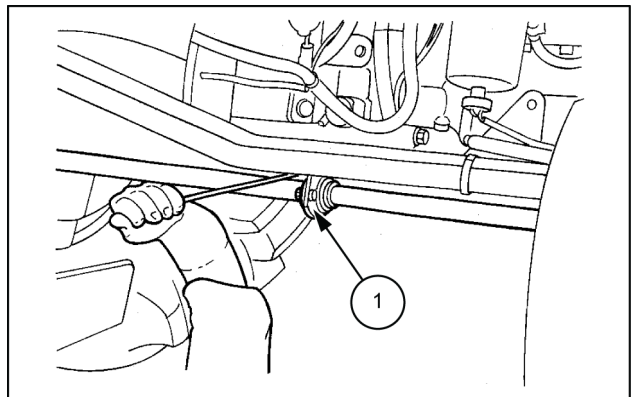

ANIL12TR00126AB 19

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>