

SERVICE MANUAL

**T9.390 / T9.450 / T9.505 /
T9.560 / T9.615 / T9.670**

Tractor

PIN ZCF200001 and above

PIN ZDF200001 and above

Part number 47488219


English

March 2013





 SERVICE MANUAL

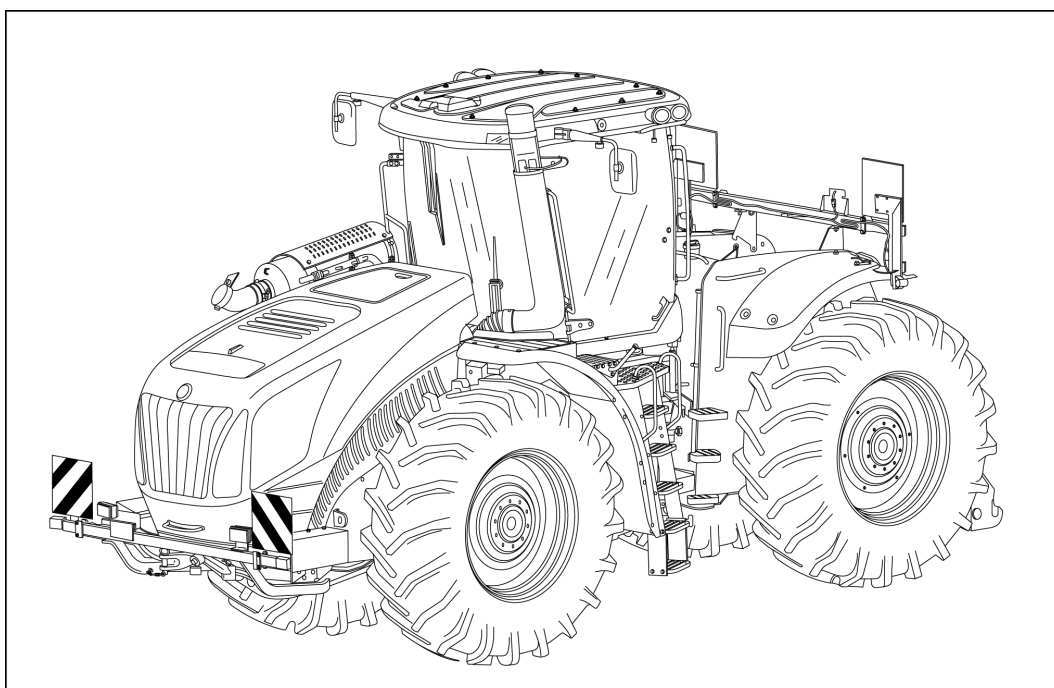

T9.390 [ZCF200001 -] , T9.390 [ZDF200001 -] , T9.450 [ZCF200001 -] , T9.450 [ZDF200001 -] , T9.505 [ZCF200001 -] , T9.505 [ZDF200001 -] , T9.560 [ZCF200001 -] , T9.560 [ZDF200001 -] , T9.615 [ZCF200001 -] , T9.615 [ZDF200001 -] , T9.670 [ZCF200001 -] , T9.670 [ZDF200001 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.5
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.910] Auxiliary steering	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3

Electrical systems	55
[55.010] Fuel injection system	55.1
[55.014] Engine intake and exhaust system	55.2
[55.024] Transmission control system	55.3
[55.035] Remote control valve electric control	55.4
[55.045] Front axle control system	55.5
[55.046] Rear axle control system	55.6
[55.048] Rear Power Take-Off (PTO) control system	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.9
[55.100] Harnesses and connectors	55.10
[55.130] Rear three-point hitch electronic control system	55.11
[55.301] Alternator	55.12
[55.302] Battery	55.13
[55.404] External lighting	55.14
[55.522] Cab Power Take-Off (PTO) controls	55.15
[55.640] Electronic modules	55.16
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.17
[55.DTC] FAULT CODES	55.18
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat	90.3
[90.150] Cab	90.4
[90.151] Cab interior	90.5



INTRODUCTION

Contents

INTRODUCTION

Safety rules	3
T9.390 [ZCF200001 -] WE, T9.390 [ZDF200001 -] WE, T9.390, T9.450 [ZCF200001 -] WE, T9.450 [ZDF200001 -] WE, T9.450, T9.505 [ZCF200001 -] WE, T9.505 [ZDF200001 -] WE, T9.505, T9.560 [ZCF200001 -] WE, T9.560 [ZDF200001 -] WE, T9.560, T9.615 [ZCF200001 -] WE, T9.615 [ZDF200001 -] WE, T9.615, T9.670 [ZCF200001 -] WE, T9.670 [ZDF200001 -] WE, T9.670	
Personal safety - Do not operate tag	4
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Safety rules	5
T9.390 WE, T9.450 WE, T9.505 WE, T9.560 WE, T9.615 WE, T9.670 WE	
Foreword - Ecology and the environment	18
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Basic instructions - Important notice regarding equipment servicing	19
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Basic instructions - Shop and assembly	20
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Basic instructions - Product identification	22
T9.390 WE, T9.450 WE, T9.505 WE, T9.560 WE, T9.615 WE, T9.670 WE	
Torque - Minimum tightening torques for normal assembly	26
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Torque - Standard torque data for hydraulics	29
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Capacities - Product identification numbers ZCF and before	31
T9.390 [ZCF200001 -], T9.450 [ZCF200001 -], T9.505 [ZCF200001 -], T9.560 [ZCF200001 -], T9.615 [ZCF200001 -], T9.670 [ZCF200001 -]	
Definition - Important notice regarding equipment servicing	32
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Capacities - Product identification numbers ZDF and after	33
T9.390 [ZDF200001 -] WE, T9.450 [ZDF200001 -] WE, T9.505 [ZDF200001 -] WE, T9.560 [ZDF200001 -] WE, T9.615 [ZDF200001 -] WE, T9.670 [ZDF200001 -] WE	
Definition - Machine orientation	34
T9.390 WE, T9.450 WE, T9.505 WE, T9.560 WE, T9.615 WE, T9.670 WE	

Safety rules

T9.390 [ZCF200001 -] WE, T9.390 [ZDF200001 -] WE, T9.390, T9.450 [ZCF200001 -] WE, T9.450 [ZDF200001 -] WE, T9.450, T9.505 [ZCF200001 -] WE, T9.505 [ZDF200001 -] WE, T9.505, T9.560 [ZCF200001 -] WE, T9.560 [ZDF200001 -] WE, T9.560, T9.615 [ZCF200001 -] WE, T9.615 [ZDF200001 -] WE, T9.615, T9.670 [ZCF200001 -] WE, T9.670 [ZDF200001 -] WE, T9.670

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

 
NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.



SERVICE MANUAL

Engine

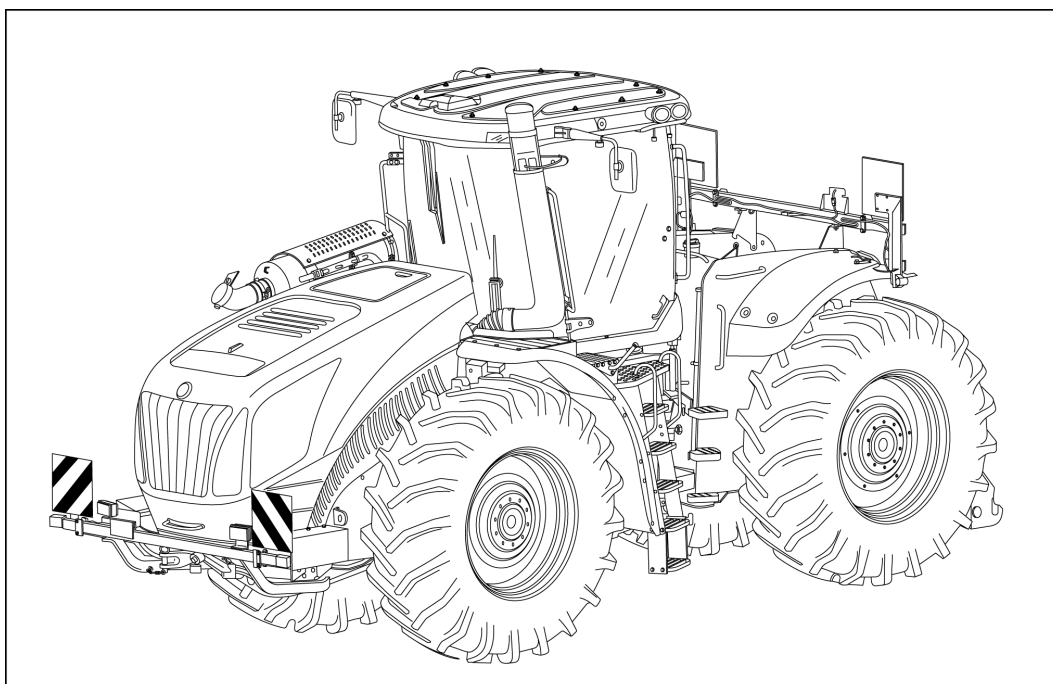


T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670

Contents

Engine - 10

[10.001] Engine and crankcase	10.1
T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670	
[10.202] Air cleaners and lines	10.2
T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670	
[10.400] Engine cooling system	10.3
T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670	
[10.414] Fan and drive	10.4
T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670	
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670	

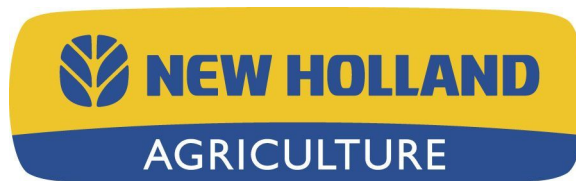 

Engine - 10

Engine and crankcase - 001

T9.390 , T9.450 , T9.505 , T9.560 , T9.615 , T9.670

Contents

Engine - 10

Engine and crankcase - 001

SERVICE

Engine

Remove - 9 Liter tractors	3
T9.390	
Install - 9 Liter tractors	8
T9.390	
Remove - 13L single turbo tractors	20
T9.450, T9.505, T9.560	
Install - 13L single turbo tractors	26
T9.450, T9.505, T9.560	
Remove 13L Two Stage turbocharger tractors	39
T9.615, T9.670	
Install 13L Two Stage turbocharger tractors	47
T9.615, T9.670	

Engine - Remove - 9 Liter tractors

T9.390

 
Air conditioning - Evacuate - Air conditioning system (50.200)

Prior operation:

Hood - Remove - Hood support frame on row crop unit (90.100)


1. Disconnect air conditioning high and low pressure hoses (1) from compressor. Unplug high pressure sending unit (2).

NOTE: Cap and plug disconnected hoses and ports.

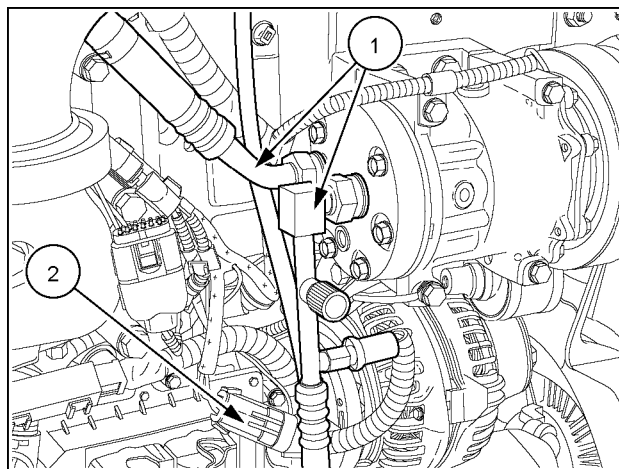

RCPH10FWD998BAC 1

 
2. Cut ties (1) and unplug harness (2).

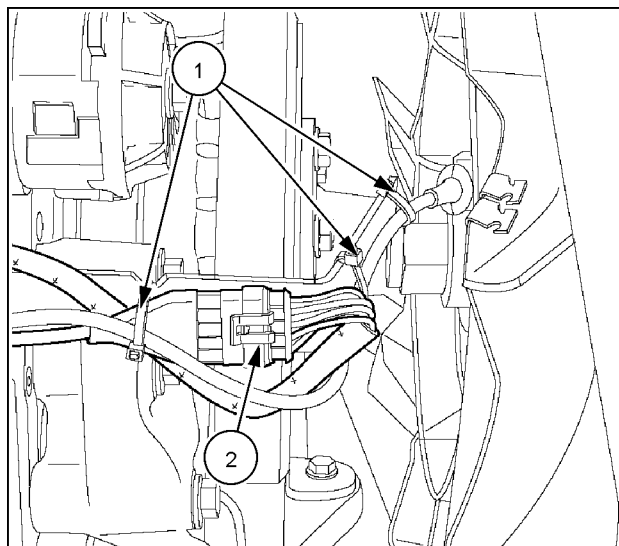

RCPH10FWD009BBC 2


3. Loosen fan from hub.

 NOTE: Hub has left hand threads.

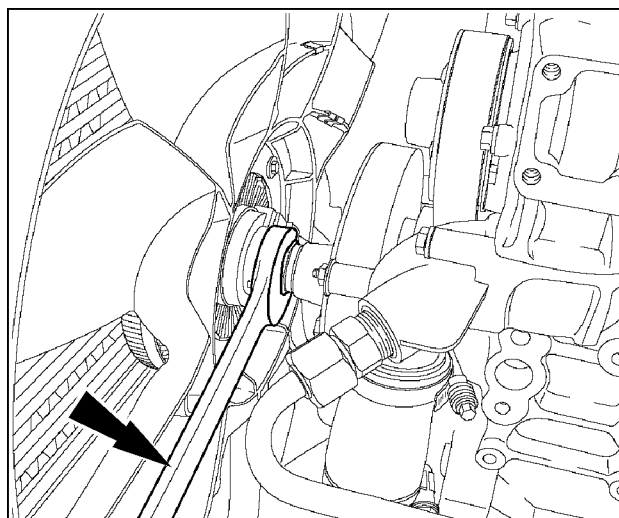


RCPH10FWD010BBC 3

 4. With the help of an assistant turn fan off hub. Remove out the right hand side.

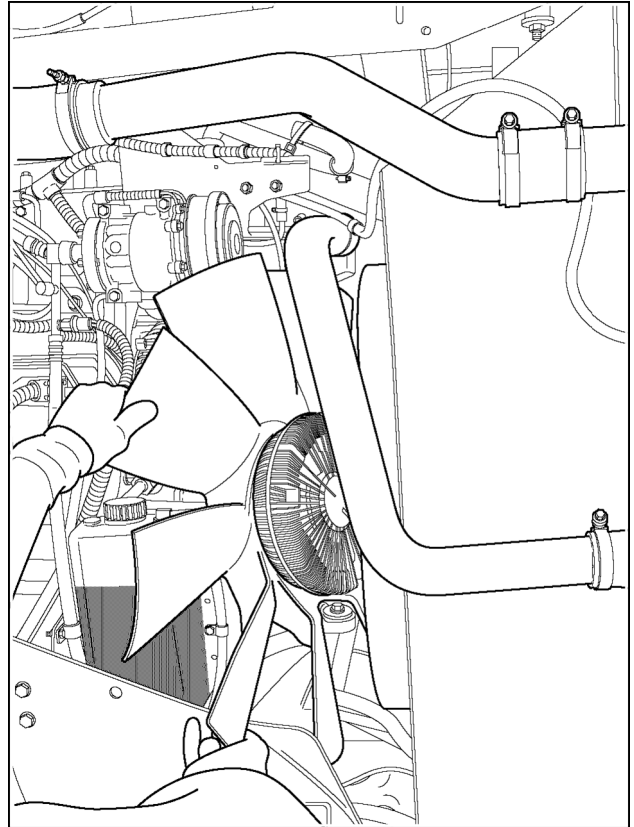


RCPH10FWD011BBC 4

 5. Label and disconnect heater hoses (1) and DEF/Ad-Blue® solenoid hoses (2).

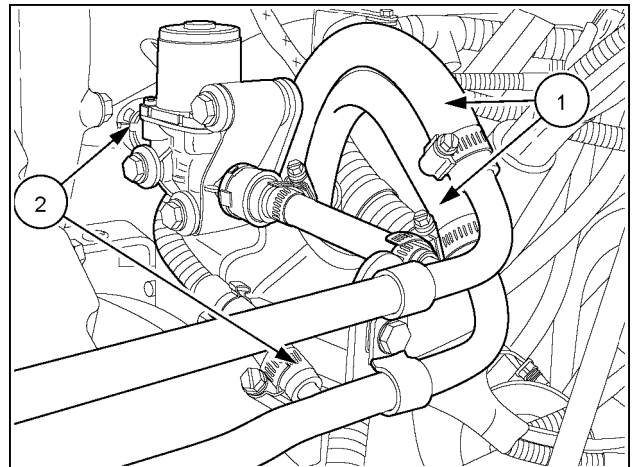


RCPH10FWD012BBC 5

 6. Disconnect starter connections (1). Remove ground strap from engine block (2).

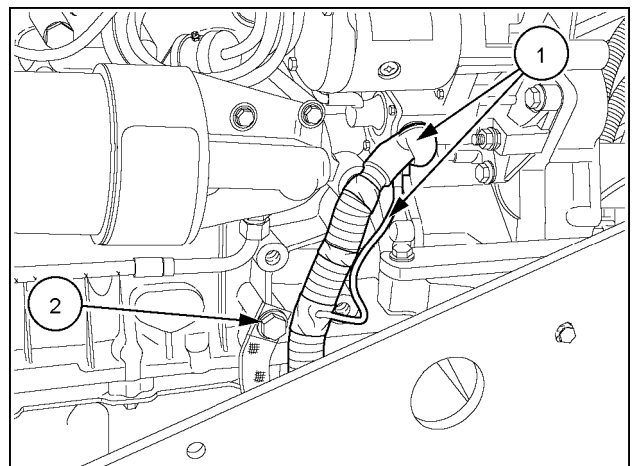

RCPH10FWD013BBC 6

 
7. Remove left hand air to air tube (1) and lower radiator hose (2). Loosen upper radiator hose clamp (3).

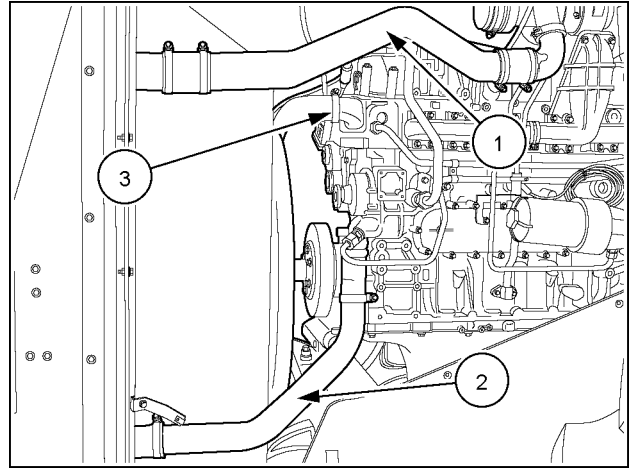

RCPH10FWD014BBC 7


8. Disconnect alternator cable (1). Disconnect fuel line (2).

 NOTE: Plug and cap disconnected fuel line and fitting.

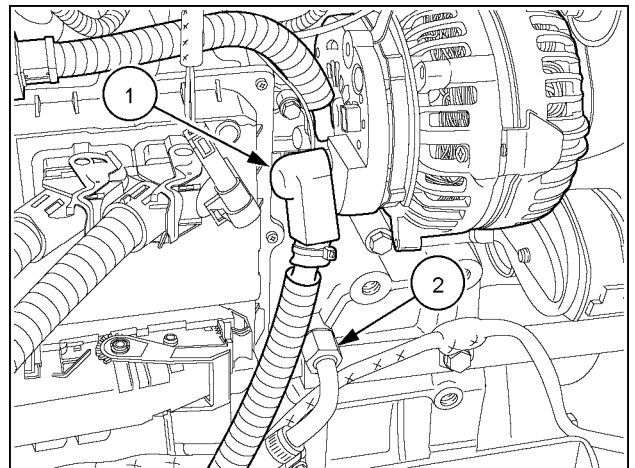

RCPH10FWD015BBC 8

 
9. Secure cooling package with support strap (1). Remove right hand air to air tube (2) and upper radiator hose (3).

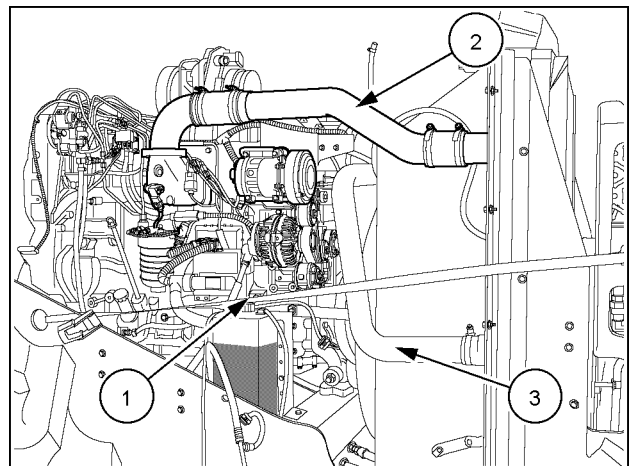

RCPH10FWD016BBC 9


10. Disconnect fuel return line.

 NOTE: Plug and cap disconnected hoses and fittings.

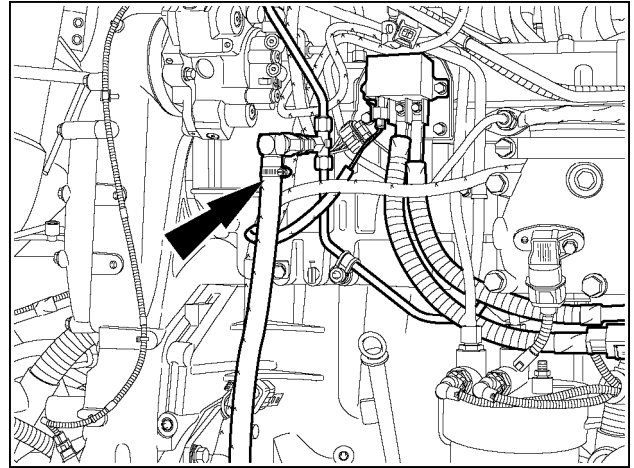


RCPH10FWD017BBC 10

 11. Disconnect drive shaft from engine.

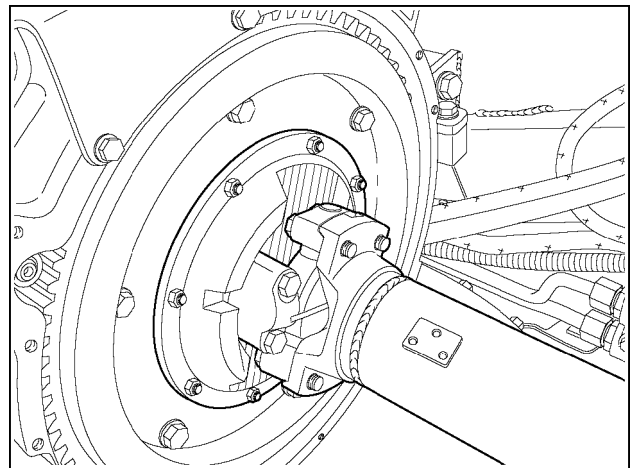

RCPH10FWD018BBC 11

 12. Remove bracket on both sides over rear engine mounts.

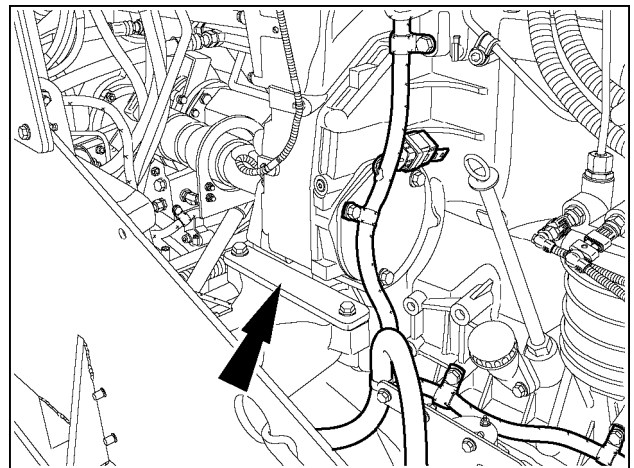

RCPH10FWD019BBC 12



 
Suggest:

If the above button click is invalid.

**Please download this document
first, and then click the above link
to download the complete manual.**


Thank you so much for reading

13. Remove front engine mount bracket.

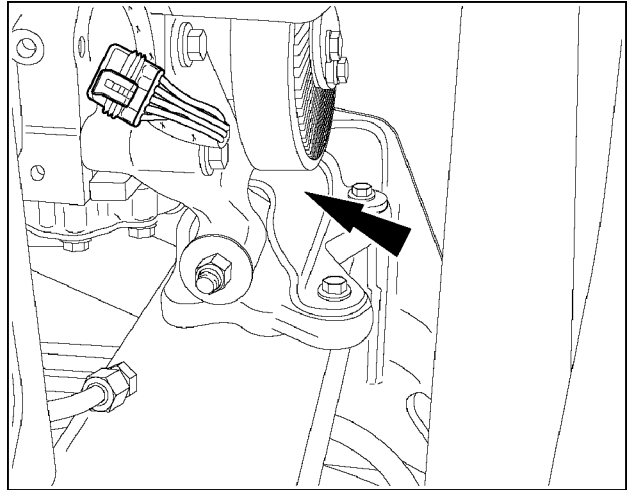

RCPH10FWD021BBC 13

 14. Attach 4130 load rotor lifting bale or equivalent. Remove engine from tractor over left hand side rail.

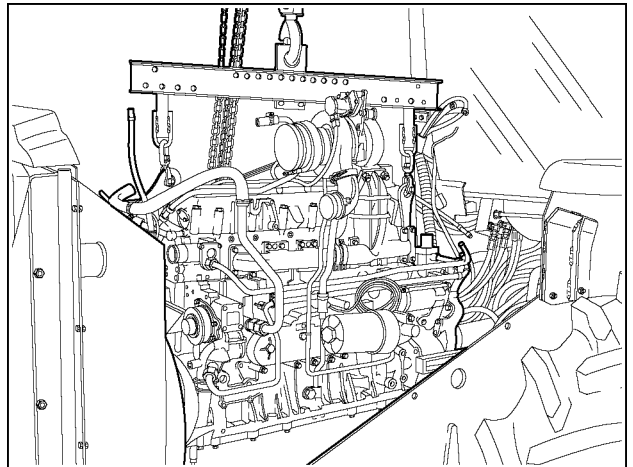

RCPH10FWD022BBC 14

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>