




**NEW HOLLAND**

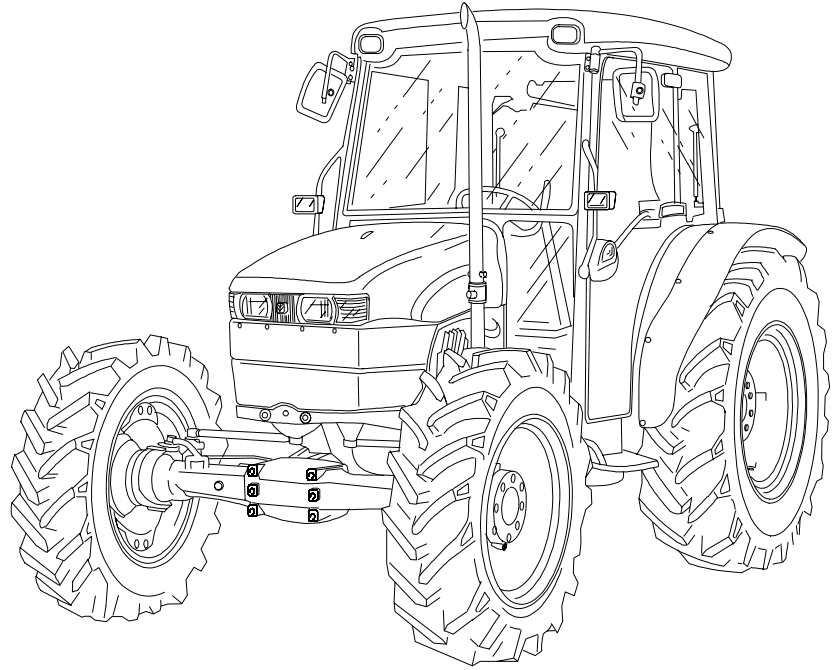

27594

# **TN55D - TN55S - TN65D - TN65S - TN70D - TN70S - TN75D - TN75S TRACTORS SERVICE MANUAL**

## **CROSS-SECTIONAL VIEWS**

<b>GENERAL GUIDELINES</b> .....	<b>00</b>
<b>ENGINE</b> .....	<b>10</b>
<b>CLUTCH</b> .....	<b>18</b>
<b>TRANSMISSIONS</b> .....	<b>21</b>
<b>DRIVE LINES</b> .....	<b>23</b>
<b>FRONT MECHANICAL TRANSMISSION</b> .....	<b>25</b>
<b>REAR MECHANICAL TRANSMISSION</b> .....	<b>27</b>
<b>POWER TAKE-OFF</b> .....	<b>31</b>
<b>BRAKES</b> .....	<b>33</b>
<b>HYDRAULIC SYSTEMS</b> .....	<b>35</b>
<b>STEERING</b> .....	<b>41</b>
<b>AXLE AND WHEELS</b> .....	<b>44</b>
<b>CAB AIR CONDITIONING SYSTEM</b> .....	<b>50</b>
<b>ELECTRICAL SYSTEM</b> .....	<b>55</b>
<b>PLATFORM, CAB, BODYWORK</b> .....	<b>90</b>

**S E R V I C E**

## INTRODUCTION

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.  
For easy reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *Pages updated in the future will be identified by the same document number followed by a two-figure update number (e.g.: 1<sup>st</sup> Update 603.54.350.01; 2<sup>nd</sup> Update 603.54.350.02; etc.) and by the corresponding issue date.  
These pages will be supplemented by a reprint of the updated contents page.*
- *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries. In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

## IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.  
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY  
OF NEW HOLLAND ITALIA S.p.A.



No part of the text or illustrations  
may be reproduced

PRINTED IN ITALY

**CNH ITALIA S.p.A. - Viale delle Nazioni, 55 - 41100 MODENA - Italy**

SERVICE - Technical Publications & Special Tools

Print No. **603.54.351.01** - 03 - 2002 - 400

## CONTENTS

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>			Engine Disassembly - As-		
General instructions . . . . .	1-2	09-98	sembly . . . . .	34-35-36- 37-38-39- 40-41-42- 43-44-45- 46-47-48- 49-50	09-98
Safety regulations . . . . .	3-4	09-98	Checks and measure-	51-52	09-98
Safety regulations . . . . .	5	03-02	ments - cylinder block and		
Consumables . . . . .	6	03-02	liners . . . . .		
			Checks and measure-	53-54-55- 56	09-98
<b>10 - ENGINE</b>			ments - crankshaft, bear-		
Summary . . . . .	1	03-02	ings and flywheel . . . . .		
General specifications . . . . .	2-3-4	03-02	Checks and measure-	57	09-98
Fuel system data . . . . .	5	03-02	ments - connecting rods .		
Fuel system data . . . . .	12	09-98	Checks and measure-	58-59-60	09-98
Injection pump calibration			ments - pistons . . . . .		
and engine performance			Checks and measure-	61-62-63	09-98
data . . . . .	6	03-02	ments - camshaft, tappets		
Injection pump calibration			and valves . . . . .	64	09-98
and engine performance			Checks and measure-	65	03-02
data . . . . .	7-8-9-10- 11	09-98	ments - cylinder head . . . .		
Engine block data . . . . .	12	09-98	Re-facing valve seats . . . .	66	03-02
Crankshaft data . . . . .	13-14	09-98	Checks and measure-	67	09-98
Connecting rod data . . . . .	14	09-98	ments - lubrication system		
Piston data . . . . .	15	03-02	Checks and measure-	68	09-98
Timing gear data . . . . .	16	03-02	ments - lubrication system	69-70-71	09-98
Timing gear data . . . . .	17	09-98	Replacing injector sleeves		
Cylinder head data . . . . .	18	09-98	and support . . . . .	72-73	09-98
Lubrication and cooling			Removal-Installation -		
system data . . . . .	19	03-02	crankshaft front seal . . . . .	74-75	09-98
Tightening Torques . . . . .	20	03-02	Valve clearance adjust-		
Tools . . . . .	21-22	03-02	ment . . . . .	76-77	09-98
Cross-sectional views of			Removal-Installation - in-		
engine . . . . .	23-24	09-98	jectors . . . . .	78-79	09-98
Lubrication diagrams . . . . .	25	09-98	Removal - Installation		
Engine cooling system dia-			Bosch injection pump . . . .	80	09-98
gram . . . . .	26	09-98	Removal - Installation		
Troubleshooting . . . . .	27-28-29- 30	09-98	Bosch injection pump . . . .	81-82	03-02
Engine Removal - Installa-			Bosch injection pump - tim-		
tion . . . . .	31-32	09-98	ing . . . . .	83-84	03-02
Compression test . . . . .	33	09-98			

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

	Page	Date		Page	Date
Bosch injection pump – air bleeding .....	85	09-98			
Exhaust pipe. Removal-Refitting .....	86	09-98			
Removal-Refitting – coolant pump .....	87	09-98			
Coolant pump overhaul ...	88	09-98			
Removal-Refitting – thermostat valve .....	89-90	09-98			
Removal-Refitting – radiator .....	91-92-93-94	09-98			
Injection pump calibration and engine performance data .....	95-96	03-02			
<b>18 - CLUTCH</b>					
Main specifications .....	1-2	03-02			
Tightening Torques .....	2	03-02			
Tools .....	2-3	03-02			
Cross-sectional views ...	3-4	03-02			
Troubleshooting .....	5	03-02			
Removal-Refitting – clutch .....	6-11-12-13-14-15	03-02			
Removal-Refitting – clutch .....	7-8-9-10	09-98			
Clutch Overhaul .....	16	03-02			
Clutch Overhaul .....	17-18-19-20	09-98			
Checks and measurements – clutch .....	21-22	09-98			
Adjustments – clutch disengagement lever .....	22-23	09-98			
Adjustments – clutch pedal .....	24	09-98			
PTO control adjustment ..	25	03-02			
Sectional view of PTO clutch servo control .....	26	03-02			
Description and operation of PTO servo control .....	27-28	03-02			
PTO servo control adjustment .....	29	03-02			
PTO engaged switch adjustment .....	30	03-02			
			<b>21 - TRANSMISSIONS</b>		
			<b>CHAPTER 1 - Transmission and range gear (16x16)</b>		
			Main specifications .....	1-2	09-98
			Tightening Torques .....	2-3	09-98
			Tools .....	4-5-6-7	09-98
			Cross-sectional views ...	8-9-10-11	09-98
			Description and Operation	12	09-98
			Troubleshooting .....	12-13	09-98
			Removal-Refitting – Rear transmission – gearbox casing .....	14-15-16-17-18-19-20	09-98
			Disassembly-Assembly – transmission-gearbox casing .....	21-22-23-24-25-26-27-28	09-98
			Gearbox driving and driven shafts clearance adjustment. ....	29	03-02
			Sealing compound application diagram .....	30	03-02
			Gearbox control lever. Removal-Refitting .....	31	09-98
			Range gear control lever. Removal-Refitting .....	32	09-98
			Shuttle control lever. Removal-Refitting .....	33	09-98
			Fuel tank. Removal-Refitting .....	34-35	09-98
			<b>CHAPTER 2 - Mechanical transmission and splitter</b>		
			Main specifications .....	1-2	09-98
			Tightening Torques .....	2	09-98
			Tools .....	2	09-98
			Cross-sectional views ...	3-4-5	09-98
			Description and Operation	6	09-98
			Troubleshooting .....	7	09-98
			Splitter device and creeper unit casing, shafts and bearings disassembly ....	8-9-10	09-98

	Page	Date
<b>CHAPTER 3 - Power Shuttle transmission with 2 Speed Power Shift</b>		
Main specifications .....	1-2	03-02
Tightening Torques .....	3	09-98
Tools .....	4-5-6	09-98
Cross-sectional views ...	7-8-9-11	09-98
Cross-sectional views ...	10	03-02
Clutch control pressure test	10	03-02
Description and Operation	12	09-98
Troubleshooting .....	12	09-98
Disassembly-Assembly - transmission-gearbox casing .....	13-14	09-98
Disassembly-Reassembly - Power Shuttle control valve .....	15-16-17	09-98
Disassembly-Assembly - accumulator .....	18	09-98
Gearbox control valve solenoid valve. Removal-Refitting .....	19-20	09-98
Disassembly-Assembly - clutch casing .....	21-22-23-24	09-98
Disassembly-Assembly - clutch casing .....	25	03-02
Faults code decoding ....	26	03-02
Calibration .....	27-28-29-30-31-32-33-34-35-36-37-38-39-40-41-42-43-44-45	03-02
First start-up procedure ..	46	03-02
Diagnostics .....	47 to 148	03-02
Power Shuttle control unit input/output wiring diagram	150-151-152-153	03-02
Description and operation of the control unit .....	154-155-156-157-157	03-02

**CHAPTER 4 - Mechanical transmission (8 + 8 NASO version)**

Main specifications .....	1	09-98
Tightening Torques .....	1	09-98
Tools .....	1	09-98
Cross-sectional views ...	2-3-4	09-98

**CHAPTER 4 - Power Shuttle transmission (16 + 16 and 8 + 8 versions)**

Main specifications .....	1	09-98
Tightening Torques .....	2	09-98
Cross-sectional views ...	3-4-5-6	09-98

**23 - DRIVE LINES**

Main specifications .....	1	03-02
Tightening Torques .....	2	03-02
Tools .....	3-4	03-02
Cross-sectional views ...	5-6-7	09-98
Description and Operation	8-9	09-98
Troubleshooting .....	9	09-98
Drive shafts and guard.		
Disassembly - Assembly .	10-11-12	09-98
Removal-Refitting - drive gear casing .....	13-14	09-98
Disassembly-Assembly - drive gear casing .....	15-16-17-18	09-98
Faults code decoding ....	19	03-02
Calibration .....	20-21-22-23-24-25-26-27	03-02
First start-up procedure ..	28	03-02
Diagnostics .....	29 to 66	03-02
PTO control unit input/output wiring diagram .....	68-69	03-02

**25 - FRONT MECHANICAL TRANSMISSION**

**CHAPTER 1 - Front mechanical transmission (super steer axle)**

Main specifications .....	1-2	03-02
Main specifications .....	3	09-98
Tightening Torques .....	4-5-6	09-98

	Page	Date		Page	Date
Tools .....	7-8	03-02	Removal-Refitting - front axle .....	11-12-13-14	09-98
Tools .....	9	09-98	Front axle. Disassembly - Assembly .....	15-16-17-18-19-20-21-22-23	09-98
Cross-sectional views ...	10-11-12-13	09-98	Overhaul - differential lock unit .....	24-25	09-98
Description and Operation	13-14	03-02	Replacing steering knuckle pins and bearings .....	26	09-98
Troubleshooting .....	15	09-98	Adjustments - steering knuckle bearings .....	27-28	09-98
Removal-Refitting - front axle .....	16-17-18-19	09-98	Adjustments - bevel drive	29-30	03-02
Removal-Installation - front axle bevel drive support and differential .....	20-21-22-23	09-98	Adjustments - bevel drive	31-32-33-34-35	09-98
Overhaul - front axle bevel drive .....	24-25	09-98	Overhaul - front differential	36	09-98
Adjustments - bevel drive	26-27-28-29-30-31	09-98	LIM-SLIP self-locking differential .....	37-38	09-98
Overhaul - front differential	32	09-98	Checking leading wheels alignment .....	39	03-02
Overhaul - differential lock unit .....	33-34-35	09-98	Disassembly-Assembly - front epicyclic final drive ..	40-41	03-02
Disassembly-Assembly - front epicyclic final drive with brake .....	36-37-38-39	09-98	Disassembly-Assembly - front epicyclic final drive with brake .....	42-43-44	03-02
Disassembly-Assembly - front epicyclic final drive ..	40-43	09-98			
Disassembly-Assembly - front epicyclic final drive ..	41-42	03-02	<b>27 - REAR MECHANICAL TRANSMISSION</b>		
Disassembly-Assembly - wheel hubs and steering knuckle .....	44	09-98	Main specifications .....	1-2	03-02
Adjustments - steering knuckle bearings .....	45	09-98	Tightening Torques .....	3-4	03-02
Replacing steering knuckle pins and bearings .....	46	09-98	Tools .....	5-6-7-8	09-98
			Cross-sectional views ...	9-10	09-98
			Description and Operation	11-12	09-98
			Troubleshooting .....	12-13	09-98
			Disassembly-Assembly - transmission-gearbox casing .....	14-15-16-17-18-19	09-98
			Adjustment - differential lock engagement sleeve position .....	20	09-98
			Adjustments - bevel drive	21-22	03-02
			Adjustments - bevel drive	23-24-25	09-98
<b>CHAPTER 2 - Front mechanical transmission</b>					
Main specifications .....	1-2	03-02			
Main specifications .....	3	09-98			
Tightening Torques .....	3-4	09-98			
Tools .....	5-6	03-02			
Cross-sectional views ...	7-8	03-02			
Description and Operation	8-9	09-98			
Troubleshooting .....	10	09-98			

	Page	Date		Page	Date
Removal-Refitting - side gear casing .....	26-27-28- 29	09-98			
Disassembly-Assembly - drive wheel shaft .....	29-30-31	09-98			
Disassembly-Assembly - epicyclic reduction gear ..	31	09-98			
<b>31 - POWER TAKE-OFF</b>					
<b>CHAPTER 1 - Mechanical power take-off</b>					
Main specifications .....	1-2-3	03-02			
Tools .....	3-4	03-02			
Tightening Torques .....	5-6	09-98			
Cross-sectional views ...	7-8	09-98			
Description and Operation	9-10-11	09-98			
Troubleshooting .....	11	09-98			
Disassembly - Assembly - power take-off .....	12-13-14- 15	09-98			
<b>33 - BRAKES</b>					
Main specifications .....	1-2	09-98			
Tightening Torques .....	2	09-98			
Cross-sectional views ...	3-4	03-02			
Cross-sectional views ...	5	09-98			
Tools .....	5-6	09-98			
Description and Operation	6	09-98			
Troubleshooting .....	7-8	09-98			
Removal-Refitting - ser- vice brake .....	9-10	09-98			
Removal-Refitting - ser- vice brake pump .....	11-12-13- 14	09-98			
Adjustments - service brake pedals travel .....	15-16	09-98			
Service brake circuit air bleeding .....	16-17-18	09-98			
Removal-Refitting - park- ing brake .....	19-20	09-98			
Adjustments - parking handbrake travel .....	20	09-98			
<b>35 - HYDRAULIC SYSTEMS</b>					
<b>CHAPTER 1 - Rear mechanical hydraulic lift</b>					
Main specifications .....	1-2-3	09-98			
Tightening Torques .....	3-4	09-98			
Tools .....	5-6	09-98			
Cross-sectional views ...	7-8-9-10- 11	09-98			
Description and Operation	12-13-14- 15	09-98			
Troubleshooting .....	16	09-98			
Troubleshooting .....	17	03-02			
Lift internal controls. Disas- sembly - Assembly .....	18-19-20- 21	03-02			
Adjusting the lift .....	22-31	03-02			
Adjusting the lift .....	23-24-25- 26-27-28- 29-30	09-98			
Lift cylinder and arms shaft. Disassembly - Assembly .	32	03-02			
Lift cylinder and arms shaft. Disassembly - Assembly .	33-34-35	09-98			
Disassembly-Assembly - lift control valve .....	36-37-38	09-98			
Disassembly-Assembly - lift control valve .....	39	03-02			
Lift pressure relief valve ..	40	03-02			
<b>CHAPTER 2 - Open centre system auxiliary control valves</b>					
Main specifications .....	2	03-02			
Tools .....	2	03-02			
Tightening Torques .....	2	03-02			
Cross-sectional views ...	3-4-5	09-98			
Description and Operation	5-6-7-8	09-98			
Lift electronic control unit. Replacement .....	9	09-98			
Control valves. Disassem- bly - Assembly .....	10-11-12	09-98			

	Page	Date		Page	Date
<b>CHAPTER 3 - Trailer brakes auxiliary control valves</b>			Electronic lift calibration . . .	44-45-46- 47-48-49- 50-51-52- 53-54-55- 56	03-02
Cross-sectional views . . .	1	09-98	First start-up procedure . .	57	03-02
Description and Operation	1-2-3-4-5 -6-7	09-98	Diagnostics . . . . .	58 to 145	03-02
Troubleshooting . . . . .	8-9-10	09-98	Electronic lift control unit input/output wiring diagram	146-147	03-02
Removal-Refitting - trailer brake valve . . . . .	11	09-98			
<b>CHAPTER 4 - Electronically controlled hydraulic lift</b>			<b>CHAPTER 5 - Non-stop flow gear pump</b>		
Main specifications . . . . .	2-3	03-02	Main specifications . . . . .	2-3	09-98
Tightening Torques . . . . .	4	09-98	Diagrams . . . . .	3	09-98
Tools . . . . .	4-5-6	09-98	Description and Operation	3	09-98
Cross-sectional views . . .	7-8-9	09-98	Disassembly-Assembly - lift oil pump . . . . .	4	09-98
Location of parts . . . . .	10-11	09-98	<b>CHAPTER 6 - Electronic lift and front Power Take-Off</b>		
Description and Operation	12-13-14- 15-16-17- 18	09-98	Main specifications of front lift . . . . .	1-2-3	03-02
Removal-Installation - lift .	19-20-21- 22-23	09-98	Tightening Torques . . . . .	3-4-5	03-02
Draft sensor support. Removal-Refitting . . . . .	24	09-98	Cross-sectional views of implement linkage . . . . .	6-7	03-02
Replacement - control unit	25	09-98	Cross-sectional views of front PTO . . . . .	8-9-10	03-02
Lift arm potentiometer. Re- placement . . . . .	26-27	09-98	Description and Operation	11-12-13- 14	03-02
Replacement - draft sen- sor . . . . .	28-29-30	09-98	Front lift hydraulic diagram	15	03-02
Electronically controlled hydraulic lift. Disassembly - Assembly . . . . .	31-32-33- 34-35	09-98	Front lift troubleshooting . .	16-17	03-02
Removal-Installation - hy- draulic control valve . . . . .	36	09-98	Removal-Refitting - Front power take-off trans- mission shaft . . . . .	18-19-20- 21-22-23- 24-25	03-02
Hydraulic control valve. Disassembly - Assembly .	37-38	09-98	Disassembly-Assembly - Front PTO transmission shaft . . . . .	26	03-02
Hydraulic control valve. Disassembly - Assembly .	39	03-02	Front PTO casing cross- sectional view . . . . .	27	03-02
Lift calibration . . . . .	40-41	03-02	Removal-Refitting - Front PTO electromagnetic coupling . . . . .	28-29-30	03-02
Connecting calibration in- strument <b>294084</b> to the lift diagnosis socket . . . . .	42	03-02	Disassembly-Assembly - Front PTO electromagnetic coupling . . . . .	31-32-33- 34	03-02
Faults code decoding . . . .	43	03-02			

	Page	Date		Page	Date
Removal-Refitting - Front lift support .....	35-36-37	03-02	Disassembly-Assembly - hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27	09-98
Front PTO fault codes decoding .....	38	03-02	Hydrostatic steering control valve bench testing .....	28-29	09-98
Front PTO calibration .....	39-40-41-42-43-44-45-46	03-02	Pressure relief valve testing	30	09-98
Front PTO first start-up ..	47	03-02	<b>CHAPTER 2 - Non-stop flow gear pump</b>		
Front PTO troubleshooting	48 to 62	03-02	Main specifications .....	1-2	09-98
Front electronic lift calibration .....	63-64	03-02	Diagrams .....	3	09-98
Connecting calibration instrument <b>294084</b> to the lift diagnosis socket .....	65	03-02	Description and Operation	4	09-98
Front lift fault codes decoding .....	66	03-02	Disassembly-Assembly - hydrostatic steering oil pump .....	5	03-02
Front electronic lift calibration .....	67-68-69-70-71-72-73-74-75-76-77-78-79	03-02	<b>44 - AXLES AND WHEELS</b>		
Front electronic lift troubleshooting .....	81 to 126	03-02	Main specifications .....	1-2	03-02
Front PTO control unit input/output wiring diagram	128-129	03-02	Front wheel track diagram	2	03-02
Front electronic lift control unit input/output wiring diagram .....	130-131	03-02	Cross-sectional views ...	3	09-98
<b>41 - STEERING</b>			Tightening Torques .....	4-5-6	09-98
<b>CHAPTER 1 - Steering</b>			Tools .....	6-7	09-98
Main specifications .....	2	09-98	Troubleshooting .....	7	09-98
Tightening Torques .....	2	09-98	Disassembly-Assembly - wheel axle hub .....	8-9-10	09-98
Tools .....	2	09-98	Removal-Refitting - front axle .....	11-12-13	09-98
Description and Operation	3-4-5	09-98	Stub axle hub overhaul ...	14-15-16-17	09-98
View of hydrostatic steering control valve components .	6	09-98	Checking leading wheels alignment .....	18	09-98
Troubleshooting .....	7-8	09-98	<b>50 - CAB AIR CONDITIONING SYSTEM</b>		
Replacement - hydrostatic steering wheel .....	9	09-98	Safety regulations .....	2	09-98
Removal-Refitting - hydrostatic steering control valve	10-11-12	09-98	Main specifications .....	3	09-98
			Tools .....	4	09-98
			Operating principles .....	5	09-98
			Components of cab air conditioning system .....	6-7-8-9-10	09-98
			Cab controls .....	11-12-13	09-98
			Operation control and cooling .....	14-15	09-98

	Page	Date		Page	Date
Conditioning system maintenance .....	16-17	09-98	Electronic Instrument Panel .....	24-25-26	03-02
Troubleshooting .....	18-19-20-21	09-98	<b>CHAPTER 2 - Components</b>		
Refrigerant recovery - recycling and evacuation - charging stations .....	22-23	09-98	Introduction .....	1	09-98
Dehydration, recharging and refrigeration check ...	24-25-26-27-28-29-30	09-98	Components .....	1-2-3-4-5-6-7-8-9-10-11-12-13-14	09-98
Checking for fluid/gas leaks in the air conditioning system .....	31-32	09-98	Maintenance .....	15-16-17	09-98
Compressor drive belt tension adjustment .....	33	09-98	<b>Version of frame No. 1269072</b>		
Cab air infeed vents. Removal-Refitting .....	34	09-98	Introduction .....	19	03-02
Cab heating/air-conditioning system. Removal-Refitting .....	35-36	09-98	Components .....	20-21-22-23-24-25-26-27-28-29-30-31-32-33	03-02
Cab heater. Disassembly-Assembly .....	37	09-98	<b>CHAPTER 3 - Starting System</b>		
Cab air conditioning system evaporator unit. Disassembly - Assembly .....	38	09-98	Technical data .....	1	09-98
Cab electric fan unit. Disassembly - Assembly .....	39	09-98	Tightening Torques .....	1	09-98
			Description and Operation .....	2	09-98
			Electrical diagram .....	3	09-98
			Troubleshooting .....	4	09-98
			System testing .....	5-6-7	09-98
			Overhaul .....	8-9	09-98
			Starter motor testing .....	10-11	09-98
			<b>Version of frame No. 1269072</b>		
			Technical data .....	13	03-02
			Tightening Torques .....	13	03-02
			Electrical diagram .....	14	03-02
			<b>CHAPTER 4 - Charging system</b>		
			Technical data .....	1	09-98
			Tightening Torques .....	1	09-98
			Description and Operation .....	2-3	09-98
			System testing .....	4-5-6-7-8-9	09-98
			Alternator Removal-Refitting and overhaul .....	9-10-11-12-13-14-15-16	09-98
			<b>CHAPTER 5 - Battery</b>		
			Technical data .....	1	09-98
<b>55 - ELECTRICAL SYSTEM</b>					
<b>CHAPTER 1 - Instruments</b>					
Analog instruments .....	1-2-3-4	09-98			
Transmitters, sensors and switches .....	5-6-7-8-9-10	09-98			
Transmitters, sensors and switches .....	11-12	03-02			
Electronic Instrument Panel .....	13-14-15	09-98			
Maintenance .....	16	09-98			
<b>Version of frame No. 1269072</b>					
Analog instruments .....	17-18-19	03-02			
Transmitters, sensors and switches .....	20-21-22-23	03-02			

	Page	Date
Description and Operation	1	09-98
Battery Removal-Refitting	2	09-98
Battery maintenance . . . . .	3	09-98
Battery recharging . . . . .	4-5-6	09-98
Battery troubleshooting . . .	6	09-98

**CHAPTER 6 - Electrical circuits**

Contents . . . . .	1	09-98
Index (Version of frame No. 1269072) . . . . .	111	03-02

**CHAPTER 7 - Cab electrical components**

Direction indicator switch. Replacement . . . . .	2	09-98
Multi-function control panel. Removal-Refitting .	3	09-98
Services electronic control unit. Replacement . . . . .	4	09-98
Power Shuttle electronic control unit. Replacement .	5	09-98
Fusebox. Replacement . . .	6	09-98
Fuses - Relays. Replacement . . . . .	7	09-98
Loudspeakers. Removal-Refitting . . . . .	8	09-98
Cab lamp fitting. Removal-Refitting . . . . .	9	09-98
Rear windscreen wiper motor. Removal-Refitting .	10	09-98

	Page	Date
Rear windscreen wiper motor. Removal-Refitting .	11	09-98

**90 - PLATFORM, CAB, BODYWORK**

**CHAPTER 1 - Cab**

Hood opening. Removal-Refitting . . . . .	2	09-98
Protective grill. Removal-Refitting . . . . .	3	09-98
Hood guard. Removal-Refitting . . . . .	4	09-98
Instrument panel lower guard. Removal-Refitting .	5	09-98
Platform assembly. Removal-Refitting . . . . .	6-7-8-9-10-11-12	09-98
Safety frame roof. Removal-Refitting . . . . .	13	09-98
Cab assembly with platform. Removal-Refitting . .	14-15-16-17-18-19-20-21	09-98
Cab windows. Replacement . . . . .	22-23-24	09-98
Right/left-hand upright seals. Removal-Refitting .	25	09-98
Cab ceiling fitting. Removal-Refitting . . . . .	26-27	09-98

## START UP

- Never run the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
- Never place the head, body, limbs, feet, hands or fingers near fans or rotating belts.

## ENGINE

- Always loosen the radiator cap slowly before removing it to allow any remaining pressure in the system to be discharged. Filling up with coolant should only be carried out with the engine stopped or idling (if hot).
- Never fill up with fuel when the engine is running, especially if hot, in order to prevent the outbreak of fire as a result of fuel spillage.
- Never check or adjust fan belt tension when the engine is running.  
Never adjust the fuel injection pump when the vehicle is moving.
- Never lubricate the vehicle when the engine is running.

## ELECTRICAL SYSTEMS

- If it is necessary to use auxiliary batteries, remember that both ends of the cables must be connected as follows: (+) with (+) and (-) with (-). Avoid short-circuiting the terminals. GAS RELEASED FROM BATTERIES IS HIGHLY INFLAMMABLE. During charging, leave the battery compartment uncovered to improve ventilation. Never check the battery charge using "jumpers" (metal objects placed on the terminals). Avoid sparks or flames near the battery zone. Do not smoke to prevent explosion hazards.
- Before servicing operations, check for fuel or current leaks. Eliminate any eventual leaks before proceeding with work.
- Never charge batteries in confined spaces. Make sure that there is adequate ventilation in order to prevent accidental explosion hazards as a result of the accumulation of gases released during charging operations.
- Always disconnect the batteries before performing any kind of servicing on the electrical system.

## HYDRAULIC SYSTEMS

- A liquid leaking from a tiny hole may be almost invisible but, at the same time, be powerful

enough to penetrate the skin; Therefore, NEVER USE HANDS TO CHECK FOR LEAKS. Use a piece of cardboard or wood for this purpose. If any liquid penetrates skin tissue, call for medical aid immediately. Failure to treat this condition with correct medical procedure may result in serious infection or dermatosis.

- In order to check the pressure in the system use suitable instruments.

## WHEELS AND TYRES

- Make sure that the tyres are correctly inflated at the pressure specified by the manufacturer. Periodically check the rims and tyres for damage.
- Stand away from (at the side of) the tyre when checking inflation pressure.
- Only check pressure when the tractor is unloaded and the tyres are cold, to avoid incorrect readings as a result of over-pressure. Do not use parts of recovered wheels as incorrect welding brazing or heating may weaken and eventually cause damage to the wheel.
- Never cut or weld a rim mounted with an inflated tyre.
- To remove the wheels, lock both the front and rear vehicle wheels. After having raised the vehicle, position supports underneath, according to regulations in force.
- Deflate the tyre before removing any objects that may be jammed in the tyre tread.
- Never inflate tyres using inflammable gases; as this may result in explosions and injury to bystanders.

## REMOVAL AND RE-FITTING

- Lift and handle all heavy parts using suitable hoisting equipment. Make sure that parts are sustained by appropriate hooks and slings. Use the hoisting eyebolts for lifting operations. Extra care should be taken if persons are present near the load to be lifted.
- Handle all parts carefully. Do not put your hands or fingers between parts. Wear suitable safety clothing - safety goggles, gloves and shoes.
- Avoid twisting chains or metal cables. Always wear safety gloves when handling cables or chains.

## CONSUMABLES

COMPONENT TO BE FILLED OR TOPPED UP	QUANTITY dm <sup>3</sup> gall. (litres)	RECOMMENDED NEW HOLLAND PRODUCTS	NEW HOLLAND SPECIFICATIONS	INTERNATIONAL SPECIFICATIONS
Cooling system: without cab  with cab	2.64 (10.0)  3.17 (12.0)	Water and <b>AMBRA AGRIFLU liquid 50% + 50%</b>	NH 900 A	-
Windscreen washer bottle .	0.52 (2.0)	Water and <b>AREXONS DP1* liquid*</b>	-	-
Fuel tank:	19.81 (75)	Decanted and filtered diesel fuel	-	-
Engine sump: without filter: .....	1.77 (6.7)	<b>AMBRA SUPER GOLD</b>	NH 324G (SAE 10W-30) NH 330G (SAE 15W-40)	API CF-4/SG CCMC D4 MIL-L-2104E
with filter: .....	1.98 (7.5)	<b>AMBRA SUPER Oil</b>	NH 301C (SAE 10W) NH 302C (SAE 10W) NH 303C (SAE 10W) NH 304C (SAE 10W)	API CCMC D4 MIL-L-2104C
Brake circuit .....	0.18 (0.7)	<b>AMBRA BRAKE LHM oil</b>	NH 610 A	ISO 7308
With front brakes .....	0.13 (0.5)			
Front axle: axle casing .....	1.18 (4.5)	<b>AMBRA MULTI G oil</b>	NH 410 B	API GL4 ISO 32/46 SAE 10W-30
final drives without brakes TN55D/S (each) .....	0.21 (0.8)			
final drives with brakes TN55D/S (each) .....	0.34 (1.3)			
final drives without brakes TN65, TN70D/S TN75D/S (each) .....	0.26 (1.0)			
final drives with brakes TN65, TN70D/S TN75D/S (each) .....	0.40 (1.5)			
Rear transmission (bevel drive, final drives and brakes), gearbox, hydraulic lift, PTO and hydraulic steering: .....	11.09 (42)			
Grease fittings .....	-	<b>AMBRA GR9 grease</b>	NH 710 A	NLGI 2
Air conditioning system - coolant .....	- 0.21 (0.80)	-	-	R-134a SPA
- oil .....	0.04 (0.15)			

(\* Detergent and anti-freeze to -10 °C with 50% of AREXONS DP1 **liquid**. For temperatures below -10 °C) fill only with AREXONS DP1 **liquid**.

**SECTION 10 - ENGINE****Chapter 1 - Engine****CONTENTS**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>10 000</b>	General specifications .....	2
	Main data .....	5
	Torque settings .....	20
	Tools .....	21
	Sections .....	23
	Lubrication and cooling system diagrams .....	25
	Troubleshooting .....	27
<b>10 001 10</b>	Engine. Removal - Installation .....	31
<b>10 001 30</b>	Compression test .....	33
<b>10 001 54</b>	Engine. Disassembly - Assembly .....	34
<b>10 101 53</b>	Valve guides. Replacement .....	69
<b>10 101 60</b>	Injector sleeve. Replacement .....	72
<b>10 102 70</b>	Front engine oil seal. Removal-refitting .....	74
<b>10 106 12</b>	Valve rocker arm clearance adjustment .....	76
<b>10 218 30</b>	Engine injectors. Removal-refitting .....	78
<b>10 246 14</b>	Bosch injection pump. Removal-Refitting timing and air bleeding check .....	80
<b>10 254 44</b>	Exhaust pipe. Removal-Refitting .....	86
<b>10 402 11</b>	Coolant pump. Removal-Refitting with radiator removed .....	87
<b>10 402 28</b>	Coolant pump. Overhaul .....	88
<b>10 402 30</b>	Thermostat. Removal-Refitting .....	89
<b>10 406 10</b>	Radiator. Removal-Refitting .....	91

<b>GENERAL SPECIFICATIONS</b>	
Engine, technical type:	
- Models TN 55D and TN 55S - type 8035.05B.231/229/529 (BOSCH pump)	See data on page 6-7
- Models TN 65D and TN 65S - type 8035.05R.241/239/539 (BOSCH pump)	See data on page 8-9
- Models TN 70D and TN 70S - type 8035.25R.220/520 (BOSCH pump) . .	See data on page 95-96
- Models TN 75D and TN 75S - type 8035.25.231/229/529 (BOSCH pump)	See data on page 10-11
Cycle . . . . .	diesel, 4-stroke
Injection . . . . .	direct
Number of on-line cylinders . . . . .	3
Cylinder liners . . . . .	dry force-fitted in cylinder block
Piston diameter	
- Models TN 55D and TN 55S . . . . .	4.094 in. (104 mm)
- Models TN 65D and TN 65S . . . . .	4.094 in. (104 mm)
- Models TN 70D and TN 70S . . . . .	4.094 in. (104 mm)
- Models TN 75D and TN 75S . . . . .	4.094 in. (104 mm)
Piston stroke . . . . .	4.527 in. (115 mm)
Total displacement:	
- Models TN 55D and TN 55S . . . . .	2931 cm <sup>3</sup>
- Models TN 65D and TN 65S . . . . .	2931 cm <sup>3</sup>
- Models TN 70D and TN 70S . . . . .	2931 cm <sup>3</sup>
- Models TN 75D and TN 75S . . . . .	2931 cm <sup>3</sup>
Compression ratio for Models TN 55D, TN 55S, TN 65D and TN 65S . . . . .	17:1 normally aspirated
Compression ratio for Models TN 70D, TN 70S, TN 75D and TN 75S . . . . .	16.5:1 turbocharged
Maximum power:	
- Models TN 55D and TN 55S . . . . .	37 kW (50 Hp)
- Models TN 65D and TN 65S . . . . .	44 kW (60 Hp)
- Models TN 70D and TN 70S . . . . .	51 kW (70 Hp)
- Models TN 75D and TN 75S . . . . .	53 kW (72 Hp)
Maximum power speed . . . . .	2300 rpm
Maximum torque speed for Models TN 55D and TN 55S . . . . .	1400 rpm
Maximum torque speed for Models TN 65D and TN 65S . . . . .	1400 rpm
Maximum torque speed for Models TN 70D and TN 70S . . . . .	1400 rpm
Maximum torque speed for Models TN 75D and TN 75S . . . . .	1400 rpm
Number of main bearings . . . . .	4
Sump pan . . . . .	structural, cast iron

(continued)

(cont)

<b>GENERAL SPECIFICATIONS</b>	
<b>Lubrication</b> .....	forced, with gear pump
Pump drive .....	camshaft
Engine speed/oil pump speed ratio .....	2:1
Oil cleaning .....	mesh filter on oil intake and filtering cartridge on delivery line
Normal oil pressure with motor warmed-up and running at maximum speed 203° to 221 °F (95° to 105 °C):	
For Models TN 55D/S and TN 65D/S .....	42.06 to 56.56 psi (2.9 to 3.9 bar)
For Models TN 70D/S and TN 75D/S (start operation) .....	≥ 29 psi (≥ 2 bar)
Pressure relief valve .....	incorporated in oil pump housing
Valve initial opening pressure .....	50.76 psi (3.5 bar)
For further lubrication technical data .....	see page 19
<b>Cooling system</b> .....	coolant circulation
Radiator on Models TN 55D/S and TN 65D/S .....	3 lines of vertical pipes with copper fins
Radiator on model. TN 70D/S and TN 75D/S .....	4 lines of vertical copper pipes
Fan, attached to coolant pump pulley .....	intake, 6-blade in sheet-metal
Coolant pump .....	centrifugal vane-type
Engine speed/coolant pump speed ratio .....	1:1.25
Temperature control .....	thermostat
Coolant thermometer .....	coloured scale divided into 3 sections
Temperature ranges corresponding to each section:	
- initial white section .....	86° to 149 °F (30° to 65 °C)
- middle green section (normal working conditions) .....	149° to 221 °F (65° to 105 °C)
- final red section .....	221° to 239 °F (105° to 115 °C)
For further cooling system technical data .....	see page 19
<b>Speedometer/tachometer</b> .....	incorporated in control panel
Operating system .....	from gear on camshaft
Hour counter calibrated for engine speed of .....	1800 rpm

(continued)



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

(cont)

GENERAL SPECIFICATIONS	
<p><b>Timing system</b></p> <p>Intake:</p> <ul style="list-style-type: none"> <li>- start: before TDC. .... 12°</li> <li>- end: after BDC. .... 31°</li> </ul> <p>Drain:</p> <ul style="list-style-type: none"> <li>- start: before BDC. .... 50°</li> <li>- end: after TDC. .... 16°</li> </ul> <p>Valve-rocker arm clearance for timing check ..... 0.0177 in. (0.45 mm)</p> <p>Valve-rocker arm clearance (with engine cold):</p> <ul style="list-style-type: none"> <li>- intake ..... 0.011 ± 0.0019 mm (0.30 ± 0.05 mm)</li> <li>- exhaust ..... 0.011 ± 0.0019 mm (0.30 ± 0.05 mm)</li> </ul> <p>For further timing system technical data ..... see page 16</p>	<p>overhead valves operated by tappets, rods and rocker arms via the camshaft located in the engine block; the camshaft is driven by the crankshaft using helical gears</p>
<p><b>Fuel system</b></p> <p>Air cleaning ..... dual cartridge dry air filter, with clogged filter indicator with centrifugal pre-filter and automatic dust ejector</p> <p>Charge Pump ..... double diaphragm</p> <p>Fuel filtering ..... through wire filter in fuel supply pump, and replaceable cartridge on delivery line to injection pump</p> <p>Minimum fuel flow rate with pump shaft rotating at 1600 rpm . 100 litres/hour</p> <p>Cam operated ..... engine timing</p> <p>BOSCH injection pump ..... rotating distributor type</p> <p>All-speed governor, incorporated in pump:</p> <p>BOSCH ..... centrifugal counterweights</p> <p>Automatic advance regulator, incorporated in pump:</p> <p>BOSCH ..... hydraulic</p> <p>For further fuel system technical data:</p> <p>Fixed advance (pump setting for start of delivery before TDC)</p> <ul style="list-style-type: none"> <li>- Pressure setting - Injection order, and other information regarding the BOSCH pump ..... refer to the data for the relevant engine type in the table on page 2</li> </ul>	

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**