



E16 - E18

**WORKSHOP MANUAL
ENGLISH**

Print No. 604.13.396

Edition: 01/2005
English - Printed in Italy

Printed by Studio ti - 12105

AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individuals to follow simple and fundamental safety rules or precautions. For this reason **MOST ACCIDENTS CAN BE PREVENTED** by recognising the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

Carefully read indications, cautions and safety warning quoted in the "SAFETY RULES" section.

A careful operator is the best insurance against an accident.

The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

Never attempt to clean, oil or adjust a machine while it is in motion.



ATTENTION

On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.

If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.

COPYRIGHT BY NEW HOLLAND KOBELCO CONSTRUCTION MACHINERY S.p.A.

Product Support - Documentation Centre

Strada di Settimo, 323 - 10099 - S. Mauro T.SE (TO) ITALY

All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

E16 - E18

SECTION 1	HOW TO USE
------------------	-------------------

INDEX

Sections index	1-1
Introduction	1-4
Manual handling	1-4
Symbols and indications	1-5
Features of the manual	1-6
Manual composition	1-6
Brief information for manual consultation	1-8

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SECTIONS INDEX	PAGES
SECTION 1 - HOW TO USE	
Sections index	1-1
Introduction	1-4
Features of the manual	1-5
SECTION 2 - SAFETY RULES	
Safety rules	2-1
Safety signs	2-38
SECTION 3 - PRELIMINARY	
General precautions for repairs	3-1
Escaping procedure in case of emergency	3-6
International unit conversion system	3-7
SECTION 4 - SPECIFICATION	
Foreword	4-1
Identification data	4-2
Noise levels (2000/14/EC)	4-3
Summary plate for maintenance operations	4-4
Basic components of the mini excavator	4-5
Technical specifications	4-7
Digging performances (canopy)	4-8
Digging performances (cab)	4-9
Transport dimensions (canopy)	4-10
Transport dimensions (cab)	4-11
Lifting capacities (cab)	4-12
Lifting capacities (canopy)	4-13
Machine and components weight (dry)	4-14
Buckets application	4-15
Filling chart	4-16
SECTION 5 - TOOLS	
Tools of cylinders	5-1
Tool of hydraulic pump	5-4
Tool of pilot valve track	5-4
Tool of roller track	5-4
Tool of idler adjuster	5-5
Tools of engine	5-5
Tools of travel motor	5-8
SECTION 6 - STANDARD MAINTENANCE TIME TABLE	
Preface	6-1
Standard working time table for the maintenance	6-2
SECTION 7 - MAINTENANCE STANDARDS AND TEST PROCEDURES	
How to use maintenance standards and precautions	7-1
Performance inspection standard table	7-2
Measuring engine speed	7-4
Measuring hydraulic oil pressure	7-5
Measuring travel performances	7-8
Measuring slew performances	7-10
Measuring attachment operating performances	7-12
Measuring slew bearing performances	7-14
Measuring crawler tension	7-15

SECTION 8 - HYDRAULIC SYSTEM

Function and features of hydraulic circuit 8-1
 Hydraulic circuits and components 8-2
 Hydraulic circuit operation 8-6

SECTION 9 - ELECTRICAL SYSTEM

How to read circuit diagram 9-1

SECTION 10 - ATTACHMENT

Attachment assy and name 10-1
 Bucket 10-2
 Arm 10-5
 Boom 10-10
 Swing 10-15
 Dozer 10-22
 Hydraulic cylinders 10-26

SECTION 11 - UPPER STRUCTURE

Canopy 11-1
 Cab 11-4
 Guard 11-6
 Floor plate 11-10
 Battery 11-13
 Counterweight 11-14
 Fuel tank 11-17
 Hydraulic oil tank 11-20
 Air cleaner 11-25
 Muffler 11-27
 Hydraulic pump 11-28
 Radiator 11-43
 Engine 11-47
 Control valve 11-49
 Solenoid valve 11-84
 Pilot valve 11-86
 Pilot valve travel 11-96
 Slew motor 11-105
 Joint swivel 11-139
 Selector valve 11-154
 Upper frame 11-159

SECTION 12 - TRAVEL SYSTEM

Low structure 12-1
 Crawler 12-3
 Slide plate 12-12
 Roller tracks 12-14
 Idler adjuster 12-19
 Sprocket 12-28
 Travel motor 12-29
 Slew bearing 12-71
 Lower frame 12-76

SECTION 13 - TROUBLESHOOTING HYDRAULIC SYSTEM

General precautions 13-1
 Trouble diagnosis: Hydraulic 13-2
 Troubleshooting 13-3

SECTION 14 - TROUBLESHOOTING ELECTRICAL SYSTEM

Trouble diagnosis: Electrical 14-1
 Troubleshooting 14-2

SECTION 15 - TROUBLESHOOTING ENGINE

Trouble diagnosis: Engine	15-1
Troubleshooting	15-2

SECTION 16 - ENGINE

Specifications and Performance	16-1
Cross Sectional Views	16-15
Cooling water, lubricating oil and fuel oil	16-17
Troubleshooting	16-21
Measuring instruments	16-25
Measurement, inspection and adjustment	16-29
Adjustment the valve head clearance	16-31
Checking the v-belt tension	16-32
Measuring and checking the injection pressure and spray patterns of the fuel injection valve	16-32
Checking and adjustment the fuel injection timing	16-36
Adjustment the no-load maximum (or minimum) revolutions	16-38
Checking the cooling water system and radiator for water leakage	16-38
Checking the battery	16-39
Checking the sensors	16-41
Checking the oil cooler	16-42
Checking the piston cooling nozzle	16-43
Measuring Procedure, Service Data and Corrective Action	16-45
Disassembly and reassembly	16-73
Service data	16-83
Tightening torque	16-89
Fuel injection pump for indirect injection system	16-91
Fuel Injection Pump for Direct Injection System	16-97
Governor	16-111
Turbocharger	16-123

INTRODUCTION


INTRODUCTION

This service manual has been prepared in order to increase repair quality, providing to the technicians the elements for a good knowledge of the product and showing the proper procedures to carry out the maintenance operations. We recommend to thoroughly read the content and follow it when necessary.

It is a concise guide. It covers construction features, operation principle, troubleshooting, disassembly and assembly of components and repair action.

Using this manual in systematic and rational way it is possible to reduce the repairing errors and delay that could cause machine stop with a detriment of cost management.

The information quoted in this service manual are supplied also to be used for training aids. Therefore it is advisable to be used in the training of new personnel that will be employed in the machine maintenance.

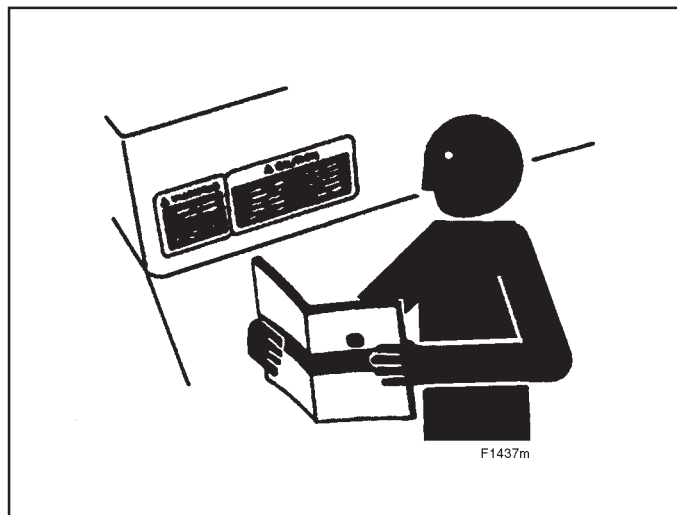

All the information, illustrations and specifications contained in this service manual are based on the latest product information available at the time of publication.

The dealer reserves the right to makes changes at any time without notice to this service manual for technical or trading reasons.

MANUAL HANDLING

CHANGES AND SUPPLEMENTS

This service manual is carried out in loose-leaf and therefore can be easily kept up-to-date.

The personnel in charge is responsible for updating the manual and will insert the changes or supplements that the Dealer will issue to its service organisation.

SYMBOLS AND INDICATIONS

In this service manual, symbols and indications are used to draw the attention on important points for safety and quality.

SAFETY

This safety symbol is used for important safety message. When you see this symbol, be alert to the potential for personal injury. Strictly follow the recommended precautions.



INDICATIONS

Reading this service manual you can find indications as “**IMPORTANT**” or “**NOTE**” that have the following meaning:

- **IMPORTANT**
Indicates a situation which, if not avoided, could caused damages to the machine.
- **Note**
Indicates supplementary technical information or know-how.

FEATURES OF THE MANUAL

MANUAL COMPOSITION

This service manual is divided into ten Sections. The Section names and its contents are as below. To fully use this service manual it is essential to understand how it is organised. Therefore, in order to speed up the searching of wished subject, it is advisable to carefully read this chapter.

SECTION 1 - HOW TO USE

Begin to read first this Section to know the manual composition. This will help you for subject searching.

SECTION 2 - SAFETY RULES

Indication on how to avoid dangerous situation during the use and maintenance are given in this Section. Furthermore safety decals and related indications used on the machine are listed on this Section.

SECTION 3 - PRELIMINARY

This Section contains the information related to general precautions for repairs and escaping procedure in case of emergency.

SECTION 4 - SPECIFICATION

This Section quotes the specification and data of the machine.

SECTION 5 - TOOLS

This Section contains the list of special tools.

SECTION 6 - STANDARD MAINTENANCE TIME TABLE

SECTION 7 - MAINTENANCE STANDARDS AND TEST PROCEDURES

SECTION 8 - HYDRAULIC SYSTEM

This Section describes the operation of the machine from hydraulic point of view.

SECTION 9 - ELECTRICAL SYSTEM

This Section describes the electric system of the machine and the connection with the electrical users.

SECTION 10 - ATTACHMENT

This Section describes the attachments and its components and maintenance rules with related disassembly/assembly.

SECTION 11 - UPPER STRUCTURE

This Section contains the information related to the operation principle of the system, of the assemblies and their components located on the machine upper frame.

Further more the assembly/disassembly procedures of main devices are quoted.

SECTION 12 - TRAVEL SYSTEM

This Section contains the information related to the operation principle of the system, of the assemblies and their components located on the machine travel system.

Further more the assembly/disassembly procedures of main devices are quoted.

SECTION 13 - TROUBLESHOOTING HYDRAULIC SYSTEM

In this section information is provided for troubleshooting the hydraulic system.

SECTION 14 - TROUBLESHOOTING ELECTRICAL SYSTEM

In this section information is provided for troubleshooting the electric system.

SECTION 15 - TROUBLESHOOTING ENGINE

In this section information is provided for troubleshooting the engine.

SECTION 16 - ENGINE

This section describes specifications, performance, measurement, inspection, disassembly/assembly and service data of engine.

E16 - E18

SECTION 2	SAFETY PRECAUTIONS
------------------	---------------------------

INDEX

Safety rules2-1
Safety signs2-38



SAFETY PRECAUTIONS

SAFETY PRECAUTIONS

GENERALITIES

Read the Operation and Maintenance Instruction Manual carefully before starting, operating, maintaining, fuelling or servicing the machine.

Carefully read the explanation to each and all safety signs in the special section of this Manual before starting, operating, maintaining, fuelling or servicing the machine.

Machine-mounted safety plates are colour coded yellow with black borders when they refer to points where special **WARNING** must be paid and failure to observe them may cause a serious **DANGER** to the integrity of machine operators.

They are white with red borders and black lettering when they refer to a **FORBIDDEN** practice.

It is fundamental that all machine operators know very well the meaning of each safety plate as this considerably decreases operating hazards and accidents.

Do not allow unauthorised personnel to operate or service this machine.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts.

Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators every time the job requires it.

Ask your employer about safety regulations in force and protective equipment.

Always keep the operator's compartment, step plates, grab-rails and handles clean and clear of foreign objects, oil, grease, mud or snow to minimise the danger of slipping or stumbling.

Remove mud or grease from your shoes before operating the machine.

Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and/or grab rails.

Do not use controls or hoses as hand holds.

Hoses and controls are movable parts and do not provide solid support.

Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments.

Never operate the machine or its attachments from any position other than sitting in the driver's seat.

Keep head, body, limbs, hands and feet inside the operator's compartment at all times to reduce exposure to external hazards.

Be careful of possible slippery conditions of the steps and hand rails as well as of the ground around the machine.

Wear protective boots or shoes with the soles made of highly no-slip rubber.

Do not leave the machine until it has come to a complete stop.

Always check height, width and weight limitations which may be encountered in the working site and ensure the machine does not exceed them.

Assess exact paths of gas ducts, water mains, telephone lines, sewers, overhead and underground electric lines and all other possible obstacles.

Such paths should be opportunely defined by competent Authorities.

If necessary, require that the service is interrupted or said installations are moved prior to starting the work.

You must know the working capacity of the machine.

Define the rear upperstructure swing area and provide for opportune barriers to prevent access into it.

Never exceed machine lifting capacity.

Remain within the limits shown in the loading capacity chart located on the machine.

STARTING

Never start or operate a failed machine. Walk all around the machine before mounting.

Before operating the machine, make sure that any possible dangerous condition has been properly removed.

Before starting machine, check that steering and attachment controls are in the neutral position and the safety lever is in the LOCK position.

Immediately report any malfunction of parts or systems to the maintenance managers for proper action.

Prior to starting the engine, check, adjust and lock the driver's seat for maximum riding comfort and control accessibility.

Prior to operating the machine and/or its attachments, check that bystanders are outside the machine operating range. Sound the horn.

Obey all hand signals, safety indications and signs.



SAFETY PRECAUTIONS

Due to the presence of flammable fluids, never check fuel level, refuel, charge the batteries or use the starting fluid in the presence of smoking materials, open flames or sparks.

Ensure that nobody is within the excavator operating area before starting the machine, swinging the upper structure or moving in any direction.

Adjust all rear-view mirrors for maximum visibility of the area behind the machine.

Ensure that engine speed is appropriate to the job to be carried out.

If any hydraulic control or system exhibits erratic performance or responds abnormally, have the machine checked for air in the system.

Air in these circuits may cause incorrect movements with consequent accident hazard.

Refer to the Operation and Maintenance Instruction Manual about corrective action to be taken.

OPERATING

Do not run the engine of this machine in closed buildings without proper ventilation capable to remove harmful exhaust gases which concentrate in the air.

Keep the operator's compartment free of foreign objects, especially if not firmly secured. Never use the machine to transport objects, unless proper securing points are provided.

Do not carry riders on the machine.

Study and familiarise with escape routes alternative to normal exit routes.

For your personal safety, do not climb on or off the machine while it is in motion.

Make sure that bystanders are clear of the machine operating range before starting the engine and operating the attachment. Sound the horn.

Obey all hand signals, safety indications and signs.

When backing, always look to where the machine is to be moved. Be alert of the position of bystanders. Should someone enter the work area, stop the machine.

Maintain a safe distance from other machines or obstacles to ensure required visibility conditions. Always give way to loaded machines.

Maintain a clear vision of the surroundings of the travel or work area at all times.

Keep cab windows clean and repaired.

When pulling loads or towing through a cable or chain, do not start suddenly at full throttle. Take-up

slack carefully.

Avoid kinking or twisting chains or cables.

Carefully inspect cables or chains for flaws or problems before proceeding.

Do not pull through a kinked chain or cable as the high anomalous stresses existing in this condition may induce failures in the kinked portion.

Always wear heavy gloves when handling chains or cables.

Chains and cables should be securely anchored using suitable hooks.

Anchor points should be strong enough to withstand the expected load.

Keep anyone clear of anchor points and cables or chains. **Do not pull or tow unless the operator's compartments of the machines involved are properly protected against possible backlash in case of cable or chain failure or detachment.**

Be alert of soft ground conditions close to newly constructed walls.

The fill material and machine weight may cause the wall to collapse under the machine.

In darkness, check area of operation carefully before moving in with the machine. Use all lights provided.

Do not move into low visibility areas.

If the engine tends to slow down and stall for whatever reason under load or at idle, immediately report this problem to the maintenance managers for proper action.

Do not operate the machine until this condition is corrected.

Regularly check all exhaust system components, as exhaust fumes are toxic for the operator.

Operators must know the performance of the machine they are driving.

When working on slopes or near sudden level drops in the terrain, pay attention not to lose adherence and avoid loose soft ground since overturn or loss of machine control could result.

If noise level is high and exceeds 90 dB(A) over 8 hours at the operator's ear, wear approved ear protection in compliance with local regulations.

Do not operate the machine if you are extremely tired or feel ill.

Be especially careful towards the end of the working shift.

Where removable counterweights are provided, do not operate the machine if they have been removed.

When operating the machine, keep in mind height limits of overhead doors, arches, overhead cables

E16 - E18

SECTION 3	PRELIMINARY REMARKS
------------------	----------------------------

INDEX

General precautions for repairs3-1
Escaping procedure in case of emergency3-6
International unit conversion system3-7

GENERAL PRECAUTIONS FOR REPAIRS

PREPARATION BEFORE DISASSEMBLING

Understanding operating procedure

Read OPERATION & MAINTENANCE MANUAL carefully to understand the operating procedure.

Cleaning machines

Remove soil, mud, and dust from the machine before carrying it into the service shop to prevent loss of work efficiency, damage of parts, and difficulty in rust prevention and dust protection while reassembling.

Inspecting machines

Identify the parts to be disassembled before starting work, determine the disassembling procedure by yourself considering the workshop situations etc., and request procurement of necessary parts in advance.

Recording

Record the following items for communication and prevention of recurring malfunction.

- Inspection date and place.
- Model name, applicable machine number, and hour meter read.
- Trouble condition, place and cause, if any.
- Visible oil leakage, water leakage and damage.
- Clogging of filters, oil level, oil quality, oil contamination and loosening of connections.
- Result of consideration if any problem exists based on the operation rate per month calculated from hour meter indication after the last inspection date.

Arrangement and cleaning in service shop

- Tools required for repair work.
- Prepare space to place the disassembled parts.
- Prepare oil containers for spilling oil etc.

SAFETY IN DISASSEMBLING AND ASSEMBLING

- Wear appropriate clothes with long sleeves, safety shoes, safety helmet and protective glasses.
- Suspend warning tag "DO NOT OPERATE" from the doorknob or the operating lever, and have a preliminary meeting before starting work.
- Stop the engine before starting inspection and maintenance to prevent the operator being caught in machine.
- Identify the location of a first-aid kit and a fire extinguisher, and also where to make contact in a state of emergency.
- Choose a hard, level and safe place, and place the attachment on the ground securely.
- Use a lifter such as a crane to remove heavy parts (20 kg [45 lbs] or more) from the machine.
- Use proper tools, and replace or repair defective tools.
- Support the machine and attachment with supports or blocks if the work is performed in the lifted condition.



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

HYDRAULIC EQUIPMENT DISASSEMBLY/ REASSEMBLY

Hydraulic equipment removal

- Before disconnecting pipes, release the hydraulic pressure of the system, or open the return side cover and take out the filter.
- Carefully drain oil of the removed pipes into a containers without spilling on the floor.
- Apply plugs or caps on the pipe ends to avoid oil spillage and dust intrusion.
- Clean off the external surface of the equipment before disassembling, and drain hydraulic and gear oil before placing it on the workbench.

Hydraulic equipment disassembly

- Do not disassemble, reassemble or modify the hydraulic equipment without the permission of the manufacturer, who is not responsible for the performance and function of the product after reassembling.
- When disassembling and reassembling for unavoidable reason, refer the work to qualified personnel who have the specific knowledge or completed the parts service training.
- Provide matching marks to facilitate reassembling work.
- Before starting the work, read the manual of disassembling procedure, if it is provided, and decide whether the work can be performed by yourself. Use the special jig and tools without fail if they are specified.
- If it is hard to remove a part according to the procedure, do not try it by force but investigate the cause.
- Place the removed parts in order and attach tags to facilitate the reassembling.
- Note the location and quantity of parts commonly applied to multiple locations.

Inspecting parts

- Ensure that the disassembled parts are free from seizure, interference and uneven contact.
- Measure and record wear condition of parts and clearance.
- If the problem is found in a part, repair or replace it with a new one.

Hydraulic equipment reassembly

- Turn ON the ventilation fan or open windows to maintain good ventilation prior to starting the cleaning of parts.
- Perform rough and finish cleaning before assembling.
- Remove washing oil by air and apply clean hydraulic or gear oil for assembling.
- Always replace the removed O-rings, backup rings and oil seals with new ones by applying grease in advance.

- Remove dirt and moisture from and perform degreasing on the surface where liquid gasket to be applied.
- Remove rust preventive agent from the new parts before use.
- Fit bearings, bushings and oil seals using special jigs.
- Assemble the parts utilizing matching marks.
- Ensure all the parts are completely assembled after the work.

Hydraulic equipment installation

- Ensure hydraulic oil and lubricant are properly supplied.
- Perform air bleeding when:
 - Hydraulic oil changed
 - Parts of suction side piping replaced
 - Hydraulic pump installed
 - Slewing motor installed
 - Travel motor installed
 - Hydraulic cylinder installed



WARNING

Operation of the hydraulic equipment without filling hydraulic oil or lubricant or without performing air bleeding will result in damage to the equipment.

- Perform air bleeding of the hydraulic pump and slewing motor after loosening the upper drain plug, starting the engine and keep it in low idle condition. Complete the air bleeding when seeping of hydraulic oil is recognized, and tightly plug.
- Perform air bleeding of the travel motor and the hydraulic cylinders by running the engine for more than 5 minutes at low speed without load.



WARNING

Do not allow the hydraulic cylinder to bottom on the stroke end just after the maintenance.

- Perform air bleeding of pilot line by performing a series of digging, slewing and travel.
- Check hydraulic oil level after placing the attachment to the oil check position, and replenish oil if necessary.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>