

## TJ AND T9000 MASTER TABLE OF CONTENTS

### THIS MANUAL, 84257310, COVERS THE FOLLOWING TRACTORS:

**TJ 280, 330, 380, 430, 480, and 530 Series**

**T9010, 9020, 9030, 9040, 9050, and 9060 Series**

**T9020, 9030, 9040, 9050, and 9060 Series After S/N Z7F204001**

**NOTE:** *Engine repair information is not contained within this tractor Service Manual. For engine repair, refer to appropriate engine service manual as follows:*

**87515682** - *For 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.*

**87523643** - *For 12.9L 6 Cylinder, Engine.*

**87737594** - *For 12.9L 6 Cylinder, Turbo Compound Engine.*

STANDARD TORQUE SPECIFICATION.....	SECTION 00, CHAPTER 1 (Book 1 - 87525642)
SAFETY.....	SECTION 00, CHAPTER 2 (Book 1 - 87525642)
LUBRICATION AND MAINTENANCE.....	SECTION 00, CHAPTER 3 (Book 1 - 87525642)
ENGINE LUBRICATION .....	00-3-3
Engine Oil Selection .....	00-3-3
Synthetic Lubricants .....	00-3-3
Engine Oil Viscosity/Temperature Usage Recommendation .....	00-3-3
Engine Coolant Solutions .....	00-3-4
LUBRICANTS AND CAPACITIES .....	00-3-5
LUBRICATION AND MAINTENANCE CHART .....	00-3-6
SPECIFICATIONS.....	SECTION 00, CHAPTER 4 (Book 1 - 87525642)
DIESEL ENGINE .....	00-4-3
ENGINE LUBRICATION SYSTEM .....	00-4-3
FUEL SYSTEM .....	00-4-3
AIR INTAKE SYSTEM .....	00-4-3
TRANSMISSION - POWER SHIFT .....	00-4-4
TRANSMISSION - MANUAL SHIFT .....	00-4-4
BRAKES .....	00-4-4
AXLE DIFFERENTIAL AAND FINAL DRIVES .....	00-4-4
POWER TAKEOFF (IF EQUIPPED) .....	00-4-4
HYDRAULIC SYSTEM .....	00-4-5
MEGAFLOW HYDRAULICS (IF EQUIPPED) .....	00-4-5
HITCH SYSTEM (IF EQUIPPED) .....	00-4-5
DRAWBAR .....	00-4-5
TRACTOR WEIGHTS .....	00-4-6
Approximate Base Shipping Weights .....	00-4-6
Approximate Component Weights .....	00-4-6
MAXIMUM TRACTOR OPERATING WEIGHT .....	00-4-6
ENGINE REMOVAL AND INSTALLATION -	
TJ380/430 TRACTORS.....	SECTION 10, CHAPTER 1 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-1-3
RECOMMENDED TOOLS .....	10-1-3
ENGINE REMOVAL .....	10-1-4
ENGINE INSTALLATION .....	10-1-13

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### ENGINE REMOVAL AND INSTALLATION -

TJ280/330 TRACTORS.....	SECTION 10, CHAPTER 2 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-2-2
SPECIAL TOOLS .....	10-2-2
ENGINE REMOVAL .....	10-2-3
ENGINE INSTALLATION .....	10-2-10

### ENGINE REMOVAL AND INSTALLATION -

TJ480/530 TRACTORS.....	SECTION 10, CHAPTER 3 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-3-2
RECOMMENDED TOOLS .....	10-3-2
ENGINE REMOVAL .....	10-3-3
ENGINE INSTALLATION .....	10-3-13

### AIR INDUCTION SYSTEM - TJ380/430 TRACTORS.....

SECTION 10, CHAPTER 4 (Book 1 - 87525642)	
SPECIAL TORQUE VALUES .....	10-4-2
AIR INDUCTION SYSTEM .....	10-4-3
AIR INDUCTION SYSTEM DESCRIPTION .....	10-4-4
AIR INDUCTION SYSTEM .....	10-4-4
AIR FILTER ELEMENTS .....	10-4-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL .....	10-4-5
PRIMARY FILTER ELEMENT SERVICE .....	10-4-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-4-8
AIR CLEANER HOUSING REMOVAL .....	10-4-9
ASPIRATOR STRATA TUBE CLEANING .....	10-4-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-4-11
ASPIRATOR SAFETY VALVE INSTALLATION .....	10-4-11
AIR CLEANER HOUSING INSTALLATION .....	10-4-12
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-4-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-4-13

### AIR INDUCTION SYSTEM - TJ280/330 TRACTORS.....

SECTION 10, CHAPTER 5 (Book 1 - 87525642)	
SPECIAL TORQUE VALUES .....	10-5-3
AIR INDUCTION SYSTEM .....	10-5-4
AIR FILTER ELEMENTS .....	10-5-4
ENGINE AIR INDUCTION SYSTEM .....	10-5-5
Primary And Secondary Filter Element Removal .....	10-5-5
PRIMARY FILTER ELEMENT SERVICE .....	10-5-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-5-7
AIR CLEANER HOUSING REMOVAL .....	10-5-8
Aspirator Strata Tube Cleaning .....	10-5-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-5-12
ASPIRATOR SAFETY CHECK VALVE INSTALLATION .....	10-5-13
AIR CLEANER HOUSING INSTALLATION .....	10-5-14
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-5-15
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-5-16

### AIR INDUCTION SYSTEM - TJ480/530 TRACTORS.....

SECTION 10, CHAPTER 6 (Book 1 - 87525642)	
SPECIAL TORQUE VALUES .....	10-6-2
AIR INDUCTION SYSTEM .....	10-6-3
AIR FILTER ELEMENTS .....	10-6-4
Primary And Secondary Filter Element Removal .....	10-6-5
PRIMARY FILTER ELEMENT SERVICE .....	10-6-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-6-8
AIR CLEANER HOUSING REMOVAL .....	10-6-9
ASPIRATOR STRATA TUBE CLEANING .....	10-6-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-6-11

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

ASPIRATOR SAFETY VALVE INSTALLATION .....	10-6-11
AIR CLEANER HOUSING INSTALLATION .....	10-6-12
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-6-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-6-13
VISCOUS FAN DRIVE - TJ280/330/380/430, HYD FAN DRIVE TEST - TJ480/530 .....	SECTION 10, CHAPTER 7 (Book 1 - 87525642)
VISCOUS FAN DRIVE TEST - TJ280, TJ330, TJ380, TJ430 .....	10-7-3
HYDRAULIC FAN DRIVE TEST - TJ480, TJ530 .....	10-7-5
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ280/330 .....	SECTION 10, CHAPTER 8 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-8-2
GENERAL INFORMATION .....	10-8-3
FUEL COOLER REMOVAL .....	10-8-3
FUEL COOLER INSTALLATION .....	10-8-4
ENGINE AIR TO AIR COOLER REMOVAL .....	10-8-6
AIR TO AIR COOLER INSTALLATION .....	10-8-9
A/C CONDENSER REMOVAL .....	10-8-12
A/C CONDENSER INSTALLATION .....	10-8-13
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL .....	10-8-15
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION .....	10-8-17
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-8-20
RADIATOR AND COOLER ASSEMBLY INSTALLATION .....	10-8-27
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ480/530 .....	SECTION 10, CHAPTER 9 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-9-3
GENERAL INFORMATION .....	10-9-3
FUEL COOLER REMOVAL .....	10-9-4
FUEL COOLER INSTALLATION .....	10-9-4
ENGINE AIR TO AIR COOLER REMOVAL .....	10-9-5
ENGINE AIR TO AIR COOLER INSTALLATION .....	10-9-7
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL .....	10-9-9
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION .....	10-9-10
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-9-12
RADIATOR/COOLER DISASSEMBLY .....	10-9-19
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ380/430 .....	SECTION 10, CHAPTER 10 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-10-2
GENERAL INFORMATION .....	10-10-3
ENGINE AIR TO AIR COOLER REMOVAL .....	10-10-4
AIR TO AIR COOLER INSTALLATION .....	10-10-6
A/C CONDENSER REMOVAL .....	10-10-7
A/C CONDENSER INSTALLATION .....	10-10-8
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL .....	10-10-10
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION .....	10-10-12
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-10-15

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

AIR INDUCTION SYSTEM, T9030, 9040 and 9050 Tractors, S/N Z7F204001 and After.....	SECTION 10, CHAPTER 11 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-11-2
AIR INDUCTION SYSTEM .....	10-11-3
AIR INDUCTION SYSTEM DESCRIPTION .....	10-11-4
AIR INDUCTION SYSTEM .....	10-11-4
AIR FILTER ELEMENTS .....	10-11-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL .....	10-11-5
PRIMARY FILTER ELEMENT SERVICE .....	10-11-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-11-8
AIR CLEANER HOUSING REMOVAL .....	10-11-9
ASPIRATOR STRATA TUBE CLEANING .....	10-11-11
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-11-12
ASPIRATOR SAFETY VALVE INSTALLATION .....	10-11-12
AIR CLEANER HOUSING INSTALLATION .....	10-11-13
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-11-14
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-11-15
ENGINE REMOVAL AND INSTALLATION, T9050 TRACTOR, S/N Z7F204001 AND AFTER .....	SECTION 10, CHAPTER 12 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-12-3
RECOMMENDED TOOLS .....	10-12-3
ENGINE REMOVAL .....	10-12-4
ENGINE INSTALLATION .....	10-12-15
RADIATOR, COOLERS AND CONDENSER REMOVE AND INSTALL, T9050 TRACTOR .....	SECTION 10, CHAPTER 13 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-13-3
ENGINE AIR TO AIR COOLER REMOVAL .....	10-13-4
ENGINE AIR TO AIR COOLER INSTALLATION .....	10-13-6
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL .....	10-13-8
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION .....	10-13-9
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-13-11
RADIATOR/COOLER DISASSEMBLY .....	10-13-18
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ280/330.....	SECTION 21, CHAPTER 1 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-1-2
SPECIAL TOOLS .....	21-1-2
TRANSMISSION REMOVAL .....	21-1-3
TRANSMISSION INSTALLATION .....	21-1-9
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ380/430/480/530.....	SECTION 21, CHAPTER 2 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-2-3
SPECIAL TOOLS .....	21-2-3
TRANSMISSION REMOVAL .....	21-2-4
TRANSMISSION INSTALLATION .....	21-2-10
ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ280/330 .....	SECTION 21, CHAPTER 3 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-3-2
DRIVE COUPLER REMOVAL .....	21-3-3
DRIVE COUPLER INSTALLATION .....	21-3-5

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ480/530 .....	SECTION 21, CHAPTER 4 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-4-2
DRIVE COUPLER REMOVAL .....	21-4-3
DRIVE COUPLER INSTALLATION .....	21-4-6
16 SPEED POWERSHIFT TRANSMISSION REPAIR.....	SECTION 21, CHAPTER 5 (Book 2 - 87525640)
SPECIFICATIONS .....	21-5-3
SPECIAL TORQUE VALUES .....	21-5-3
SPECIAL TOOLS .....	21-5-4
TRANSMISSION DISASSEMBLY .....	21-5-7
INPUT (FIRST) SHAFT DISASSEMBLY .....	21-5-18
PUMP (SECOND) SHAFT DISASSEMBLY .....	21-5-27
MASTER CLUTCH (FOURTH) SHAFT DISASSEMBLY .....	21-5-33
OUTPUT (FIFTH) SHAFT DISASSEMBLY .....	21-5-41
COUNTER (THIRD) SHAFT DISASSEMBLY .....	21-5-48
CLEANING AND INSPECTION .....	21-5-50
CLUTCH PACK CLEARANCE AND CLUTCH PACK TRAVEL TEST .....	21-5-52
1F, 1R, 2F AND 2R CLUTCH GEAR BEARING PRELOAD TEST .....	21-5-55
INPUT (FIRST) SHAFT ASSEMBLY .....	21-5-58
PUMP (SECOND) SHAFT ASSEMBLY .....	21-5-72
MASTER CLUTCH (FOURTH) SHAFT ASSEMBLY .....	21-5-82
OUTPUT (FIFTH) SHAFT ASSEMBLY .....	21-5-96
COUNTER (THIRD) SHAFT BEARING ASSEMBLY .....	21-5-107
TRANSMISSION ASSEMBLY .....	21-5-110
16 SPEED POWERSHIFT TRANSMISSION - HOW IT WORKS ..	SECTION 21, CHAPTER 6 (Book 2 - 87525640)
GENERAL DESCRIPTION OF OPERATION .....	21-6-3
Regulator Valve .....	21-6-4
Lube Regulator Valve .....	21-6-5
Master Clutch Lube Valve .....	21-6-5
Range Selector Valve .....	21-6-6
MASTER CLUTCH CONTROL VALVE .....	21-6-7
Transmission Power Flow .....	21-6-8
Default Settings .....	21-6-8
Helical-cut Gears .....	21-6-8
Shifting The Powershift Transmission .....	21-6-9
REAR DRIVE LINE AND CARRIER BEARING.....	SECTION 21, CHAPTER 7 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-7-2
REAR DRIVE LINE AND CARRIER BEARING REMOVAL .....	21-7-3
REAR DRIVE LINE AND CARRIER BEARING INSTALLATION .....	21-7-5
CHARGE PUMP REPAIR FOR 16-SPEED POWERSHIFT TRANSMISSION .....	SECTION 21, CHAPTER 8 (Book 2 - 87525640)
SPECIFICATIONS .....	21-8-3
SPECIAL TORQUE VALUES .....	21-8-3
PUMP DISASSEMBLY .....	21-8-4
PUMP ASSEMBLY .....	21-8-7

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

24 SPEED MANUAL TRANSMISSION REMOVAL AND INSTALLATION .....	SECTION 21, CHAPTER 9 (Book 2 - 87525640)
SPECIAL TOOLS .....	21-9-3
SPECIAL TORQUE VALUES .....	21-9-3
24 SPEED TRANSMISSION REMOVAL .....	21-9-4
24 SPEED TRANSMISSION INSTALLATION .....	21-9-13
MASTER CLUTCH ADJUSTMENT .....	21-9-23
SHIFT LEVER LINKAGE ADJUSTMENT .....	21-9-24
ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ380/430 .....	SECTION 21, CHAPTER 10 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-10-2
DRIVE COUPLER REMOVAL .....	21-10-3
DRIVE COUPLER INSTALLATION .....	21-10-6
24 SPEED MANUAL TRANS HOW IT WORKS/ PRESSURE TESTING/REPAIR.....	SECTION 21, CHAPTER 11 (Book 2 - 87525640)
SPECIFICATIONS .....	21-11-4
SPECIAL TORQUE VALUES .....	21-11-5
SPECIAL TOOLS .....	21-11-6
PRESSURE TESTING SPECIFICATIONS .....	21-11-8
GENERAL SETUP PROCEDURE .....	21-11-9
TRANSMISSION PRESSURE TEST PORT LOCATIONS .....	21-11-11
TESTING THE LUBRICATION PRESSURE .....	21-11-13
TRANSMISSION SERIAL NUMBER IDENTIFICATION .....	21-11-14
TRANSMISSION LUBRICATION CIRCUIT .....	21-11-15
TRANSMISSION OIL FLOW CHART .....	21-11-16
DESCRIPTION OF OPERATION .....	21-11-20
TRANSMISSION POWER FLOW .....	21-11-24
STARTING IN A FORWARD SPEED .....	21-11-26
STARTING IN A REVERSE SPEED .....	21-11-27
TROUBLESHOOTING GUIDE .....	21-11-35
NEUTRAL SAFETY SWITCH ADJUSTMENT .....	21-11-40
TRANSMISSION SPEED SENSOR ADJUSTMENT .....	21-11-40
TRANSMISSION DISASSEMBLY .....	21-11-41
SHIFT LEVER SEAL REPLACEMENT .....	21-11-53
INPUT SHAFT DISASSEMBLY .....	21-11-54
INPUT SHAFT ASSEMBLY .....	21-11-59
PUMP SHAFT DISASSEMBLY .....	21-11-72
PUMP SHAFT ASSEMBLY .....	21-11-75
SPEED SHAFT DISASSEMBLY .....	21-11-81
SPEED SHAFT ASSEMBLY .....	21-11-84
CENTER SHAFT DISASSEMBLY .....	21-11-88
CENTER SHAFT ASSEMBLY .....	21-11-90
RANGE SHAFT DISASSEMBLY .....	21-11-94
RANGE SHAFT ASSEMBLY .....	21-11-967
TRANSMISSION ASSEMBLY .....	21-11-100
HIGH-LOW CLUTCH CONTROL ASSEMBLY .....	21-11-118
HIGH-LOW CONTROL VALVE DISASSEMBLY .....	21-11-119
REGULATOR VALVE ASSEMBLY .....	21-11-121
REGULATOR VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-122
MASTER CLUTCH CONTROL VALVE ASSEMBLY .....	21-11-123
MASTER CLUTCH CONTROL VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-124
LOCKOUT VALVE ASSEMBLY .....	21-11-126
LOCKOUT VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-127
MASTER CLUTCH CABLE ADJUSTMENT .....	21-11-128

## TJ AND T9000 MASTER TABLE OF CONTENTS

16-SPEED POWERSHIFT TRANSMISSION - PRESSURE TESTING AND TROUBLESHOOTING .....	SECTION 21, CHAPTER 12 (Book 2A - 87740916)
RECOMMENDED TOOLS .....	21-12-3
SPECIAL TORQUE VALUES .....	21-12-4
TRANSMISSION TROUBLESHOOTING .....	21-12-5
Important General Information .....	21-12-5
Fault Code Retrieval .....	21-12-5
Fault Codes Recorded .....	21-12-6
No Fault Codes Recorded .....	21-12-7
Solenoid Swap Test .....	21-12-8
CLUTCH TEST PORT IDENTIFICATION .....	21-12-9
Transmission Clutch Pressure Test .....	21-12-10
TEST PORT IDENTIFICATION .....	21-12-15
PRESSURE TEST SPECIFICATIONS AND WORKSHEETS .....	21-12-16
LUBE TEST PORT IDENTIFICATION .....	21-12-19
LUBRICATION CIRCUIT PRESSURE TEST .....	21-12-20
MASTER CLUTCH LUBE TEST .....	21-12-22
PTO CLUTCH PRESSURE TEST .....	21-12-23
PTO AND TRANSMISSION PRESSURE TEST REASSEMBLY .....	21-12-25
16 SPEED POWERSHIFT TRANSMISSION, RANGE SELECTOR, PRESSURE REGULATOR AND MASTER CLUTCH VALVE REPAIR .....	SECTION 21, CHAPTER 13 (Book 2A - 87740916)
SPECIAL TORQUE VALUES .....	21-13-3
REGULATOR VALVE DISASSEMBLY .....	21-13-4
CLEANING, INSPECTION AND SOLENOID VALVE TEST .....	21-13-12
REGULATOR VALVE ASSEMBLY .....	21-13-15
RANGE SELECTOR VALVE DYNAMIC TEST .....	21-13-23
RANGE SELECTOR PWM VALVE TEST .....	21-13-26
RANGE SELECTOR VALVE DISASSEMBLY .....	21-13-29
RANGE SELECTOR VALVE ASSEMBLY .....	21-13-32
PTO SYSTEM HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 31, CHAPTER 1 (Book 3 - 87525644)
POWER TAKE OFF, General Information .....	31-1-3
PTO LUBRICATION, General Information .....	31-1-4
PTO CONTROL	
PTO Control Switch .....	31-1-5
To Operate the PTO .....	31-1-5
To Stop the PTO .....	31-1-5
PTO Electrical Circuit .....	31-1-6
PTO Switch in the OFF Position .....	31-1-7
PTO Switch in the ON Position .....	31-1-8
Diode Suppressed PTO Coil .....	31-1-9
Neutral Start Feature .....	31-1-9
PTO VALVE	
Operational Modes .....	31-1-10
PTO Control Valve Operation .....	31-1-12
PTO Clutch Disengaged .....	31-1-13
PTO Modulated Engagement .....	31-1-14
PTO Fully Engaged .....	31-1-15
PTO Clutch Drive .....	31-1-16
PTO Clutch .....	31-1-17
PTO Brake .....	31-1-18
PTO Drop Box and Clutch .....	31-1-19
Engine RPM Speed Circuit .....	31-1-19

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

PTO SYSTEM TROUBLESHOOTING	
PTO Will Not Engage .....	31-1-20
PTO Will Not Disengage .....	31-1-21
PTO CLUTCH REMOVAL AND INSTALLATION -	
TJ380/430/480/530.....	SECTION 31, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-2-2
PTO CLUTCH ASSEMBLY REMOVAL .....	31-2-3
PTO CLUTCH ASSEMBLY INSTALLATION .....	31-2-9
PTO DRIVE UNIT (CLUTCH) REPAIR .....	SECTION 31, CHAPTER 3 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-3-3
SPECIFICATIONS .....	31-3-3
PTO DRIVE UNIT DISASSEMBLY .....	31-3-4
PTO DRIVE UNIT ASSEMBLY (EXPLODED VIEW) .....	31-3-13
PTO CLUTCH AND BRAKE ASSEMBLY (EXPLODED VIEW) .....	31-3-14
PTO DRIVE UNIT ASSEMBLY .....	31-3-15
PTO CLUTCH REMOVAL AND INSTALLATION - TJ280/330.....	SECTION 31, CHAPTER 4 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-4-2
PTO CLUTCH REMOVAL .....	31-4-3
PTO CLUTCH INSTALLATION .....	31-4-5
PTO TRANSFER CASE REMOVAL AND INSTALLATION .....	SECTION 31, CHAPTER 5 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-5-2
SPECIAL TOOLS .....	31-5-2
TRANSFER CASE REMOVAL .....	31-5-3
TRANSFER CASE INSTALLATION .....	31-5-10
PTO DROPBOX REPAIR.....	SECTION 31, CHAPTER 6 (Book 3 - 87525644)
SPECIFICATIONS .....	31-6-2
SPECIAL TORQUE VALUES .....	31-6-2
PTO DROPBOX DISASSEMBLY .....	31-6-3
EXPLODED VIEW PTO DROPBOX ASSEMBLY .....	31-6-9
PTO DROPBOX ASSEMBLY .....	31-6-10
PTO DRIVELINE HANGER BEARING.....	SECTION 31, CHAPTER (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-7-2
PTO DRIVELINE HANGER BEARING REMOVAL .....	31-7-3
HANGER BEARING ASSEMBLY REPAIR (Exploded View) .....	31-7-5
HANGER BEARING DISASSEMBLY .....	31-7-6
HANGER BEARING ASSEMBLY .....	31-7-7
PTO DRIVELINE HANGER BEARING INSTALLATION .....	31-7-10
PTO CLUTCH VALVE.....	SECTION 31, CHAPTER 8 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-8-2
PTO VALVE REMOVAL .....	31-8-3
PTO VALVE DISASSEMBLY .....	31-8-4
CLEANING AND INSPECTION .....	31-8-7
PTO VALVE SOLENOID TESTS .....	31-8-8
PTO VALVE SECTIONAL VIEW .....	31-8-9
PTO VALVE ASSEMBLY .....	31-8-10
PTO VALVE INSTALLATION .....	31-8-13

## TJ AND T9000 MASTER TABLE OF CONTENTS

POWER BRAKES SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 33, CHAPTER 1 (Book 3 - 87525644)
BRAKE SYSTEM .....	33-1-3
General Information .....	33-1-3
General Description .....	33-1-4
Axle Pump .....	33-1-4
Axle Cooling Filter .....	33-1-5
Axle Lube Solenoid Valve .....	33-1-5
Pressure/Lube Control Valve .....	33-1-6
Brake Lubrication and Jet Pump .....	33-1-6
Pressure/Lube Control Valve .....	33-1-7
Regulated Pressure Spool .....	33-1-8
Park Brake/Tow Valve .....	33-1-10
Park Brake Applied .....	33-1-11
Park Brake Released .....	33-1-11
Tow Valve .....	33-1-11
BRAKE CIRCUIT COMPONENTS .....	33-1-12
Brake Pedal .....	33-1-12
Brake Control Valve .....	33-1-13
Brake Clutch Pack .....	33-1-13
Axle Brake Cylinders .....	33-1-13
HYDRAULIC BRAKE CONTROL .....	33-1-14
General Description .....	33-1-14
Brake Valve .....	33-1-14
Service Brake Circuit .....	33-1-15
Emergency Braking .....	33-1-18
BRAKE SYSTEM TROUBLESHOOTING .....	33-1-19
SERVICE BRAKE VALVE .....	SECTION 33, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	33-2-2
RECOMMENDED TOOLS .....	33-2-2
SERVICE BRAKE VALVE REMOVAL .....	33-2-3
SERVICE BRAKE VALVE DISASSEMBLY .....	33-2-6
INSPECTION AND CLEANING .....	33-2-8
BRAKE MAL-FUNCTION SWITCH TEST .....	33-2-8
SERVICE BRAKE VALVE EXPLODED VIEW .....	33-2-9
SERVICE BRAKE VALVE SECTIONAL VIEW .....	33-2-10
SERVICE BRAKE VALVE ASSEMBLY .....	33-2-11
SERVICE BRAKE VALVE INSTALLATION .....	33-2-13
<b>2006 AND 2007 MODEL YEAR HYDRAULIC SCHEMATIC .....</b>	<b>POSTER 87522497</b>
<b>2008 MODEL YEAR HYDRAULIC SCHEMATIC .....</b>	<b>POSTER 87722947</b>
HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC .....	SECTION 35, CHAPTER 1 (Book 4 - 87618159)
Introduction .....	35-1-3
Circuit Diagrams .....	35-1-3
Symbol Systems .....	35-1-3
Using Schematic Symbols .....	35-1-3
Reservoirs .....	35-1-3
Lines, Tubes and Hoses .....	35-1-4
Crossing or Joining Lines .....	35-1-5
Pump Symbols .....	35-1-5
Hydraulic Motor Symbols .....	35-1-6
Cylinder Symbols .....	35-1-6

## TJ AND T9000 MASTER TABLE OF CONTENTS

Pressure Control Symbols .....	35-1-7
Normally Closed .....	35-1-7
Normally Open .....	35-1-7
Relief Valve .....	35-1-7
Pressure Reducing Valve .....	35-1-7
Sequence Valve .....	35-1-8
Directional Control Symbols .....	35-1-8
Simplified Symbols .....	35-1-8
One Way Valve .....	35-1-8
By Pass Valve .....	35-1-8
Composite Symbols .....	35-1-8
One Way Valves .....	35-1-8
Two Position Valves .....	35-1-8
Three Position Valves .....	35-1-9
Actuating Controls .....	35-1-9
Flow Control Symbols .....	35-1-9
Restrictors .....	35-1-9
Accessories .....	35-1-10
SIMPLE SCHEMATIC .....	35-1-12
COMMON SYMBOLS .....	35-1-14
Lines and Line Functions .....	35-1-14
Mechanical Devices .....	35-1-14
Pumps and Motors .....	35-1-14
Reservoirs .....	35-1-15
Cylinders .....	35-1-15
Valves .....	35-1-15
Valve Actuators .....	35-1-17
Accessories.....	35-1-17

### HYDRAULIC SYSTEM HOW IT WORKS

WITH TROUBLESHOOTING .....	SECTION 35, CHAPTER 2 (Book 4 - 87618159)
GENERAL INTRODUCTION .....	35-2-3
SPECIFICATIONS .....	35-2-5
MODEL NUMBER LOCATION .....	35-2-7
STANDARD AND HIGH FLOW PFC PISTON PUMPS .....	35-2-8
Principle of Control .....	35-2-8
Engine Start Up .....	35-2-8
Operating Modes .....	35-2-8
Low Pressure Standby .....	35-2-8
Pressure and Flow Delivery and Compensation Principle .....	35-2-8
Increased Flow Demand .....	35-2-9
Decreased Flow Demand .....	35-2-9
High Pressure Standby .....	35-2-9
Return to Low Pressure Standby .....	35-2-9
Destroke Valve .....	35-2-9
Model 480 and 530 Tractor Hydraulic Fan Pump And Motor .....	35-2-10
PRESSURE/FLOW COMPENSATED PUMP .....	35-2-12
PFC CHARGE PRESSURE TEST .....	35-2-14
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-2-16
PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS .....	35-2-17
MEGAFLOW PUMP LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-2-18
MEGAFLOW PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS .....	35-2-20
REGULATED PRESSURE TEST .....	35-2-21
REGULATED PRESSURE ADJUSTMENT PROCEDURE .....	35-2-22
REGULATED/LUBE PUMP TESTS .....	35-2-23

## TJ AND T9000 MASTER TABLE OF CONTENTS

480 and 530 HYDRAULIC FAN PUMP LOW PRESSURE STANDBY, HIGH PRESSURE AND FLOW TESTS .....	35-2-25
480 and 530 HYDRAULIC FAN MOTOR TEST .....	35-2-27
REGULATED PRESSURE / LUBE CONTROL SYSTEM .....	35-2-28
REGULATOR VALVE .....	35-2-29
480 and 530 HYDRAULIC FAN CIRCUIT .....	35-2-30
480 and 530 HYDRAULIC FAN SYSTEM .....	35-2-31
STEERING PRIORITY VALVE .....	35-2-32
HYDRAULIC FAN/MOTOR REMOVAL AND FAN MOTOR/PUMP REPAIR - TJ480/530 ..... SECTION 35, CHAPTER 3 (Book 4 - 87618159)	
SPECIAL TORQUE VALUES .....	35-3-3
HYDRAULIC FAN AND FAN MOTOR REMOVAL .....	35-3-4
HYDRAULIC FAN AND FAN MOTOR INSTALLATION .....	35-3-15
HYDRAULIC FAN PUMP REMOVAL .....	35-3-28
HYDRAULIC FAN PUMP INSTALLATION .....	35-3-31
HYDRAULIC FAN MOTOR DISASSEMBLY .....	35-3-35
HYDRAULIC FAN MOTOR ASSEMBLY .....	35-3-39
COMPENSATOR CONTROL VALVE REMOVAL AND DISASSEMBLY .....	35-3-42
COMPENSATOR CONTROL VALVE ASSEMBLY AND INSTALLATION .....	35-3-43
HYDRAULIC FAN PUMP DISASSEMBLY .....	35-3-44
PUMP CLEANING AND INSPECTION .....	35-3-51
PFC PISTON PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 ..... SECTION 35, CHAPTER 4 (Book 4 - 87618159)	
SPECIAL TORQUE VALUES .....	35-4-2
SPECIAL TOOLS .....	35-4-2
PISTON PUMP REMOVAL .....	35-4-3
PISTON PUMP INSTALLATION .....	35-4-8
START-UP PROCEDURE .....	35-4-13
GEAR PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 ..... SECTION 35, CHAPTER 5 (Book 4 - 87618159)	
SPECIAL TORQUE VALUES .....	35-5-2
SPECIAL TOOLS .....	35-5-2
GEAR PUMP REMOVAL .....	35-5-3
GEAR PUMP INSTALLATION .....	35-5-5
PFC AXIAL PISTON PUMP REPAIR ..... SECTION 35, CHAPTER 6 (Book 4 - 87618159)	
SPECIFICATIONS .....	35-6-3
SPECIAL TORQUE VALUES .....	35-6-4
PISTON PUMP DISASSEMBLY .....	35-6-5
PRESSURE/FLOW COMPENSATOR DISASSEMBLY .....	35-6-12
PISTON PUMP CLEANING AND INSPECTION .....	35-6-16
PRESSURE/FLOW COMPENSATOR ASSEMBLY EXPLODED VIEW .....	35-6-20
PRESSURE/FLOW COMPENSATOR ASSEMBLY .....	35-6-21
PISTON PUMP ASSEMBLY EXPLODED VIEW .....	35-6-24
PISTON PUMP ASSEMBLY .....	35-6-25

## TJ AND T9000 MASTER TABLE OF CONTENTS

HITCH SYSTEM - HOW IT WORKS .....	SECTION 35, CHAPTER 7 (Book 4 - 87618159)
THREE POINT HITCH .....	35-7-3
ELECTRONIC HITCH CONTROL .....	35-7-4
Operator Controls and Settings .....	35-7-5
ELECTRONIC HITCH CONTROL SYSTEM FEATURES .....	35-7-7
HITCH CONTROL VALVE .....	35-7-14
General .....	35-7-14
Raise and Lower Solenoids .....	35-7-14
Raise and Lower Pilot Spools .....	35-7-14
Raise Spool .....	35-7-14
Lower Poppet .....	35-7-14
Load Check Ball .....	35-7-14
Manual Raise or Lower Control Pins .....	35-7-14
Overload Relief Valve .....	35-7-14
Neutral Function and Troubleshooting .....	35-7-16
Raise Function and Troubleshooting .....	35-7-18
Raise Function and Troubleshooting .....	35-7-19
Lower Function and Troubleshooting .....	35-7-20
Lower Function and Troubleshooting .....	35-7-21
THREE POINT HITCH VALVE.....	SECTION 35, CHAPTER 8 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-8-2
TPH VALVE REMOVAL .....	35-8-3
TPH VALVE DISASSEMBLY .....	35-8-5
CLEANING AND INSPECTION .....	35-8-9
HITCH VALVE SOLENOID TEST .....	35-8-11
THREE POINT HITCH VALVE .....	35-8-13
TPH VALVE ASSEMBLY .....	35-8-14
TPH VALVE INSTALLATION .....	35-8-18
REMOTE ELECTRONIC HYD SYSTEMS - HOW IT WORKS/TROUBLESHOOTING.....	SECTION 35, CHAPTER 9 (Book 4 - 87618159)
REMOTE HYDRAULIC SYSTEM INTRODUCTION .....	35-9-3
REMOTE SYSTEM CONTROLS (ELECTRONIC) .....	35-9-5
Remote Function Control .....	35-9-6
Full Function Position .....	35-9-6
Neutral Lock Position .....	35-9-6
Float Lock-Out Position .....	35-9-7
Non-Detent Raise Position .....	35-9-7
Hydraulic Motor Position .....	35-9-7
Hydraulic Valve Timer Control .....	35-9-9
Variable Flow Control .....	35-9-9
Remote Valve Load Check Valves .....	35-9-10
REMOTE VALVE PROPORTIONAL CURRENT CONTROL (PCC) SOLENOID OPERATION .....	35-9-11
REMOTE VALVE OPERATION (ELECTRONIC) .....	35-9-12
REMOTE VALVE PROBLEMS AND WHERE TO LOOK .....	35-9-20
ELECTRONIC REMOTE VALVE SYSTEM TESTING .....	35-9-21
FAULT CODE RETRIEVAL .....	35-9-21
REGULATED PRESSURE CHECK .....	35-9-24
REMOTE VALVE HIGH PRESSURE TEST .....	35-9-24
REMOTE VALVE PROPORTIONAL SOLENOID CHECK .....	35-9-26
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-9-27
REMOTE VALVE FLOW TEST .....	35-9-29
REMOTE VALVE SIGNAL CHECK AND HITCH SIGNAL CHECK TEST .....	35-9-31
REMOTE VALVE COUPLER TEST .....	35-9-32
LOAD CHECK INSPECTION .....	35-9-33

## TJ AND T9000 MASTER TABLE OF CONTENTS

HYDRAULIC GEAR (CHARGE) PUMP REPAIR .....	SECTION 35, CHAPTER 10 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-10-2
PUMP DISASSEMBLY .....	35-10-3
CLEANING AND INSPECTION .....	35-10-7
PUMP ASSEMBLY .....	35-10-8
HYDRAULIC FILTERS .....	SECTION 35, CHAPTER 11 (Book 4 - 87618159)
SPECIFICATIONS .....	35-11-2
SERVICING THE HYDRAULIC AND TRANSMISSION OIL FILTERS .....	35-11-3
REMOTE AUXILIARY VALVE AND COUPLER, REMOVAL/INSTALLATION/REPAIR .....	SECTION 35, CHAPTER 12 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-12-3
REMOTE AUXILIARY VALVE MANIFOLD SEAL REPLACEMENT .....	35-12-4
REMOTE AUXILIARY VALVE SOLENOID TEST .....	35-12-9
REMOTE AUXILIARY VALVE SOLENOID REMOVAL AND DISASSEMBLY .....	35-12-9
REMOTE AUXILIARY VALVE SOLENOID ASSEMBLY AND INSTALLATION .....	35-12-12
REMOTE AUXILIARY VALVE CONTROL SPOOL REMOVAL .....	35-12-15
REMOTE AUXILIARY VALVE CONTROL SPOOL INSTALLATION .....	35-12-17
REMOTE AUXILIARY VALVE REMOVAL .....	35-12-19
REMOTE AUXILIARY VALVE SECTION DISASSEMBLY .....	35-12-20
LOAD CHECK VALVE DISASSEMBLY .....	35-12-25
REMOTE AUXILIARY VALVE SECTION ASSEMBLY .....	35-12-27
LOAD CHECK VALVE ASSEMBLY .....	35-12-29
REMOTE AUXILIARY VALVE SECTION ASSEMBLY .....	35-12-31
REMOTE AUXILIARY VALVE SECTION INSTALLATION .....	35-12-36
HYDRAULIC GEAR PUMP AND PISTON PUMP REMOVE/INSTALL - TJ280/330 .....	SECTION 35, CHAPTER 13 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-13-3
RECOMMENDED TOOLS .....	35-13-3
GEAR PUMP REMOVAL .....	35-13-4
GEAR PUMP INSTALLATION .....	35-13-7
PFC PISTON PUMP REMOVAL .....	35-13-9
PFC PISTON PUMP INSTALLATION .....	35-13-14
START-UP PROCEDURE .....	35-13-19
DRAWBAR REMOVAL AND INSTALLATION .....	SECTION 37, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	37-1-2
SPECIAL TOOLS .....	37-1-2
DRAWBAR REMOVAL .....	37-1-3
DRAWBAR INSTALLATION .....	37-1-7
CENTER HINGE BEARINGS AND CONNECTING LINK - TJ380/430/480/530 .....	SECTION 39, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	39-1-3
SPECIAL TOOL .....	39-1-3
RECOMMENDED TOOLS .....	39-1-3
GENERAL INFORMATION .....	39-1-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-1-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-1-11
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-1-19
CONNECTING LINK REMOVAL .....	39-1-21
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-1-22
CONNECTING LINK INSTALLATION .....	39-1-23
CONNECTING THE FRONT AND REAR FRAMES .....	39-1-25

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### CENTER HINGE BEARINGS AND CONNECTING LINK -

TJ280/330.....	SECTION 39, CHAPTER 2 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	39-2-3
SPECIAL TOOL .....	39-2-3
RECOMMENDED TOOLS .....	39-2-3
GENERAL INFORMATION .....	39-2-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-2-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-2-11
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-2-19
CONNECTING LINK REMOVAL .....	39-2-21
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-2-22
CONNECTING LINK INSTALLATION .....	39-2-23
CONNECTING THE FRONT AND REAR FRAMES .....	39-2-25

### CENTER HINGE BEARINGS AND CONNECTING LINK,

T9030, 9040, 9050, AND 9060 S/N Z7F204001 AND AFTER....	SECTION 39, CHAPTER 3 (Book 4A - 87740917)
SPECIAL TORQUE VALUES .....	39-3-3
SPECIAL TOOL .....	39-3-3
RECOMMENDED TOOLS .....	39-3-3
GENERAL INFORMATION .....	39-3-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-3-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-3-12
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-3-20
CONNECTING LINK REMOVAL .....	39-3-22
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-3-23
CONNECTING LINK INSTALLATION .....	39-3-24
CONNECTING THE FRONT AND REAR FRAMES .....	39-3-26

STEERING COLUMN REPAIR.....	SECTION 41, CHAPTER 1 (Book 5 - 87525646)
TILT STEERING COLUMN DISASSEMBLY .....	41-1-3
TILT STEERING COLUMN ASSEMBLY .....	41-1-5

### CENTER CONSOLE, STEERING COLUMN,

PEDALS AND SWITCHES.....	SECTION 41, CHAPTER 2 (Book 5 - 87525646)
SPECIAL TOOLS .....	41-2-3
SPECIAL TORQUE VALUES .....	41-2-3
STEERING WHEEL REMOVAL .....	41-2-4
TRANSMISSION SHIFT LEVER REMOVAL .....	41-2-4
CENTER CONSOLE COVER REMOVAL .....	41-2-7
CENTER CONSOLE COVER INSTALLATION .....	41-2-9
TRANSMISSION SHIFT INSTALLATION .....	41-2-11
STEERING WHEEL INSTALLATION .....	41-2-14
STEERING COLUMN REMOVAL .....	41-2-15
STEERING COLUMN INSTALLATION .....	41-2-16
TILT STEERING COLUMN RELEASE CABLE REMOVAL .....	41-2-17
TILT STEERING COLUMN RELEASE CABLE INSTALLATION .....	41-2-18
CLUTCH AND BRAKE PEDAL ASSEMBLY REMOVAL .....	41-2-20
CLUTCH AND BRAKE PEDAL ASSEMBLY INSTALLATION .....	41-2-22
DECELERATION SWITCH REMOVAL .....	41-2-25
DECELERATION SWITCH INSTALLATION .....	41-2-26
CLUTCH POTENTIOMETER REMOVAL .....	41-2-27
CLUTCH POTENTIOMETER INSTALLATION .....	41-2-28
CLUTCH POTENTIOMETER CALIBRATION .....	41-2-29
CLUTCH POTENTIOMETER CALIBRATION .....	41-2-31
DIFFERENTIAL LOCK BRAKE SWITCH REMOVAL .....	41-2-34
DIFFERENTIAL LOCK BRAKE SWITCH INSTALLATION .....	41-2-34

## TJ AND T9000 MASTER TABLE OF CONTENTS

HVAC PLENUM ACTUATOR MOTOR AND LOUVER REMOVAL .....	41-2-36
HVAC PLENUM ACTUATOR MOTOR AND LOUVER INSTALLATION .....	41-2-39
TRANSMISSION SHIFT LEVER DISASSEMBLY .....	41-2-42
TRANSMISSION SHIFT LEVER ASSEMBLY .....	41-2-49
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ380/430/480/530 AND T9030/40/50/60 TRACTORS.....SECTION 41, CHAPTER 3 (Book 5 - 87525646)	
SPECIAL TOOLS .....	41-3-2
SPECIAL TORQUE VALUES .....	41-3-2
STEERING HAND PUMP REMOVAL .....	41-3-3
STEERING TUBE LINES REMOVAL .....	41-3-5
STEERING PRIORITY/CONTROL VALVE REMOVAL .....	41-3-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION .....	41-3-8
STEERING TUBE LINES INSTALLATION .....	41-3-9
STEERING HAND PUMP INSTALLATION .....	41-3-11
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ280/330 AND T9010/20 TRACTORS.....SECTION 41, CHAPTER 4 (Book 5 - 87525646)	
SPECIAL TOOLS .....	41-4-2
SPECIAL TORQUE VALUES .....	41-4-2
STEERING HAND PUMP REMOVAL .....	41-4-3
STEERING TUBE LINES REMOVAL .....	41-4-5
STEERING PRIORITY/CONTROL VALVE REMOVAL .....	41-4-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION .....	41-4-10
STEERING TUBE LINES INSTALLATION .....	41-4-13
STEERING HAND PUMP INSTALLATION .....	41-4-15
STEERING SYSTEM HOW IT WORKS.....SECTION 41, CHAPTER 5 (Book 5 - 87525646)	
ELECTROHYDRAULIC STEERING SYSTEM (EHPS) .....	41-5-3
PRIORITY / STEERING CONTROL VALVE (EHPS) .....	41-5-4
EHPS STEERING SYSTEM .....	41-5-6
Engine Running Steering in Neutral Position .....	41-5-7
Engine Running, Turning Left .....	41-5-9
EHPS Steering System .....	41-5-11
280 AND 330 MODELS STEERING LAYOUT .....	41-5-12
380, 430, 480 AND 530 MODELS STEERING LAYOUT .....	41-5-13
FRONT AXLE REMOVAL AND INSTALLATION - TJ380/430/480/530.....SECTION 44, CHAPTER 1 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES .....	44-1-3
SPECIAL TOOLS .....	44-1-3
RECOMMENDED TOOLS .....	44-1-3
FRONT AXLE REMOVAL .....	44-1-4
FRONT AXLE INSTALLATION .....	44-1-10
FRONT AXLE REMOVAL AND INSTALLATION - TJ280/330.....SECTION 44, CHAPTER 2 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES .....	44-2-3
SPECIAL TOOLS .....	44-2-3
RECOMMENDED TOOLS .....	44-2-3
FRONT AXLE REMOVAL .....	44-2-4
FRONT AXLE INSTALLATION .....	44-2-10

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### REAR AXLE REMOVAL AND INSTALLATION -

TJ380/430/480/530.....	SECTION 44, CHAPTER 3 (Book 5 - 87525646)
SPECIAL TORQUE VALUES .....	44-3-3
SPECIAL TOOLS .....	44-3-3
RECOMMENDED TOOLS .....	44-3-3
REAR AXLE REMOVAL .....	44-3-4
REAR AXLE INSTALLATION .....	44-3-13

### REAR AXLE REMOVAL AND INSTALLATION - TJ280/330 ..... SECTION 44, CHAPTER 4 (Book 5 - 87525646)

SPECIAL TORQUE VALUES .....	44-4-3
SPECIAL TOOLS .....	44-4-3
RECOMMENDED TOOLS .....	44-4-3
REAR AXLE REMOVAL .....	44-4-4
REAR AXLE INSTALLATION .....	44-4-12

### FRONT AND REAR AXLE REPAIR - 300 SERIES AXLES ..... SECTION 44, CHAPTER 5 (Book 5 - 87525646)

AXLE SPECIFICATIONS .....	44-5-4
SPECIAL TORQUE VALUES .....	44-5-4
SPECIAL TOOLS .....	44-5-5
RECOMMENDED TOOLS .....	44-5-6
GENERAL INFORMATION .....	44-5-12
AXLE FINAL DRIVE REMOVAL .....	44-5-12
FINAL DRIVE DISASSEMBLY .....	44-5-14
PLANETARY CARRIER DISASSEMBLY .....	44-5-18
PLANETARY CARRIER ASSEMBLY .....	44-5-19
FINAL DRIVE HOUSING ASSEMBLY .....	44-5-21
FRONT COVER REMOVAL .....	44-5-26
FRONT COVER DISASSEMBLY .....	44-5-28
FRONT COVER ASSEMBLY .....	44-5-31
RH SIDE BRAKE CARRIER REMOVAL .....	44-5-37
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-5-38
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-5-42
DIFFERENTIAL REMOVAL .....	44-5-47
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES .....	44-5-48
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-5-51
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY .....	44-5-57
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY .....	44-5-58
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-5-59
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-5-62
SETTING RING/PINION GEAR BACKLASH .....	44-5-65
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION .....	44-5-69
FRONT COVER INSTALLATION .....	44-5-70
LEAK TESTING THE SERVICE BRAKE .....	44-5-73
LEAK TESTING THE PARK BRAKE .....	44-5-74
LEAK TESTING THE DIFFERENTIAL LOCK .....	44-5-75
FINAL DRIVE INSTALLATION .....	44-5-77

### FRONT AND REAR AXLE REPAIR - 500 SERIES AXLES ..... SECTION 44, CHAPTER 6 (Book 5 - 87525646)

AXLE IDENTIFICATION .....	44-6-4
AXLE SPECIFICATIONS .....	44-6-5
SPECIAL TORQUE VALUES .....	44-6-5
SPECIAL TOOLS .....	44-6-6
RECOMMENDED TOOLS .....	44-6-8
GENERAL INFORMATION .....	44-6-13
AXLE FINAL DRIVE REMOVAL .....	44-6-13
FINAL DRIVE DISASSEMBLY .....	44-6-15



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

## TJ AND T9000 MASTER TABLE OF CONTENTS

PLANETARY CARRIER DISASSEMBLY .....	44-6-19
PLANETARY CARRIER ASSEMBLY .....	44-6-20
FINAL DRIVE HOUSING ASSEMBLY .....	44-6-22
PINION CARRIER REMOVAL .....	44-6-28
PINION CARRIER DISASSEMBLY .....	44-6-32
PINION CARRIER ASSEMBLY .....	44-6-34
BRAKE CARRIER/BEARING SUPPORT REMOVAL .....	44-6-39
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-6-40
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-6-44
DIFFERENTIAL REMOVAL AND DISASSEMBLY .....	44-6-49
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-6-53
LH DIFFERENTIAL BEARING SUPPORT DISASSEMBLY .....	44-6-59
LH DIFFERENTIAL BEARING SUPPORT ASSEMBLY .....	44-6-60
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-6-61
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-6-64
SETTING RING/PINION GEAR BACKLASH .....	44-6-67
CHECKING FOR CORRECT BEVEL PINION/GEAR TOOTH CONTACT .....	44-6-68
BRAKE CARRIER/BEARING SUPPORT INSTALLATION .....	44-6-70
PERFORMING THE BRAKE LEAK DOWN TEST .....	44-6-73
DIFFERENTIAL LOCK LEAK TEST .....	44-6-74
FINAL DRIVE INSTALLATION .....	44-6-77
FRONT AND REAR AXLE REPAIR - 400 SERIES AXLES .....	SECTION 44, CHAPTER 7 (Book 5 - 87525646)
AXLE IDENTIFICATION .....	44-7-4
AXLE SPECIFICATIONS .....	44-7-5
SPECIAL TORQUE VALUES .....	44-7-5
SPECIAL TOOLS .....	44-7-6
RECOMMENDED TOOLS .....	44-7-7
GENERAL INFORMATION .....	44-7-13
AXLE FINAL DRIVE REMOVAL .....	44-7-13
FINAL DRIVE DISASSEMBLY .....	44-7-15
PLANETARY CARRIER DISASSEMBLY .....	44-7-19
PLANETARY CARRIER ASSEMBLY .....	44-7-20
FINAL DRIVE HOUSING ASSEMBLY .....	44-7-22
FRONT COVER REMOVAL .....	44-7-28
FRONT COVER DISASSEMBLY .....	44-7-31
FRONT COVER ASSEMBLY .....	44-7-33
RH SIDE BRAKE CARRIER REMOVAL .....	44-7-39
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-7-40
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-7-44
DIFFERENTIAL REMOVAL .....	44-7-49
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES .....	44-7-50
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-7-53
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY .....	44-7-59
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY .....	44-7-60
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-7-61
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-7-64
SETTING RING/PINION GEAR BACKLASH .....	44-7-67
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION .....	44-7-71
FRONT COVER INSTALLATION .....	44-7-72
LEAK TESTING THE SERVICE BRAKE .....	44-7-75
LEAK TESTING THE PARK BRAKE .....	44-7-76
LEAK TESTING THE DIFFERENTIAL LOCK .....	44-7-77
FINAL DRIVE INSTALLATION .....	44-7-79

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**