

# SERVICE MANUAL

**T9.390 / T9.450 / T9.505 /  
T9.560 / T9.615 / T9.670**

**Tier 4**  
Tractor

**Part number 47488217**

English

February 2013

*Replaces part number 84354096*





## **SERVICE MANUAL**

**T9.390 [ZBF200001 - ] , T9.390 [ZCF200001 - ] , T9.390 [ZDF200001 - ] , T9.450 [ZBF200001 - ] , T9.450 [ZCF200001 - ] , T9.450 [ZDF200001 - ] , T9.505 [ZBF200001 - ] , T9.505 [ZCF200001 - ] , T9.505 [ZDF200001 - ] , T9.560 [ZBF200001 - ] , T9.560 [ZCF200001 - ] , T9.560 [ZDF200001 - ] , T9.615 [ZBF200001 - ] , T9.615 [ZCF200001 - ] , T9.615 [ZDF200001 - ] , T9.670 [ZBF200001 - ] , T9.670 [ZCF200001 - ] , T9.670 [ZDF200001 - ]**

## Link Product / Engine

| Product             | Market Product | Engine         |
|---------------------|----------------|----------------|
| null [ZBF200001 - ] | North America  | F2CFE613A*A    |
| null [ZCF200001 - ] | North America  | F2CFE613A*A    |
| null [ZDF200001 - ] | North America  | F2CFE613A*A    |
| null [ZBF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZCF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZDF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZBF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZCF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZDF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZBF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZCF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZDF200001 - ] | North America  | F3BFE613A*A001 |
| null [ZBF200001 - ] | North America  | F3DFE613A*A001 |
| null [ZCF200001 - ] | North America  | F3DFE613A*A001 |
| null [ZDF200001 - ] | North America  | F3DFE613A*A001 |
| null [ZBF200001 - ] | North America  | F3DFE613A*A001 |
| null [ZCF200001 - ] | North America  | F3DFE613A*A001 |
| null [ZDF200001 - ] | North America  | F3DFE613A*A001 |

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# Contents

---

## INTRODUCTION

|                                                                      |           |
|----------------------------------------------------------------------|-----------|
| <b>Engine.....</b>                                                   | <b>10</b> |
| [10.001] Engine and crankcase .....                                  | 10.1      |
| [10.202] Air cleaners and lines .....                                | 10.2      |
| [10.400] Engine cooling system .....                                 | 10.3      |
| [10.414] Fan and drive .....                                         | 10.4      |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment ..... | 10.5      |
| <b>Transmission.....</b>                                             | <b>21</b> |
| [21.113] Powershift transmission .....                               | 21.1      |
| [21.135] Powershift transmission external controls.....              | 21.2      |
| [21.145] Gearbox internal components.....                            | 21.3      |
| [21.155] Powershift transmission internal components.....            | 21.4      |
| <b>Front axle system .....</b>                                       | <b>25</b> |
| [25.100] Powered front axle .....                                    | 25.1      |
| [25.102] Front bevel gear set and differential .....                 | 25.2      |
| [25.310] Final drives .....                                          | 25.3      |
| <b>Rear axle system.....</b>                                         | <b>27</b> |
| [27.100] Powered rear axle.....                                      | 27.1      |
| [27.106] Rear bevel gear set and differential.....                   | 27.2      |
| [27.120] Planetary and final drives .....                            | 27.3      |
| <b>Power Take-Off (PTO) .....</b>                                    | <b>31</b> |
| [31.104] Rear electro-hydraulic control.....                         | 31.1      |
| [31.110] One-speed rear Power Take-Off (PTO) .....                   | 31.2      |
| [31.220] Gearbox .....                                               | 31.3      |
| <b>Brakes and controls .....</b>                                     | <b>33</b> |
| [33.110] Parking brake or parking lock .....                         | 33.1      |

|                                                        |           |
|--------------------------------------------------------|-----------|
| [33.202] Hydraulic service brakes .....                | 33.2      |
| <b>Hydraulic systems.....</b>                          | <b>35</b> |
| [35.000] Hydraulic systems.....                        | 35.1      |
| [35.102] Pump control valves.....                      | 35.2      |
| [35.105] Charge pump.....                              | 35.3      |
| [35.106] Variable displacement pump .....              | 35.4      |
| [35.204] Remote control valves .....                   | 35.5      |
| [35.220] Auxiliary hydraulic pump and lines .....      | 35.6      |
| [35.300] Reservoir, cooler, and filters.....           | 35.7      |
| [35.304] Combination pump units .....                  | 35.8      |
| [35.600] High flow hydraulics .....                    | 35.9      |
| <b>Hitches, drawbars, and implement couplings.....</b> | <b>37</b> |
| [37.100] Drawbars and towing hitches .....             | 37.1      |
| <b>Frames and ballasting .....</b>                     | <b>39</b> |
| [39.100] Frame .....                                   | 39.1      |
| [39.110] Drawbar and hitch assembly .....              | 39.2      |
| <b>Steering.....</b>                                   | <b>41</b> |
| [41.101] Steering control .....                        | 41.1      |
| [41.200] Hydraulic control components.....             | 41.2      |
| [41.206] Pump .....                                    | 41.3      |
| <b>Wheels .....</b>                                    | <b>44</b> |
| [44.511] Front wheels.....                             | 44.1      |
| [44.520] Rear wheels.....                              | 44.2      |
| <b>Tracks and track suspension .....</b>               | <b>48</b> |
| [48.100] Tracks .....                                  | 48.1      |
| [48.130] Track frame and driving wheels .....          | 48.2      |
| [48.134] Track tension units .....                     | 48.3      |
| [48.138] Track rollers .....                           | 48.4      |

|                                                                                 |           |
|---------------------------------------------------------------------------------|-----------|
| <b>Cab climate control .....</b>                                                | <b>50</b> |
| [50.104] Ventilation .....                                                      | 50.1      |
| [50.200] Air conditioning .....                                                 | 50.2      |
| [50.300] Cab pressurizing system .....                                          | 50.3      |
| <b>Electrical systems .....</b>                                                 | <b>55</b> |
| [55.010] Fuel injection system .....                                            | 55.1      |
| [55.014] Engine intake and exhaust system .....                                 | 55.2      |
| [55.024] Transmission control system .....                                      | 55.3      |
| [55.035] Remote control valve electric control .....                            | 55.4      |
| [55.045] Front axle control system .....                                        | 55.5      |
| [55.046] Rear axle control system .....                                         | 55.6      |
| [55.048] Rear Power Take-Off (PTO) control system .....                         | 55.7      |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system ..... | 55.8      |
| [55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....   | 55.9      |
| [55.100] Harnesses and connectors .....                                         | 55.10     |
| [55.130] Rear three-point hitch electronic control system .....                 | 55.11     |
| [55.301] Alternator .....                                                       | 55.12     |
| [55.302] Battery .....                                                          | 55.13     |
| [55.404] External lighting .....                                                | 55.14     |
| [55.522] Cab Power Take-Off (PTO) controls .....                                | 55.15     |
| [55.640] Electronic modules .....                                               | 55.16     |
| [55.988] Selective Catalytic Reduction (SCR) electrical system .....            | 55.17     |
| [55.DTC] FAULT CODES .....                                                      | 55.18     |
| <b>Platform, cab, bodywork, and decals .....</b>                                | <b>90</b> |
| [90.100] Engine hood and panels .....                                           | 90.1      |
| [90.102] Engine shields, hood latches, and trims .....                          | 90.2      |
| [90.124] Pneumatically-adjusted operator seat .....                             | 90.3      |
| [90.150] Cab .....                                                              | 90.4      |

[90.151] Cab interior..... 90.5



# INTRODUCTION

---

## Safety rules

T9.390, T9.450, T9.505, T9.560, T9.615, T9.670

### Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

### FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

### Machine safety

**NOTICE:** Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

### Information

**NOTE:** Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

---

## Safety rules

T9.390 NA, T9.450 NA, T9.505 NA, T9.560 NA, T9.615 NA, T9.670 NA

### General safety rules

Use caution when operating the machine on slopes. Raised equipment, full tanks and other loads will change the center of gravity of the machine. The machine can tip or roll over when near ditches and embankments or uneven surfaces.

Never permit anyone other than the operator to ride on the machine.

Never operate the machine under the influence of alcohol, drugs, or while otherwise impaired.

While driving on the road, the seat swivel position must always be straight forward and locked in position with no rotation. The seat swivel should only be rotated for in field operation.

Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid “free wheeling.”

Do not drive on roads, or at high speed anywhere, with the differential lock engaged. Difficult steering will occur, and can result in an accident. In field operation, use the differential lock for traction improvement, but release for turning at row ends.

Do not exceed implement transport speed or the speed rating on the implement tires. Review the implements Operator’s Manual for specifications. Failure to comply could result in death or serious injury.

For speeds up to **16 km/h (10 mph)**, make sure that the weight of a trailed vehicle that is not equipped with brakes does NOT EXCEED 1.5 times the Tractor weight. For speeds up to **40 km/h (25 mph)**, make sure that the weight of the trailed vehicle that is not equipped with brakes, does NOT EXCEED the weight of the Tractor. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.

Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use three point hitch only with the implements designed for its use – not as a drawbar.

Do not look directly into the front or rear HID (high intensity discharge) lamps. Eye damage can occur.

Do not tamper with the ballast on the front or rear high intensity discharge (HID) lamp since it uses high voltage. Personal injury or death can occur.

To avoid possible eye damage from microwave signals emitted by the radar sensor, do not look directly into the sensor face.

When digging or using ground engaging attachments be aware of buried cables. Contact local utilities to determine the locations of services.

Pay attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety.

Hydraulic oil or diesel fuel leaking under pressure can penetrate the skin, causing serious injury or infection.

- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper.
- Stop engine, remove key and relieve the pressure before connecting or disconnecting fluid lines.
- Make sure all components are in good condition and tighten all connections before starting the engine or pressurizing the system.
- If hydraulic fluid or diesel fuel penetrates the skin, seek medical attention immediately.
- Continuous long term contact with hydraulic fluid may cause skin cancer. Avoid long term contact and wash the skin promptly with soap and water.

Keep clear of moving parts. Loose clothing, jewelry, watches, long hair, and other loose or hanging items can become entangled in moving parts.

Wear protective equipment when appropriate.

DO NOT attempt to remove material from any part of the machine while it is being operated or components are in motion.

Make sure all guards and shields are in good condition and properly installed before operating the machine. Never operate the machine with shields removed. Always close access doors or panels before operating the machine.

Dirty or slippery steps, ladders, walkways, and platforms can cause falls. Make sure these surfaces remain clean and clear of debris.

A person or pet within the operating area of a machine can be struck or crushed by the machine or its equipment. DO NOT allow anyone to enter the work area.

Raised equipment and/or loads can fall unexpectedly and crush persons underneath. Never allow anyone to enter the area underneath raised equipment during operation.

Never operate engine in enclosed spaces as harmful exhaust gases may build up.

Before starting the machine, be sure that all controls are in neutral or park lock position.

Start the engine only from the operator's seat. If the safety start switch is bypassed, the engine can start with the transmission in gear. Do not connect or short across terminals on the starter solenoid. Attach jumper cables as described in the manual. Starting in gear may cause death or serious injury.

Always keep windows, mirrors, all lighting, and Slow Moving Vehicle (SMV) emblem clean to provide the best possible visibility while operating the machine.

Operate controls only when seated in the operator's seat, except for those controls expressly intended for use from other locations.

Before leaving the machine:

1. Park machine on a firm level surface.
2. Put all controls in neutral or park lock position.
3. Engage park brake. Use wheel chocks if required.
4. Lower all hydraulic equipment — Implements, header, etc.
5. Turn off engine and remove key.

When, due to exceptional circumstances, you would decide to keep the engine running after leaving the operator's station, then the following precautions must be followed:

1. Bring the engine to low idle speed.
2. Disengage all drive systems.

3. **⚠ WARNING**

**Some components may continue to run down after disengaging drive systems.  
Make sure all drive systems are fully disengaged.  
Failure to comply could result in death or serious injury.**

W0113A

Shift the transmission into neutral.

4. Apply the parking brake.



## **SERVICE MANUAL**

### **Engine**

**T9.390 [ZBF200001 - ] , T9.390 [ZCF200001 - ] , T9.390 [ZDF200001 - ] , T9.450 [ZBF200001 - ] , T9.450 [ZCF200001 - ] , T9.450 [ZDF200001 - ] , T9.505 [ZBF200001 - ] , T9.505 [ZCF200001 - ] , T9.505 [ZDF200001 - ] , T9.560 [ZBF200001 - ] , T9.560 [ZCF200001 - ] , T9.560 [ZDF200001 - ] , T9.615 [ZBF200001 - ] , T9.615 [ZCF200001 - ] , T9.615 [ZDF200001 - ] , T9.670 [ZBF200001 - ] , T9.670 [ZCF200001 - ] , T9.670 [ZDF200001 - ]**

## Engine - Remove - 9 Liter tractors

T9.390

 
### Air conditioning - Evacuate - Air conditioning system (50.200)

#### Prior operation:

#### Hood - Remove - Hood support frame on row crop unit (90.100)


1. Disconnect air conditioning high and low pressure hoses (1) from compressor. Unplug high pressure sending unit (2).

**NOTE:** Cap and plug disconnected hoses and ports.

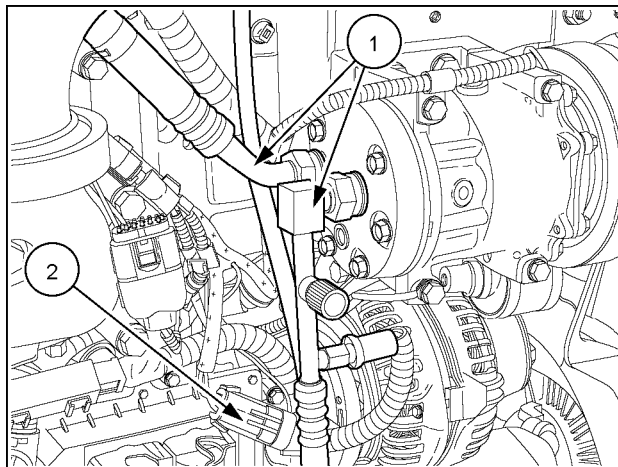

RCPH10FWD998BAC 1

 
2. Cut ties (1) and unplug harness (2).

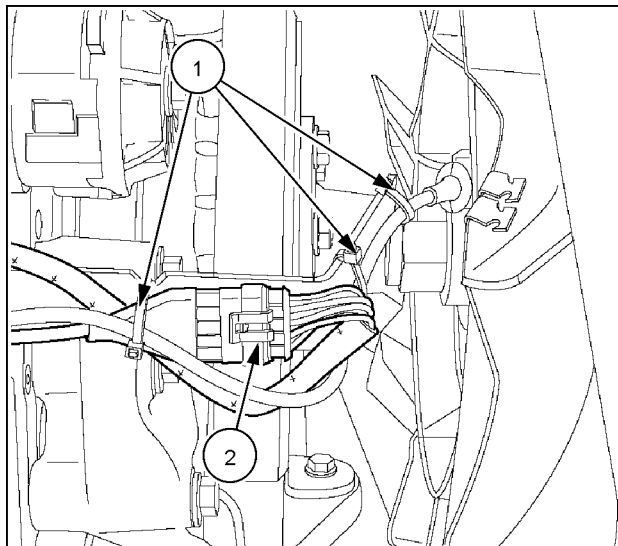

RCPH10FWD009BBC 2


3. Loosen fan from hub.

 **NOTE:** Hub has left hand threads.

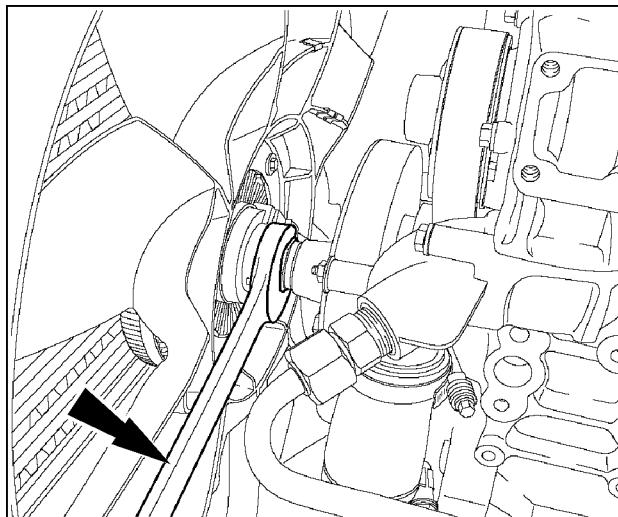


RCPH10FWD010BBC 3

 4. With the help of an assistant turn fan off hub. Remove out the right hand side.

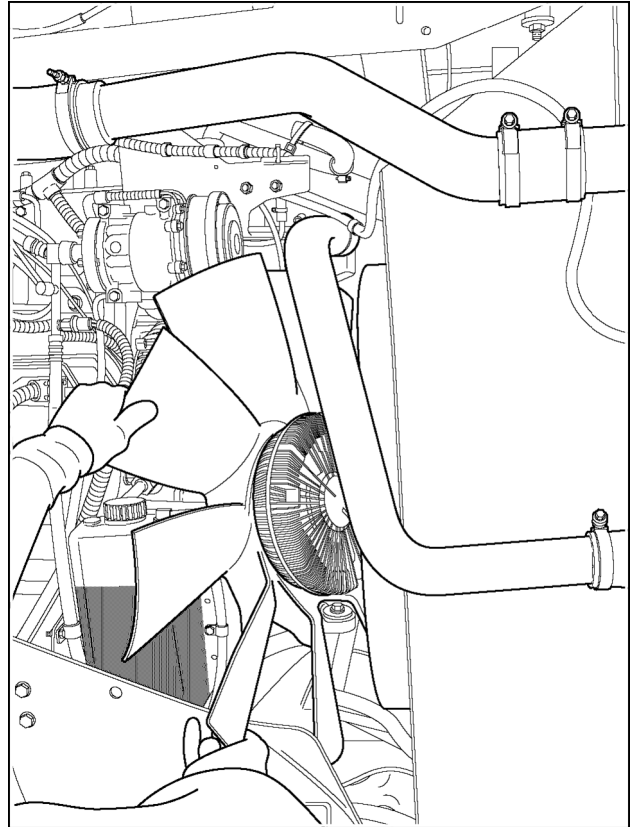


RCPH10FWD011BBC 4

 5. Label and disconnect heater hoses (1) and DEF/Ad-Blue® solenoid hoses (2).

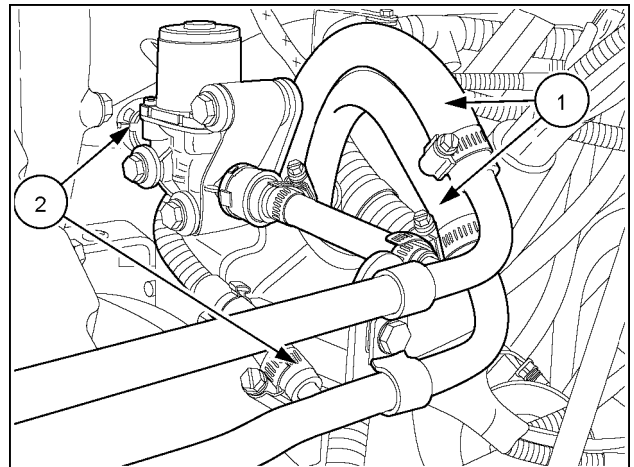


RCPH10FWD012BBC 5

 6. Disconnect starter connections (1). Remove ground strap from engine block (2).

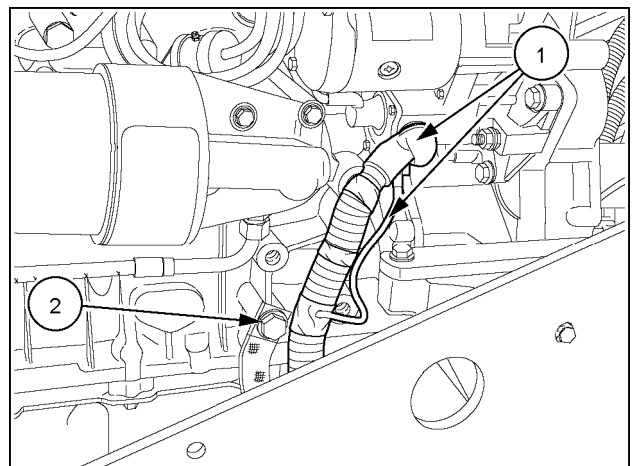

RCPH10FWD013BBC 6

 
7. Remove left hand air to air tube (1) and lower radiator hose (2). Loosen upper radiator hose clamp (3).

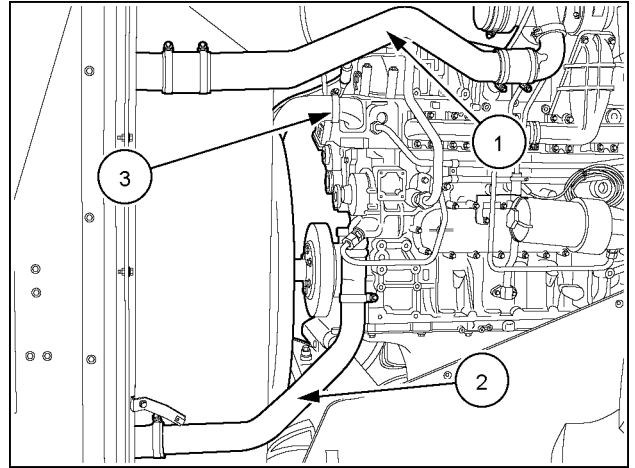

RCPH10FWD014BBC 7


8. Disconnect alternator cable (1). Disconnect fuel line (2).

 **NOTE:** Plug and cap disconnected fuel line and fitting.

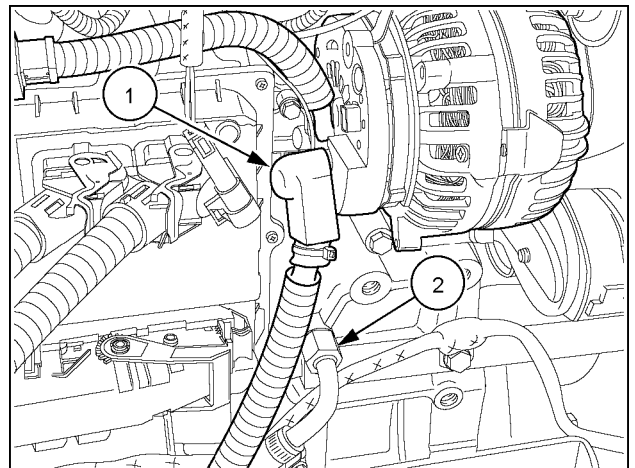

RCPH10FWD015BBC 8

 
9. Secure cooling package with support strap (1). Remove right hand air to air tube (2) and upper radiator hose (3).

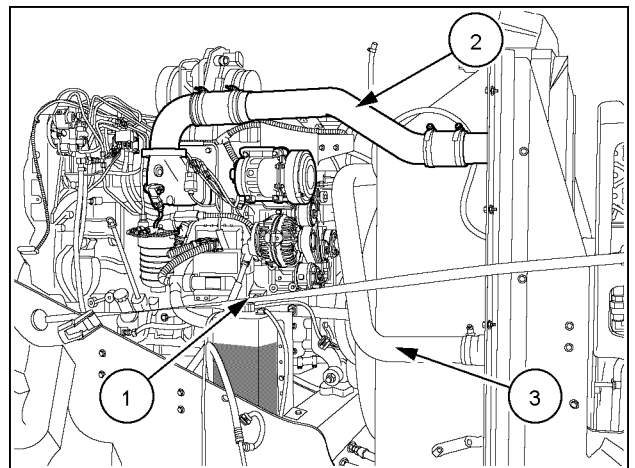

RCPH10FWD016BBC 9


10. Disconnect fuel return line.

 **NOTE:** Plug and cap disconnected hoses and fittings.

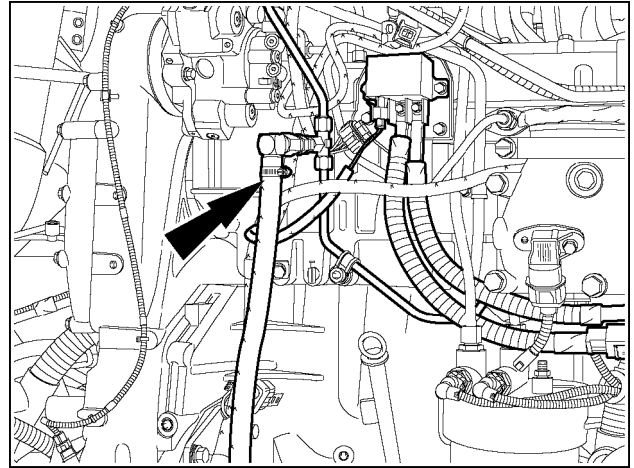


RCPH10FWD017BBC 10

 11. Disconnect drive shaft from engine.

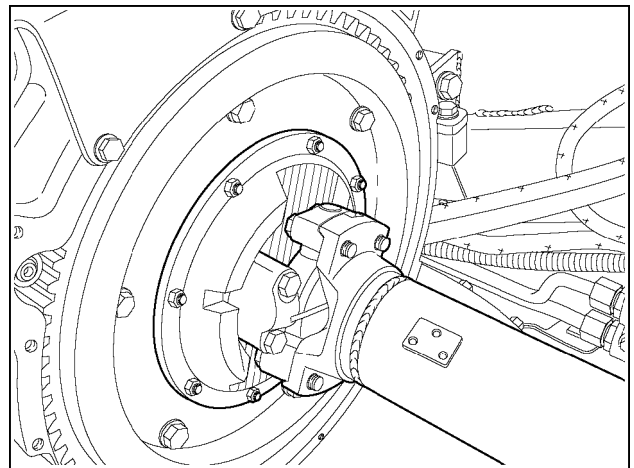

RCPH10FWD018BBC 11

 12. Remove bracket on both sides over rear engine mounts.

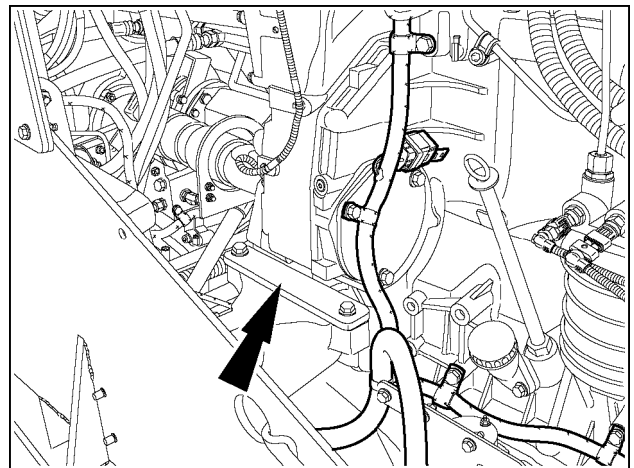

RCPH10FWD019BBC 12




**Suggest:**

 **If the above button click is invalid.**

**Please download this document first, and then click the above link to download the complete manual.**


**Thank you so much for reading**

13. Remove front engine mount bracket.

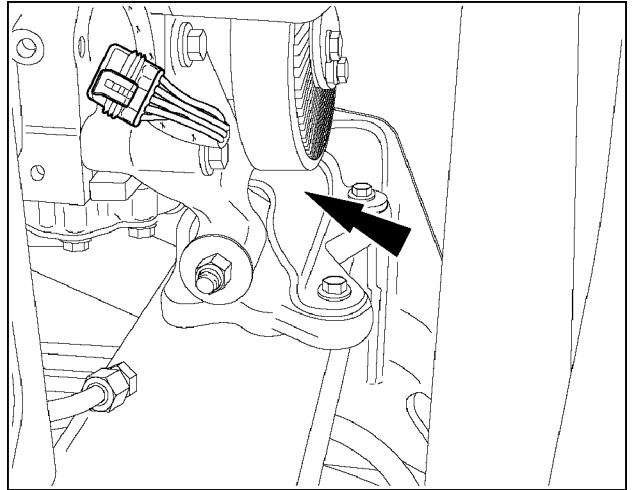

RCPH10FWD021BBC 13

 14. Attach 4130 load rotor lifting bale or equivalent. Remove engine from tractor over left hand side rail.

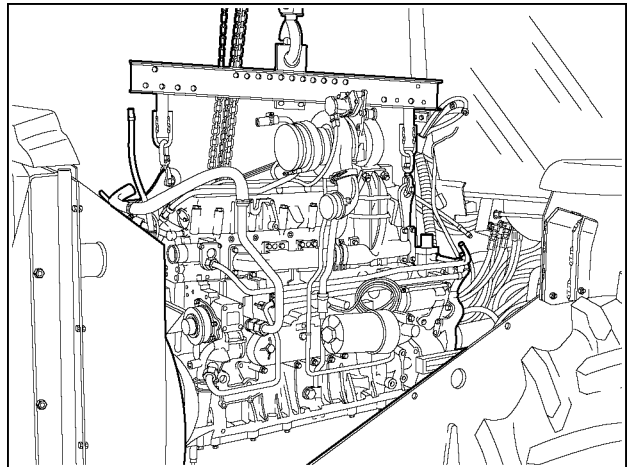

RCPH10FWD022BBC 14

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**