

SERVICE MANUAL

T4030N / T4040N / T4050N
T4060N / T4020V / T4030V
T4040V / T4050V / T4060V
Tractor

Part number 47888351
English
July 2016





SERVICE MANUAL

T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384], T4020V Without cab [Z8JE04136 - ZCJE10918], T4020V Without cab - Model Year 2012 [ZCJE08297 - ZDJE10851], T4020V Without cab [Z8JE03611 - ZCJE09385], T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061], T4030N With cab [Z8JE11012 - ZCJE10920], T4030N Without cab - Model Year 2012 [ZCJE12159 - ZDJE09449], T4030N Without cab [Z8JE03686 - ZCJE08869], T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775], T4030V With cab [Z8JE04295 - ZCJE10898], T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084], T4030V Without cab [Z8JE13092 - ZCJE07076], T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934], T4040N With cab [Z8JE03840 - ZCJE10920], T4040N Without cab - Model Year 2012 [ZCJE04365 - ZDJE11547], T4040N Without cab [Z8JE15170 - ZCJE08869], T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978], T4040V With cab [Z8JE04453 - ZCJE08151], T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487], T4040V Without cab [Z8JE04825 - ZCJE06813], T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074], T4050N With cab [Z8JE12903 - ZCJE10899], T4050N Without cab - Model Year 2012 [ZCJE13034 - ZDJE11359], T4050N Without cab [Z8JE02338 - ZCJE07673], T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111], T4050V With cab [Z8JE04822 - ZCJE10163], T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531], T4050V Without cab [Z8JE14721 - ZCJE04768], T4060N With Cab [ZCJE05677 - ZDJE08122], T4060N Without cab [ZCJE09652 - ZDJE10652], T4060V With cab [ZCJE12826 - ZDJE06199], T4060V Without cab [ZCJE09734 - ZDJE10451]

Link Product / Engine

Product	Market Product	Engine
T4030N With cab [Z8JE11012 - ZCJE10920]	Australia New Zealand	F5AE9484B
T4030N With cab [Z8JE11012 - ZCJE10920]	Asia Pacific	F5AE9484B
T4030N With cab [Z8JE11012 - ZCJE10920]	Middle East Africa	F5AE9484B
T4030N With cab [Z8JE11012 - ZCJE10920]	Europe	F5AE9484B
T4030N Without cab [Z8JE03686 - ZCJE08869]	Australia New Zealand	F5AE9484B
T4030N Without cab [Z8JE03686 - ZCJE08869]	Middle East Africa	F5AE9484B
T4030N Without cab [Z8JE03686 - ZCJE08869]	Europe	F5AE9484B
T4030N Without cab [Z8JE03686 - ZCJE08869]	Asia Pacific	F5AE9484B
T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061]	Europe	F5AE9484B
T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061]	Middle East Africa	F5AE9484B
T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061]	Australia New Zealand	F5AE9484B
T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061]	Asia Pacific	F5AE9484B
T4030N Without cab - Model Year 2012 [ZCJE12159 - ZDJE09449]	Australia New Zealand	F5AE9484B
T4030N Without cab - Model Year 2012 [ZCJE12159 - ZDJE09449]	Europe	F5AE9484B
T4030N Without cab - Model Year 2012 [ZCJE12159 - ZDJE09449]	Asia Pacific	F5AE9484B
T4030N Without cab - Model Year 2012 [ZCJE12159 - ZDJE09449]	Middle East Africa	F5AE9484B
T4040N With cab [Z8JE03840 - ZCJE10920]	Middle East Africa	F5AE9484G
T4040N With cab [Z8JE03840 - ZCJE10920]	Europe	F5AE9484G
T4040N With cab [Z8JE03840 - ZCJE10920]	Australia New Zealand	F5AE9484G
T4040N With cab [Z8JE03840 - ZCJE10920]	Asia Pacific	F5AE9484G
T4040N Without cab [Z8JE15170 - ZCJE08869]	Middle East Africa	F5AE9484G
T4040N Without cab [Z8JE15170 - ZCJE08869]	Australia New Zealand	F5AE9484G
T4040N Without cab [Z8JE15170 - ZCJE08869]	Europe	F5AE9484G
T4040N Without cab [Z8JE15170 - ZCJE08869]	Asia Pacific	F5AE9484G

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Product	Market Product	Engine
T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934]	Middle East Africa	F5AE9484G
T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934]	Asia Pacific	F5AE9484G
T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934]	Europe	F5AE9484G
T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934]	Australia New Zealand	F5AE9484G
T4040N Without cab - Model Year 2012 [ZCJE04365 - ZDJE11547]	Australia New Zealand	F5AE9484G
T4040N Without cab - Model Year 2012 [ZCJE04365 - ZDJE11547]	Europe	F5AE9484G
T4040N Without cab - Model Year 2012 [ZCJE04365 - ZDJE11547]	Asia Pacific	F5AE9484G
T4040N Without cab - Model Year 2012 [ZCJE04365 - ZDJE11547]	Middle East Africa	F5AE9484G
T4050N With cab [Z8JE12903 - ZCJE10899]	Europe	F4CE9484
T4050N With cab [Z8JE12903 - ZCJE10899]	Middle East Africa	F4CE9484
T4050N With cab [Z8JE12903 - ZCJE10899]	Australia New Zealand	F4CE9484
T4050N With cab [Z8JE12903 - ZCJE10899]	Asia Pacific	F4CE9484
T4050N Without cab [Z8JE02338 - ZCJE07673]	Australia New Zealand	F4CE9484
T4050N Without cab [Z8JE02338 - ZCJE07673]	Middle East Africa	F4CE9484
T4050N Without cab [Z8JE02338 - ZCJE07673]	Asia Pacific	F4CE9484
T4050N Without cab [Z8JE02338 - ZCJE07673]	Europe	F4CE9484
T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074]	Middle East Africa	F4CE9484
T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074]	Australia New Zealand	F4CE9484
T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074]	Asia Pacific	F4CE9484
T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074]	Europe	F4CE9484
T4050N Without cab - Model Year 2012 [ZCJE13034 - ZDJE11359]	Australia New Zealand	F4CE9484
T4050N Without cab - Model Year 2012 [ZCJE13034 - ZDJE11359]	Europe	F4CE9484
T4050N Without cab - Model Year 2012 [ZCJE13034 - ZDJE11359]	Asia Pacific	F4CE9484
T4050N Without cab - Model Year 2012 [ZCJE13034 - ZDJE11359]	Middle East Africa	F4CE9484
T4060N With Cab [ZCJE05677 - ZDJE08122]	Middle East Africa	F4CE9484
T4060N With Cab [ZCJE05677 - ZDJE08122]	Australia New Zealand	F4CE9484

Product	Market Product	Engine
T4060N With Cab [ZCJE05677 - ZDJE08122]	Europe	F4CE9484
T4060N With Cab [ZCJE05677 - ZDJE08122]	Asia Pacific	F4CE9484
T4060N Without cab [ZCJE09652 - ZDJE10652]	Europe	F4CE9484
T4060N Without cab [ZCJE09652 - ZDJE10652]	Asia Pacific	F4CE9484
T4060N Without cab [ZCJE09652 - ZDJE10652]	Middle East Africa	F4CE9484
T4060N Without cab [ZCJE09652 - ZDJE10652]	Australia New Zealand	F4CE9484
T4020V With cab [Z8JE04136 - ZCJE10918]	Australia New Zealand	F5AE9484A
T4020V With cab [Z8JE04136 - ZCJE10918]	Middle East Africa	F5AE9484A
T4020V With cab [Z8JE04136 - ZCJE10918]	Europe	F5AE9484A
T4020V With cab [Z8JE04136 - ZCJE10918]	Asia Pacific	F5AE9484A
T4020V Without cab [Z8JE03611 - ZCJE09385]	Asia Pacific	F5AE9484A
T4020V Without cab [Z8JE03611 - ZCJE09385]	Middle East Africa	F5AE9484A
T4020V Without cab [Z8JE03611 - ZCJE09385]	Australia New Zealand	F5AE9484A
T4020V Without cab [Z8JE03611 - ZCJE09385]	Europe	F5AE9484A
T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384]	Asia Pacific	F5AE9484A
T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384]	Australia New Zealand	F5AE9484A
T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384]	Europe	F5AE9484A
T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384]	Middle East Africa	F5AE9484A
T4020V Without cab - Model Year 2012 [ZCJE08297 - ZDJE10851]	Europe	F5AE9484A
T4020V Without cab - Model Year 2012 [ZCJE08297 - ZDJE10851]	Middle East Africa	F5AE9484A
T4020V Without cab - Model Year 2012 [ZCJE08297 - ZDJE10851]	Australia New Zealand	F5AE9484A
T4020V Without cab - Model Year 2012 [ZCJE08297 - ZDJE10851]	Asia Pacific	F5AE9484A
T4030V With cab [Z8JE04295 - ZCJE10898]	Australia New Zealand	F5AE9484B
T4030V With cab [Z8JE04295 - ZCJE10898]	Europe	F5AE9484B
T4030V With cab [Z8JE04295 - ZCJE10898]	Middle East Africa	F5AE9484B
T4030V With cab [Z8JE04295 - ZCJE10898]	Asia Pacific	F5AE9484B

Product	Market Product	Engine
T4030V Without cab [Z8JE13092 - ZCJE07076]	Europe	F5AE9484B
T4030V Without cab [Z8JE13092 - ZCJE07076]	Asia Pacific	F5AE9484B
T4030V Without cab [Z8JE13092 - ZCJE07076]	Australia New Zealand	F5AE9484B
T4030V Without cab [Z8JE13092 - ZCJE07076]	Middle East Africa	F5AE9484B
T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775]	Asia Pacific	F5AE9484B
T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775]	Middle East Africa	F5AE9484B
T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775]	Europe	F5AE9484B
T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775]	Australia New Zealand	F5AE9484B
T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084]	Australia New Zealand	F5AE9484B
T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084]	Europe	F5AE9484B
T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084]	Middle East Africa	F5AE9484B
T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084]	Asia Pacific	F5AE9484B
T4040V With cab [Z8JE04453 - ZCJE08151]	Middle East Africa	F5AE9484G
T4040V With cab [Z8JE04453 - ZCJE08151]	Australia New Zealand	F5AE9484G
T4040V With cab [Z8JE04453 - ZCJE08151]	Europe	F5AE9484G
T4040V With cab [Z8JE04453 - ZCJE08151]	Asia Pacific	F5AE9484G
T4040V Without cab [Z8JE04825 - ZCJE06813]	Europe	F5AE9484G
T4040V Without cab [Z8JE04825 - ZCJE06813]	Middle East Africa	F5AE9484G
T4040V Without cab [Z8JE04825 - ZCJE06813]	Australia New Zealand	F5AE9484G
T4040V Without cab [Z8JE04825 - ZCJE06813]	Asia Pacific	F5AE9484G
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978]	Australia New Zealand	F5AE9484G
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978]	Asia Pacific	F5AE9484G
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978]	Europe	F5AE9484G
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978]	Middle East Africa	F5AE9484G
T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487]	Australia New Zealand	F5AE9484G
T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487]	Middle East Africa	F5AE9484G

Product	Market Product	Engine
T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487]	Europe	F5AE9484G
T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487]	Asia Pacific	F5AE9484G
T4050V With cab [Z8JE04822 - ZCJE10163]	Europe	F4CE9484
T4050V With cab [Z8JE04822 - ZCJE10163]	Middle East Africa	F4CE9484
T4050V With cab [Z8JE04822 - ZCJE10163]	Australia New Zealand	F4CE9484
T4050V With cab [Z8JE04822 - ZCJE10163]	Asia Pacific	F4CE9484
T4050V Without cab [Z8JE14721 - ZCJE04768]	Australia New Zealand	F4CE9484
T4050V Without cab [Z8JE14721 - ZCJE04768]	Europe	F4CE9484
T4050V Without cab [Z8JE14721 - ZCJE04768]	Asia Pacific	F4CE9484
T4050V Without cab [Z8JE14721 - ZCJE04768]	Middle East Africa	F4CE9484
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111]	Middle East Africa	F4CE9484
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111]	Asia Pacific	F4CE9484
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111]	Australia New Zealand	F4CE9484
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111]	Europe	F4CE9484
T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531]	Europe	F4CE9484
T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531]	Middle East Africa	F4CE9484
T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531]	Asia Pacific	F4CE9484
T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531]	Australia New Zealand	F4CE9484
T4060V With cab [ZCJE12826 - ZDJE06199]	Asia Pacific	F4CE9484
T4060V With cab [ZCJE12826 - ZDJE06199]	Australia New Zealand	F4CE9484
T4060V With cab [ZCJE12826 - ZDJE06199]	Europe	F4CE9484
T4060V With cab [ZCJE12826 - ZDJE06199]	Middle East Africa	F4CE9484
T4060V Without cab [ZCJE09734 - ZDJE10451]	Europe	F4CE9484
T4060V Without cab [ZCJE09734 - ZDJE10451]	Middle East Africa	F4CE9484
T4060V Without cab [ZCJE09734 - ZDJE10451]	Australia New Zealand	F4CE9484
T4060V Without cab [ZCJE09734 - ZDJE10451]	Asia Pacific	F4CE9484

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.145] Gearbox internal components.....	21.7
[21.160] Creeper	21.8
[21.162] Reverser	21.9
[21.168] Hi-Lo unit.....	21.10
[21.182] Differential.....	21.11
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2

[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
[25.310] Final drives	25.5
[25.400] Non-powered front axle	25.6
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.146] Front Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems.....	35
[35.160] Front hitch controls and lines	35.1
[35.000] Hydraulic systems.....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.104] Fixed displacement pump.....	35.4
[35.204] Remote control valves	35.5
[35.600] High flow hydraulics.....	35.6
[35.100] Main lift system.....	35.7
[35.114] Three-point hitch control valve	35.8
[35.116] Three-point hitch cylinder	35.9
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1

[37.108] Rear three-point hitch external controls	37.2
[37.162] Front hitch	37.3
Steering	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components	41.2
Wheels	44
[44.511] Front wheels	44.1
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.302] Battery	55.5
[55.202] Cold start aid	55.6
[55.640] Electronic modules	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.9
[55.047] Steering control system	55.10
[55.523] Cab hitch controls	55.11
[55.130] Rear three-point hitch electronic control system	55.12
[55.404] External lighting	55.13
[55.514] Cab lighting	55.14
[55.511] Light harnesses	55.15
[55.408] Warning indicators, alarms, and instruments	55.16

[55.DTC] FAULT CODES.....	55.17
Platform, cab, bodywork, and decals	90
[90.110] Operator platform less cab	90.1
[90.114] Operator protections	90.2
[90.150] Cab	90.3
[90.151] Cab interior.....	90.4
[90.154] Cab doors and hatches	90.5
[90.100] Engine hood and panels	90.6
[90.102] Engine shields, hood latches, and trims	90.7
[90.160] Cab interior trim and panels.....	90.8



INTRODUCTION

Contents

INTRODUCTION

Advice Important notice	3
Note to the Owner WARNINGS FOR AIR CONDITIONING SYSTEM REPAIR OPERATIONS (*)	4
Safety rules SAFETY REGULATIONS	5
Personal safety CAB AIR CONDITIONING SYSTEM (*)	8
Basic instructions	9
Consumables	11

(*) See content for specific models

Advice Important notice

All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary. Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.

Note to the Owner WARNINGS FOR AIR CONDITIONING SYSTEM REPAIR OPERATIONS

T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384]	ANZ --- APAC --- MEA --- WE
T4020V With cab [Z8JE04136 - ZCJE10918]	ANZ --- APAC --- MEA --- WE
T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061]	ANZ --- APAC --- MEA --- WE
T4030N With cab [Z8JE11012 - ZCJE10920]	ANZ --- APAC --- MEA --- WE
T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775]	ANZ --- APAC --- MEA --- WE
T4030V With cab [Z8JE04295 - ZCJE10898]	ANZ --- APAC --- MEA --- WE
T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934]	ANZ --- APAC --- MEA --- WE
T4040N With cab [Z8JE03840 - ZCJE10920]	ANZ --- APAC --- MEA --- WE
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978]	ANZ --- APAC --- MEA --- WE
T4040V With cab [Z8JE04453 - ZCJE08151]	ANZ --- APAC --- MEA --- WE
T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074]	ANZ --- APAC --- MEA --- WE
T4050N With cab [Z8JE12903 - ZCJE10899]	ANZ --- APAC --- MEA --- WE
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111]	ANZ --- APAC --- MEA --- WE
T4050V With cab [Z8JE04822 - ZCJE10163]	ANZ --- APAC --- MEA --- WE
T4060N With Cab [ZCJE05677 - ZDJE08122]	ANZ --- APAC --- MEA --- WE
T4060V With cab [ZCJE12826 - ZDJE06199]	ANZ --- APAC --- MEA --- WE

Starting the system at low temperatures can damage the compressor. Only operate the air conditioner when the engine is hot and the temperature inside the cab is at least **20 °C (68.00 °F)**.

When disconnecting the hoses, close the ends with plastic caps to prevent foreign matter and humidity from getting inside the hoses.

Handle the thermostatic sensor carefully to avoid damage that may prevent efficient system operation.

Always use two spanners to unscrew the hose fittings to avoid twisting the fitting.

Do not use any type of engine oil to lubricate the compressor and the system.

Never leave the compressor oil container open, always make sure that it is tightly closed. If left exposed the oil will absorb humidity from the air and may, subsequently, damage the system.

Do not transfer compressor oil from the original container to another container.

Do not introduce any additives to the compressor oil. Any additional substances could contain elements which are incompatible with the chemical base of the refrigerant and thus alter its characteristics.

Check that the thermostatic sensor is correctly inserted in the fins on the evaporator to ensure efficient system operation.

Safety rules SAFETY REGULATIONS

TO PREVENT ACCIDENTS

Most accidents or injuries that occur in workshops are the result of non-observance of simple and fundamental safety regulations.

For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED: by foreseeing possible causes and consequently acting with the necessary caution and care.

Accidents may occur with all types of vehicle, regardless of how well it was designed and built.

A careful and judicious service technician is the best guarantee against accidents.

Precise observance of the most basic safety rule is normally sufficient to avoid many serious accidents.

DANGER: Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

GENERAL

- Carefully follow specified repair and maintenance procedures.
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts.
It is advised to wear approved safety clothing, e.g: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.
- Operate the vehicle and use the implements exclusively from the driver's seat.
- Do not carry out operations on the vehicle with the engine running, unless specifically indicated.
- Stop the engine and ensure that all pressure is relieved from hydraulic circuits before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out using extreme care and attention.
- Service steps and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- Disconnect the batteries and label all controls to indicate that the vehicle is being serviced. Block the machine and all equipment which should be raised.
- Do not check or fill fuel tanks, accumulator batteries, nor use starting liquid when smoking or near naked flames, as these fluids are inflammable.
- Brakes are inoperative if manually released for repair or maintenance purposes.
In such cases, the machine should be kept constantly under control using blocks or similar devices.
- The fuel nozzle should always be in contact with the filling aperture. Maintain this position until filling operations are completed in order to avoid possible sparks caused by the accumulation of static electricity.
- Only use specified towing points for towing the tractor, connect parts carefully. Make sure that all pins and/or locks are secured in position before applying traction.
Never remain near the towing bars, cables or chains that are operating under load
- Transport vehicles that cannot be driven using a trailer or a low-loading platform trolley, if available.
- When loading or unloading the vehicle from the trailer (or other means of transport), select a flat area capable of sustaining the trailer or truck wheels, firmly secure the tractor to the truck or trailer and lock the wheels in the position.
- Electric heaters, battery-chargers and similar equipment must only be powered by auxiliary power supplies with efficient ground insulation to avoid electrical shock hazards.
- Always use suitable hoisting or lifting devices when raising or moving heavy parts.
- Take extra care if bystanders are present.
- Never pour gasoline or diesel oil into open, wide and low containers.
- Never use gasoline, diesel oil or other inflammable liquids as cleaning agents. Use non-flammable non-toxic proprietary solvents.
- Wear safety goggles with side guards when cleaning parts with compressed air.
- Limit the air pressure to a maximum of **2.1 bar (30.5 psi)**, according to local regulations.



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading



SERVICE MANUAL

Engine

T4020V With cab - Model Year 2012 [ZCJE06109 - ZDJE10384], T4020V Without cab [Z8JE04136 - ZCJE10918], T4020V Without cab - Model Year 2012 [ZCJE08297 - ZDJE10851], T4020V Without cab [Z8JE03611 - ZCJE09385], T4030N With cab - Model Year 2012 [ZCJE06854 - ZDJE10061], T4030N With cab [Z8JE11012 - ZCJE10920], T4030N Without cab - Model Year 2012 [ZCJE12159 - ZDJE09449], T4030N Without cab [Z8JE03686 - ZCJE08869], T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775], T4030V With cab [Z8JE04295 - ZCJE10898], T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084], T4030V Without cab [Z8JE13092 - ZCJE07076], T4040N With cab - Model Year 2012 [ZCJE08352 - ZDJE09934], T4040N With cab [Z8JE03840 - ZCJE10920], T4040N Without cab - Model Year 2012 [ZCJE04365 - ZDJE11547], T4040N Without cab [Z8JE15170 - ZCJE08869], T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978], T4040V With cab [Z8JE04453 - ZCJE08151], T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487], T4040V Without cab [Z8JE04825 - ZCJE06813], T4050N With cab - Model Year 2012 [ZCJE03562 - ZDJE10074], T4050N With cab [Z8JE12903 - ZCJE10899], T4050N Without cab - Model Year 2012 [ZCJE13034 - ZDJE11359], T4050N Without cab [Z8JE02338 - ZCJE07673], T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111], T4050V With cab [Z8JE04822 - ZCJE10163], T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531], T4050V Without cab [Z8JE14721 - ZCJE04768], T4060N With Cab [ZCJE05677 - ZDJE08122], T4060N Without cab [ZCJE09652 - ZDJE10652], T4060V With cab [ZCJE12826 - ZDJE06199], T4060V Without cab [ZCJE09734 - ZDJE10451]

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>