

## TG215/245/275/305 MASTER TABLE OF CONTENTS

**NOTE:** Engine repair information is not contained within this tractor Repair Manual. For engine repair, refer to publication number 87515682 for the 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.

### BOOK 1 - 87678533

STANDARD TORQUE SPECIFICATIONS .....	SECTION 00, CHAPTER 1
TORQUE SPECIFICATIONS - METRIC HARDWARE .....	00-1-4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	00-1-5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	00-1-6
SAFETY, GENERAL INFORMATION, MAINTENANCE SCHEDULE .....	SECTION 00, CHAPTER 2
SAFETY .....	00-2-3
GENERAL INFORMATION .....	00-2-5
LUBRICATION/MAINTENANCE CHART .....	00-2-6
SYSTEM CAPACITIES .....	00-2-7
ENGINE REMOVAL AND INSTALLATION .....	SECTION 10, CHAPTER 1
ENGINE REMOVAL .....	10-1-3
ENGINE INSTALLATION .....	10-1-10
FUEL TANK / FUEL SENDER REMOVAL AND INSTALLATION .....	SECTION 10, CHAPTER 2
SPECIAL TORQUES .....	10-2-3
FUEL TANK .....	10-2-3
FUEL LEVEL SENDER .....	10-2-10
HOOD REMOVAL .....	SECTION 10, CHAPTER 3
HOOD REMOVAL .....	10-3-3
HOOD INSTALLATION .....	10-3-5
COOLING SYSTEM MODULE REMOVAL AND INSTALLATION .....	SECTION 10, CHAPTER 4
COOLING MODULE REMOVAL .....	10-4-3
COOLING MODULE INSTALLATION .....	10-4-7
VISCOUS FAN DRIVE TEST .....	SECTION 10, CHAPTER 5
REQUIRED TOOLS .....	10-5-3
DIAGNOSTIC PROCEDURE .....	10-5-4
FAN SPEED TEST .....	10-5-7
POWERSHIFT TRANSMISSION SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 21, CHAPTER 1
TRANSMISSION SYSTEM INTRODUCTION .....	21-1-3
TRANSMISSION SYSTEM CONTROLS .....	21-1-5
TRANSMISSION SYSTEM COMPONENTS .....	21-1-6
TRANSMISSION LUBE AND DISTRIBUTION TUBES .....	21-1-8
POWERSHIFT TRANSMISSION CLUTCH LAYOUT .....	21-1-10
POWERSHIFT VALVE CLUTCH ENGAGEMENTS .....	21-1-11
POWER FLOW (FORWARD SPEEDS) .....	21-1-12
POWER FLOW (REVERSE SPEEDS) .....	21-1-30
POWER FLOW (FORWARD CREEPER DRIVE SPEEDS) .....	21-1-34
POWER FLOW (REVERSE CREEPER DRIVE SPEEDS) .....	21-1-40
INCHING VALVE OPERATION .....	21-1-42
INSTRUMENTATION CLUSTER - TRANSMISSION LEAKAGE CHECK .....	21-1-46
MASTER CLUTCH PRESSURE CHECK .....	21-1-49

## TG215/245/275/305 MASTER TABLE OF CONTENTS

FRONT FRAME TO SPEED TRANSMISSION SPLIT .....	SECTION 21, CHAPTER 2
SPECIAL TOOLS .....	21-2-3
SPECIAL TORQUES .....	21-2-3
FRONT FRAME TO SPEED TRANSMISSION SPLIT .....	21-2-4
SPEED TO RANGE TRANSMISSION SPLIT .....	SECTION 21, CHAPTER 3
SPECIAL TOOLS .....	21-3-3
SPECIAL TORQUES .....	21-3-3
SPEED TO RANGE TRANSMISSION SPLIT .....	21-3-4
Removal .....	21-3-4
Installation .....	21-3-7
SPEED TRANSMISSION .....	SECTION 21, CHAPTER 4
SPECIFICATIONS .....	21-4-4
SPECIAL TORQUES .....	21-4-4
TROUBLESHOOTING AFTER SPEED TRANSMISSION REPAIR .....	21-4-4
SPECIAL TOOLS .....	21-4-5
SPEED TRANSMISSION WITH CREEP OPTION .....	21-4-6
ASSEMBLING THE COUNTERSHAFT WITH CREEPER SPEED CLUTCH .....	21-4-14
TRANSMISSION ASSEMBLY WITH CREEP OPTION .....	21-4-78
TRANSMISSION ASSEMBLY WITHOUT CREEP OPTION .....	21-4-80
RANGE TRANSMISSION TO REAR FRAME SPLIT .....	SECTION 21, CHAPTER 5
SPECIAL TOOLS .....	21-5-3
SPECIAL TORQUES .....	21-5-3
RANGE TRANSMISSION TO REAR FRAME SPLIT .....	21-5-4
Disassembly .....	21-5-4
Assembly .....	21-5-7
RANGE TRANSMISSION .....	SECTION 21, CHAPTER 6
SPECIFICATIONS .....	21-6-3
TROUBLESHOOTING AFTER RANGE TRANSMISSION REPAIR .....	21-6-3
SPECIAL TORQUES .....	21-6-3
SPECIAL TOOLS .....	21-6-4
RANGE TRANSMISSION .....	21-6-5
Removing the Shaft Master Clutch .....	21-6-5
Removing the Input Shaft, Countershaft and Front Wheel Drive (FWD) / Park Brake Assembly .....	21-6-7
Disassembly of the Master Clutch .....	21-6-12
Exploded View of the Master Clutch .....	21-6-14
Assembly of the Master Clutch .....	21-6-15
Disassembly of the Range Transmission Input Shaft .....	21-6-16
Exploded View of the Range Transmission Input Shaft .....	21-6-22
Assembly of the Range Transmission Input Shaft .....	21-6-23
Cross-Section of Input Shaft .....	21-6-32
Disassembly of the Range Transmission Countershaft .....	21-6-33
Exploded View of the Range Transmission Countershaft .....	21-6-37
Assembly of the Range Transmission Countershaft .....	21-6-38
Front Wheel Drive (FWD) - Emergency Brake Disassembly .....	21-6-45
Exploded View of FWD and Emergency Brake .....	21-6-51
Assembly of the FWD / Emergency Brake .....	21-6-52
Exploded View of the Range Transmission Countershaft, Input Shaft, and FWD Input Shaft .....	21-6-66
Installing the Range Transmission Countershaft, Input Shaft, and FWD Input Shaft into the Range Transmission Housing .....	21-6-67
SETTING THE END PLAY OF THE RANGE TRANSMISSION COUNTERSHAFT AND INPUT SHAFT .....	21-6-73
Installing the Range Input Master Clutch .....	21-6-75

**TG215/245/275/305 MASTER TABLE OF CONTENTS**

TRANSMISSION CONTROL VALVES AND INCHING VALVE .....SECTION 21, CHAPTER 7  
SPECIAL TORQUES ..... 21-7-3  
POWERSHIFT TRANSMISSION CONTROL VALVES ..... 21-7-3  
TRANSMISSION CONTROL VALVE CONFIGURATION ..... 21-7-4  
INCHING VALVE ..... 21-7-15

REAR FRAME .....SECTION 21, CHAPTER 8  
SPECIFICATIONS ..... 21-8-3  
SPECIAL TORQUES ..... 21-8-3  
SPECIAL TOOLS ..... 21-8-3  
DIFFERENTIAL ..... 21-8-4  
Removal ..... 21-8-4  
Disassembly ..... 21-8-10  
PINION SHAFT ..... 21-8-15  
Removal and Disassembly ..... 21-8-15  
Assembly and Installation ..... 21-8-18  
HEAVY DUTY PINION SHAFT ..... 21-8-25  
Removal and Disassembly ..... 21-8-25  
Assembly and Installation ..... 21-8-27  
DIFFERENTIAL ASSEMBLY ..... 21-8-33  
DIFFERENTIAL INSTALLATION ..... 21-8-38  
ADJUSTING THE DIFFERENTIAL PRELOAD ..... 21-8-45  
ADJUSTING THE RING AND PINION BACKLASH ..... 21-8-47  
BEVEL PINION AND GEAR TOOTH CONTACT CHECK ..... 21-8-48

HYDRAULIC PUMP DRIVE .....SECTION 21, CHAPTER 9  
SPECIAL TORQUES ..... 21-9-3  
SPECIFICATIONS ..... 21-9-3  
PUMP DRIVE ..... 21-9-3  
Removal ..... 21-9-3  
Disassembly ..... 21-9-4  
Assembly ..... 21-9-7  
Installation ..... 21-9-12

**BOOK 2 - 87689442**

FRONT WHEEL DRIVE CONTROL SYSTEM - HOW IT WORKS .....SECTION 25, CHAPTER 1  
FRONT WHEEL DRIVE (FWD) ..... 25-1-3  
ELECTRONIC FRONT WHEEL DRIVE (FWD) CONTROL ..... 25-1-5  
FRONT WHEEL DRIVE (FWD) CONTROL MODES ..... 25-1-7  
FRONT WHEEL DRIVE (FWD) FUNCTIONAL TESTS ..... 25-1-8  
TROUBLESHOOTING ..... 25-1-10

DIFFERENTIAL LOCK CONTROL SYSTEM - HOW IT WORKS .....SECTION 25, CHAPTER 2  
DIFFERENTIAL LOCK ..... 25-2-3  
ELECTRONIC DIFFERENTIAL LOCK CONTROL ..... 25-2-5  
DIFFERENTIAL LOCK CONTROL MODES ..... 25-2-7  
DIFFERENTIAL LOCK CONTROL ..... 25-2-8  
DIFFERENTIAL LOCK FUNCTIONAL TESTS ..... 25-2-9  
TROUBLESHOOTING ..... 25-2-12  
TROUBLESHOOTING ..... 25-2-14  
PTO/DIFFERENTIAL LOCK VALVE CIRCUIT ..... 25-2-15

FRONT WHEEL DRIVE OUTPUT SHAFT .....SECTION 25, CHAPTER 3  
SPECIAL TORQUES ..... 25-3-3  
FWD OUTPUT SHAFT ..... 25-3-4  
FWD Output Shaft Removal ..... 25-3-4

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## TG215/245/275/305 MASTER TABLE OF CONTENTS

FWD Output Shaft Disassembly .....	25-3-5
FWD Output Shaft Assembly .....	25-3-9
FRONT WHEEL DRIVE DRIVE SHAFT.....	SECTION 25, CHAPTER 4
SPECIAL TORQUES .....	25-4-3
FWD DRIVE SHAFT .....	25-4-4
SUSPENSION FWD AXLE SYSTEM - HOW IT WORKS AND TROUBLESHOOTING ..	SECTION 25, CHAPTER 5
SUSPENDED FWD AXLE OPERATION .....	25-5-3
SUSPENDED MFD AXLE- CALIBRATION MODE .....	25-5-9
ERROR TABLE .....	25-5-11
SUSPENDED FWD AXLE- MANUAL OPERATION MODE (TEST MODE) .....	25-5-13
SUSPENDED FWD AXLE- DEMONSTRATION MODE .....	25-5-16
SUSPENSION FWD AXLE REMOVAL .....	SECTION 25, CHAPTER 6
SUSPENDED FWD AXLE .....	25-6-3
Removal .....	25-6-3
Installation .....	25-6-5
SUPERSTEER AXLE REMOVAL AND INSTALLATION .....	SECTION 25, CHAPTER 7
SPECIAL TORQUES .....	25-7-3
SPECIAL TOOLS .....	25-7-3
FRONT AXLE REMOVAL .....	25-7-4
FRONT AXLE INSTALLATION .....	25-7-7
LIMITED SLIP FWD DIFFERENTIAL.....	SECTION 25, CHAPTER 8
SPECIFICATIONS .....	25-8-2
SPECIAL TORQUES .....	25-8-2
SPECIAL TOOLS .....	25-8-2
12 BOLT AXLE .....	25-8-2
DIFFERENTIAL CARRIER ASSEMBLY REMOVAL .....	25-8-3
DIFFERENTIAL DISASSEMBLY .....	25-8-4
Pinion Disassembly .....	25-8-8
DIFFERENTIAL ASSEMBLY .....	25-8-11
DIFFERENTIAL CARRIER ASSEMBLY .....	25-8-15
Pinion Position and Assembly .....	25-8-15
Shim Pack Thickness Chart .....	25-8-16
Setting The Pinion Depth .....	25-8-17
Adjusting Bearing Preload .....	25-8-20
DIFFERENTIAL INSTALLATION .....	25-8-22
Checking Backlash .....	25-8-23
Ring Gear and Pinion Tooth Pattern Interpretation .....	25-8-25
Installation of Carrier Assembly to Axle Housing .....	25-8-27
LOCKING FWD DIFFERENTIAL.....	SECTION 25, CHAPTER 9
SPECIFICATIONS .....	25-9-3
SPECIAL TORQUES .....	25-9-3
SPECIAL TOOLS .....	25-9-3
REMOVAL OF THE FRONT DIFFERENTIAL CARRIER ASSEMBLY .....	25-9-4
REMOVAL OF THE FRONT DIFFERENTIAL FROM THE CARRIER HOUSING .....	25-9-5
DISASSEMBLY OF THE DIFFERENTIAL .....	25-9-7
PINION DISASSEMBLY .....	25-9-9
ASSEMBLY OF THE DIFFERENTIAL .....	25-9-12
DIFFERENTIAL CARRIER ASSEMBLY .....	25-9-16
SETTING THE PINION DEPTH .....	25-9-18
ADJUSTING BEARING PRELOAD .....	25-9-21
DIFFERENTIAL INSTALLATION .....	25-9-23

## TG215/245/275/305 MASTER TABLE OF CONTENTS

FWD PLANETARY HUB, STEERING KNUCKLE AND AXLE DRIVE SHAFT .....	SECTION 25, CHAPTER 10
SPECIFICATIONS .....	25-10-3
SPECIAL TORQUES .....	25-10-3
SPECIAL TOOLS .....	25-10-3
PLANETARY HUB DISASSEMBLY .....	25-10-4
STEERING KNUCKLE AND KINGPIN DISASSEMBLY .....	25-10-9
AXLE DRIVE SHAFT DISASSEMBLY .....	25-10-13
AXLE SHAFT ASSEMBLY .....	25-10-14
KINGPIN ASSEMBLY .....	25-10-16
STEERING KNUCKLE ASSEMBLY .....	25-10-20
PLANETARY HUB ASSEMBLY .....	25-10-25
Ten Bolt Axle Only .....	25-10-30
Twelve Bolt Axle Only .....	25-10-34
All Axles .....	25-10-39
SUSPENSION FWD AXLE .....	SECTION 25, CHAPTER 11
SPECIAL TORQUES .....	25-11-2
SUSPENSION FWD AXLE .....	25-11-3
Disassembly .....	25-11-3
Assembly .....	25-11-13
Position Sensor Adjustment .....	25-11-25
SUPERSTEER AXLE VERTICAL CONTROL LINKAGE .....	SECTION 25, CHAPTER 12
SPECIAL TORQUES .....	25-12-3
VERTICAL LINK DISASSEMBLY AND REPAIR .....	25-12-3
Vertical Link Removal .....	25-12-3
Roller Replacement .....	25-12-4
Articulation Bearing Removal and Installation .....	25-12-5
REAR AXLE AND PLANETARIES .....	SECTION 27, CHAPTER 1
SPECIAL TOOLS .....	27-1-3
SPECIAL TORQUES .....	27-1-5
SPECIFICATIONS .....	27-1-5
GENERAL INFORMATION .....	27-1-5
REAR AXLE .....	27-1-6
AXLE HOUSING DISASSEMBLY .....	27-1-9
PLANETARY DISASSEMBLY .....	27-1-11
DIFFERENTIAL CARRIER SEAL REPLACEMENT .....	27-1-13
PLANETARY ASSEMBLY - THREE PIN .....	27-1-14
PLANETARY ASSEMBLY - FOUR PIN .....	27-1-15
AXLE HOUSING ASSEMBLY .....	27-1-18
HOW TO DETERMINE RAM PRESSURE .....	27-1-23
AXLE INSTALLATION .....	27-1-26
AXLE SEAL WEAR SLEEVE INSTALLATION (4-Inch Axle Only) .....	27-1-30
POWER TAKE OFF CONTROL SYSTEM - HOW IT WORKS .....	SECTION 31, CHAPTER 1
POWER TAKE OFF .....	31-1-3
ELECTRONIC PTO CONTROL .....	31-1-4
PTO SYSTEM CONTROL .....	31-1-7
PTO CONTROL MODES .....	31-1-8
PTO VALVE OIL SUPPLY .....	31-1-10
PTO DIFFERENTIAL LOCK VALVE .....	31-1-11
TROUBLESHOOTING .....	31-1-12

## TG215/245/275/305 MASTER TABLE OF CONTENTS

PTO CLUTCH ASSEMBLY - SINGLE, REVERSIBLE AND DUAL SPEED.....SECTION 31, CHAPTER 2  
(NOTE: Book 2A contains updated information in Section 31, Chapter 2. Use the information in Book 2A in place of this original chapter.)

BRAKE VALVE.....	SECTION 33, CHAPTER 1
SPECIAL TORQUES .....	33-2-2
BRAKE VALVE .....	33-2-3
Removal .....	33-2-3
Disassembly .....	33-2-4
Assembly .....	33-2-6
Installation .....	33-2-8

BRAKE CYLINDERS.....	SECTION 33, CHAPTER 2
SPECIAL TORQUES .....	33-2-3
SPECIFICATIONS .....	33-2-3
BRAKE CYLINDERS .....	33-2-3
Disassembly .....	33-2-3
Assembly .....	33-2-5

### BOOK 2A - 87710926

PTO CLUTCH ASSEMBLY - SINGLE, REVERSIBLE AND DUAL SPEED.....	SECTION 31, CHAPTER 2
SPECIAL TOOLS .....	31-2-3
SPECIAL TORQUES .....	31-2-3
PTO CLUTCH ASSEMBLY .....	31-2-4
General .....	31-2-4
PTO CLUTCH SERVICE .....	31-2-4
Removal .....	31-2-4
Disassembly .....	31-2-6
Assembly .....	31-2-16
Exploded View of PTO Clutch .....	31-2-16
Cross Section of PTO Clutch and Output Shaft Assembly .....	31-2-33
SINGLE SPEED REVERSIBLE SHAFT PTO .....	31-2-34
Disassembly .....	31-2-34
Assembly .....	31-2-37
Exploded View of PTO Output Shaft and Driven Gear Assembly .....	31-2-37
SINGLE SPEED REVERSIBLE SHAFT PTO DRIVEN GEAR .....	31-2-41
Removal .....	31-2-41
Assembly .....	31-2-43
Reversible PTO Output Shaft Bearing Adjustment .....	31-2-45
SINGLE SPEED REVERSIBLE SHAFT PTO .....	31-2-47
Cross Section of PTO Output Shaft Assembly .....	31-2-45

### BOOK 3 - 87678534

HYDRAULIC SCHEMATIC POSTER - NORTH AMERICAN.....	87518875
HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC .....	SECTION 35, CHAPTER 1
HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC .....	35-1-3
SIMPLE SCHEMATIC .....	35-1-13
COMMON SYMBOLS .....	35-1-15
HYDRAULIC SYSTEM - HOW IT WORKS WITH TROUBLESHOOTING.....	SECTION 35, CHAPTER 2
GENERAL INTRODUCTION .....	35-2-3
REAR CHARGE/LUBE PUMP PRESSURE TEST .....	35-2-17
REAR CHARGE/LUBE PUMP FLOW TEST .....	35-2-19

**TG215/245/275/305 MASTER TABLE OF CONTENTS**

---

REGULATED SYSTEM PRESSURE TEST AND ADJUSTMENT PROCEDURE .....	35-2-20
FRONT/REGULATED SYSTEM PUMP FLOW TEST .....	35-2-24
STEERING RELIEF PRESSURE TEST AND ADJUSTMENT PROCEDURE .....	35-2-26
STEERING SYSTEM PROBLEMS .....	35-2-28
PRIORITY AND REGULATOR VALVE .....	35-2-30
PFC AXIAL PISTON PUMP .....	35-2-33
PFC PUMP HIGH PRESSURE STANDBY CHECK AND ADJUSTMENT PROCEDURE .....	35-2-43
PFC PISTON PUMP FLOW CHECK AT REMOTE COUPLERS .....	35-2-44
PFC PISTON PUMP FLOW CHECK AT POWER BEYOND COUPLERS .....	35-2-45
PFC PISTON PUMP FLOW TEST .....	35-2-47
MEGAFLOW PFC PISTON PUMP FLOW TEST .....	35-2-49
PFC PISTON PUMP FLOW COMPENSATOR SETTING .....	35-2-51
PUMP COMPENSATOR VALVE INSPECTION .....	35-2-53
PFC PUMP OPERATIONAL PROBLEMS .....	35-2-54
PTO AND DIFFERENTIAL LOCK VALVE.....SECTION 35, CHAPTER 3	
SPECIAL TORQUES .....	35-3-2
SPECIFICATIONS .....	35-3-2
PTO AND DIFFERENTIAL LOCK VALVE .....	35-3-3
REMOTE VALVE AND COUPLER SERVICE.....SECTION 35, CHAPTER 4	
SPECIAL TORQUES .....	35-4-2
REMOTE VALVE AND COUPLER SERVICE .....	35-4-3
REMOTE VALVE REMOVAL AND SERVICE .....	35-4-5
REMOTE COUPLERS .....	35-4-14
REMOTE HYDRAULIC SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....SECTION 35, CHAPTER 5	
REMOTE HYDRAULIC SYSTEM INTRODUCTION .....	35-5-3
REMOTE VALVE SYSTEM COMPONENTS .....	35-5-5
REMOTE VALVE SYSTEM CONTROLS .....	35-5-11
REMOTE VALVE OPERATION .....	35-5-15
REMOTE VALVE PROBLEMS AND WHERE TO LOOK .....	35-5-24
REMOTE VALVE PROPORTIONAL CURRENT CONTROL (PCC) SOLENOID OPERATION .....	35-5-26
PFC PISTON PUMP FLOW CHECK AT REMOTE COUPLERS .....	35-5-27
REMOTE VALVE SYSTEM TESTING .....	35-5-28
REMOTE VALVE HIGH PRESSURE TEST .....	35-5-29
PFC PUMP HIGH PRESSURE STANDBY CHECK AND ADJUSTMENT PROCEDURE .....	35-5-30
STANDARD PUMP COMPENSATOR VALVE INSPECTION .....	35-5-31
REMOTE VALVE SIGNAL CHECK AND HITCH SIGNAL CHECK .....	35-5-32
REMOTE VALVE COUPLER TEST .....	35-5-33
LOAD CHECK INSPECTION .....	35-5-34
OPERATIONAL PROBLEMS .....	35-5-35
PRIORITY AND REGULATOR VALVE .....SECTION 35, CHAPTER 6	
SPECIAL TORQUES .....	35-6-3
PRIORITY VALVE AND REGULATOR .....	35-6-4
Removal .....	35-6-4
Disassembly .....	35-6-6
Assembly .....	35-6-9
Installation .....	35-6-12
CROSS SECTION OF PRIORITY AND REGULATOR VALVE .....	35-6-14
CHARGE PUMP.....SECTION 35, CHAPTER 7	
Removal .....	35-7-3
Installation .....	35-7-4

## TG215/245/275/305 MASTER TABLE OF CONTENTS

PFC PISTON PUMP AND HYDRAULIC FILTER.....	SECTION 35, CHAPTER 8
SPECIAL TORQUES .....	35-8-3
PFC PISTON PUMP .....	35-8-3
Removal .....	35-8-3
Installation .....	35-8-4
HITCH SYSTEM - HOW IT WORKS .....	SECTION 35, CHAPTER 9
THREE POINT HITCH .....	35-9-3
ELECTRONIC HITCH CONTROL .....	35-9-4
ELECTRONIC HITCH CONTROL SYSTEM FEATURES .....	35-9-7
HITCH CONTROL VALVE .....	35-9-14
SETUP / ADJUSTMENT SEQUENCE .....	35-9-24
HITCH CONTROL VALVE .....	SECTION 35, CHAPTER 10
HITCH CONTROL VALVE .....	35-10-3
Removal .....	35-10-3
Disassembly .....	35-10-5
Assembly .....	35-10-7
Installation .....	35-10-9
HITCH CONTROL VALVE CROSS SECTION .....	35-10-11
TRACTOR HITCH .....	SECTION 35, CHAPTER 11
SPECIAL TORQUES .....	35-11-3
TRACTOR HITCH .....	35-11-3
EDC PIN ASSEMBLY .....	35-11-20
POTENTIOMETER (HITCH POSITION SENSOR) .....	35-11-21
CAM SWAY LIMITER .....	35-11-23
CAM BUMPERS FOR DRAFT ARM .....	35-11-25
DRAWBAR, HIGH VERTICAL CAPACITY .....	35-11-26
TRAILER BRAKE SYSTEMS .....	SECTION 35, CHAPTER 12
HYDRAULIC BRAKE SYSTEMS .....	35-12-4
European / NAO Hydraulic Trailer Brakes .....	35-12-4
Italian Hydraulic Trailer Brakes .....	35-12-8
PNEUMATIC BRAKE SYSTEMS .....	35-12-11
Pneumatic Trailer Brakes .....	35-12-11
European Pneumatic Trailer Brakes .....	35-12-11
Italian Pneumatic Trailer Brakes .....	35-12-14
ROW (Rest of World) Pneumatic Trailer Brakes (NAR, ANZ, CIS, LAR, EEAA) .....	35-12-17
Italian Hydraulic Trailer Brake Schematic .....	35-12-19
Italian Pneumatic Trailer Brake Schematic .....	35-12-21
STEERING COLUMN AND STEERING HAND PUMP .....	SECTION 41, CHAPTER 1
SPECIAL TOOLS .....	41-1-2
SPECIAL TORQUES .....	41-1-3
STEERING COLUMN REMOVAL .....	41-1-3
STEERING HAND PUMP SERVICE .....	41-1-6
STEERING COLUMN ASSEMBLY .....	41-1-8
WHEEL TOE IN SETTING SUPERSTEER FWD AXLE .....	SECTION 41, CHAPTER 2
WHEEL TOE IN SETTING .....	41-2-3
WHEEL TOE IN SETTING DIAGRAM .....	41-2-9
SPECIAL TOOL LAYOUT DRAWINGS .....	41-2-10

**BOOK 4 - 87525633**

A/C TROUBLESHOOTING .....	SECTION 50, CHAPTER 1
SAFETY PROCEDURES .....	50-1-5
SPECIAL TOOLS .....	50-1-6
A/C THERMAL OPERATION .....	50-1-7
A/C SYSTEM COMPONENTS .....	50-1-9
Cab HVAC Box Components - Automatic Temperature Control .....	50-1-9
Chassis Components .....	50-1-11
AUTOMATIC TEMPERATURE CONTROL (ATC) OPERATION .....	50-1-12
Operation Modes .....	50-1-15
Automatic Mode .....	50-1-15
Defog Mode .....	50-1-15
Automatic Operation Summary .....	50-1-16
Defog/Dehumidify Operation Summary .....	50-1-17
ATC Fault Codes .....	50-1-18
ATC Fault Code 111 .....	50-1-18
ATC Fault Code 112 .....	50-1-19
ATC Fault Code 115 .....	50-1-19
ATC Fault Code 116 .....	50-1-20
ATC Fault Code 120 .....	50-1-20
ATC Fault Code 121 .....	50-1-21
ATC Fault Code 122 .....	50-1-21
ATC Fault Code 125 .....	50-1-22
ATC Fault Code 126 .....	50-1-22
ATC Fault Code 127 .....	50-1-23
ATC Fault Code 128 .....	50-1-23
ATC Fault Code 129 .....	50-1-24
ATC Fault Code 130 .....	50-1-24
ATC Fault Code 131 .....	50-1-25
ATC Fault Code 132 .....	50-1-25
ATC Fault Code 133 .....	50-1-26
ATC Fault Code 134 .....	50-1-26
Locating System Problems Without Fault Codes .....	50-1-27
Controller-Based Resistance Tests .....	50-1-27
ATC Controller Test (Connector J8 Test Points) .....	50-1-29
ATC Field Reported Symptoms/Causes .....	50-1-32
Compressor And Clutch .....	50-1-33
Operational Check .....	50-1-33
Electrical Test .....	50-1-36
Compressor Clutch Control Circuit Test Procedure .....	50-1-36
Service Note: Adjusting Clutch Air Gap .....	50-1-38
High And Low Pressure Switch Clutch Latching Circuit .....	50-1-39
Background .....	50-1-39
Possible Failure Modes - Fault Codes 129 and 134 .....	50-1-40
Electrical Test .....	50-1-41
High Pressure Switch and Circuit Test .....	50-1-41
Low Pressure Switch and Circuit Test .....	50-1-42
Heater Control Valve .....	50-1-43
Operational Check .....	50-1-43
Electrical Test .....	50-1-44
Heater Control Valve Power, Signal and Ground Test .....	50-1-44
Blower Speed And Temperature Control Potentiometers .....	50-1-45
Background .....	50-1-45
Possible Failure Modes - Fault Codes 120, 121 .....	50-1-45
Electrical Test .....	50-1-46
Common Control Potentiometer and Circuit Test Procedure .....	50-1-46

## TG215/245/275/305 MASTER TABLE OF CONTENTS

BLOWER AND BLOWER SPEED DRIVER .....	50-1-47
Background .....	50-1-47
Power, Signal and Ground Circuit .....	50-1-47
Possible Failure Modes .....	50-1-47
Blower Motor/Blower Driver Power, Signal and Ground Test .....	50-1-48
Cab And Evapator Temperature Sensors .....	50-1-49
Background .....	50-1-49
Electrical Test .....	50-1-51
Power Circuit .....	50-1-51
Possible Failure Modes - Fault Codes 111, 115 and 116 .....	50-1-52
Cab Temperature Sensor and Circuit Test .....	50-1-53
Evaporator Temperature Sensor and Circuit Test .....	50-1-54
Controller Power, Ground, And ATC Switch .....	50-1-56
Background .....	50-1-56
Power and Ground Circuit .....	50-1-56
Possible Failure Modes .....	50-1-56
Controller Power Supply and Ground Test .....	50-1-56
ATC Switch and Circuit Test .....	50-1-57
Defog/Defrost Switch and Circuit Test .....	50-1-57
Cab Pressurizer Blower .....	50-1-58
Background .....	50-1-58
Power and Ground .....	50-1-58
Cab Pressurizer Blower & Relay Power Supply and Ground Test .....	50-1-58
ACCESSING THE HVAC BOX .....	50-1-59
STANDARD AIR CONDITIONING (STD) TROUBLESHOOTING .....	50-1-60
Standard A/C Operation .....	50-1-61
Smart Pressure Switch Cycling System .....	50-1-61
Standard A/C Controls and Their Function .....	50-1-62
Symptom-Based Standard A/C Troubleshooting .....	50-1-63
Standard Controller Test .....	50-1-65
Compressor And Clutch .....	50-1-67
Operational Check .....	50-1-67
Electrical Test – Compressor Clutch .....	50-1-70
Clutch Relay Power Supply and Ground Test .....	50-1-71
Service Note: Adjusting Clutch Air Gap .....	50-1-72
High And Low Pressure Switch Clutch Latching Circuit .....	50-1-73
Background .....	50-1-73
Possible Failure Modes - Flashing Pressure Warning Lamp .....	50-1-74
Electrical Test – Pressure Switches .....	50-1-75
High Pressure Switch and Circuit Test .....	50-1-75
Low Pressure Switch and Circuit Test .....	50-1-76
Heater Control Valve .....	50-1-77
Operational Check .....	50-1-77
Electrical Test .....	50-1-78
Temperature Control Potentiometer .....	50-1-79
Background .....	50-1-79
Electrical Test .....	50-1-79
Blower Speed Switch And Blower Motor .....	50-1-80
Background .....	50-1-80
Power and Ground Circuit .....	50-1-80
Possible Failure Modes .....	50-1-80
Blower Speed Switch and Power Circuit Test .....	50-1-81
Blower Motor Power, and Control Circuit Test .....	50-1-81
Evaporator Temperature Sensor .....	50-1-83
Background .....	50-1-83
Electrical Test – Sensor .....	50-1-83
Power Circuit .....	50-1-84

**TG215/245/275/305 MASTER TABLE OF CONTENTS**

Service Note: Too Little Cooling/Too Much Heating without Symptoms ..... 50-1-84  
Evaporator Temperature Sensor and Circuit Test ..... 50-1-84  
Controller Power, Ground And A/C Switch ..... 50-1-86  
Background ..... 50-1-86  
Power and Ground Circuit ..... 50-1-86  
Possible Failure Modes ..... 50-1-86  
Controller Power Supply and Ground Test ..... 50-1-86  
A/C Switch and Circuit Test ..... 50-1-87  
Cab Pressurizer Blower ..... 50-1-88  
Background ..... 50-1-88  
Power and Ground ..... 50-1-88  
Cab Pressurizer Blower & Relay Power Supply and Ground Test ..... 50-1-89

**AIR CONDITIONER SYSTEM SERVICE ..... SECTION 50, CHAPTER 2**

SPECIFICATIONS ..... 50-2-4  
SPECIAL TORQUES ..... 50-2-4  
SPECIAL TOOLS ..... 50-2-4  
SAFETY PROCEDURES ..... 50-2-9  
AIR CONDITIONER SYSTEM REFRIGERANT RECOVERY ..... 50-2-10  
RECOVERING PURE 134A REFRIGERANT ..... 50-2-12  
RECOVERING CONTAMINATED REFRIGERANT WITH OEM1691 ..... 50-2-16  
    Preparing the Tank ..... 50-2-16  
    Recovery Process ..... 50-2-20  
AIR CONDITIONER SYSTEM EVACUATION AND RECHARGING ..... 50-2-26  
AIR CONDITIONING TEMPERATURE/PRESSURE CHART ..... 50-2-33  
A/C SYSTEM FLUSHING PROCEDURE ..... 50-2-34  
    Required Tools ..... 50-2-35  
    Precautions ..... 50-2-36  
    Component Flushing Procedure with Power Flush 17550 ..... 50-2-37  
    Complete Circuit Flushing Procedure with Power Flush 17550 ..... 50-2-41  
    Back Flushing the Thermal Expansion Valve or Refrigerant Line ..... 50-2-46  
    Post Flushing Procedures ..... 50-2-48  
    Flushing Solvent Disposal ..... 50-2-50  
LEAK DETECTION ..... 50-2-51  
    Electronic Testing with OEM1437 ..... 50-2-52  
    Fluorescent Leak Detection ..... 50-2-53  
    Fluorescent Dye Injection ..... 50-2-53  
    Fluorescent Leak Testing ..... 50-2-59  
A/C SYSTEM COMPONENTS ..... 50-2-60  
    Cab HVAC Box Components - Automatic Temperature Control ..... 50-2-60  
    Cab HVAC Components - Standard Systems ..... 50-2-62  
    Chassis Components ..... 50-2-64  
A/C COMPRESSOR CLUTCH ..... 50-2-65  
    Clutch Removal ..... 50-2-65  
    Exploded View of Clutch ..... 50-2-71  
    Compressor Clutch Replacement ..... 50-2-71  
A/C COMPRESSOR ..... 50-2-79  
    Oil Level Check or Adjustment ..... 50-2-79  
    Compressor Removal ..... 50-2-82  
    Compressor Installation ..... 50-2-85  
CONDENSER AND RECEIVER-DRIER ..... 50-2-87  
    Condenser ..... 50-2-87  
    Receiver-Drier ..... 50-2-88  
ACCESSING THE HVAC BOX ..... 50-2-90  
THERMAL EXPANSION VALVE TESTING ..... 50-2-92  
THERMAL EXPANSION VALVE REPLACEMENT ..... 50-2-93  
EVAPORATOR AND CAB TEMPERATURE SENSOR LOCATION ..... 50-2-95

**TG215/245/275/305 MASTER TABLE OF CONTENTS**

BLOWER MOTOR REPLACEMENT ..... 50-2-96  
HEATER CONTROL VALVE REPLACEMENT ..... 50-2-97  
EVAPORATOR/HEATER ASSEMBLY ..... 50-2-98  
    Evaporator/Heater Assembly Removal ..... 50-2-98  
    Evaporator/Heater Assembly Installation ..... 50-2-101  
    Post Replacement Procedures ..... 50-2-104  
EVAPORATOR/HEATER ASSEMBLY SEALING AND CLEANING ..... 50-2-105  
BLOWER AND EVAPORATOR REFERENCE ILLUSTRATION ..... 50-2-106  
CONTROLLER AND BLOWER SPEED DRIVER REPLACEMENT ..... 50-2-107  
    ATC Controller ..... 50-2-107  
    Standard A/C Controller ..... 50-2-107  
    Blower Speed Driver (ATC Units Only) ..... 50-2-108  
CAB AIR FILTER SERVICE ..... 50-2-109  
CAB RECIRCULATION AIR FILTER SERVICE ..... 50-2-110  
CAB PRESSURIZATION TEST ..... 50-2-111  
CAB PRESSURIZER MOTOR REPLACEMENT ..... 50-2-113  
VISCOUS FAN DRIVE ..... 50-2-116

**BOOK 5 - 87678535**

ELECTRICAL SCHEMATIC POSTER - NORTH AMERICAN ..... 87389710

ELECTRICAL SYSTEM - HOW IT WORKS AND TROUBLESHOOTING ..... SECTION 55, CHAPTER 1

    SPECIAL TOOLS ..... 55-1-4  
    FUSES AND RELAY IDENTIFICATION ..... 55-1-5  
        Cab Fuses/Relay Location ..... 55-1-5  
        Engine Compartment Fuse/Relay Identification (Power Distribution Box) ..... 55-1-5  
        Fuse Identification ..... 55-1-6  
        Relays ..... 55-1-7  
    INSTRUMENTATION AND CONTROLS ..... 55-1-8  
    CONNECTOR AND COMPONENT LOCATIONS ..... 55-1-12  
    ELECTRICAL CONNECTORS ..... 55-1-34  
    ELECTRICAL SYSTEMS SCHEMATICS AND DIAGNOSTICS ..... 55-1-141  
        Power Distribution System Circuit Operation ..... 55-1-141  
        Power Distribution Circuit Troubleshooting ..... 55-1-141  
        Power Distribution Schematic ..... 55-1-141  
    POWER DISTRIBUTION SYMPTOM CHART ..... 55-1-142  
        Diagnostic Tests ..... 55-1-143  
    AUDIO SYSTEM ..... 55-1-145  
        Audio System Circuit Operation ..... 55-1-145  
        Audio System Circuit Troubleshooting ..... 55-1-145  
        Audio System Symptom Chart ..... 55-1-145  
        Audio System Diagnostic Tests ..... 55-1-147  
    CHARGING SYSTEM ..... 55-1-151  
        Charging System Circuit Operation ..... 55-1-151  
        Charging System Circuit Troubleshooting ..... 55-1-151  
        Charging System Symptom Chart ..... 55-1-152  
        Charging System Diagnostic Tests ..... 55-1-153  
    EXTERIOR LIGHTING SYSTEM ..... 55-1-157  
        Exterior Lighting System Circuit Operation ..... 55-1-157  
        Exterior Lighting System Circuit Troubleshooting ..... 55-1-157  
        Exterior Lighting System Symptom Chart ..... 55-1-158  
        Exterior Lighting System Diagnostic Tests ..... 55-1-158  
    INSTRUMENTATION AND WARNING SYSTEM ..... 55-1-163  
        Instrumentation and Warning System Circuit Troubleshooting ..... 55-1-163

**TG215/245/275/305 MASTER TABLE OF CONTENTS**

Instrumentation and Warning System Symptom Chart ..... 55-1-163  
Instrumentation and Warning System Diagnostic Tests ..... 55-1-164  
INTERIOR LIGHTING AND HORN SYSTEM ..... 55-1-167  
  Interior Lighting and Horn System Circuit Operation ..... 55-1-167  
  Interior Lighting and Horn System Circuit Troubleshooting ..... 55-1-167  
  Interior Lighting and Horn System Symptom Chart ..... 55-1-168  
  Interior Lighting and Horn System Diagnostic Tests ..... 55-1-168  
POWER MIRROR SYSTEM ..... 55-1-172  
  Power Mirror Circuit Operation ..... 55-1-172  
  Power Mirror Circuit Troubleshooting ..... 55-1-172  
  Power Mirror System Symptom Chart ..... 55-1-173  
  Power Mirror System Diagnostic Tests ..... 55-1-175  
POWER SEAT SYSTEM ..... 55-1-184  
  Power Seat System Circuit Operation ..... 55-1-184  
  Power Seat System Circuit Troubleshooting ..... 55-1-184  
  Power Seat System Symptom Chart ..... 55-1-185  
  Power Seat System Diagnostic Tests ..... 55-1-186  
STARTING SYSTEM ..... 55-1-190  
  Starting System Circuit Operation ..... 55-1-190  
  Starter Motor Circuit Troubleshooting ..... 55-1-190  
  Starting System Symptom Chart ..... 55-1-190  
  Starting System Diagnostic Tests ..... 55-1-192  
WIPER/WASHER SYSTEM ..... 55-1-197  
  Wiper/Washer System Circuit Operation ..... 55-1-197  
  Wiper/Washer System Circuit Troubleshooting ..... 55-1-197  
  Wiper/Washer System Symptom Chart ..... 55-1-198  
  Wiper/Washer System Diagnostic Tests ..... 55-1-199

**BOOK 6 - 87609386**

INSTRUMENTATION CONTROLLER FAULT CODES .....SECTION 55, CHAPTER 2  
  FAULT CODE INST 1015 ..... 55-2-4  
  FAULT CODE INST 3010 ..... 55-2-6  
  FAULT CODE INST 3020 ..... 55-2-7  
  FAULT CODE INST 3022 ..... 55-2-7  
  FAULT CODE INST 5010 ..... 55-2-7  
  FAULT CODE INST 5011 ..... 55-2-8  
  FAULT CODE INST 10031 ..... 55-2-9  
  FAULT CODE INST 10032 ..... 55-2-9  
  FAULT CODE INST 10033 ..... 55-2-9  
  FAULT CODE INST 10034 ..... 55-2-10  
  FAULT CODE INST 10035 ..... 55-2-10  
  FAULT CODE INST 10036 ..... 55-2-10  
  FAULT CODE INST 10037 ..... 55-2-11  
  FAULT CODE INST 10038 ..... 55-2-11  
  FAULT CODE INST 11011 ..... 55-2-12  
  FAULT CODE INST 12011 ..... 55-2-13  
  FAULT CODE INST 12043 ..... 55-2-15  
  FAULT CODE INST 12051 ..... 55-2-17  
  FAULT CODE INST 12071 ..... 55-2-19  
  FAULT CODE INST 12091 ..... 55-2-21  
  FAULT CODE INST 12111 ..... 55-2-23  
  FAULT CODE INST 13010 ..... 55-2-25  
  FAULT CODE INST 13011 ..... 55-2-26  
  FAULT CODE INST 13012 ..... 55-2-27  
  FAULT CODE INST 13021 ..... 55-2-28  
  FAULT CODE INST 13022 ..... 55-2-29

TG215/245/275/305 MASTER TABLE OF CONTENTS

FAULT CODE INST 13040 .....	55-2-30
FAULT CODE INST 13051 .....	55-2-31
FAULT CODE INST 13052 .....	55-2-32
FAULT CODE INST 53001 .....	55-2-33
FAULT CODE INST 53005 .....	55-2-33
FAULT CODE INST 65535 .....	55-2-33
AUX/HITCH/PTO FAULT CODES -	
TRACTOR MULTI-FUNCTION (TMF) CONTROLLER .....	SECTION 55, CHAPTER 3
AUX/HITCH/PTO FAULT CODE 2 .....	55-3-7
AUX/HITCH/PTO FAULT CODE 4 .....	55-3-8
AUX/HITCH/PTO FAULT CODE 5 .....	55-3-9
AUX/HITCH/PTO FAULT CODE 7 .....	55-3-10
AUX/HITCH/PTO FAULT CODE 11 .....	55-3-11
AUX/HITCH/PTO FAULT CODE 12 .....	55-3-13
AUX/HITCH/PTO FAULT CODE 14 .....	55-3-14
AUX/HITCH/PTO FAULT CODE 15 .....	55-3-15
AUX/HITCH/PTO FAULT CODE 17 .....	55-3-16
AUX/HITCH/PTO FAULT CODE 18 .....	55-3-17
AUX/HITCH/PTO FAULT CODE 19 .....	55-3-18
AUX/HITCH/PTO FAULT CODE 21 .....	55-3-18
AUX/HITCH/PTO FAULT CODE 22 .....	55-3-19
AUX/HITCH/PTO FAULT CODE 23 .....	55-3-20
AUX/HITCH/PTO FAULT CODE 24 .....	55-3-21
AUX/HITCH/PTO FAULT CODE 25 .....	55-3-22
AUX/HITCH/PTO FAULT CODE 26 .....	55-3-23
AUX/HITCH/PTO FAULT CODE 28 .....	55-3-24
AUX/HITCH/PTO FAULT CODE 29 .....	55-3-24
AUX/HITCH/PTO FAULT CODE 30 .....	55-3-25
AUX/HITCH/PTO FAULT CODE 31 .....	55-3-26
AUX/HITCH/PTO FAULT CODE 32 .....	55-3-28
AUX/HITCH/PTO FAULT CODE 33 .....	55-3-29
AUX/HITCH/PTO FAULT CODE 34 .....	55-3-29
AUX/HITCH/PTO FAULT CODE 35 .....	55-3-30
AUX/HITCH/PTO FAULT CODE 37 .....	55-3-31
AUX/HITCH/PTO FAULT CODE 41 .....	55-3-31
AUX/HITCH/PTO FAULT CODE 42 .....	55-3-32
AUX/HITCH/PTO FAULT CODE 43 .....	55-3-32
AUX/HITCH/PTO FAULT CODE 44 .....	55-3-32
AUX/HITCH/PTO FAULT CODE 45 .....	55-3-32
AUX/HITCH/PTO FAULT CODE 47 .....	55-3-33
AUX/HITCH/PTO FAULT CODE 48 .....	55-3-33
AUX/HITCH/PTO FAULT CODE 50 .....	55-3-34
AUX/HITCH/PTO FAULT CODE 51 .....	55-3-34
AUX/HITCH/PTO FAULT CODE 52 .....	55-3-35
AUX/HITCH/PTO FAULT CODE 53 .....	55-3-35
AUX/HITCH/PTO FAULT CODE 54 .....	55-3-36
AUX/HITCH/PTO FAULT CODE 55 .....	55-3-37
AUX/HITCH/PTO FAULT CODE 56 .....	55-3-38
AUX/HITCH/PTO FAULT CODE 57 .....	55-3-39
AUX/HITCH/PTO FAULT CODE 58 .....	55-3-40
AUX/HITCH/PTO FAULT CODE 59 .....	55-3-41
AUX/HITCH/PTO FAULT CODE 60 .....	55-3-41
AUX/HITCH/PTO FAULT CODE 61 .....	55-3-42
AUX/HITCH/PTO FAULT CODE 62 .....	55-3-42
AUX/HITCH/PTO FAULT CODE 63 .....	55-3-42
AUX/HITCH/PTO FAULT CODE 64 .....	55-3-43

TG215/245/275/305 MASTER TABLE OF CONTENTS

AUX/HITCH/PTO FAULT CODE 65 .....	55-3-43
AUX/HITCH/PTO FAULT CODE 66 .....	55-3-44
AUX/HITCH/PTO FAULT CODE 80 .....	55-3-44
AUX/HITCH/PTO FAULT CODE 81 .....	55-3-45
AUX/HITCH/PTO FAULT CODE 82 .....	55-3-46
AUX/HITCH/PTO FAULT CODE 83 .....	55-3-47
AUX/HITCH/PTO FAULT CODE 86 .....	55-3-48
AUX/HITCH/PTO FAULT CODE 87 .....	55-3-49
AUX/HITCH/PTO FAULT CODE 88 .....	55-3-50
AUX/HITCH/PTO FAULT CODE 89 .....	55-3-50
AUX/HITCH/PTO FAULT CODE 90 .....	55-3-51
AUX/HITCH/PTO FAULT CODE 92 .....	55-3-51
AUX/HITCH/PTO FAULT CODE 93 .....	55-3-52
AUX/HITCH/PTO FAULT CODE 94 .....	55-3-52
AUX/HITCH/PTO FAULT CODE 98 .....	55-3-53
AUX/HITCH/PTO FAULT CODE 99 .....	55-3-53
AUX/HITCH/PTO FAULT CODE 106 .....	55-3-54
AUX/HITCH/PTO FAULT CODE 107 .....	55-3-54
AUX/HITCH/PTO FAULT CODE 108 .....	55-3-55
AUX/HITCH/PTO FAULT CODE 109 .....	55-3-55
AUX/HITCH/PTO FAULT CODE 110 .....	55-3-56
AUX/HITCH/PTO FAULT CODE 111 .....	55-3-56
AUX/HITCH/PTO FAULT CODE 112 .....	55-3-57
AUX/HITCH/PTO FAULT CODE 113 .....	55-3-58
AUX/HITCH/PTO FAULT CODE 114 .....	55-3-59
AUX/HITCH/PTO FAULT CODE 115 .....	55-3-60
AUX/HITCH/PTO FAULT CODE 116 .....	55-3-61
AUX/HITCH/PTO FAULT CODE 120 .....	55-3-62
AUX/HITCH/PTO FAULT CODE 123 .....	55-3-62
AUX/HITCH/PTO FAULT CODE 124 .....	55-3-63
AUX/HITCH/PTO FAULT CODE 125 .....	55-3-64
AUX/HITCH/PTO FAULT CODE 126 .....	55-3-65
AUX/HITCH/PTO FAULT CODE 127 .....	55-3-66
AUX/HITCH/PTO FAULT CODE 128 .....	55-3-67
AUX/HITCH/PTO FAULT CODE 129 .....	55-3-68
AUX/HITCH/PTO FAULT CODE 130 .....	55-3-69
AUX/HITCH/PTO FAULT CODE 131 .....	55-3-70
AUX/HITCH/PTO FAULT CODE 132 .....	55-3-71
AUX/HITCH/PTO FAULT CODE 133 .....	55-3-72
AUX/HITCH/PTO FAULT CODE 134 .....	55-3-73
AUX/HITCH/PTO FAULT CODE 135 .....	55-3-74
AUX/HITCH/PTO FAULT CODE 136 .....	55-3-75
AUX/HITCH/PTO FAULT CODE 137 .....	55-3-76
AUX/HITCH/PTO FAULT CODE 138 .....	55-3-77
AUX/HITCH/PTO FAULT CODE 139 .....	55-3-78
AUX/HITCH/PTO FAULT CODE 140 .....	55-3-79
AUX/HITCH/PTO FAULT CODE 141 .....	55-3-80
AUX/HITCH/PTO FAULT CODE 142 .....	55-3-81
AUX/HITCH/PTO FAULT CODE 147 .....	55-3-82
AUX/HITCH/PTO FAULT CODE 148 .....	55-3-82
AUX/HITCH/PTO FAULT CODE 149 .....	55-3-83
AUX/HITCH/PTO FAULT CODE 150 .....	55-3-83
AUX/HITCH/PTO FAULT CODE 151 .....	55-3-84
AUX/HITCH/PTO FAULT CODE 152 .....	55-3-86
AUX/HITCH/PTO FAULT CODE 153 .....	55-3-86
AUX/HITCH/PTO FAULT CODE 154 .....	55-3-87
AUX/HITCH/PTO FAULT CODE 155 .....	55-3-87

TG215/245/275/305 MASTER TABLE OF CONTENTS

AUX/HITCH/PTO FAULT CODE 156 .....	55-3-88
AUX/HITCH/PTO FAULT CODE 157 .....	55-3-88
AUX/HITCH/PTO FAULT CODE 158 .....	55-3-89
AUX/HITCH/PTO FAULT CODE 159 .....	55-3-89
AUX/HITCH/PTO FAULT CODE 160 .....	55-3-90
AUX/HITCH/PTO FAULT CODE 161 .....	55-3-91
AUX/HITCH/PTO FAULT CODE 162 .....	55-3-92
AUX/HITCH/PTO FAULT CODE 163 .....	55-3-93
AUX/HITCH/PTO FAULT CODE 164 .....	55-3-94
AUX/HITCH/PTO FAULT CODE 165 .....	55-3-95
AUX/HITCH/PTO FAULT CODE 166 .....	55-3-96
AUX/HITCH/PTO FAULT CODE 167 .....	55-3-97
AUX/HITCH/PTO FAULT CODE 168 .....	55-3-98
AUX/HITCH/PTO FAULT CODE 169 .....	55-3-99
AUX/HITCH/PTO FAULT CODE 170 .....	55-3-100
AUX/HITCH/PTO FAULT CODE 171 .....	55-3-101
AUX/HITCH/PTO FAULT CODE 172 .....	55-3-101
AUX/HITCH/PTO FAULT CODE 173 .....	55-3-102
AUX/HITCH/PTO FAULT CODE 174 .....	55-3-103
AUX/HITCH/PTO FAULT CODE 175 .....	55-3-104
AUX/HITCH/PTO FAULT CODE 178 .....	55-3-106
AUX/HITCH/PTO FAULT CODE 179 .....	55-3-107
AUX/HITCH/PTO FAULT CODE 180 .....	55-3-108
TRANSMISSION CONTROLLER FAULT CODES .....	SECTION 55, CHAPTER 4
FAULT CODE TRANS 11 .....	55-4-5
FAULT CODE TRANS 12 .....	55-4-6
FAULT CODE TRANS 24 .....	55-4-7
FAULT CODE TRANS 37 .....	55-4-8
FAULT CODE TRANS .....	55-4-9
FAULT CODE TRANS 47 .....	55-4-10
FAULT CODE TRANS 48 .....	55-4-12
FAULT CODE TRANS 49 .....	55-4-13
FAULT COE TRANS 50 .....	55-4-14
FAULT CODE TRANS 51 .....	55-4-15
FAULT CODE TRANS 52 .....	55-4-16
FAULT CODE TRANS 53 .....	55-4-17
FAULT CODE TRANS 54 .....	55-4-19
FAULT CODE TRANS 59 .....	55-4-21
FAULT CODE TRANS 60 .....	55-4-22
FAULT CODE TRANS 66 .....	55-4-23
FAULT CODE TRANS 67 .....	55-4-24
FAULT CODE TRANS 68 .....	55-4-25
FAULT CODE TRANS 69 .....	55-4-26
FAULT CODE TRANS 70 .....	55-4-27
FAULT CODE TRANS 72 .....	55-4-27
FAULT CODE TRANS 73 .....	55-4-28
FAULT CODE TRANS 74 .....	55-4-28
FAULT CODE TRANS 77 .....	55-4-29
FAULT CODE TRANS 78 .....	55-4-30
FAULT CODE TRANS 79 .....	55-4-31
FAULT CODE TRANS 80 .....	55-4-32
FAULT CODE TRANS 81 .....	55-4-34
FAULT CODE TRANS 82 .....	55-4-36
FAULT CODE TRANS 83 .....	55-4-36
FAULT CODE TRANS 103 .....	55-4-37
FAULT CODE TRANS 104 .....	55-4-38



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

TG215/245/275/305 MASTER TABLE OF CONTENTS

FAULT CODE TRANS 105 .....	55-4-39
FAULT CODE TRANS 106 .....	55-4-40
FAULT CODE TRANS 107 .....	55-4-41
FAULT CODE TRANS 108 .....	55-4-42
FAULT CODE TRANS 109 .....	55-4-43
FAULT CODE TRANS 110 .....	55-4-44
FAULT CODE TRANS 111 .....	55-4-45
FAULT CODE TRANS 112 .....	55-4-46
FAULT CODE TRANS 113 .....	55-4-47
FAULT CODE TRANS 114 .....	55-4-48
FAULT CODE TRANS 115 .....	55-4-49
FAULT CODE TRANS 116 .....	55-4-50
FAULT CODE TRANS 117 .....	55-4-51
FAULT CODE TRANS 118 .....	55-4-52
FAULT CODE TRANS 119 .....	55-4-53
FAULT CODE TRANS 120 .....	55-4-54
FAULT CODE TRANS 121 .....	55-4-55
FAULT CODE TRANS 122 .....	55-4-56
FAULT CODE TRANS 123 .....	55-4-57
FAULT CODE TRANS 124 .....	55-4-58
FAULT CODE TRANS 125 .....	55-4-59
FAULT CODE TRANS 126 .....	55-4-59
FAULT CODE TRANS 127 .....	55-4-59
FAULT CODE TRANS 128 .....	55-4-60
FAULT CODE TRANS 129 .....	55-4-60
FAULT CODE TRANS 130 .....	55-4-60
FAULT CODE TRANS 131 .....	55-4-61
FAULT CODE TRANS 132 .....	55-4-61
FAULT CODE TRANS 133 .....	55-4-61
FAULT CODE TRANS 134 .....	55-4-62
FAULT CODE TRANS 135 .....	55-4-63
FAULT CODE TRANS 136 .....	55-4-65
FAULT CODE TRANS 137 .....	55-4-67
FAULT CODE TRANS 138 .....	55-4-68
FAULT CODE TRANS 139 .....	55-4-69
FAULT CODE TRANS 140 .....	55-4-70
FAULT CODE TRANS 141 .....	55-4-71
FAULT CODE TRANS 142 .....	55-4-72
FAULT CODE TRANS 143 .....	55-4-72
FAULT CODE TRANS 144 .....	55-4-73
FAULT CODE TRANS 145 .....	55-4-74
FAULT CODE TRANS 147 .....	55-4-75
FAULT CODE TRANS 148 .....	55-4-77
ARMREST CONTROLLER FAULT CODES .....	SECTION 55, CHAPTER 5
FAULT CODE ARM 19 .....	55-5-4
FAULT CODE ARM 29 .....	55-5-5
FAULT CODE ARM 39 .....	55-5-6
FAULT CODE ARM 49 .....	55-5-7
FAULT CODE ARM 59 .....	55-5-8
FAULT CODE ARM 69 .....	55-5-9
FAULT CODE ARM 79 .....	55-5-10
FAULT CODE ARM 89 .....	55-5-11
FAULT CODE ARM 99 .....	55-5-12
FAULT CODE ARM 109 .....	55-5-13
FAULT CODE ARM 119 .....	55-5-14
FAULT CODE ARM 129 .....	55-5-15

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**