


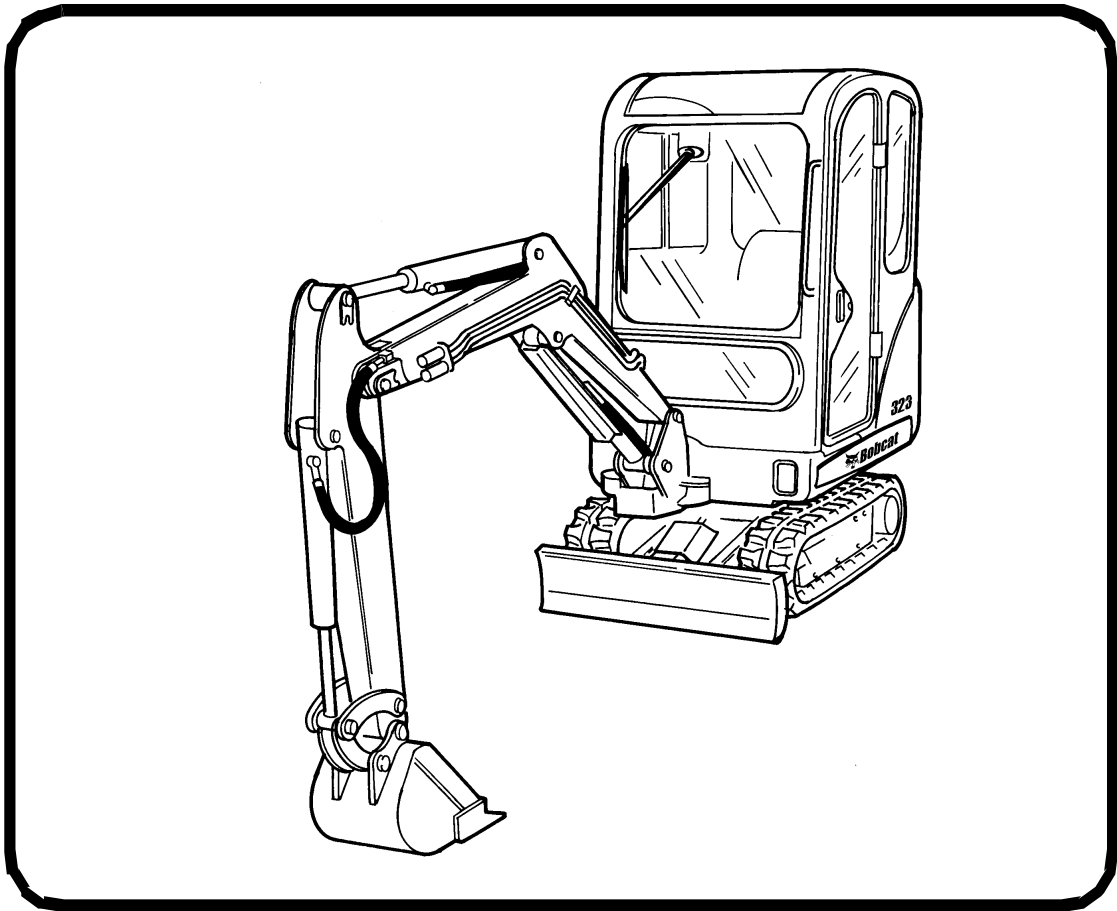

Bobcat®

Service Manual 323 Compact Excavator

S/N A9JZ11001 & Above



MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



B-10731A

- ⚠ Never service the Bobcat Compact Excavator without instructions.

CORRECT



B-19964

- ⚠ Use the correct procedure to lift and support the excavator.


CORRECT



B-19959

- ⚠ Cleaning and maintenance are required daily.


WRONG

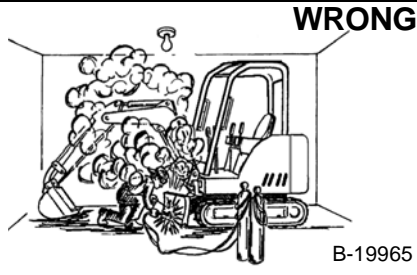

B-19965

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


WRONG

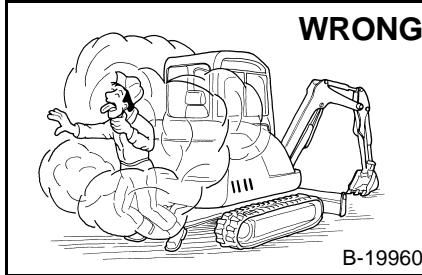

B-19960

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.


WRONG

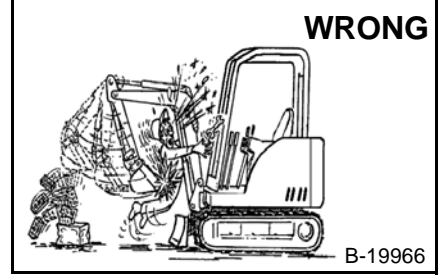

B-19966

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


WRONG

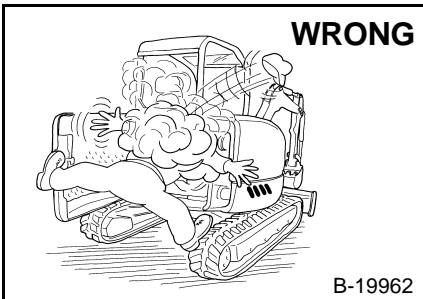

B-19962

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.


WRONG

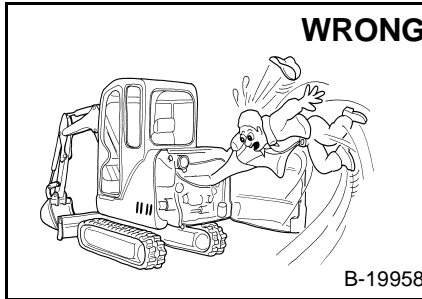

B-19958

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

WRONG

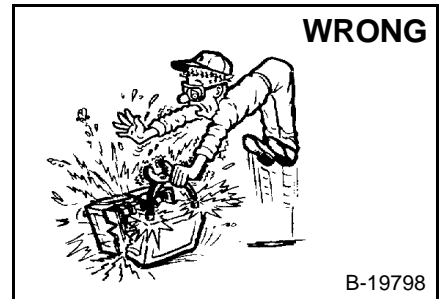

B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0805

ALPHABETICAL INDEX

AIR CLEANER	60-01	LEFT CONSOLE	40-01
AIRCLEANER SERVICE	10-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
ALTERNATOR	50-01	LEFT PEDAL	40-01
ALTERNATOR BELT	10-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
ARM	40-01	LIFTING THE EXCAVATOR	10-01
ARM CYLINDER	20-01	LIGHTS.....	50-01
		LUBRICATION OF THE HYD. EXCAVATOR.....	10-01
BATTERY	50-01		
BLADE	30-01	MAIN RELIEF VALVE	20-01
BLADE CONTROL.....	40-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
BLADE CYLINDER	20-01	MICROSWITCH	50-01
BLADE EXTENSION TRAY	40-01		
BLADE/TRACK EXPANSION SOLENOID BLOCK.....	20-01	OIL COOLER.....	20-01
BOOM	40-01	OPERATOR CAB (ROPS/TOPS)	10-01
BOOM CYLINDER.....	20-01		
BOOM SWING CYLINDER.....	20-01	PORT RELIEF VALVES.....	20-01
BUCKET	40-01	PRESSURE REDUCING VALVE.....	20-01
BUCKET CYLINDER	20-01		
		RADIATOR	60-01
CAB.....	40-01	RECONDITIONING THE ENGINE	60-01
CONTROL CONSOLE LOCKOUTS	10-01	RIGHT CONSOLE	40-01
CONTROL LINKAGE ASSEMBLY	40-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
CONTROL PATTERN SELECTOR VALVE.....	20-01	RIGHT PEDAL AND LINKAGE	40-01
CONVERSIONS	SPEC-01	ROPS CANOPY.....	40-01
CROSSPORT RELIEF VALVES	20-01		
		SEAT AND SEAT MOUNT	40-01
ELECTRICAL SYSTEM	50-01	SEAT BELT	10-01
ENGINE	60-01	SERVICE SCHEDULE	10-01
ENGINE COMPONENTS AND TESTING	60-01	SPARK ARRESTOR MUFFLER.....	10-01 & 60-01
ENGINE COOLING SYSTEM.....	10-01	SPECIFICATIONS.....	SPEC-01
ENGINE FLYWHEEL	60-01	STARTER	50-01
ENGINE LUBRICATION SYSTEM.....	10-01	SWING CIRCLE GEAR	30-01
ENGINE SPECIFICATIONS.....	SPEC-01	SWING FRAME	40-01
ENGINE SPEED CONTROL	40-01	SLEW LOCK.....	40-01
		SWING MOTOR	20-01
FLOORMAT AND FLOORPLATES.....	40-01	SWIVEL JOINT	20-01
FUEL, COOLANT AND LUBRICANTS	SPEC-01		
FUEL LEVEL SENDER.....	50-01	TAILGATE.....	40-01
FUEL SYSTEM	10-01	TORQUE SPECIFICATIONS	SPEC-01
FUEL TANK.....	40-01	TRACK DAMAGE IDENTIFICATION.....	30-01
		TRACK FRAME	30-01
HEATER AIR FILTERS	10-01	TRACK IDLER.....	30-01
HEATER.....	70-01	TRACK FRAME EXPANSION CYLINDER	20-01
HORN	40-01	TRACK ROLLER	30-01
HYDRAULIC CONNECTION SPECIFICATIONS	SPEC-01	TRACKS	30-01
HYDRAULIC CONTROL VALVE	20-01	TRANSPORTING THE EXCAVATOR.....	10-01
HYDRAULIC FILTER MOUNT	20-01	TRAVEL CONTROLS	40-01
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01	TRAVEL MOTOR.....	10-01 & 20-01
HYDRAULIC PUMP.....	20-01	TROUBLESHOOTING	60-01
HYDRAULIC PUMP STARTUP	20-01	TWO SPEED SWITCH.....	50-01
HYDRAULIC RESERVOIR	20-01	TWO-SPEED BOOST SWITCH.....	50-01
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01	UPPERSTRUCTURE	40-01
		UPPERSTRUCTURE SLEW LOCK.....	10-01

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT.....	X
BOBCAT EXCAVATOR IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
UNDERCARRIAGE.....	30-01
UPPERSTRUCTURE & SWING SECTION	40-01
ELECTRICAL SYSTEM AND ANALYSIS	50-01
ENGINE SERVICE	60-01
HEATER	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**UNDER-
CARRIAGE**

**UPPER-
STRUCTURE &
SWING SECTION**

**ELECTRICAL
SYSTEM AND
ANALYSIS**

**ENGINE
SERVICE**

HEATER


SPECIFICATIONS

FOREWORD


This manual is for the Bobcat Hydraulic Excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOGS is in good condition and is not modified.

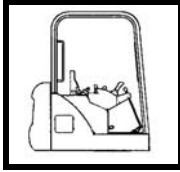


2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

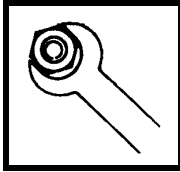

3. The seat belt must be correctly installed, functional and in good condition.

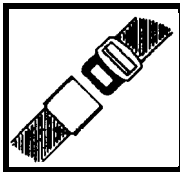


4. Inspect for loose or broken parts or connections.

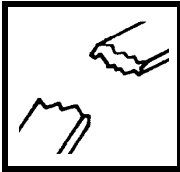


5. Machine signs must be legible and in the correct location.




6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

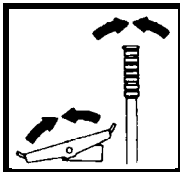


7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

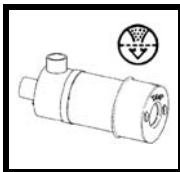


8. Check the electrical charging system.

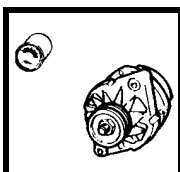


9. Safety treads must be in good condition.

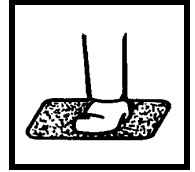


10. Check for correct function of indicator lamps (Optional on some models).

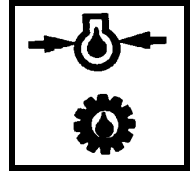


11. Check hydraulic fluid level, engine oil level and fuel supply.

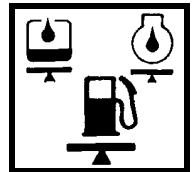


12. Inspect for fuel, oil or hydraulic fluid leaks.

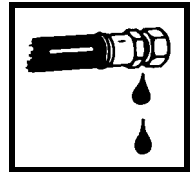


13. Lubricate the excavator.

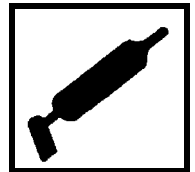

14. Check the condition of the battery and cables.

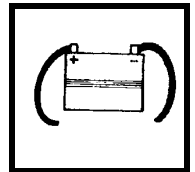

Recommend to the owner that all necessary corrections be made before the machine is returned to service.

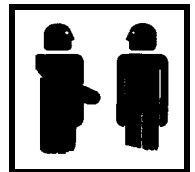

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS (CONT'D)

Safe Operation Is The Operator's Responsibility



Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat excavator and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Lift Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Before Operation* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI EXC-1007

SAFETY INSTRUCTIONS (CONT'D)

Avoid Silica Dust



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

SI EXC-1007

FIRE PREVENTION (CONT'D)

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

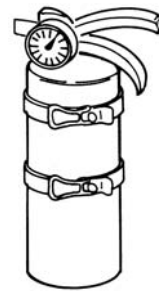


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.


Excavator Serial Number

Figure 1

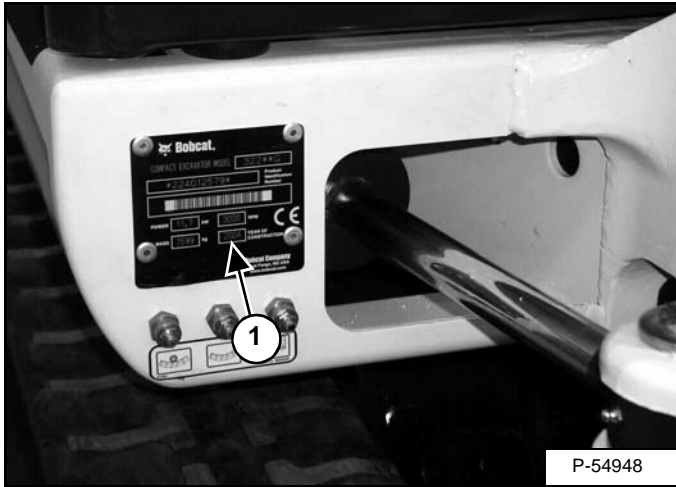

The excavator serial number plate (Item 1) is located on the frame of the machine in the location shown [Figure 1].

Explanation of excavator Serial Number:

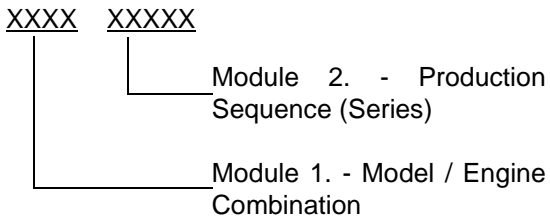

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the excavator is produced.

Engine Serial Number

Figure 2


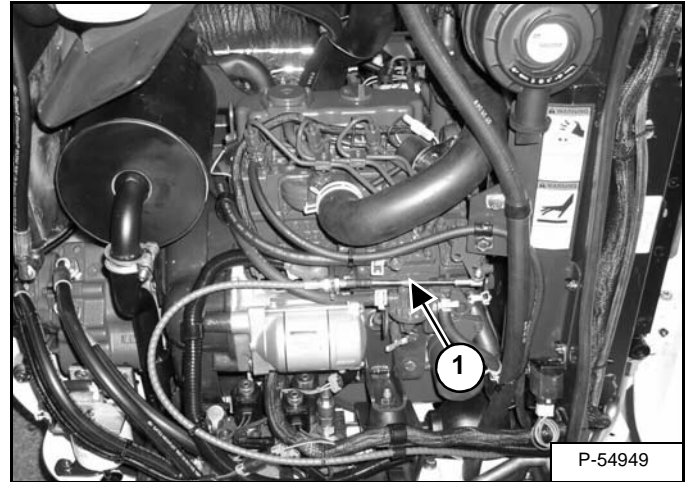


Figure 3

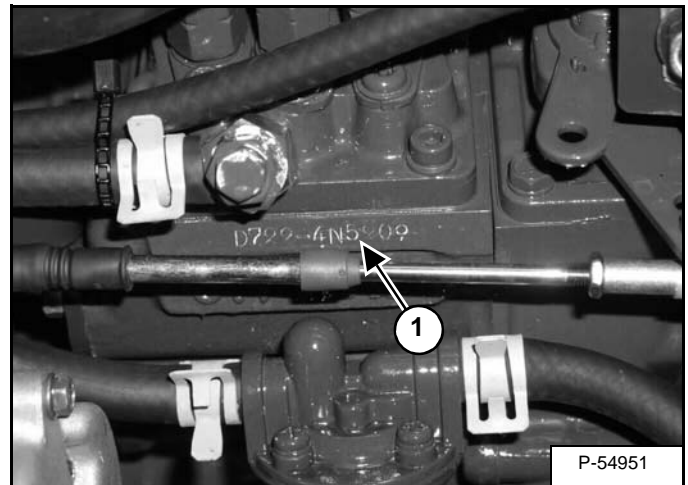

The engine serial number (Item 1) [Figure 2] & [Figure 3] is located on the engine in the locations shown.


DELIVERY REPORT

Figure 4

The diagram shows a form titled "DELIVERY REPORT". The form is divided into several sections. At the top, there is a header section with the title "DELIVERY REPORT" and several lines of text. Below this, the form is split into two columns. The left column contains a section with a dark background and the word "WARNING" in white, followed by several lines of text. The right column contains several lines of text. At the bottom of the form, there is a footer section with the text "B-16315".

The delivery report must be filled out by the dealer and signed by the owner or operator when the Bobcat Excavator is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 4]**.

BOBCAT EXCAVATOR IDENTIFICATION

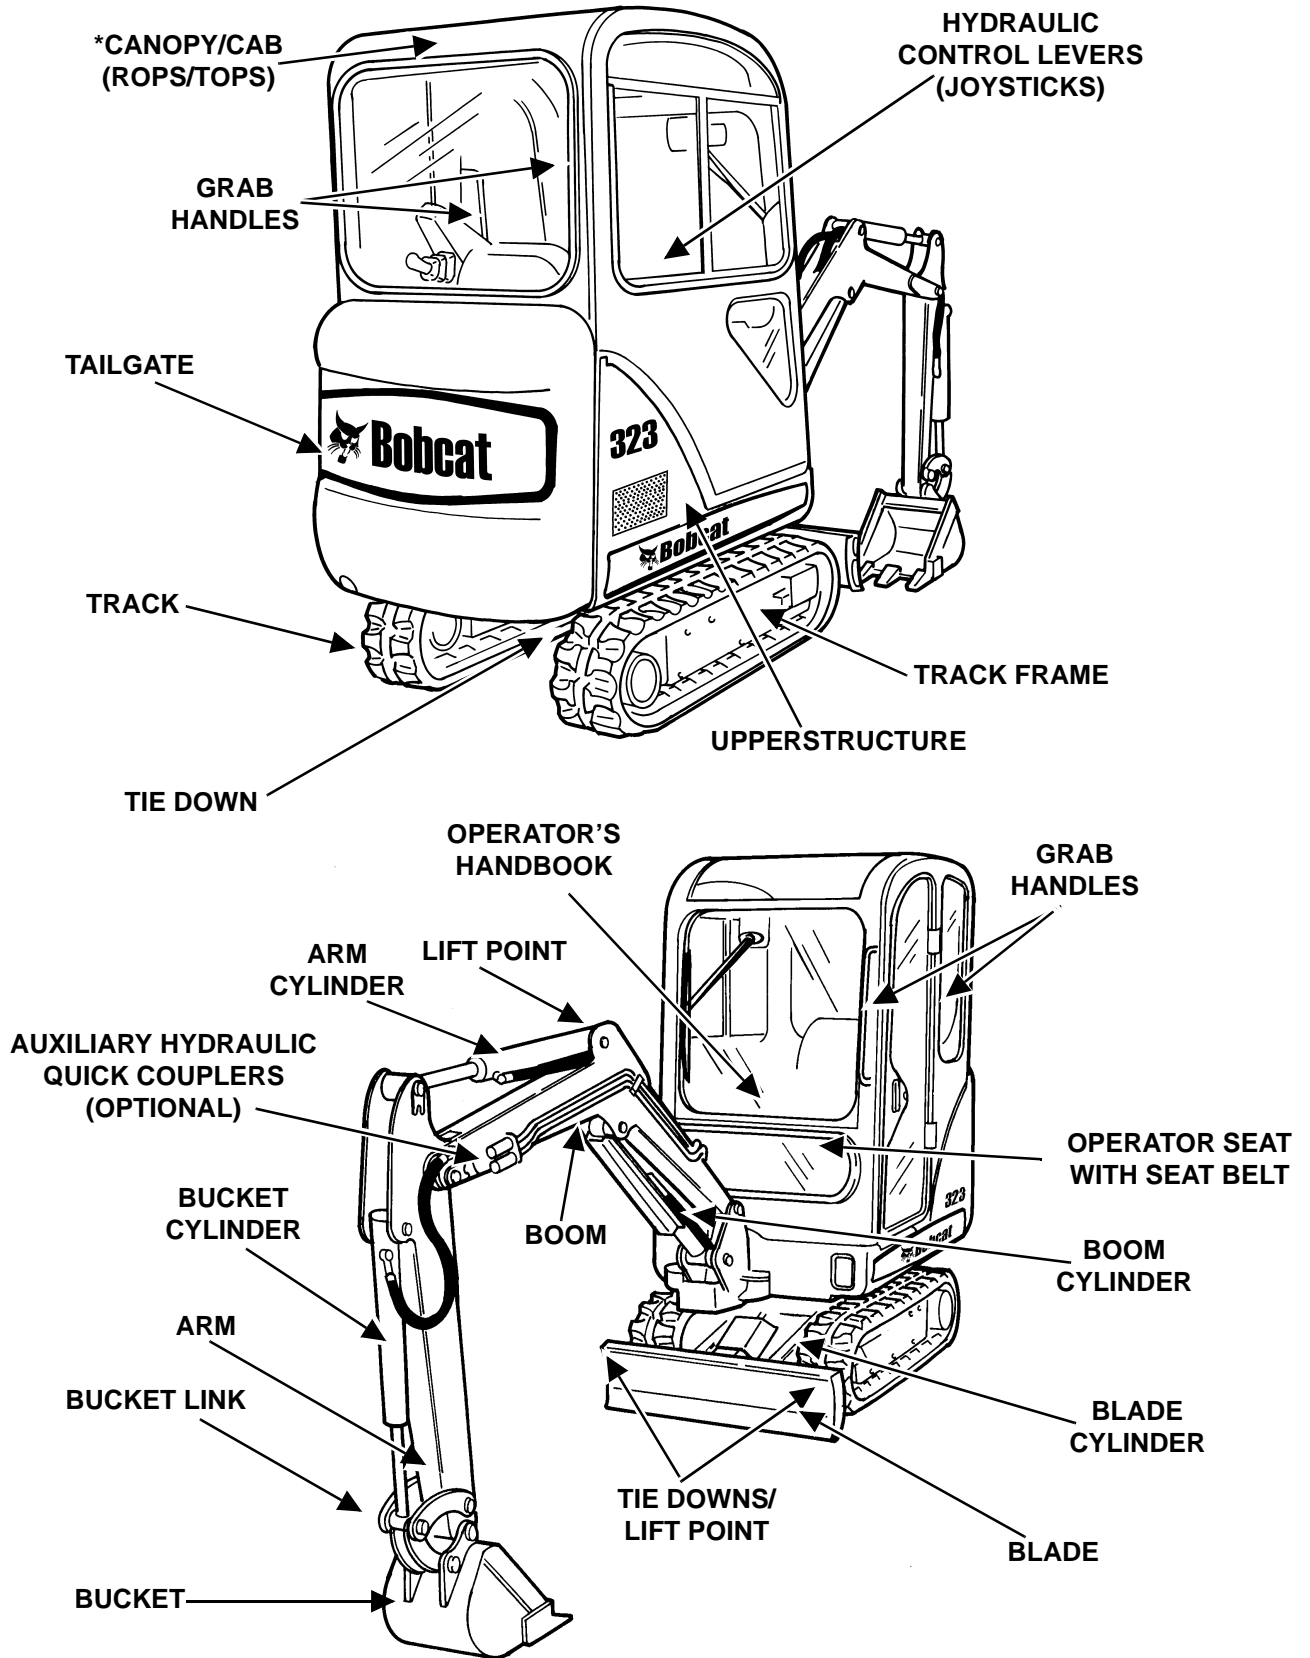

* FOGS (Falling Object Guards) is available from your Bobcat Excavator dealer.

B-23067A
B-23066A

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE 10-60-1
 Daily Check 10-60-1
 Replacing The Filters. 10-60-1

ALTERNATOR BELT 10-140-1
 Adjusting The Alternator Belt 10-140-1

CONTROL CONSOLE LOCKOUTS 10-160-1
 Inspection And Maintenance 10-160-1

ENGINE COOLING SYSTEM 10-70-1
 Checking Coolant Level. 10-70-1
 Cleaning The Cooling System 10-70-1
 Replacing The Coolant 10-70-2

ENGINE LUBRICATION SYSTEM 10-90-1
 Checking Engine Oil 10-90-1
 Oil Chart. 10-90-1
 Replacing Oil And Filter 10-90-2

EXCAVATOR STORAGE AND RETURN TO SERVICE 10-170-1
 Return to Service 10-170-1
 Storage 10-170-1

FUEL SYSTEM 10-80-1
 Biodiesel Blend Fuel 10-80-1
 Draining The Fuel Tank 10-80-4
 Filling The Fuel Tank 10-80-2
 Fuel Specifications. 10-80-1
 Removing Air From The Fuel System 10-80-4
 Removing Water From The Fuel Filter. 10-80-3
 Replacing The Fuel Filter. 10-80-3

HEATER AIR FILTERS 10-61-1
 Fresh Air Filter 10-61-1
 Recirculation Filter 10-61-1

HYDRAULIC SYSTEM 10-100-1
 Checking And Adding Hydraulic Oil. 10-100-1
 Diagnostic Couplers. 10-100-2
 Hydraulic Fluid Chart 10-100-1
 Replacing Hydraulic Oil 10-100-2
 Replacing The Hydraulic Filter. 10-100-2

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

LIFTING AND BLOCKING THE EXCAVATOR	10-10-1
Procedure	10-10-1
LIFTING THE EXCAVATOR	10-12-1
LUBRICATION OF THE HYDRAULIC EXCAVATOR	10-110-1
MOTION ALARM SYSTEM (IF EQUIPPED).....	10-190-1
Adjusting Switch Position.....	10-190-1
Description.....	10-190-1
Inspecting.....	10-190-1
OPERATOR CAB ROPS/TOPS (IF EQUIPPED)	10-20-1
Cab Door	10-20-1
Emergency Exits	10-20-1
Front Window.....	10-20-2
Front Window Wiper	10-20-2
Right Side Windows.....	10-20-4
Window Washer Reservoir.....	10-20-2
SEAT BELT	10-150-1
Inspection And Maintenance	10-150-1
SERVICE SCHEDULE	10-50-1
Chart	10-50-1
SPARK ARRESTOR MUFFLER	10-130-1
STOPPING THE ENGINE AND LEAVING THE EXCAVATOR	10-180-1
UPPERSTRUCTURE SLEW LOCK	10-11-1
TAILGATE	10-40-1
Adjusting The Bumper	10-40-1
Adjusting The Tailgate Latch	10-40-1
Opening And Closing The Tailgate	10-40-1
TRANSPORTING THE EXCAVATOR	10-30-1
TRAVEL MOTOR	10-120-1
Checking Oil Level.....	10-120-1
Draining The Travel Motor.....	10-120-1

LIFTING AND BLOCKING THE EXCAVATOR

Procedure

Always park the machine on a level surface.

Figure 10-10-1



Raise one side of the machine (approximately 4.0 in.) using the boom and arm as shown in **[Figure 10-10-1]**.

Raise the blade fully and install jackstands under the blade and the track frame. Lower the machine until all machine weight is on the jackstraws.

Stop the engine.

WARNING

Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195

WARNING


AVOID INJURY

Keep fingers and hands out of pinch points when checking the track tension.

W-2142-0903

UPPERSTRUCTURE SLEW LOCK


Figure 10-11-1

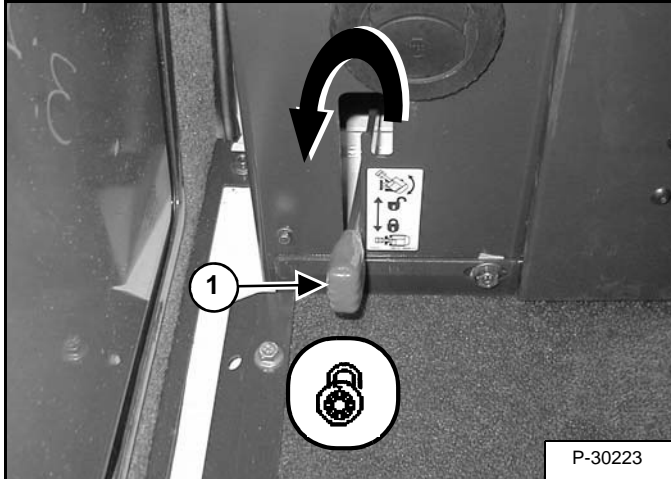

Move the lever (Item 1) [Figure 10-11-1] *down* to engage the Slew Lock. When the Slew Lock is engaged (locked), the upperstructure of the excavator is locked to the track frame and will not rotate. The upperstructure must be parallel to the track frame to engage the Slew Lock.

NOTE: The upperstructure must be in the straight forward or straight rearward position for the upperstructure to lock.

Figure 10-11-2

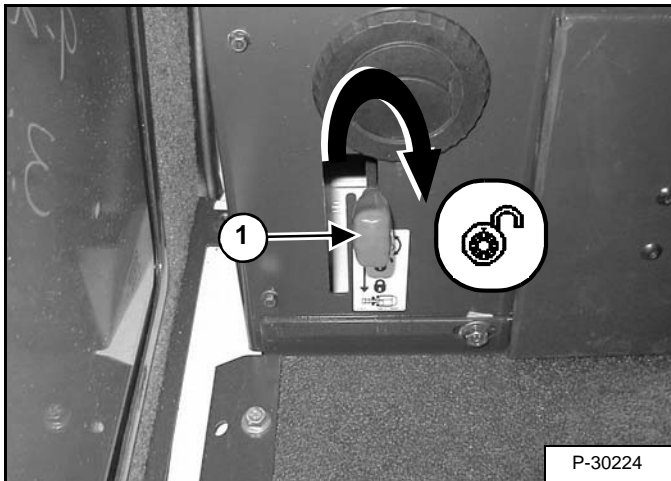

Move the lever (Item 1) [Figure 10-11-2] *up* to disengage the upperstructure from the track frame. Secure the lever in the unlocked position.

WARNING


AVOID INJURY

The upperstructure slew lock lever must be engaged when transporting the machine.

W-2197-0904

LIFTING THE EXCAVATOR

Figure 10-12-1

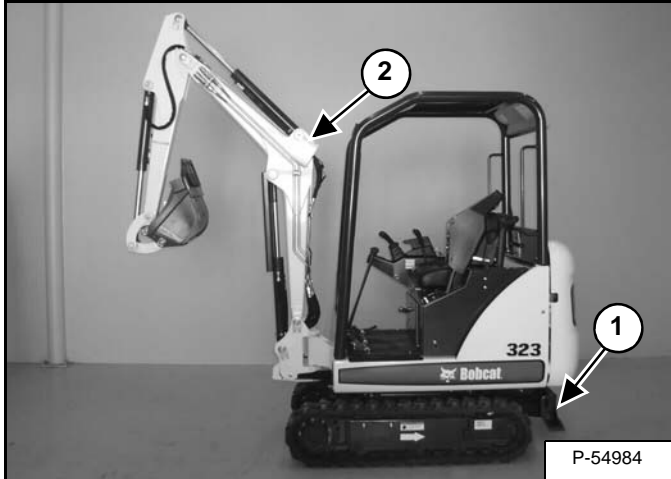

Fully extend the cylinders of the bucket, arm, and boom so that the excavator is in the position as shown [Figure 10-12-1].

Engage the upperstructure slew lock. (See UPPERSTRUCTURE SLEW LOCK on Page 10-11-1.)

Raise the blade all the way.

Put all the control levers in neutral.


WARNING

AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure. Engage the upperstructure slew lock.
- Never lift with operator on machine.


W-2202-0607

Figure 10-12-2

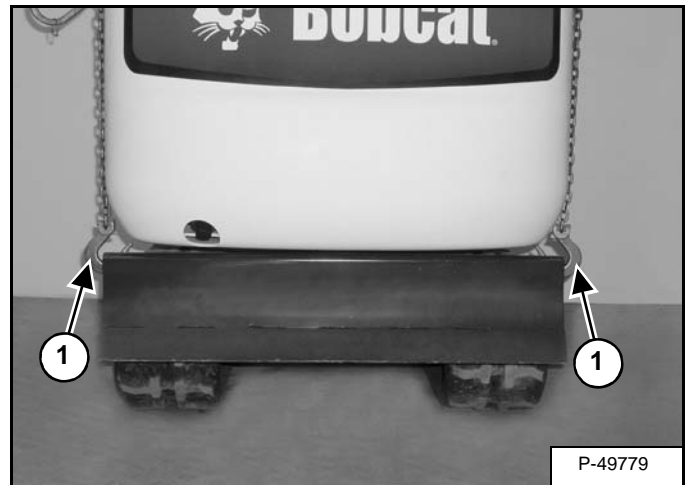

Fasten chains to the ends of the blade (Item 1) [Figure 10-12-1] and [Figure 10-12-2] and up to a lifting fixture above the canopy/cab. The lifting fixture must extend over the sides of the canopy/cab to prevent the chains from hitting the ROPS/TOPS.

Figure 10-12-3

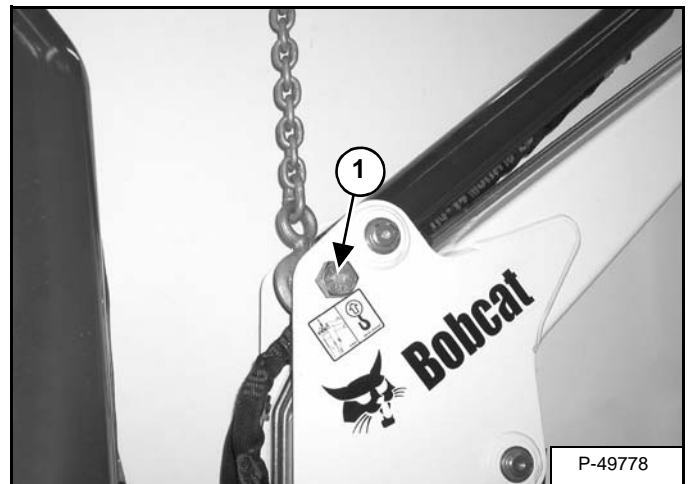

Install a 1 in. (25 mm) bolt and nut (Grade 5 or 8) through the holes at the boom (Item 1) [Figure 10-12-1] and [Figure 10-12-3]. Fasten a chain from the bolt to the lift fixture.

OPERATOR CAB ROPS/TOPS (IF EQUIPPED)

Emergency Exits

The left door, front window, and right side rear window provide exits.

Figure 10-20-1




Figure 10-20-2



Slide the window to the front of the excavator and exit through the side window [Figure 10-20-1], or open the front window and exit [Figure 10-20-2].

Cab Door


Figure 10-20-3

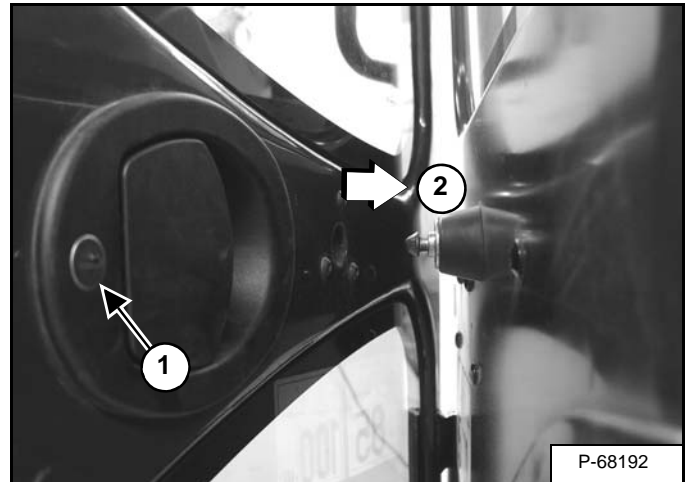

The cab door can be locked (Item 1) [Figure 10-20-3] with the same key as the starter switch.

Push the door all the way open (Item 2) [Figure 10-20-3] until the latch engages to hold the door in the open position.

Figure 10-20-4

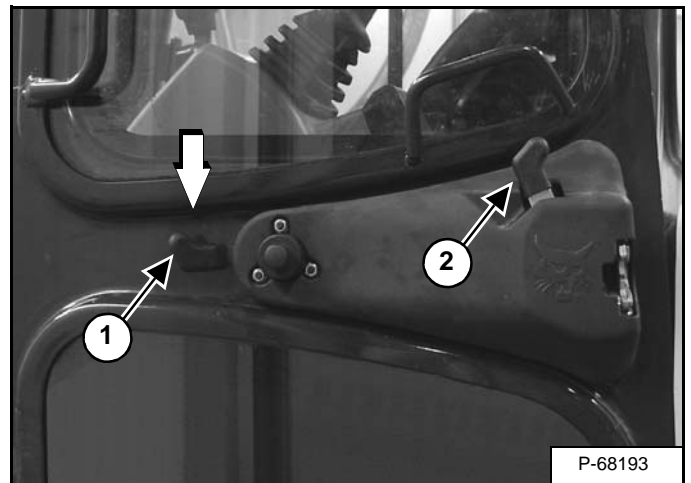


When the door is in the open position, push down on the latch (Item 1) [Figure 10-20-4] and close the door.

From inside the cab, open the door using handle (Item 2) [Figure 10-20-4].

OPERATOR CAB (ROPS / TOPS) (IF EQUIPPED) (CONT'D)

Front Window Wiper


Figure 10-20-5

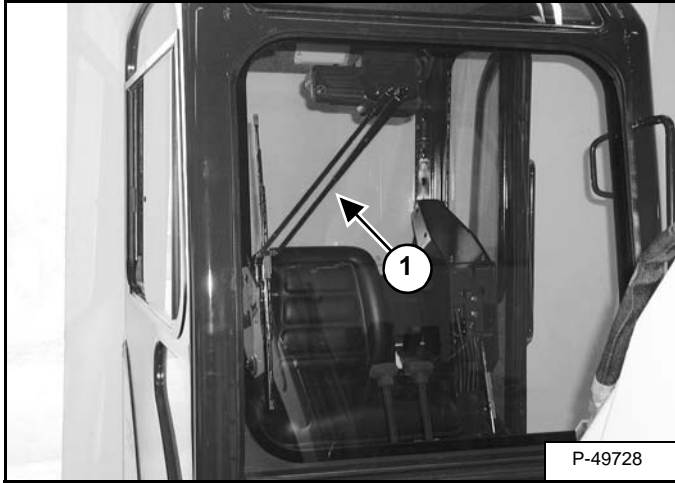

The front window is equipped with a wiper (Item 1) [Figure 10-20-5] and washer.

Window Washer Reservoir

Figure 10-20-6

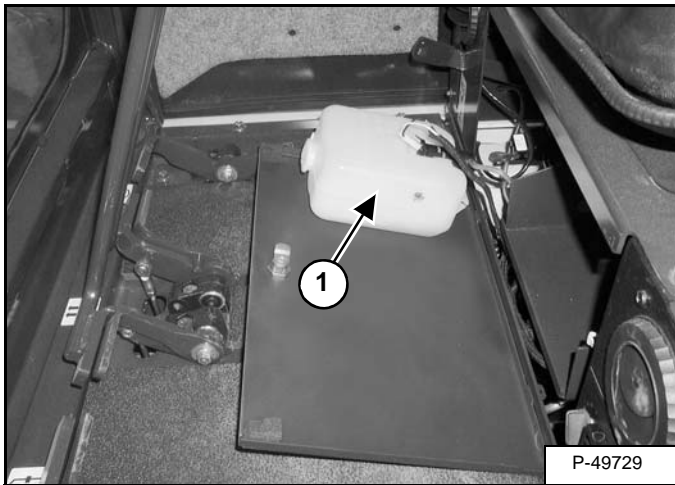


The window washer reservoir (Item 1) [Figure 10-20-6] is located on the inside of the storage compartment door.

Front Window


Opening The Front Window

Figure 10-20-7

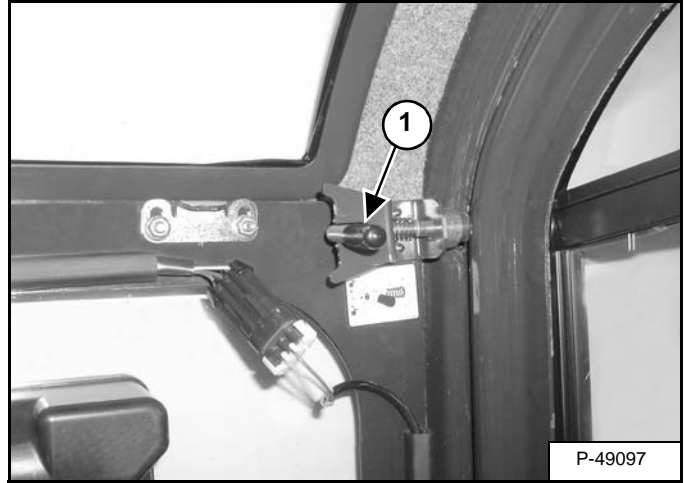

Retract the two top window latch pins (Item 1) [Figure 10-20-7].

Figure 10-20-8

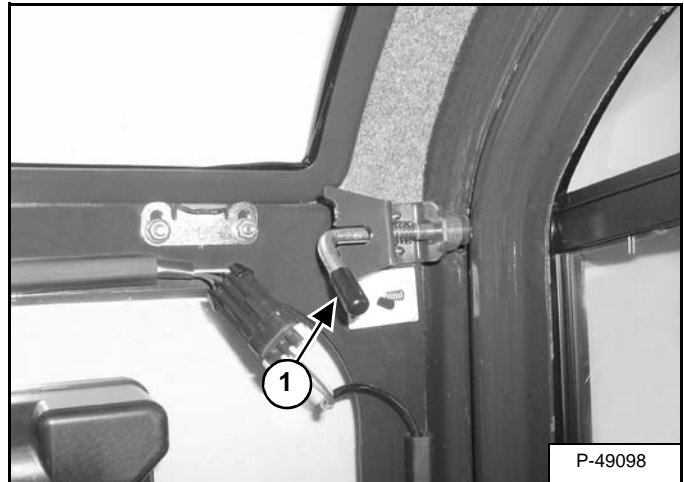

Turn the two top latches (Item 1) [Figure 10-20-8] to the unlocked position.

OPERATOR CAB (ROPS/TOPS) IF EQUIPPED (CONT'D)

Front Window (Cont'd)


Figure 10-20-9



Use both window grab handles to pull the top of the window in **[Figure 10-20-9]**.

Continue moving the window in and up over the operator's head until the window is fully raised.

Figure 10-20-10

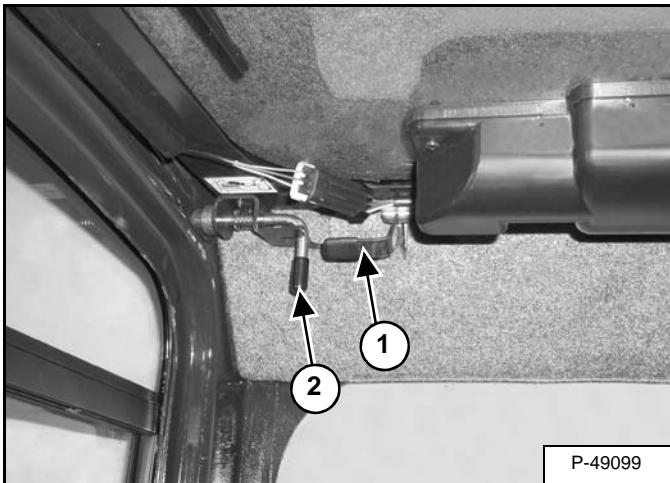

When the window is fully raised, the latch (Item 1) will close on the bracket. Turn the two top latches (Item 2) **[Figure 10-20-10]** to the locked position.

Closing The Front Window

Support the window while releasing both window latch pins and placing the pins in the unlocked position **[Figure 10-20-10]**.

Support the window using the left grab handle and pull down on the latch (Item 1) **[Figure 10-20-10]** to release the window.

Use both window grab handles to pull the window down **[Figure 10-20-9]**.


Rotate the top latches (Item 1) **[Figure 10-20-8 on Page 10-20-2]** to the locked position (Item 1) **[Figure 10-20-7 on Page 10-20-2]**.

**OPERATOR CAB (ROPS/TOPS) (IF EQUIPPED)
(CONT'D)**

Right Side Windows


Opening the right rear window

Figure 10-20-11

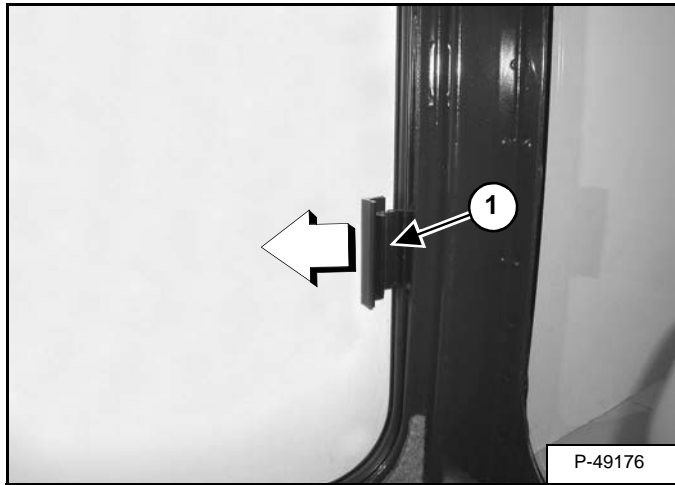

Pull forward on the latch (Item 1) [Figure 10-20-11].

Figure 10-20-12

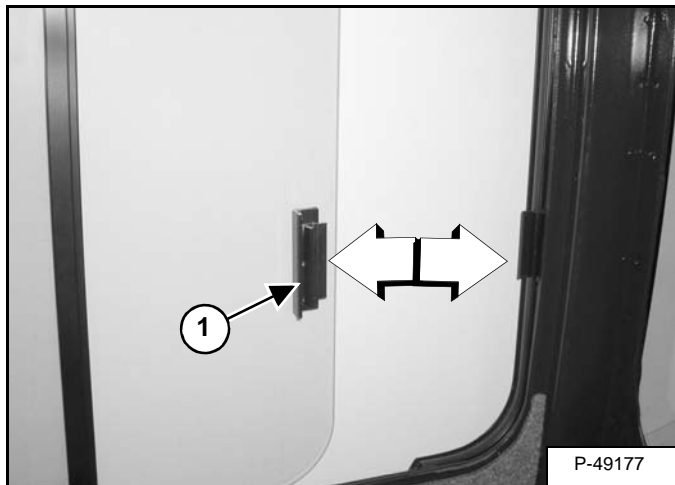


Pull the latch/handle (Item 1) [Figure 10-20-12] forward to open the window.

Push the handle back to close the window.


Opening the right front window

Figure 10-20-13

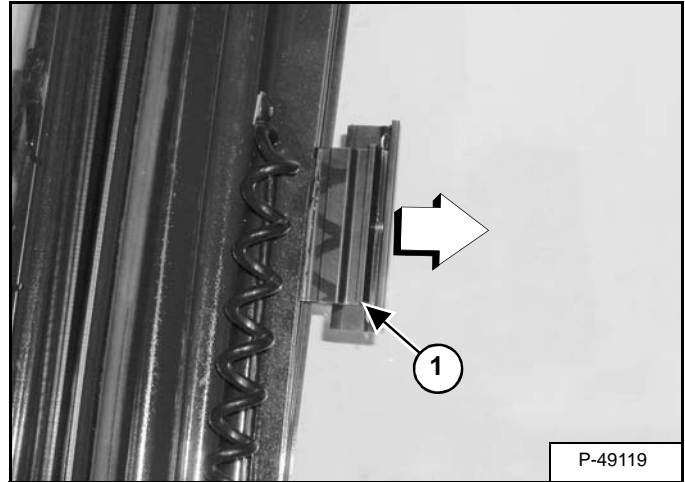

Pull back on the latch (Item 1) [Figure 10-20-13].

Figure 10-20-14

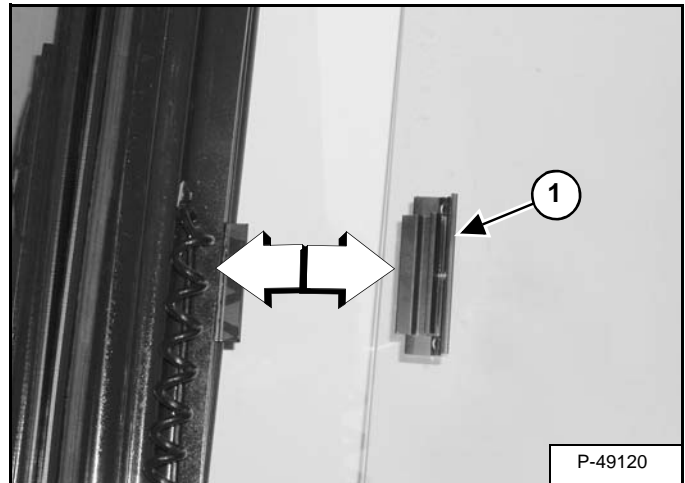

Pull the latch/handle (Item 1) [Figure 10-20-14] back to open the window.

Push the handle forward to close the window.

TRANSPORTING THE EXCAVATOR

When transporting the machine, observe the rules, motor vehicle laws and vehicle limit ordinances. Use a transport and towing vehicle of adequate length and capacity.

Secure the parking brakes and block the wheels of the transport vehicle.

Remove the blade extensions (If equipped). (See Blade Removal And Installation on Page 30-10-1.)

Retract the track frame if required. See the correct Operation & Maintenance Manual for the proper procedure.

Align the ramps with the center of the transport vehicle. Secure the ramps to the truck bed and be sure ramp angle does not exceed 15 degrees.

Use metal loading ramps with a slip resistant surface that are the correct length and width, and can support the weight of the machine.

The rear of the trailer must be blocked or supported when loading or unloading the excavator to prevent the front of the transport vehicle from raising.

Determine the direction of the track movement before moving the machine (blade forward). Engage the slew lock (See UPPERSTRUCTURE SLEW LOCK on Page 10-11-1.)

Figure 10-30-1



Move the machine forward onto the transport vehicle [Figure 10-30-1].

Do not change direction of the machine while it is on the ramps. Lower the boom, arm, and bucket to the transport vehicle.

Stop the engine and remove the key. Put blocks under the front and rear of the tracks.

Figure 10-30-2



Figure 10-30-3



Fasten chains to the front corners of the blade and to the tie down loop at the rear [Figure 10-30-2] & [Figure 10-30-3] to prevent it from moving when going up or down slopes, or during sudden stops.

Use chain binders to tighten the chains and then safely tie the chain binder levers to prevent loosening.

! WARNING

AVOID SERIOUS INJURY OR DEATH
Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0807

TAILGATE

Opening And Closing The Tailgate



AVOID INJURY OR DEATH

Never service or adjust the machine when the engine is running unless instructed to do so in the manual.


W-2012-0497



Keep the rear door closed when operating the machine. Failure to do so could seriously injure a bystander.

W-2020-1285

Figure 10-40-1

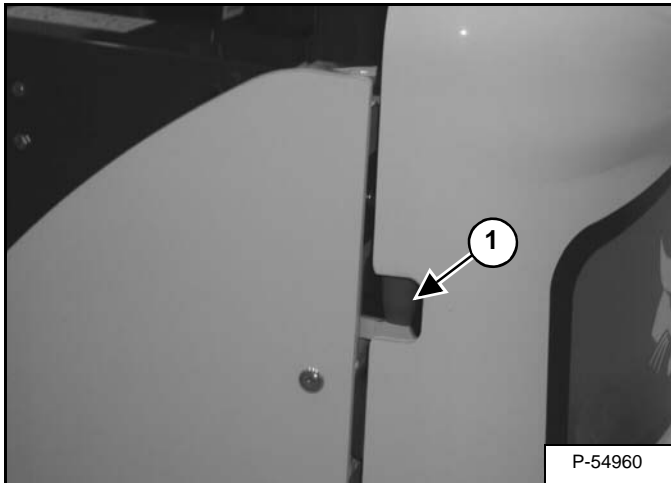


Release the latch (Item 1) [Figure 10-40-1] and pull the tailgate open.

Push firmly to close the tailgate.

Note: The tailgate can be locked using the start key.

Adjusting The Bumper

Figure 10-40-2

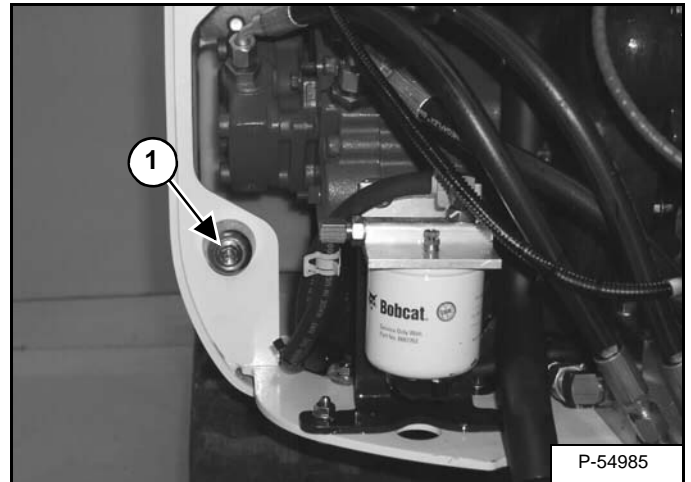


The door bumper (Item 1) [Figure 10-40-2] can be adjusted for alignment with the tailgate.

Close the tailgate before operating the excavator.

Adjusting The Tailgate Latch

Figure 10-40-3

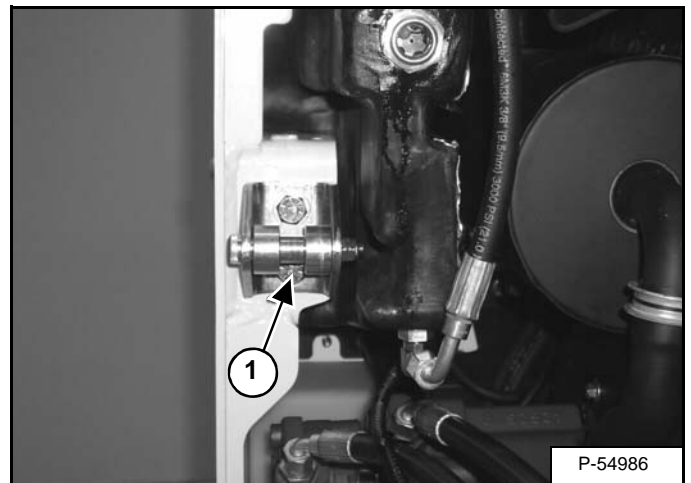

The door catch (Item 1) [Figure 10-40-3] can be adjusted by loosening the two bolts, moving the catch, and tightening the two bolts.

Close the tailgate before operating the excavator.

SERVICE SCHEDULE

Chart

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat Excavator.



AVOID INJURY OR DEATH

Instructions are necessary before operating or servicing machine. Read and understand the **Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.**

W-2003-0807

SERVICE SCHEDULE		HOURS					
ITEM	SERVICE REQUIRED	8-10	50	100	250	500	■
Engine Coolant	Check coolant level. Add premixed coolant as needed.						
Engine Oil	Check the engine oil level and add as needed.						
Hydraulic Fluid, Hoses and Tubelines	Check the hydraulic fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.						
Engine Air Filter and Air System	Check condition indicator and empty dust cup as needed. Check air system for leaks.						
Tracks	Check and adjust track tension as needed.						
Indicators and Lights	Check for correct operation of all indicators and lights.						
Control Console Lockout	Check for proper function. Repair or replace as needed.						
Operator Canopy/Cab	Check condition. Check mounting hardware.						
Seat Belt	Check condition. Check mounting hardware.						
Safety Signs and Safety Treads	Check for damaged signs (decals) and safety treads. Replace any signs or safety treads that are damaged or worn.						
Pivot Points	Grease all machinery pivot points.						
Cab Heater Air Filter (Option)	Clean the filter as needed.						
Swing Circle and Pinion	Grease two fittings.						
Fuel Tank & Filter	Drain water and sediment from fuel tank and fuel filter.						
Battery	Check battery, cables, connections and electrolyte level. Add distilled water as needed.						
Alternator / Fan Belt	Check condition of belt and adjust as needed.		^				
Spark Arrestor Muffler	Clean the spark chamber.						
Fuel Filter	Replace fuel filter.						
Travel Motor	Check lubricant level in both travel motors.						
Engine Oil and Filter	Replace oil & filter. Use CD or better grade oil and Bobcat filter.		•				
Radiator, & Oil Cooler	Clean debris from the radiator fins.						
Hydraulic Filter and Reservoir Breather	Replace the filter and reservoir breather.			••			
Alternator & Starter	Check the alternator and starter connections.			••			
Engine Valves	Check and adjust the engine valve clearance.						
Travel Motor	Replace lubricant in both travel motors.			••			
Hydraulic System	Replace the hydraulic fluid and filters. Clean the reservoir.						
Coolant	Drain and flush the cooling system. Replace the coolant.						Every 2 years

- ^ Check after the first 50 hours, then as scheduled.
- First oil and filter change must occur at 50 hours; then as scheduled.
- Check after the first 100 hours, then as scheduled.
- Or every 12 months.



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.


Thank you so much for reading

AIR CLEANER SERVICE

See the Service Schedule for the correct service interval. (See Chart on Page 10-50-1.)

Daily Check

Figure 10-60-1

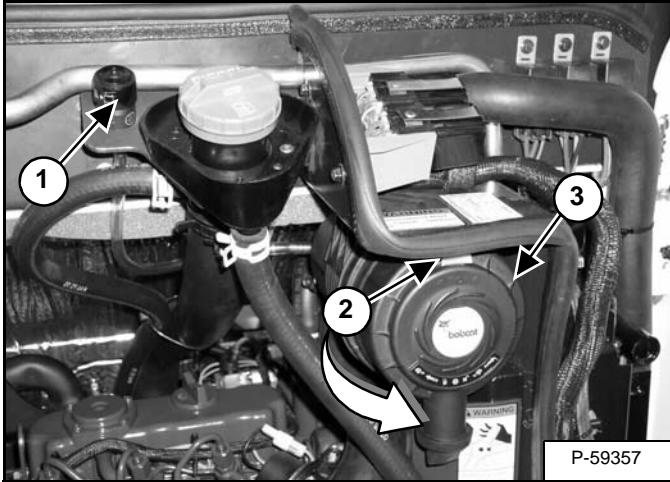

Check the condition indicator (Item 1) [Figure 10-60-1]. If the red ring shows in the condition indicator, the filter needs to be replaced.

Replace the inner filter every third time the outer filter is replaced or as indicated.

Replacing The Filters


Outer Filter

Pull the locking tab (Item 2) [Figure 10-60-1].

Turn the dust cup (Item 3) [Figure 10-60-1] counter-clockwise about 1/8 turn.

Remove and clean the dust cup.

Figure 10-60-2

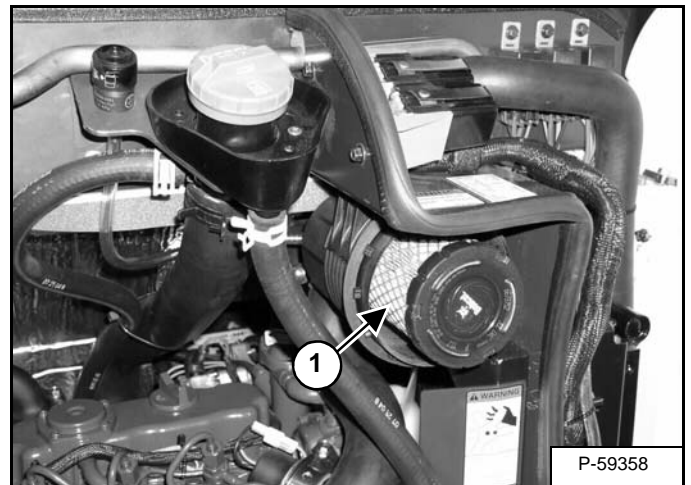

Pull the outer filter (Item 1) [Figure 10-60-2] from the air cleaner housing.

Check the housing for damage.

Clean the housing and the seal surface. DO NOT use compressed air.

Install a new outer filter.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>