

**Workmate  
2100  
2100S**




# **Bobcat® Maintenance**

**&**

# **Service**

**S/N 522711758 & Above  
S/N 524411001 & Above**

**Utility Vehicle**

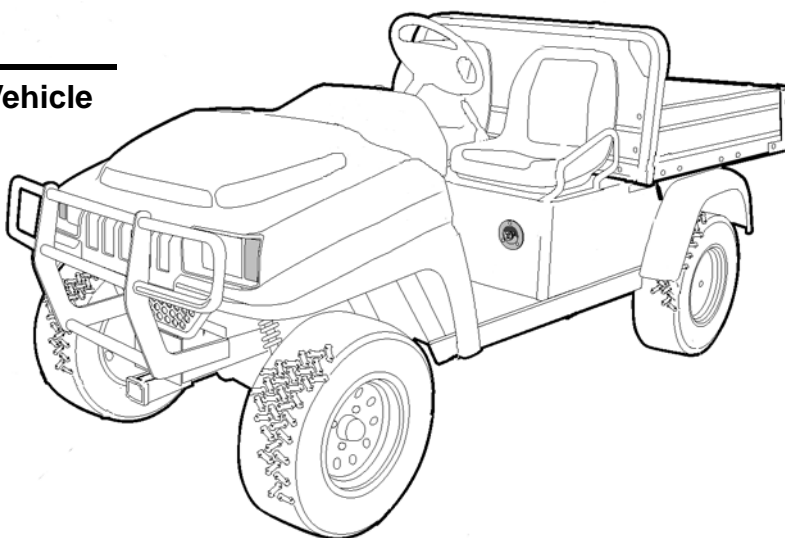

An **IR** Ingersoll-Rand business

Printed in U.S.A.

## FOREWORD

---

Bobcat vehicles are designed and built to provide the ultimate in performance efficiency; however, proper maintenance and repair are essential for achieving maximum service life and continued safe and reliable operation.

This manual provides detailed information for the maintenance and repair of the Bobcat 1200 and Bobcat 1200S vehicles, and should be thoroughly reviewed prior to servicing the vehicles. The procedures provided must be properly implemented, and the DANGER, WARNING, and CAUTION statements must be heeded.

This manual was written for the trained technician who already possesses knowledge and skills in electrical and mechanical repair. *If the technician does not have such knowledge and skills, attempted service or repairs to the vehicle may render the vehicle unsafe.* For this reason, Bobcat Company advises that all repairs and/or service be performed by an authorized Bobcat 2100 and 2100S distributor/dealer representative or by a Bobcat factory-trained technician.

It is the policy of Bobcat Company to assist its distributors and dealers in continually updating their service knowledge and facilities so they can provide prompt and efficient service for vehicle owners. Regional technical representatives, vehicle service seminars, periodic service bulletins, maintenance and service manuals, and other service publications also represent Bobcat Company's continuing commitment to customer support.

This manual covers all aspects of typical vehicle service; unique situations, however, do sometimes occur when servicing a vehicle. If it appears that a service question is not answered in this manual, you may **write to us at: P.O. Box 204658; Augusta, Georgia 30917; Attention: Technical Services, or contact a Club Car Technical Service Representative at (706) 863-3000, ext. 3580.**

Copyright © 2003 Bobcat Company.

This manual effective August, 2003.

## **WARNING**

- Read SECTION 1–SAFETY before attempting any service on this vehicle.
- Before servicing vehicle, read complete section(s) and any referenced information that may be relevant to the service or repair to be performed.

**NOTE:** *This manual represents the most current information at the time of publication. Bobcat Company is continually working to further improve our vehicles and other products. These improvements may affect servicing procedures. Any modification and/or significant change in specifications or procedures will be forwarded to all Bobcat 2100 and 2100S dealers and will, when applicable, appear in future editions of this manual.*

*Bobcat Company reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.*

*There are no warranties expressed or implied in this manual. See the limited warranty found in the vehicle Operation and Maintenance Manual.*

# CONTENTS

---

## SECTION 1 – SAFETY

---

General Warning .....	1-1
-----------------------	-----

## SECTION 2 – VEHICLE SPECIFICATIONS

---

## SECTION 3 – GENERAL INFORMATION

---

General Information .....	3-1
Serial Number Identification .....	3-1
Storage .....	3-2
Preparing the Vehicle for Extended Storage .....	3-2
To Return Vehicle to Service .....	3-2

## SECTION 4 – BODY AND TRIM

---

Cleaning the Vehicle .....	4-1
Front Body Repair .....	4-1
Abrasions and Haze .....	4-1
Light Scratches .....	4-2
Large Scratches and Abrasions .....	4-2
Front Body Components .....	4-2
Dashboard Removal .....	4-2
Dashboard Installation .....	4-2
Front Body Removal .....	4-3
Front Fender Removal .....	4-3
Front Fender Installation .....	4-4
Front Body Installation .....	4-4
Seat .....	4-4
Seat Adjustment .....	4-4
Front Seat Support .....	4-6
Front Seat Support Removal .....	4-6
Front Seat Support Installation .....	4-7
Rear Seat Support .....	4-7
Rear Seat Support Removal .....	4-7
Rear Seat Support Installation .....	4-7

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Cargo Bed .....	4-9
Cargo Bed Removal .....	4-9
Cargo Bed Installation .....	4-9
Bed Stop Bumper Adjustment .....	4-11
Rear Fender Removal .....	4-12
Rear Fender Installation .....	4-12
Tailskirt .....	4-12
Tailskirt Removal .....	4-12
Tailskirt Installation .....	4-12
Receiver Hitch .....	4-12
Receiver Hitch Removal .....	4-12
Receiver Hitch Installation .....	4-13
Floor Mat .....	4-14
Floor Mat Removal .....	4-14
Floor Mat Installation .....	4-14

## **SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES**

---

Brake Pedal .....	5-1
Brake Pedal Removal .....	5-1
Brake Pedal Installation .....	5-1
Brake Pedal Adjustment .....	5-2
Accelerator Pedal .....	5-4
Accelerator Pedal Removal .....	5-4
Accelerator Pedal Installation .....	5-5
Accelerator Pedal Adjustment .....	5-5

## **SECTION 6 – MC012C-AS00 TRANSAXLE: HYDRAULIC AND PARK BRAKE SYSTEMS**

---

Brake System Inspection .....	6-1
Brake System Troubleshooting .....	6-3
Brake Drum Removal .....	6-6
Front Wheel Brake Drum Removal .....	6-6
Rear Wheel Brake Drum Removal .....	6-8
Brake Shoe Removal .....	6-8
Front Brake Shoe Removal .....	6-8
Rear Brake Shoe Removal .....	6-9
Brake Cluster Inspection and Cleaning .....	6-10
Brake Shoe Installation .....	6-11
Front Brake Shoe Installation .....	6-12
Rear Brake Shoe Installation .....	6-12

Brake Drum Installation .....	6-14
Front Wheel Brake Drum Installation .....	6-14
Rear Wheel Brake Drum Installation .....	6-16
Brake Cluster Assembly Replacement .....	6-17
Front Brake Cluster Assembly Removal .....	6-17
Front Brake Cluster Assembly Installation .....	6-17
Rear Brake Cluster Assembly Removal .....	6-18
Rear Brake Cluster Assembly Installation .....	6-19
Wheel Cylinder Replacement .....	6-19
Front Wheel Cylinder Removal .....	6-19
Front Wheel Cylinder Installation .....	6-20
Rear Wheel Cylinder Removal .....	6-20
Rear Wheel Cylinder Installation .....	6-20
Brake Shoe Adjuster Replacement .....	6-21
Front Brake Shoe Adjuster Removal .....	6-22
Front Brake Shoe Adjuster Installation .....	6-22
Rear Brake Shoe Adjuster Removal .....	6-22
Rear Brake Shoe Adjuster Installation .....	6-22
Hydraulic Line and Hose Replacement .....	6-23
Front Brake Line Removal .....	6-23
Front Brake Line Installation .....	6-23
Front Brake Hose Assembly Removal .....	6-24
Front Brake Hose Assembly Installation .....	6-24
Rear Brake Line Removal .....	6-24
Rear Brake Line Installation .....	6-26
Rear Brake Hose Removal .....	6-26
Rear Brake Hose Installation .....	6-27
Master Cylinder And Bell Crank Replacement .....	6-27
Bell Crank Removal .....	6-27
Bell Crank Installation .....	6-27
Master Cylinder Removal .....	6-29
Master Cylinder Installation .....	6-29
Bleeding the Hydraulic Brake System .....	6-31
Purging the Hydraulic System .....	6-32
Filling the Hydraulic System .....	6-32
Park Brake System .....	6-33
Park Brake Cable Removal .....	6-33
Park Brake Cable Installation .....	6-34
Park Brake Handle Removal .....	6-35
Park Brake Handle Installation .....	6-35
Park Brake Adjustment .....	6-35

## SECTION 7 – STEERING AND FRONT SUSPENSION

---

Steering Wheel .....	7-1
Steering Wheel Removal .....	7-1
Steering Wheel Installation .....	7-3
Steering Column .....	7-3
Steering Column Removal .....	7-3
Steering Column Disassembly .....	7-3
Steering Column Assembly .....	7-4
Steering Column Installation .....	7-4
Rack and Pinion .....	7-5
Rack and Pinion Removal .....	7-5
Rack and Pinion Disassembly .....	7-6
Rack and Pinion Assembly .....	7-9
Rack and Pinion Installation .....	7-10
Front Suspension .....	7-12
Lubrication .....	7-12
Wheel Alignment .....	7-12
Front Suspension Components .....	7-14
Kingpin and Steering Spindle Removal .....	7-14
Kingpin and Steering Spindle Installation .....	7-14
A-Arm Removal .....	7-15
A-Arm Installation .....	7-17
Shock Absorber Removal .....	7-17
Shock Absorber Installation .....	7-18
Front Wheel Bearings and Hubs .....	7-18
Front Wheel Free Play Inspection .....	7-18
Front Wheel Bearings and Hub Removal .....	7-19
Front Wheel Bearings and Hub Installation .....	7-19

## SECTION 8 – WHEELS AND TIRES

---

General Information .....	8-1
---------------------------	-----

## SECTION 9 – REAR SUSPENSION

---

Shock Absorbers .....	9-1
Shock Absorber Removal and Inspection .....	9-1
Shock Absorber Installation .....	9-1
Multi-Leaf Springs .....	9-1
Multi-Leaf Spring Removal .....	9-1
Multi-Leaf Spring Installation .....	9-3

Snubber .....	9-4
Snubber Removal .....	9-4
Snubber Installation .....	9-4

## **SECTION 10 – PERIODIC MAINTENANCE**

---

Periodic Service Schedule .....	10-1
Periodic Lubrication Schedule .....	<b>10-2</b>
Master Cylinder .....	10-3
Brake Fluid .....	10-4
Engine Oil .....	10-4
Engine Oil Level Check .....	10-4
Engine Oil and Filter Change .....	10-5
Oil Viscosity .....	10-7
Fueling Instructions .....	10-7
Battery .....	10-8

## **SECTION 11 – TROUBLESHOOTING AND ELECTRICAL SYSTEM: FE400 ENGINE**

---

Troubleshooting Guide .....	11-1
Electrical System .....	11-5
Wiring Diagram .....	11-6
Electrical Circuits .....	11-8
Starter Circuit .....	11-8
Generator Circuit .....	11-8
Engine Ignition Circuit .....	11-9
Engine Kill Circuit .....	11-9
Reverse Buzzer Circuit .....	11-10
Low Oil Warning Circuit .....	11-10
Lockout Cam Circuit .....	11-11
Fuel Gauge and Sending Unit Circuit .....	11-12
Hour Meter Circuit .....	11-13
Lighting Circuit .....	11-13
Circuit Testing .....	11-13
Testing the Starter Circuit and Generator Circuit .....	11-14
Testing the Engine Ignition Circuit .....	11-15
Testing the Engine Kill Circuit .....	11-15
Testing the Reverse Buzzer Circuit .....	11-16
Testing the Low Oil Warning Circuit .....	11-17
Testing the Lockout Cam Circuit .....	11-18
Testing the Fuel Gauge and Sending Unit Circuit .....	11-18
Testing the Lighting Circuit .....	11-19

Test Procedures .....	11-19
Index of Test Procedures .....	11-19

## **SECTION 12 – ELECTRICAL COMPONENTS: FE400 ENGINE**

---

Starter/Generator .....	12-1
Voltage Regulator .....	12-11
Diode .....	12-12
Key Switch .....	12-14
Solenoid .....	12-15
Fuse .....	12-15
Lockout Cam Limit Switch .....	12-17
Lockout Cam .....	12-17
Reverse Warning Buzzer .....	12-18
Reverse Buzzer Limit Switch .....	12-19
Low Oil Warning Light .....	12-20
Fuel Gauge/Hour Meter .....	12-21
Fuel Level Sending Unit .....	12-22
RPM Limiter .....	12-22
Ignition Coil .....	12-23
Oil Level Sensor .....	12-26
Headlights .....	12-26
Headlight Diode .....	12-27
Light Switch .....	12-28
Testing the Light Switch .....	12-28
Battery .....	12-28
General Information .....	12-29
Ground Straps .....	12-33

## **SECTION 13 – FE400 ENGINE**

---

General Information .....	13-1
Before Servicing .....	13-1
Lubrication System .....	13-1
Spark Plug .....	13-1
Cylinder .....	13-3
Breather Valve (Reed Valve) .....	13-3
Valve Clearance Check and Adjustment .....	13-3
Crankcase .....	13-3
Engine Removal .....	13-3
Crankcase Cover Removal .....	13-4
Oil Level Sensor .....	13-5

Ignition Coil and Flywheel .....	13-6
Crankcase Cover Installation .....	13-7
Flywheel Installation .....	13-7
Engine Installation .....	13-8
Torque Specifications .....	13-9
Adjustment and Settings .....	13-9

## **SECTION 14 – FUEL SYSTEM**

---

General Information .....	14-1
Carburetor .....	14-1
Main Jet Elevation/Size Chart .....	14-1
Changing the Main Jet .....	14-2
Engine Control Linkage .....	14-5
General Information .....	14-5
Accelerator Rod .....	14-6
Governor Cable .....	14-7
Accelerator Cable .....	14-8
Closed Throttle or Idle Adjustment .....	14-10
Engine RPM Adjustment .....	14-10
Choke and Air Intake System .....	14-11
Choke Cable Removal .....	14-11
Choke Cable Installation .....	14-11
Air Box Removal .....	14-11
Air Box Installation .....	14-12
Intake Duct Repair .....	14-13
Intake Duct Removal .....	14-13
Intake Duct Installation .....	14-15
Air Filter .....	14-16
Fuel Filter Removal .....	14-17
Fuel Filter Installation .....	14-17
Fuel Pump .....	14-17
General Information .....	14-17
Fuel Pump Removal .....	14-20
Fuel Pump Disassembly .....	14-20
Fuel Pump Cleaning and Inspection .....	14-20
Fuel Pump Assembly .....	14-21
Fuel Pump Installation .....	14-21
Fuel Tank .....	14-22
Fuel Tank Removal .....	14-22
Fuel Tank Storage or Disposal .....	14-26
Fuel Tank Installation .....	14-26

Fuel Lines .....	14-27
Fuel Shut-Off Valve .....	14-28

## **SECTION 15 – EXHAUST SYSTEM**

---

Muffler .....	15-1
Muffler Removal .....	15-1
Muffler Installation .....	15-1

## **SECTION 16 – MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK**

---

General Information .....	16-1
Lubrication .....	16-2
Axle Shaft .....	16-3
Axle Shaft, Bearing, and Oil Seal Removal .....	16-3
Axle Bearing Removal .....	16-5
Axle Shaft, Bearing, and Oil Seal Installation .....	16-5
Unitized Transaxle Removal .....	16-6
Unitized Transaxle Installation .....	16-16
Forward/Reverse Shifter Cable .....	16-24
Forward/Reverse Shifter Cable Removal .....	16-24
Forward/Reverse Shifter Cable Installation .....	16-24
Forward/Reverse Shifter Cable Adjustment .....	16-25
Differential Lock System .....	16-26
Differential Lock System Inspection .....	16-26
Differential Lock Cable Removal .....	16-26
Differential Lock Cable Installation .....	16-27

## **SECTION 17 – TORQUE CONVERTER**

---

General Information .....	17-1
Drive Belt .....	17-3
Drive Belt Removal .....	17-3
Drive Belt Installation .....	17-4
Drive Clutch .....	17-4
Drive Clutch Removal .....	17-4
Drive Clutch Cleaning and Inspection .....	17-5
Drive Clutch Disassembly .....	17-6
Inspection of Drive Clutch Parts .....	17-7
Drive Clutch Assembly .....	17-9
Drive Clutch Installation .....	17-12

Driven Clutch .....	17-13
Driven Clutch Removal .....	17-13
Driven Clutch Disassembly .....	17-13
Driven Clutch Inspection .....	17-13
Driven Clutch Assembly .....	17-15
Driven Clutch Installation .....	17-17

## **SECTION 18 – RECONDITIONING THE FE400 ENGINE**

---

General Information .....	18-1
Recommended Replacement Parts For Engine Teardown .....	18-2
Before Servicing .....	18-2
Mechanical Systems .....	18-2
Cylinder Components .....	18-4
Cylinder Head .....	18-4
General Information .....	18-4
Cylinder Shroud Removal .....	18-5
Rocker Arm and Push Rod Removal .....	18-7
Cylinder Head Removal .....	18-8
Valve Removal .....	18-8
Breather Valve (Reed Valve) .....	18-9
Cylinder Head Cleaning and Inspection .....	18-9
Valve Guides .....	18-10
Valve Seats .....	18-11
Valves .....	18-13
Rocker Arm and Rocker Shaft inspection .....	18-15
Push Rod Inspection .....	18-16
Cylinder Head Installation .....	18-16
Valve Clearance Check and Adjustment .....	18-17
Breather Valve (Reed Valve) .....	18-17
Installation of Remaining Engine Components .....	18-18
Crankcase Components .....	18-20
Crankcase Cover Removal .....	18-20
Camshaft and Hydraulic Lifters .....	18-22
Piston and Connecting Rod .....	18-24
Cylinder Block .....	18-26
Ignition Coil and Flywheel .....	18-28
Oil Pump .....	18-29
Oil Pressure Relief Valve .....	18-31

Crankshaft and Counterbalance .....	18-32
Counterbalance Weight .....	18-35
Oil Screen .....	18-38
Ball Bearing .....	18-38
Oil Seals .....	18-39
Crankshaft Axial Play Adjustment .....	18-42
Crankcase Cover Installation .....	18-44
Engine Assembly .....	18-45
Engine Installation .....	18-46
Service Specifications .....	18-47
Specifications for Resizing Cylinder Bore .....	18-48
Torque Specifications .....	18-48
Adjustment and Settings .....	18-49

**SECTION 19 – RECONDITIONING THE MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK**

---

Transaxle Model and Identification .....	19-1
Lubrication .....	19-2
Axle Shaft .....	19-3
Unitized Transaxle Removal .....	19-3
Unitized Transaxle Disassembly .....	19-5
Component Disassembly .....	19-7
Differential Gear Lock Housing Disassembly .....	19-7
Governor Gear Disassembly .....	19-9
Differential Gear Case Disassembly .....	19-9
Shifter Fork Disassembly .....	19-12
Synchronizer Gear Disassembly .....	19-12
Intermediate Gear Disassembly .....	19-13
Idler Shaft Disassembly .....	19-14
Unitized Transaxle Component Inspection .....	19-15
Idler Shaft Assembly .....	19-15
Intermediate Gear Assembly .....	19-16
Synchronizer Gear Assembly .....	19-16
Shifter Fork Assembly .....	19-18
Differential Gear Case Assembly .....	19-19
Governor Gear Assembly .....	19-21
Differential Gear Lock Housing Assembly .....	19-21
Unitized Transaxle Assembly .....	19-22
Unitized Transaxle Installation .....	19-29

**SECTION i – INDEX**

---

# SECTION 1 – SAFETY

---

To ensure the safety of those servicing Bobcat Company vehicles, and to protect the vehicles from damage resulting from improper service or maintenance, the procedures in this manual must be followed. It is important to note that throughout this manual there are statements contained within headings labeled DANGER, WARNING, CAUTION, or NOTE. These special statements relate to specific safety issues, and must be read, understood, and heeded before proceeding.

## **⚠ DANGER**

- A DANGER indicates an immediate hazard that will result in severe personal injury or death.

## **⚠ WARNING**

- A WARNING indicates an immediate hazard that could result in severe personal injury or death.

## **⚠ CAUTION**

- A CAUTION indicates a hazard or unsafe practice that could result in product or property damage or minor personal injury.

## **CAUTION**

- A CAUTION without the safety alert symbol indicates a potentially hazardous situation that could result in property damage.

## GENERAL WARNING

---

The following safety procedures must be followed whenever the vehicle is being operated, repaired, or serviced. Service technicians should become familiar with these general statements, which can be found throughout this manual. Also, other specific warnings appear throughout this manual and on the vehicle.

## **⚠ DANGER**

- **Battery – Explosive gases! Do not smoke. Keep sparks and flames away from the vehicle and service area. Ventilate when charging or operating vehicle in an enclosed area. Wear a full face shield and rubber gloves when working on or near batteries.**
- **Battery – Poison! Contains acid! Causes severe burns. Avoid contact with skin, eyes, or clothing. Antidotes:**
  - **External: Flush with water. Call a physician immediately.**
  - **Internal: Drink large quantities of milk or water. Follow with milk of magnesia or vegetable oil. Call a physician immediately.**
  - **Eyes: Flush with water for 15 minutes. Call a physician immediately.**
- **Gasoline – Flammable! Explosive! Do not smoke. Keep sparks and flames away from the vehicle and service area. Service only in a well-ventilated area.**
- **Do not operate gasoline vehicle in an enclosed area without proper ventilation. The engine produces carbon monoxide, which is an odorless, deadly poison.**

** WARNING**

- Follow the procedures exactly as stated in this manual, and heed all DANGER, WARNING, and CAUTION statements in this manual as well as those on the vehicle.
- Only trained technicians should service or repair the vehicle. Anyone doing even simple repairs or service should have knowledge and experience in electrical and mechanical repair. The appropriate instructions must be used when performing maintenance, service, or accessory installation.
- Prior to servicing the vehicle or leaving the vehicle unattended, turn the key switch OFF, remove the key, and place the Forward/Reverse handle in the NEUTRAL position. Chock the wheels when servicing the vehicle.
- To avoid unintentionally starting the vehicle:
  - Disconnect battery cables, negative (–) cable first (Figure 1-1, Page 1-3).
  - Disconnect the spark plug wire from the spark plug.
- Frame ground – Do not allow tools or other metal objects to contact frame when disconnecting battery cables or other electrical wiring. Do not allow a positive wire to touch the vehicle frame, engine, or any other metal component.
- Wear safety glasses or approved eye protection when servicing the vehicle. Wear a full face shield and rubber gloves when working on or near batteries.
- Do not wear loose clothing or jewelry such as rings, watches, chains, etc., when servicing the vehicle.
- Moving parts! Do not attempt to service the vehicle while it is running.
- Hot! Do not attempt to service hot engine or exhaust system. Failure to heed this warning could result in severe burns.
- Use insulated tools when working near batteries or electrical connections. Use extreme caution to avoid shorting of components or wiring.
- Check the vehicle Operation and Maintenance manual for proper location of all vehicle safety and operation decals and make sure they are in place and are easy to read.
- Any modification or change to the vehicle that affects the stability or handling of the vehicle, or increases maximum vehicle speed beyond factory specifications, could result in severe personal injury or death.
- Lift only one end of the vehicle at a time. Use a suitable lifting device (chain hoist or hydraulic floor jack) with 1000 lb. (454 kg) minimum lifting capacity. Do not use lifting device to hold vehicle in raised position. Use approved jack stands of proper weight capacity to support the vehicle and chock the wheels that remain on the floor. When not performing a test or service procedure that requires movement of the wheels, lock the brakes.
- If wires are removed or replaced, make sure wiring and wire harness are properly routed and secured. Failure to properly route and secure wiring could result in vehicle malfunction, property damage, personal injury, or death.
- For vehicles with cargo beds, remove all cargo before raising the bed or servicing the vehicle. If the vehicle is equipped with a prop rod, ensure that it is securely engaged while bed is raised. Do not close bed until all persons are clear of cargo bed area. Keep hands clear of all crush areas. Do not drop cargo bed; lower gently and keep entire body clear. Failure to heed this warning could result in severe personal injury or death.
- Improper use of the vehicle or failure to properly maintain it could result in decreased vehicle performance, severe personal injury, or death.
- Do not leave children unattended on vehicle.

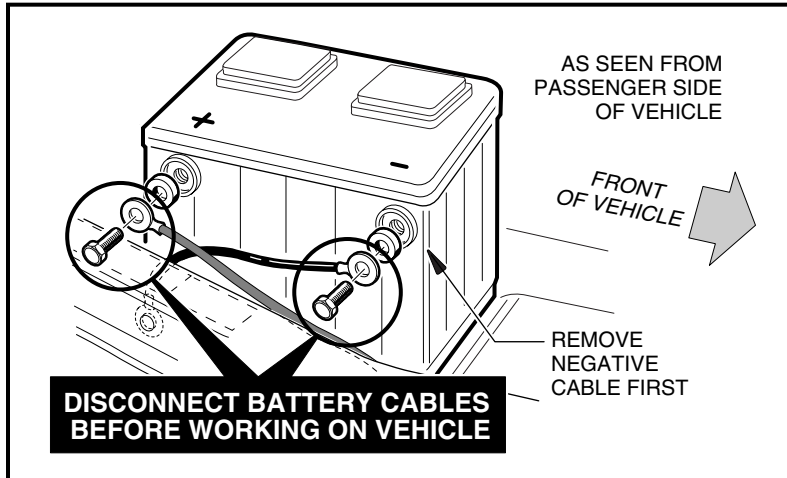


Figure 1-1 Battery

## SECTION 2 – VEHICLE SPECIFICATIONS

SPECIFICATIONS	BOBCAT 2100	BOBCAT 2100 S
<b>POWER SOURCE</b>		
<b>Engine:</b> 4-cycle OHV, 400 cc, 13 hp rated, single-cylinder, air-cooled, with pressure lubrication system	•	•
<b>Fuel system:</b> Side-draft carburetor with float bowl, fixed jets, fuel filters, and impulse fuel pump	•	•
<b>Governor:</b> Automatic ground-speed sensing, internally-geared in unitized transaxle	•	•
<b>Ignition:</b> Transistor electronic ignition with electronic RPM limiter	•	•
<b>Unitized transaxle, MC012C-AS00:</b> Fully synchronized forward and reverse with neutral (14.9:1 forward, 20.5:1 reverse) and differential lock feature	•	•
<b>Electrical system:</b> 12 volt, 500 cca at 0 °F (-17.8 °C), 650 at 32 °F (0 °C). 105-minute reserve capacity and 35-amp charging capacity	•	•
<b>Torque converter:</b> Automatic, variable-speed, dry type	•	•
<b>STEERING/SUSPENSION/BRAKES</b>		
<b>Steering:</b> Self-adjusting rack and pinion, Ackerman	•	•
<b>Suspension:</b> <b>Front:</b> Independent A-arms with coil-over shocks <b>Rear:</b> Semi-independent suspension with multi-leaf springs and dual hydraulic shocks	•	•
<b>Brakes:</b> Hydraulic brake system – self-adjusting drum brakes on each wheel with separate hand-operated park brake	•	•
<b>BODY/CHASSIS</b>		
<b>Frame/Chassis:</b> Twin I-Beam welded aluminum	•	•
<b>Side and rear body:</b> All aluminum with a powder-coated steel cargo bed	•	
<b>Side and rear body:</b> All aluminum with an aluminum cargo bed		•
<b>Front body:</b> ABS/DR acrylic cap	•	•
<b>Tires:</b> 23 x 10.50 - 12 tubeless, 4-ply rated load range, front and rear	•	•
<b>DIMENSIONS/WEIGHT</b>		
<b>Overall length</b> (with box bed)	123.4 in. (313.4 cm)	144.4 in. (366.8 cm)
<b>Overall width</b>	54 in. (137 cm)	
<b>Overall height</b> (at steering wheel)	51 in. (130 cm)	
<b>Overall height</b> (at light bar)	75.3 in. (191 cm)	
<b>Wheelbase</b>	80 in. (203 cm)	101 in. (256 cm)
<b>Ground clearance:</b> under differential under foot platform	6.6 in (17 cm) 11.4 in (29 cm)	
<b>Front wheel tread</b>	43 in. (109 cm)	
<b>Rear wheel tread, MC012C-AS00 transaxle</b>	44.5 in. (113 cm)	
<b>Weight (dry):</b> with all-terrain tread with turf tread	1106 lb. (501.7 kg) 1066 lb. (477.2 kg)	1200 lb. (544.2 kg) 1160 lb. (526.0 kg)
<b>Forward speed</b>	17-19 mph (27-31 km/h)	
<b>Governed RPM</b>	3850 (±30) RPM	
<b>Curb clearance circle</b> (diameter)	24 ft. 1 in. (734 cm)	31 ft. 8 in. (965 cm)
<b>Turning radius</b> (per SAE J 695)	139.6 in. (355 cm)	15 ft. 6 in. (472.4 cm)
<b>Intersecting aisle clearance</b>	112.2 in. (285 cm)	120 in. (304 cm)
<b>Specifications continued on next page...</b>		

<b>SPECIFICATIONS</b>	<b>BOBCAT 2100</b>	<b>BOBCAT 2100 S</b>
<b>Floorboard height</b>	17 in. (43 cm)	
<b>Seat height</b> (at seat bottom)	35 in. (89 cm)	
<b>Load bed height</b>	31.1 in. (79 cm)	
<b>Load bed size</b> (box bed inside dimensions)	48.0 x 49.8 x 10.9 in. (121.9 x 126.4 x 27.6 cm) (15.3 cubic feet)	37.6 x 45.1 x 9.3 in. (96 x 115 x 23 cm) (9.13 cubic feet)
<b>Load bed size</b> (flat bed dimensions)	46.9 x 48.3 in. (119 x 123 cm)	35.8 x 44.3 in. (91 x 112 cm)
<b>Vehicle rated capacity</b> (level surface only)	1200 lb. (544 kg)	1300 lb. (590 kg)
<b>Bed load capacity</b> (level surface only)	800 lb. (363 kg)	500 lb. (227 kg)
<b>Standard seating capacity</b>	2	4
<b>LIQUID CAPACITIES</b>		
<b>Engine crankcase without filter</b>	32 oz. (.95 liters)	
<b>Engine crankcase with filter</b>	38 oz. (1.12 liters)	
<b>Unitized transaxle, MC012C-AS00</b>	29 oz. (.85 liters)	
<b>Master cylinder</b>	8 oz. (240 ml)	
<b>Fuel tank</b> (unleaded gasoline only)	7 gallons (26.5 liters)	6.5 gallons (24.6 liters)
<b>TIRE PRESSURE</b>		
<b>All terrain tread (standard)</b>	Front: 7-11 psi (.48-.76 Bars) Rear: 14-18 psi (.97-1.24 Bars)	Front: 7-11 psi (.48-.76 Bars) Rear: 14-18 psi (.97-1.24 Bars)
<b>Turf tread (optional)</b>	Front: 12-16 psi (.83-1.10 Bars) Rear: 16-20 psi (1.10-1.38 Bars)	Front: 12-16 psi (.83-1.10 Bars) Rear: 16-20 psi (1.10-1.38 Bars)
<b>Traks Max II tread (optional)</b>	Front: 14-16 psi (.97-1.10 Bars) Rear: 18-20 psi (1.24-1.38 Bars)	Front: 14-16 psi (.97-1.10 Bars) Rear: 18-20 psi (1.24-1.38 Bars)

# SECTION 3 – GENERAL INFORMATION

## GENERAL INFORMATION

Refer to the Operation and Maintenance manual provided with the vehicle for information on the following topics:

- Vehicle Feature Identification
- Controls and Indicators
- Driving Instructions
- Towing with the Vehicle
- Transporting on a Trailer
- Engine Oil and Filter Change
- Accessory Equipment
- Subsequent Owner Registration
- Warranties

## SERIAL NUMBER IDENTIFICATION

The serial number of each vehicle is printed on a bar code decal mounted on the frame directly above the accelerator pedal (Example: 522711001) (**Figure 3-1, Page 3-1**) for Bobcat 2100 or (Example: 522411001) (**Figure 3-2, Page 3-1**) for Bobcat 2100S. **See following NOTE.**

**NOTE:** Have the vehicle serial number available when ordering parts or making inquiries (**Figure 3-1, Page 3-1 or Figure 3-2, Page 3-1**).



Figure 3-1 2100 Serial Number Decal



Figure 3-2 2100S Serial Number Decal

## STORAGE

---

### **⚠ DANGER**

- Read General Warning, Section 1, Page 1-1.

### **⚠ WARNING**

- Read General Warning, Section 1, Page 1-1.

### **⚠ CAUTION**

- Batteries in a low state of charge will freeze at low temperatures.

## PREPARING THE VEHICLE FOR EXTENDED STORAGE

1. Store vehicle in a cool dry place.
2. Use a 12-volt battery charger rated 10 amps or less to charge battery.
3. Remove all items from the vehicle so that only the vehicle weight will be placed on the tires.
4. Make sure the key switch is OFF and the Forward/Reverse handle is in NEUTRAL. Chock the wheels.
5. Drain carburetor and seal the fuel tank.
  - 5.1. Turn the fuel shut-off valve to the closed (OFF) position (**Figure 3-6, Page 3-3**) and run the engine until it stalls. **See DANGER "Do not operate gasoline vehicle..." in General Warning, Section 1, Page 1-1.**
6. Disconnect the battery cables as instructed. **See WARNING "To avoid unintentionally starting..." in General Warning, Section 1, Page 1-2.**
7. Loosen the carburetor drain screw and drain fuel in the bowl into a small, clean container and pour the fuel into the vehicle fuel tank. Tighten the carburetor drain screw.
8. Fill fuel tank to about 1 inch (2.5 cm) from top of fuel tank and add a commercially available fuel stabilizer (such as Sta-Bil<sup>®</sup>).
9. Disconnect vent tube from fuel tank vent (**Figure 3-3, Page 3-3 or Figure 3-4, Page 3-3**).
10. Plug the fuel tank vent nipple so that it is air tight using a slip-on vinyl cap.
11. Wash tops and terminals of batteries with a solution of baking soda and water (1 cup (237 mL) baking soda per 1 gallon (3.8 L) of water). Rinse solution off batteries. Do not allow this solution to enter the batteries.
12. Remove spark plug and pour 1/2 ounce of SAE 10 weight oil into the engine through the spark plug hole. Rotate engine crankshaft by hand several times, then install spark plug and tighten to 20 ft-lb (27 N-m).
13. Adjust tires to rated capacities. **See General Information, Section 8, Page 8-1.**
14. Lubricate front suspension and do all other semiannual periodic lubrication. **See Periodic Lubrication Schedule, Section 10, Page 10-2.**
15. Thoroughly clean body, seats, cargo bed, engine compartment and underside of vehicle.
16. Do not engage the park brake. Chock the wheels to prevent the vehicle from rolling.

## TO RETURN VEHICLE TO SERVICE

1. Make sure the key switch is OFF and the Forward/Reverse handle is in NEUTRAL. Remove the key. Chock the wheels.
2. Remove plug from vent tube and connect to tank vent (**Figure 3-3, Page 3-3 or Figure 3-4, Page 3-3**).

3. Connect battery cables, positive (+) cable first, and tighten terminals to 20 ft-lb (27 N·m). Coat terminals with Battery Terminal Protector Spray (CC 1014305).
4. Connect the spark plug wire.
5. Completely open fuel shut-off valve (**Figure 3-5, Page 3-3**). A partially closed fuel valve (**Figure 3-7, Page 3-4**) combined with the use of the choke, can result in a fouled spark plug and engine failure.
6. Crank the engine until the engine starts. Turn the engine off. **See following NOTE.**

**NOTE:** Due to the oil added to the engine in preparation for storage, engine may smoke excessively for a short while when running it for the first time after storage.

7. Adjust tires to recommended tire pressure. **See General Information, Section 8, Page 8-1.**

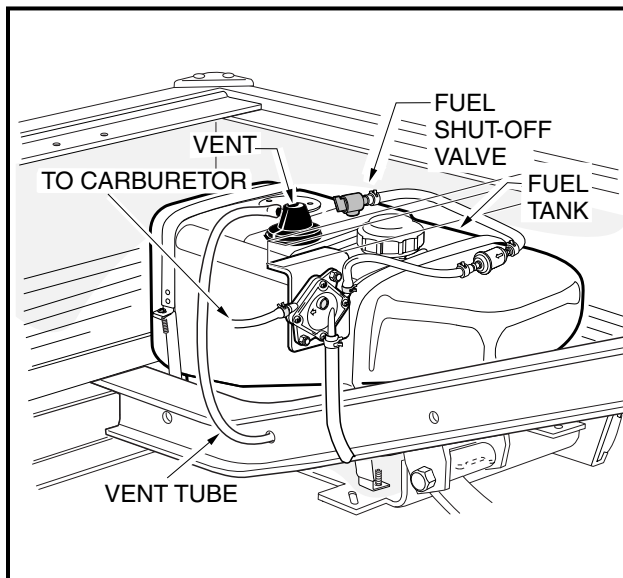


Figure 3-3 2100 Fuel Tank

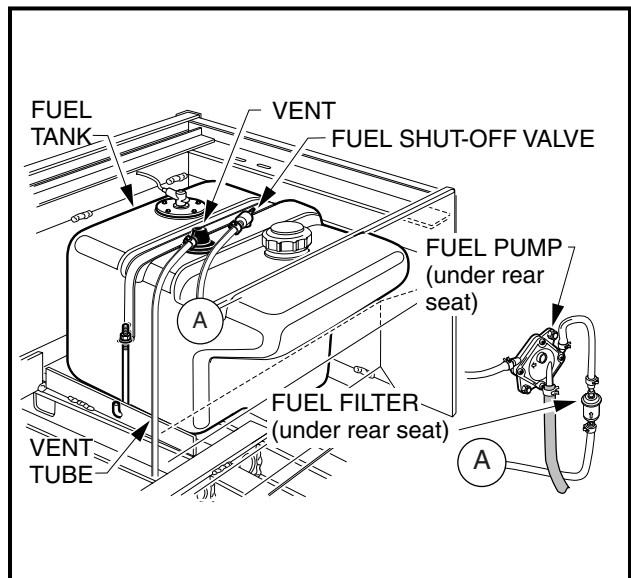


Figure 3-4 2100S Fuel Tank

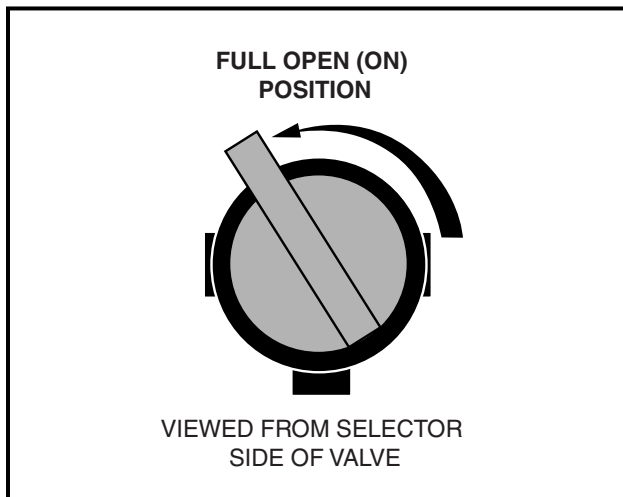


Figure 3-5 Fuel Valve – Open

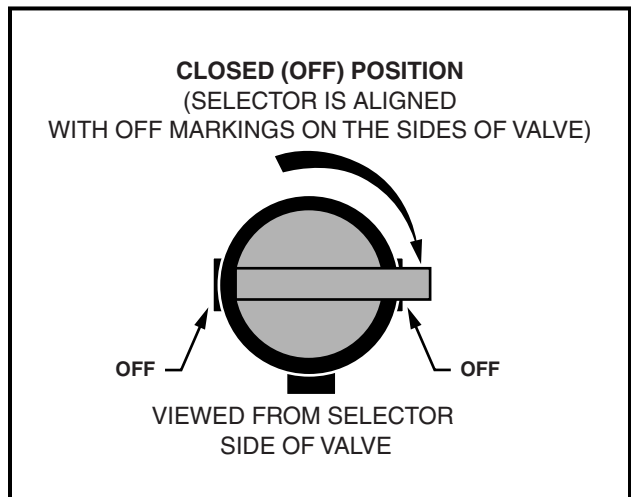
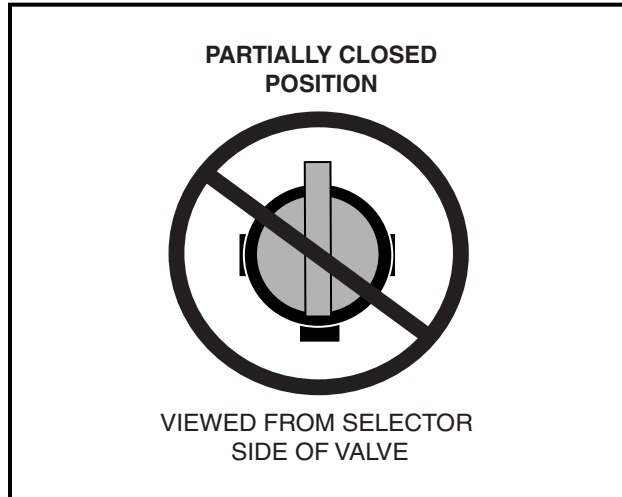


Figure 3-6 Fuel Valve – Closed



**Figure 3-7 Fuel Valve – Partially Closed**

## SECTION 4 – BODY AND TRIM

---

### **⚠ DANGER**

- See General Warning, Section 1, Page 1-1.

### **⚠ WARNING**

- See General Warning, Section 1, Page 1-1.

### **⚠ CAUTION**

- Do not use detergents or cleaning solvents that contain ammonia, aromatic solvents, or alkali materials on body panels or seats.
- Do not allow battery acid to drip on body panels. Battery acid will cause permanent damage. Wash spilled battery acid from body panels immediately.

## CLEANING THE VEHICLE

---

See General Warning, Section 1, Page 1-1.

Each vehicle is equipped with an ABS/DR acrylic cap front body and an aluminum rear body and frame. The cargo bed on the Bobcat 2100 is powder-coated steel. The Bobcat 2100S has an aluminum cargo bed.

For regular front body cleaning, use automotive cleaning solutions with a sponge or soft cloth, or use Bobcat's Vehicle Care Kit (CC AM10021). Repair kits and cleaning/polishing products are also available at most hardware stores where ABS/DR acrylic (hot tubs and shower/tub units) are sold.

To remove oxidation or discoloration from aluminum, use a commercially available aluminum cleaner paste and fine grade (No. 00) steel wool. Battery acid, fertilizers, tars, asphalt, creosote, paint, or chewing gum should be removed immediately to prevent possible stains.

Bobcat does not recommend any type of pressure washing or steam cleaning. Both can create water damage to electrical components and subsequent component failure. Normal residential water pressure is adequate for exterior cleaning.

For seats, use a solution of 10% liquid soap and warm water applied with a soft cloth. For embedded dirt, a soft bristle brush may be used. For heavy soiling, difficult stains, or scratches, blemishes, or other body damage, see Seat on page 4-4. **See following NOTE.**

***NOTE:** Dispose of waste water properly.*

## FRONT BODY REPAIR

---

See General Warning, Section 1, Page 1-1.

### ABRASIONS AND HAZE

The original gloss can be restored by hand buffing with "Novus Plastic Polish", "Mirror Glaze Professional Formula Number 17", Bobcat's Vehicle Care Kit (CC AM10021), or similar polishing compounds. A buffing wheel with a small amount of automotive type paste wax applied to the pad may also be used. Use a very light touch, because ABS/DR acrylic polishes easily. Johnson's® "J-Wax" or "Kit" may be applied as a final treatment.

## LIGHT SCRATCHES

Ajax cleanser applied dry and hand-rubbed will rapidly smooth moderate scratches. Use a soft polishing compound to restore gloss.

Scratches (up to 10 mils; the equivalent thickness of an average business card) can be removed by light sanding. Start with wet silicone carbide abrasive paper (320 grit or finer). Use progressively finer grits (i.e. 400, 600, 800) to reduce sanding marks. Use Ajax cleanser (or equivalent) for final smoothing. A "Micro Mesh" acrylic polishing kit with abrasive papers from 1800 to 8000 grit will provide the best final finish. Restore gloss with soft polishing compound, or Bobcat's Vehicle Care Kit (CC AM10021). It is not the intent of any of these processes to 'fill-in' the material removed due to light scratches but rather to blend the finish of the surrounding area and the scratch together.

## LARGE SCRATCHES AND ABRASIONS

Touch-up is not recommended. Replace the entire body part or have it repaired by a professional paint and body repair shop with experience repairing ABS/DR acrylic bodies.

## FRONT BODY COMPONENTS

---

See General Warning, Section 1, Page 1-1.

### DASHBOARD REMOVAL

1. Make sure the key switch is OFF and the Forward/Reverse handle is in NEUTRAL. Remove the key. Chock the wheels.
2. Disconnect the battery cables as instructed. **See WARNING "To avoid unintentionally starting..." in General Warning, Section 1, Page 1-2.**
3. Remove the dash panel.
  - 3.1. Loosen the seven Tuflok<sup>®</sup> screws shown in Detail A (**Figure 4-1, Page 4-3**).
  - 3.2. Remove Tuflok screws from dash panel shown in Detail B.
  - 3.3. Pull forward on top of the dash panel to access back of the panel.
4. Disconnect the wiring from components mounted in the dash panel.
5. Remove five caps (1) from top of dashboard (2) (**Figure 4-2, Page 4-5**).
6. Remove screws (3) and special plastic washers (4) from top of dashboard (2) using a Torx #T-30 driver.
7. Remove five screws (5) from underside of dashboard and pull dashboard away from front body (6).
8. Remove the steering wheel. **See Steering Wheel Removal, Section 7, Page 7-1.**
9. Remove dashboard from vehicle.

### DASHBOARD INSTALLATION

1. Reverse the dashboard removal process.
2. Tighten screws (5) to 11 in-lb (1.2 N-m) (**Figure 4-2, Page 4-5**).
3. Tighten Torx-head screws (3) with plastic washers (4) to 45 in-lb (5.1 N-m).
4. Install five caps (1).
5. Install the dash panel and connect wiring to panel components.
6. Install steering wheel. **See Steering Wheel Installation, Section 7, Page 7-3.**

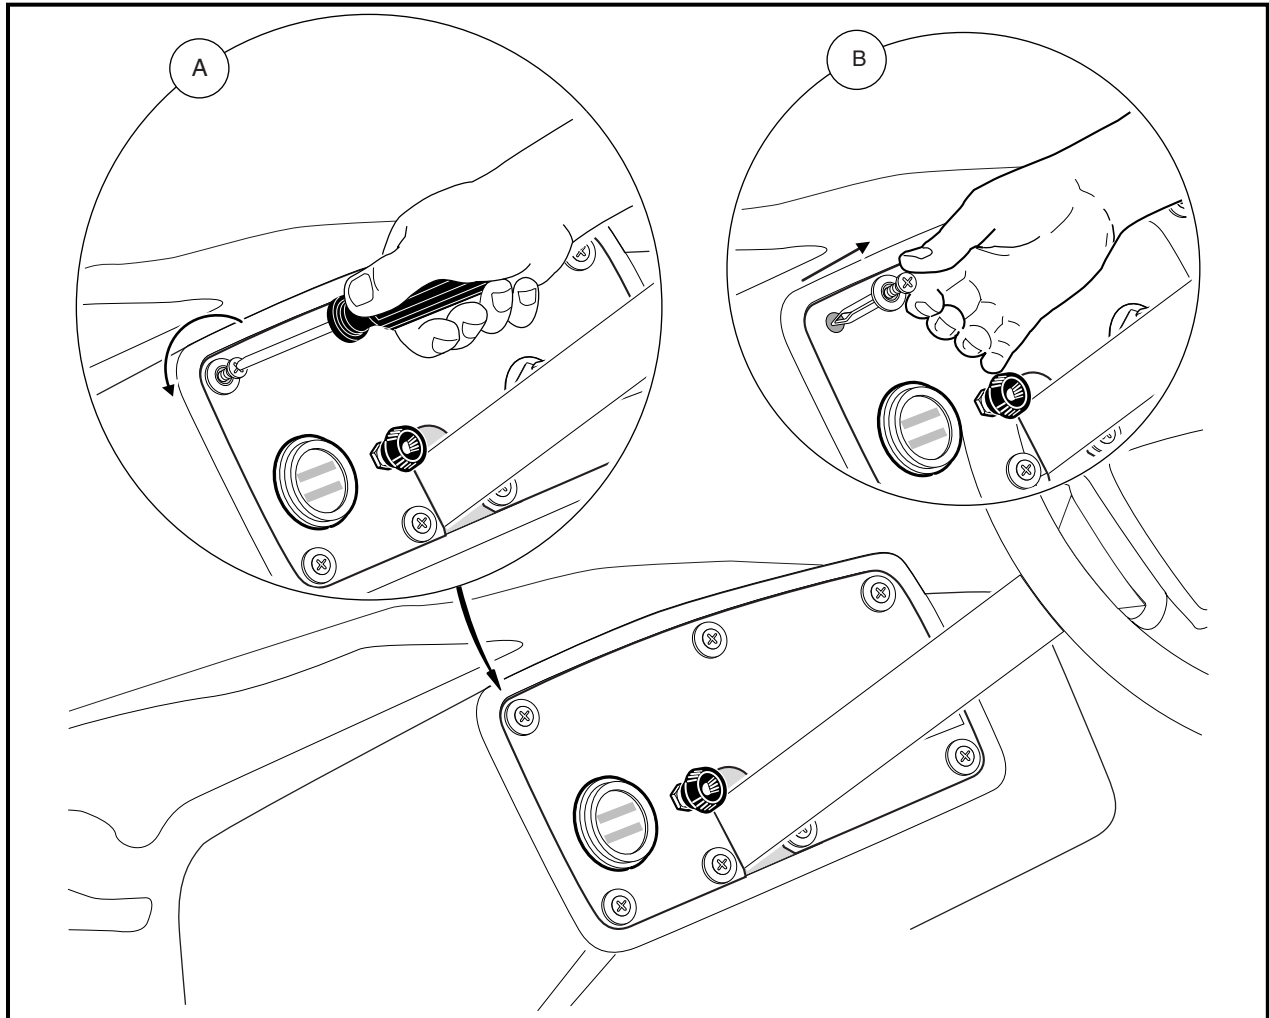


Figure 4-1 Dash Panel Removal

## FRONT BODY REMOVAL

1. Remove five caps (1) from top of dashboard (2) (**Figure 4-2, Page 4-5**).
2. Use a Torx #T-30 driver to remove the Torx-head screws (3) and washers (4) from top of front body (6).
3. Use a 5/16 nut driver to remove five screws (5) from underside of dashboard (2) and gently slide dashboard away from front body (6).
4. Use a phillips head screwdriver to remove the six Tuflok fasteners (7) from sides and two (7) from front of body (6).
5. Disconnect light wiring harness from each headlight assembly.
6. Lift the back edge of the body up and pull forward to remove from vehicle.

## FRONT FENDER REMOVAL

1. Remove front body (6) (**Figure 4-2, Page 4-5**). See **Front Body Removal** on page 4-3.
2. Pull back floor mat to access rivets securing front fender (9) to frame. Drill out two 3/16 x 5/8 pop rivets (10) and remove two washers (11).
3. Use a 3/8 hex-head socket to remove two screws (12) from fender frame support and remove fender.

## FRONT FENDER INSTALLATION

1. Reverse the fender removal process (**Figure 4-2, Page 4-5**).
2. Tighten screws (12) to 50 in-lb (5.7 N·m).
3. Pop rivet fender to frame using two 3/16 x 5/8 pop rivets (10) and two 3/16 rivet washers (11).
4. Install front body. **See Front Body Installation on page 4-4.**

## FRONT BODY INSTALLATION

1. Reverse the front body removal process (**Figure 4-2, Page 4-5**).
2. Secure front body to dashboard with screws (3) and plastic washers (4) and tighten to 45 in-lb (5.1 N·m).
3. Install five caps (1).
4. Secure front body to fenders with fasteners (7) and push the heads in until they snap into place.

## SEAT

### See General Warning, Section 1, Page 1-1.

Clean seats regularly using the following guidelines: **See following CAUTION.**

### **CAUTION**

- **To prevent damage to the vehicle when removing difficult stains or heavy soiling, remove the seat from the vehicle first.**

**Light Soiling** – A solution of 10% liquid dish soap and warm water applied with a soft, damp cloth is recommended. A soft bristle brush may be used if necessary. Wipe off any residue with a water dampened cloth.

**Difficult Stains** – Dampen a soft, white cloth with a solution of 10% household bleach (sodium hypochlorite) and 90% water. Rub gently to remove stain, then rinse with a water dampened cloth to remove bleach concentration. Use Bobcat's Vehicle Care Kit (CC AM10021) to recondition the fabric.

**For More Difficult Stains** – Perform previous procedure using full-strength bleach, or allow bleach to puddle on affected area for approximately 30 minutes. Rinse with a water dampened cloth to remove any remaining bleach concentration. Use Bobcat's Vehicle Care Kit (CC AM10021) to recondition the fabric.

## SEAT ADJUSTMENT

1. Remove seat (2) from vehicle.
2. Disassemble seat (2) from seat panel (3) by removing four bolts (4) and lock washers (5) (**Figure 4-3, Page 4-6**).
3. Adjust seat to preferred position. Align holes in seat panel (3) with holes in seat (2) and secure with four bolts (4) and lock washers (5). Tighten bolts to 96 in-lb (10.8 N·m).

### **⚠ WARNING**

- **Make sure seat hinges and latch are securely engaged before operating vehicle.**



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

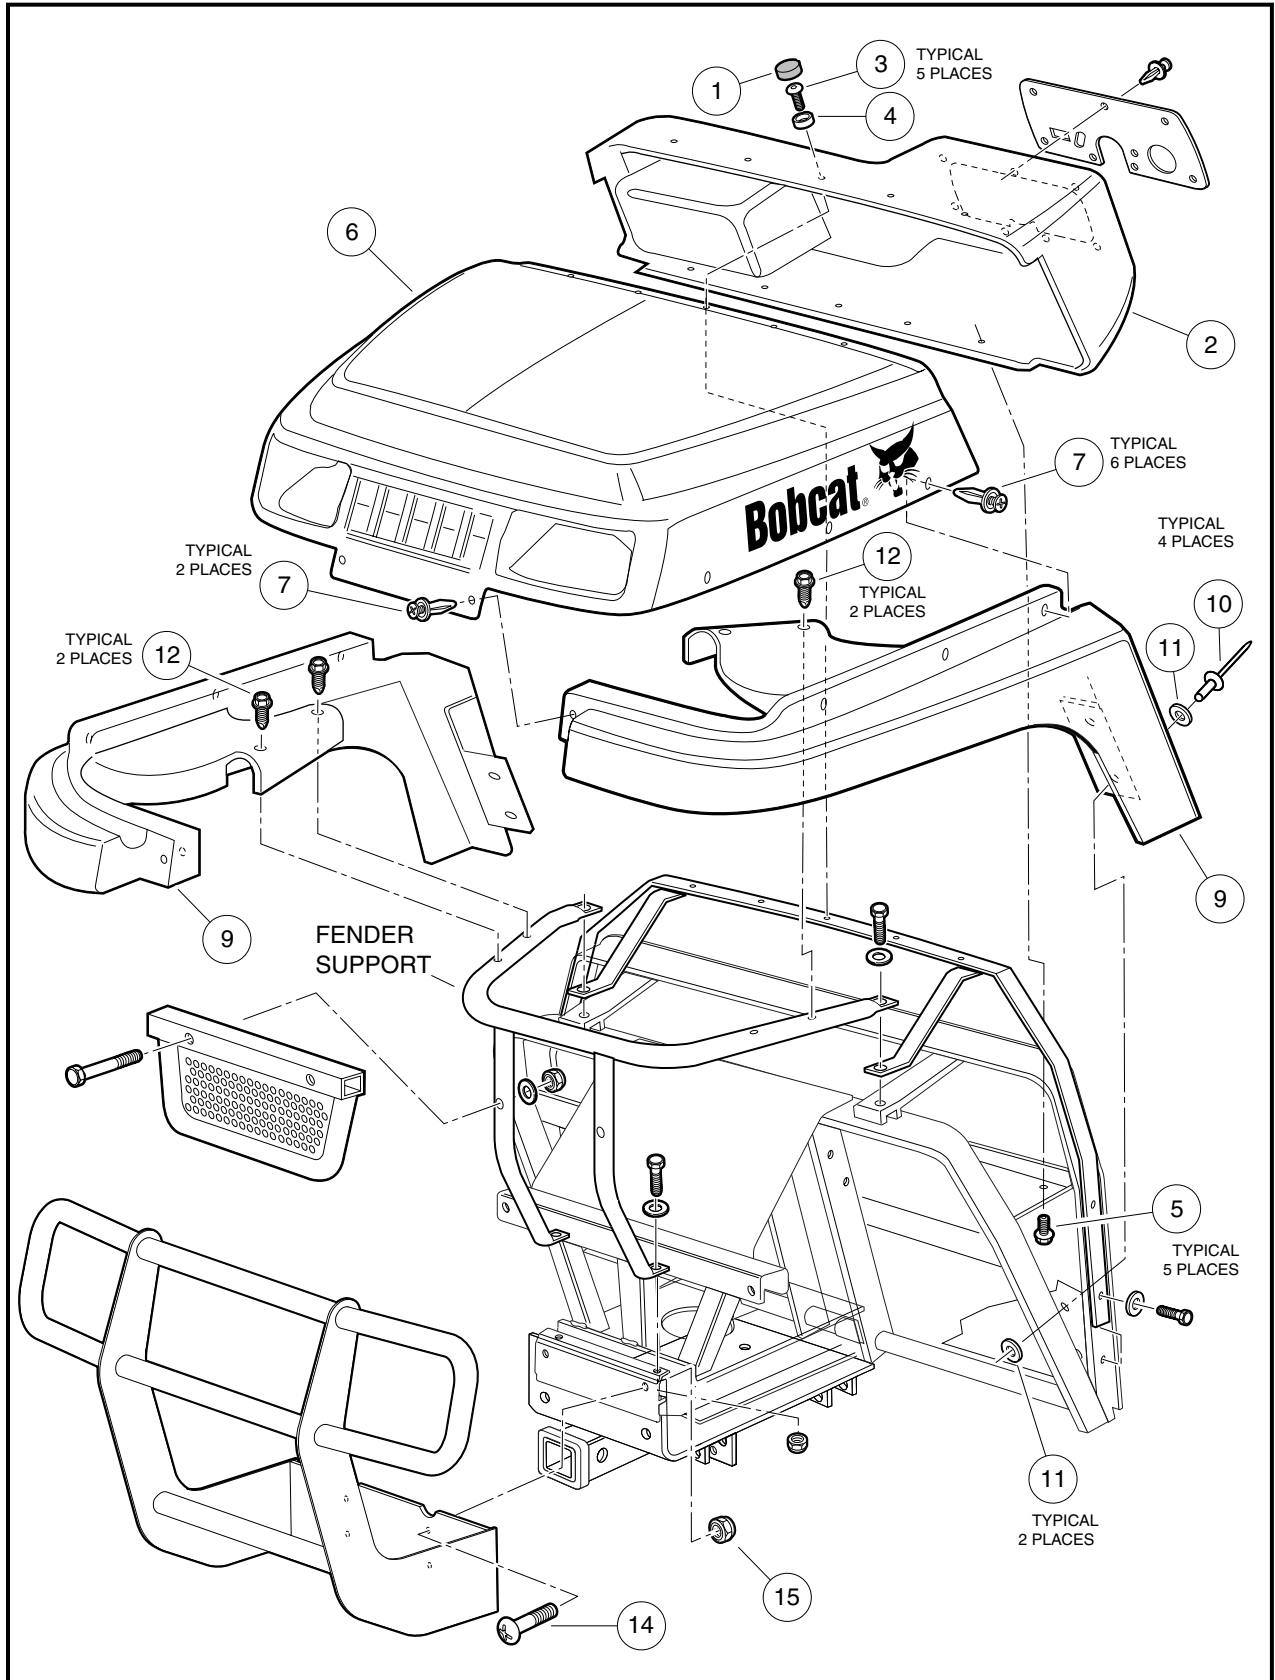


Figure 4-2 Front Body Assembly

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**