

9400, 9500, and 9600 Combines Repairs

**John Deere Harvester Works
TM1401 (28JUL97)**

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL

- Group 05—Safety
- Group 10—Identification Number Location
- Group 15—Specifications
- Group 20—Tune Up and Adjustment
- Group 25—Fuels and Lubricants

SECTION 20—ENGINE

- Group 05—Remove and Install Engine
- Group 10—Cooling System
- Group 15—Lower Engine Repair

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Air Intake System
- Group 10—Diesel Fuel System

SECTION 40—ELECTRICAL SYSTEM

- Group 05—Components
- Group 10—Bulbs and Switches
- Group 15—Batteries
- Group 20—Harness and Connector Repair
- Group 25—Gauges and Monitors
- Group 30—Wiper and Radio
- Group 35—Alternator
- Group 40—Starting Motor
- Group 45—Electrical Engine Control

SECTION 50—POWER TRAIN REPAIR

- Group 05—Transmission and Differential
- Group 10—Ring and Pinion Final Drive
- Group 15—Planetary Final Drive
- Group 20—Hydrostatic System
- Group 25—Cam Lobe Motor
- Group 30—Tires and Wheels

SECTION 60—Power Steering and Brakes

- Group 05—Steering
- Group 10—Brakes

SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Reservoir
- Group 10—Hydraulic Pumps
- Group 15—Hydraulic Valves

- Group 20—Hydraulic Cylinders
- Group 25—Motors
- Group 30—Accumulator
- Group 35—Reel/Belt Pickup Pump Drive

SECTION 80—SEPARATOR SHELL

- Group 05—Gull Wing Doors

SECTION 90—OPERATOR STATION REPAIR

- Group 05—Air Conditioning System (R-12)—Type A
- Group 10—Air Conditioning System (R134A)—Type B
- Group 15—System Components
- Group 20—Cab

SECTION 110—FEEDER HOUSE REPAIR

- Group 05—Feeder House/Conveyor
- Group 10—Feeder House Conveyor Drum
- Group 15—Conveyor Shaft and Slip Clutch
- Group 20—Feeder House Drives and Reverser Gear Case
- Group 25—CONTOUR MASTER Platform Driveshafts
- Group 30—CONTOUR MASTER Tilt Cylinder
- Group 35—CONTOUR MASTER Tilt Frame
- Group 40—CONTOUR MASTER Feeder House

SECTION 120—SEPARATOR

- Group 05—Separator Repair
- Group 10—Cylinder Drives
- Group 15—Straw Walkers and Crankshafts
- Group 20—Straw Chopper, Straw Spreader and Chaff Spreader
- Group 25—Shoe Supply Augers, Cleaning Fan and Chaffer and Sieve Frame
- Group 30—Tailings Elevator and Augers
- Group 35—Primary Countershaft Gearcase
- Group 40—Header Electromagnetic Clutch

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1401-19-28JUL97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1994, 1992, 1989, 1988 Deere & Company

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

**SECTION 130—GRAIN TANK AND UNLOADING
SYSTEM REPAIR**

- Group 05—Grain Tank Cross Augers
- Group 10—Unloading Auger System Drives
- Group 15—Vertical Unloading Auger and Lower Gearcase
- Group 20—Horizontal Unloading Auger and Gearcase
- Group 25—Upper Clean Grain Elevator
- Group 30—Grain Tank and Extensions
- Group 35—Clean Grain Elevator and Loading Auger Gear Case

**SECTION 140—ENGINE GEARCASE AND
CONTROL VALVE REPAIR**

- Group 05—Engine Gearcase and Valve

**SECTION 160—DIAL-A-MATIC HEADER HEIGHT
CONTROL**

- Group 05—Dial-A-Matic Header Height Control

Index

Section 10 GENERAL


Contents

	Page		Page
Group 05—Safety	10-05-1	Engine Coolant	10-25-3
Group 10—Identification Number Location		Liquid Coolant Conditioner	10-25-3
Combine Identification Number	10-10-1	Engine Oil	10-25-4
Transmission	10-10-1	Greases	10-25-7
Engine Serial Number for 9400 Combines	10-10-1	Lubricant Storage	10-25-7
Hydrostatic Drive Unit Pump	10-10-2	Alternative and Synthetic Lubricants	10-25-8
Hydrostatic Drive Unit Motor	10-10-2	Filter Part Numbers	10-25-8
Cam Lobe 4-Wheel Drive Motor	10-10-2		
Engine Gearcase	10-10-2		
Cab	10-10-3		
Group 15—Specifications			
Specifications—9400 Combines	10-15-1		
Operating Speeds—9400 Combines	10-15-3		
Ground Speeds (Separator Full Load)	10-15-4		
Specifications—9500 Combines	10-15-5		
Operating Speeds—9500 Combines	10-15-7		
Ground Speeds	10-15-8		
Specifications—9600 Combines	10-15-9		
Operating Speeds—9600 Combines	10-15-11		
Dimensions	10-15-14		
Metric Bolt and Cap Screw Torque			
Values	10-15-15		
Unified Inch Bolt and Cap Screw Torque			
Values	10-15-16		
O-Ring Boss Fitting Torque Chart	10-15-17		
Flat Face O-Ring Seal Fitting Torque			
Chart	10-15-18		
SAE Four Bolt Flange Fitting Torque			
Chart	10-15-19		
Prevent Hydraulic System Contamination	10-15-20		
Check Oil Lines and Fittings	10-15-21		
Group 20—Tune Up and Adjustment			
Tune-Up and Adjustment	10-20-1		
Care and Maintenance of Belts	10-20-2		
Defective Belts	10-20-3		
Right-Hand Drives and Part Numbers	10-20-5		
Left-Hand Drives and Part Numbers	10-20-7		
Group 25—Fuels and Lubricants			
Diesel Fuel	10-25-1		
Fuel Storage	10-25-2		

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

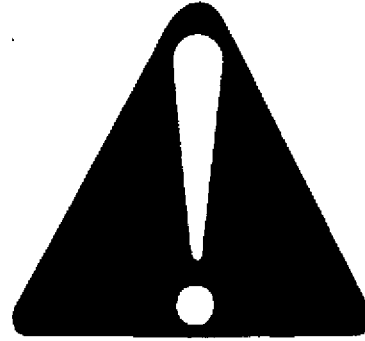

DX,ALERT -19-03MAR93

10
05
1
-UN-07DEC88
T81389

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

-19-30SEP88
TS187

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

-UN-23AUG88
TS227

SPECIFICATIONS


Item	Measurement	Specification
Engine:		
6359 (9400 Combine)	Approximate Weight	533 kg (1175 lb)
6068 (9400 Combine)	Approximate Weight	602 kg (1324 lb)
6076 (9500 and 9600 Combines)	Approximate Weight	816 kg (1800 lb)
Engine-to-Bell Housing Cap Screws	Torque	340 N·m (250 lb-ft)
Engine Mount Cap Screw	Torque	80 N·m (60 lb-ft)
Engine Crankcase:		
9400 Combine (6359A)	Capacity	14 L (14-1/2 qt)
(6068H)	Capacity	18.9 L (20 qt)
9500 and 9600 Combines	Capacity	25 L (26-1/2 qt)
Cooling System (With Heater):		
9400, 9500 and 9600 Combines	Capacity	36 L (38 qt)
9600 Corn Combine	Capacity	40 L (42 qt)

HX1401,2005,C -19-05DEC96

REMOVE ENGINE

1. At both batteries in the engine compartment, disconnect both negative (ground) terminal clamps (A) first. Lift the protective covers and remove both positive terminal clamps (B).

A—Negative Clamps
B—Positive Clamps
C—Batteries

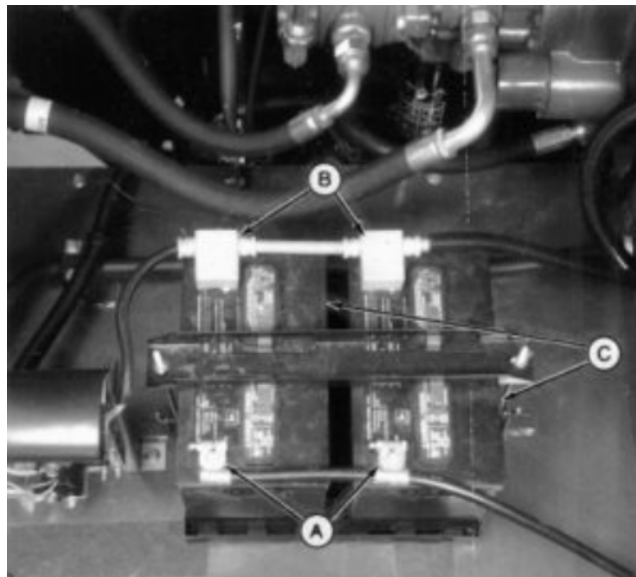
-JUN-12SEP96
H47959

HX,1401,2005,AA-19-16SEP96

NOTE: The following steps 2 through 5 reflect removal for combines: 9400 (-640100), 9500 (-640200), 9600 (-640300).

2. Open hinged access above engine.
3. Remove cap screws (A, B and D) to remove channel (C).
4. Remove cap screws (E, F, L and N) and pin (J) to remove cover sheet (K).
5. Remove wing screws (I) and pin (G) to remove fan guard door (H).

A—Cap Screw (2 used)
 B—Cap Screw (2 used)
 C—Channel
 D—Cap Screw (2 used)
 E—Cap Screw (2 used)
 F—Cap Screw (2 used)
 G—Pin
 H—Fan Guard Door
 I—Wing Screw (2 used)
 J—Pin
 K—Cover Sheet
 L—Cap Screw (2 used)
 M—Channel
 N—Cap Screw

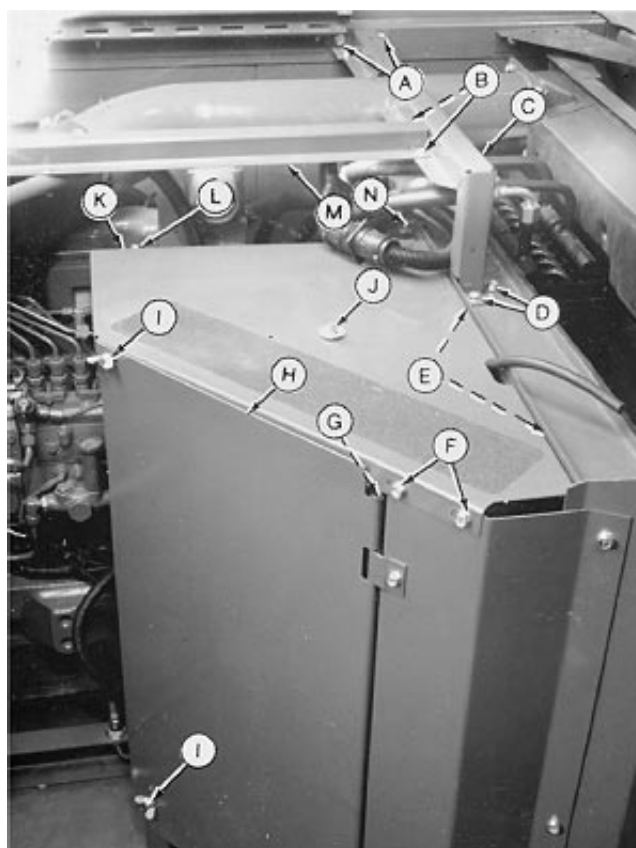

HX,1401,2005,A -19-28AUG96

H40455 -UN-05JUN89

NOTE: The following steps 6 through 9 reflect removal for combines: 9400 (640101-), 9500 (640201-), 9600 (640301-).


6. Open hinged access above engine.
7. Remove cap screws (A) and spacers (L).
8. Remove cap screws (B, C, I and K) and lock pin (G) to remove cover sheet (H).
9. Remove wing screws (F) and hinge pin (D) to remove fan guard door (E).

A—Cap Screw (2 Used)
 B—Cap Screw (2 Used)
 C—Cap Screw (2 Used)
 D—Hinge Pin
 E—Fan Guard Door
 F—Wing Screw (2 Used)
 G—Lock Pin
 H—Cover Sheet
 I—Cap Screw (2 Used)
 J—Channel
 K—Cap Screw and Clamp
 L—Spacer (2 Used)



1401,DV469 -19-27SEP96

H47960 -UN-12SEP96

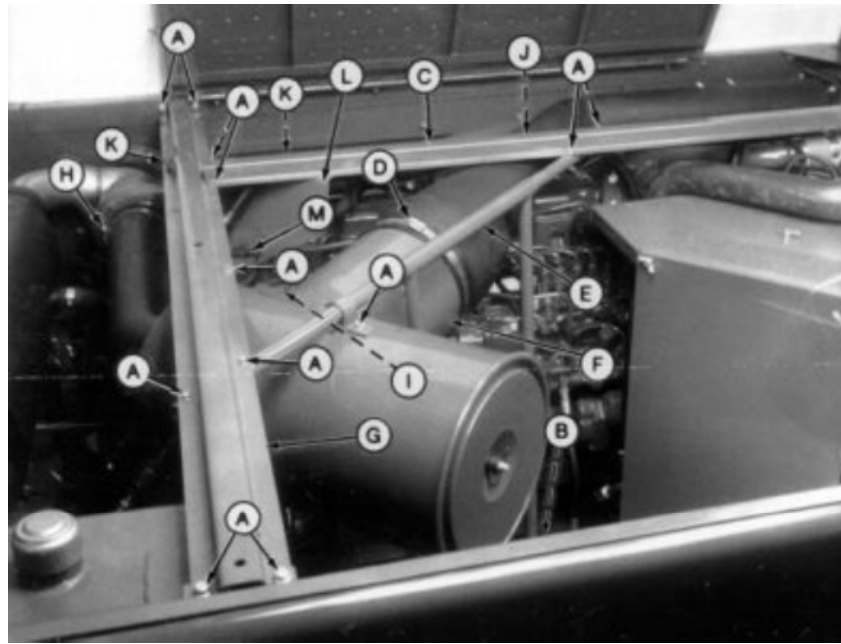

A—Cap Screws (12 used)
B—Wing Screw
C—Channel
D—Clamp

E—Brace with Ladder
F—Air Intake Tube
G—Channel

H—Clamp
I—Clamp
J—Cap Screw

K—Cap Screw (2 Used)
L—Harness Shield
M—Sensor Connector

9500 and 9600 Combines Shown

10. Remove cap screws (A and K), wing screw (B) (at ladder base) and air inlet duct cap screw (J) to remove channels (C and G), harness shield (L) and brace with ladder (E).

NOTE: Bend harness retainers, located on the underside of the channels, slightly to allow harnesses to be removed from channel.

11. Disconnect air cleaner plugged sensor connector (M).


12. Remove clamps (D, H and I) to remove air cleaner intake tube (F) and air cleaner.

HX,1401,2005,BB-19-28AUG96

13. Remove four cap screws (A) from air cleaner intake tube (C).

14. (9500 and 9600 Only) Remove clamp (B) from intercooler tubes (D).

A—Cap Screws (4 Used)
B—Clamps
C—Intake Tube
D—Intercooler Tubes

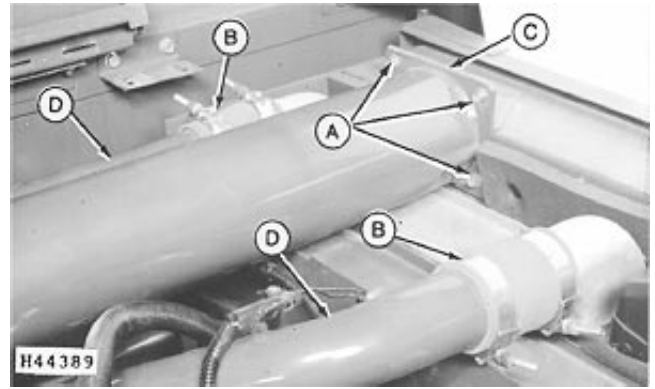


9500 and 9600 Combine Shown

HX,1401,2005,B -19-27SEP96



CAUTION: Coolant may be hot. Wait until radiator is cool to the touch before draining coolant.

15. Drain cooling system and remove radiator hoses.
(See procedure in Group 10.)

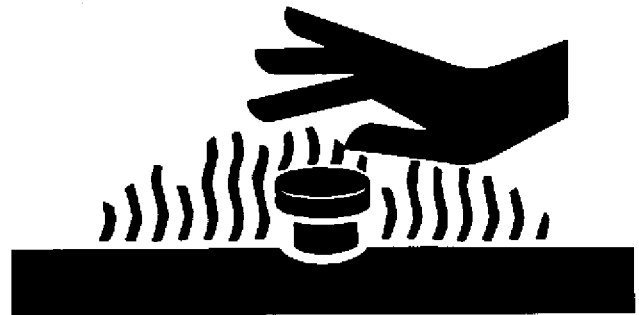


HX,1401,2005,C -19-28AUG96


NOTE: The following steps 16 through 20 reflect removal for combines: 9400 (—640100), 9500 (—640200), 9600 (—640300).

16. Disconnect wiring leads (A, B, F, G, and I-K).
17. Remove air conditioner compressor belt (D) and fan belt (L).
18. (9400 and 9500 Only) Remove fan belt drive (E) and fan (C).
19. (9600 Only) Remove cap screws (N) from drive disk (O).
20. Remove fuel line (H) and return line (M). Put caps or covers on fittings to keep dirt from entering fuel system.

- A—Wiring Lead-to-Hydraulic Reservoir Sending Unit
- B—Main Wiring Harness Connector
- C—Fan
- D—Belt
- E—Fan Belt Drive
- F—Ground Wire
- G—Wiring Harness Lead-to-Alternator
- H—Fuel Line
- I—Wiring Harness Lead-to-Tachometer Sender Injection Pump
- J—Wiring Harness Lead-to-Governor (2 used) Injection Pump
- K—Wiring Harness Lead-to-Fuel Pump Injection Pump
- L—Fan Belt
- M—Fuel Return Line
- N—Cap Screws
- O—Drive Disk

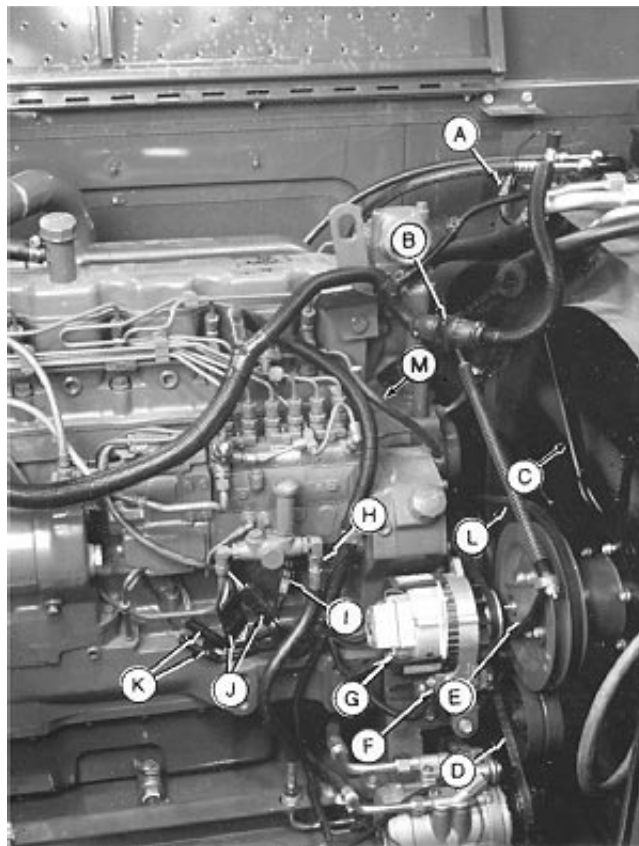

9500 Combine Shown

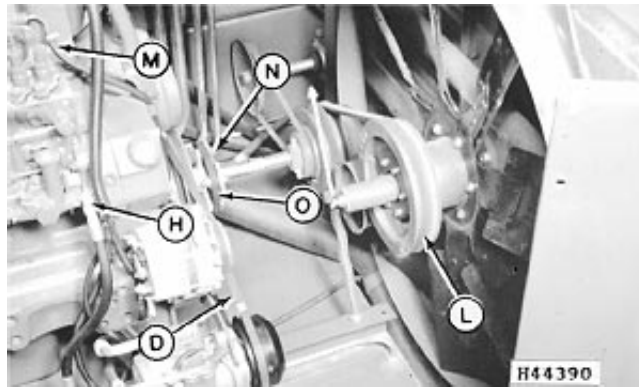


9600 Combine Shown

HX1401,2005,D -19-28AUG96


NOTE: The following steps 21 through 25 reflect removal for combines: 9400 (—650100), 9500 (—650200), 9600 (—650300).

21. Disconnect wiring leads (A, B, F, G and I-K).
22. Remove air conditioner compressor belt (D) and fan belt (L).
23. (9400 and 9500 Only) Remove fan belt drive (E) and fan (C).
24. (9600 Only) Remove cap screws (N) from drive disk (O).
25. Remove fuel line (H) and return line (M). Put caps or covers on fittings to keep dirt from entering fuel system.

- A—Wiring Lead to Hydraulic Reservoir Sending Unit
- B—Main Wiring Harness Connector
- C—Fan
- D—Belt
- E—Fan Belt Drive
- F—Ground Wire
- G—Wiring Harness Lead to Alternator
- H—Fuel Line
- I—Wiring Harness Lead-to-Tachometer Sender Injection Pump
- J—Wiring Harness Lead-to-Governor (2 used)-Injection Pump
- K—Wiring Harness Lead-to-Fuel Pump-Injection Pump
- L—Fan Belt
- M—Fuel Return Line
- N—Cap Screws
- O—Drive Disk

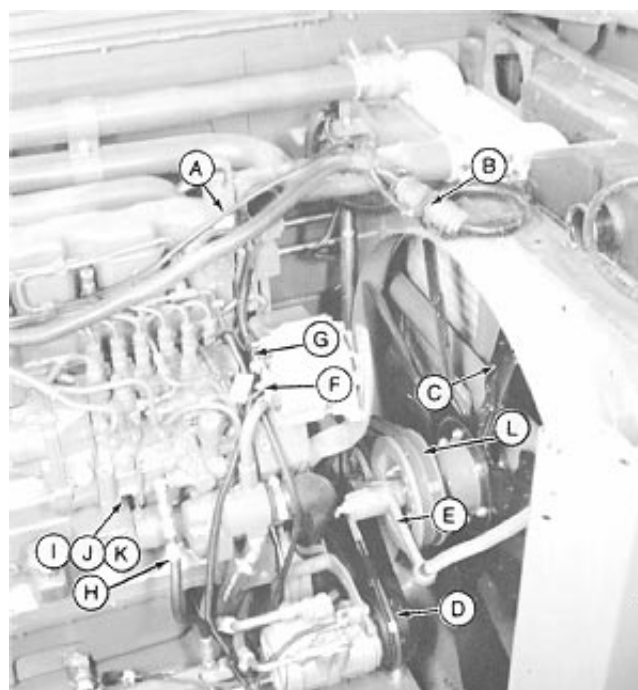

9500 Combine Shown

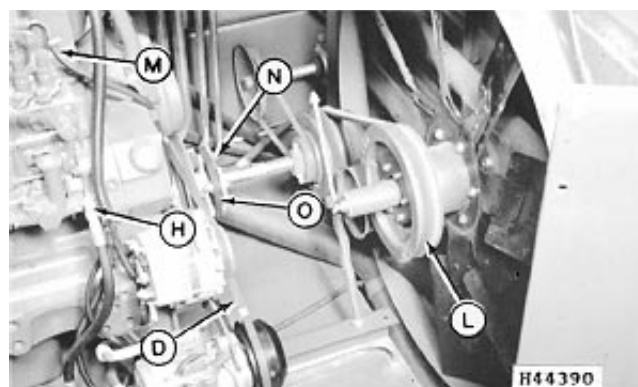


9600 Combine Shown

HX1401,2005,E -19-27SEP96

NOTE: The following steps 26 through 30 reflect removal for combines: 9400 (650101—), 9500 (650201—), 9600 (650301—).

26. Disconnect wiring leads (A, B, F, G and I-K). (Combines with Nippondenso Fuel Inj; Disconnect wiring lead to injection pump governor (J)).
27. Remove air conditioner compressor belt (D) and fan belt (L).
28. (9400 and 9500 Only) Remove fan belt drive (E) and fan (C).
29. (9600 Only) Remove cap screws (N) from drive disk (O).
30. Remove fuel line (H) and return line (M). Put caps or covers on fittings to keep dirt from entering fuel system.


- A—Wiring Lead-to-Hydraulic Reservoir Sending Unit
- B—Main Wiring Harness Connector
- C—Fan
- D—Belt
- E—Fan Belt Drive
- F—Ground Wire
- G—Wiring Harness Lead-to-Alternator
- H—Fuel Line
- I—Wiring Harness Lead-to-Tachometer Sender-Injection Pump
- J—Wiring Harness Lead-to-Governor (2 used)-Injection Pump
- K—Wiring Harness Lead-to-Fuel Pump-Injection Pump
- L—Fan Belt
- M—Fuel Return Line
- N—Cap Screws
- O—Drive Disk

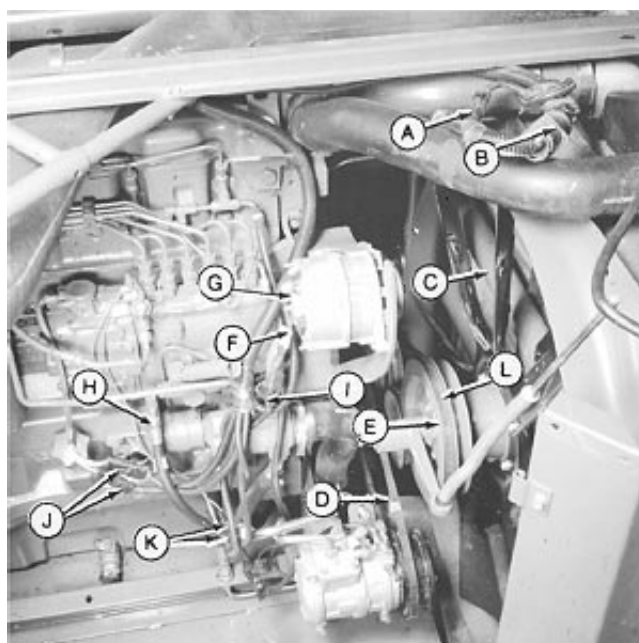

9500 W/Nippondenso Fuel Inj.




9500 W/Bosch Fuel Inj.

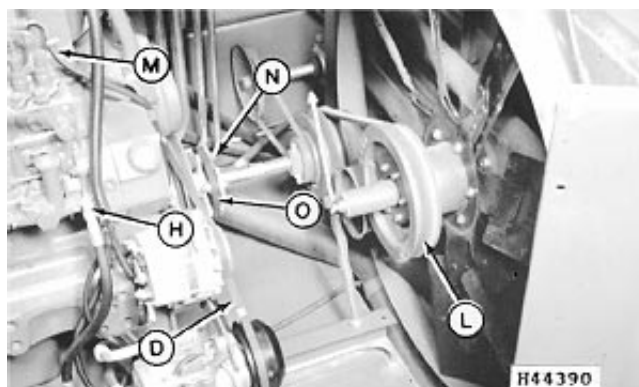


9600 Combine Shown

31. Disconnect wiring connector (A) from engine temperature switch.
32. Remove cap screws (B) from exhaust manifold.
33. Disconnect sending unit wiring lead (C).

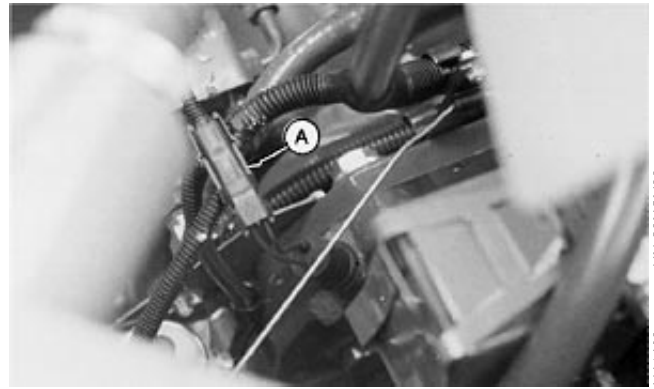


9400 Combine

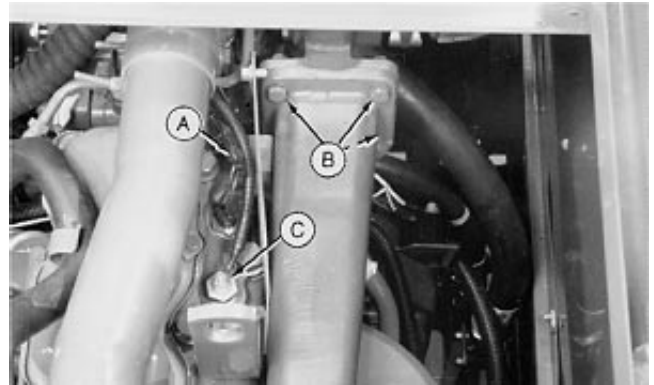

9500 and 9600 Combines


HX,1401,2005,F -19-28AUG96

34. From inside grain tank remove six cap screws (A) to remove engine access panel (B).

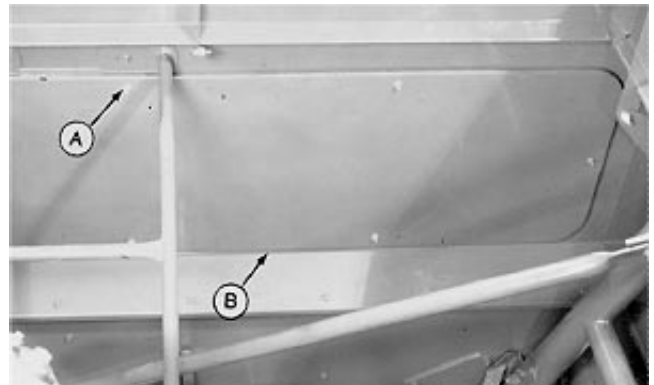

HX,1401,2005,G -19-28AUG96


35. (9400 Only) Disconnect leads (A) from throttle control.

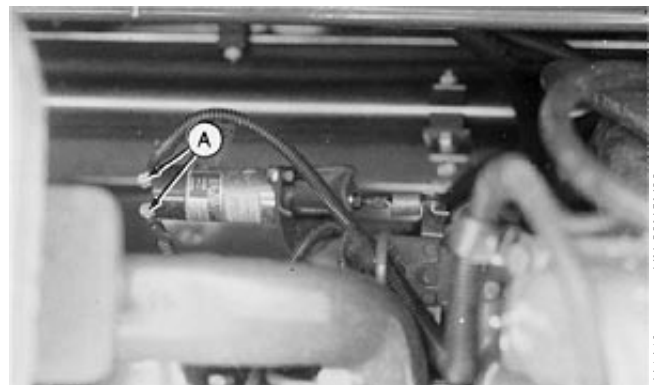


9400 Combine

HX,1401,2005,H -19-28AUG96

36. Disconnect fuel line (A) from fuel transfer pump.

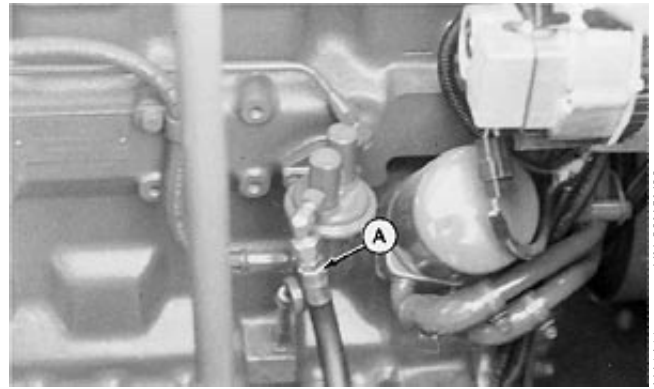

9400 Combine

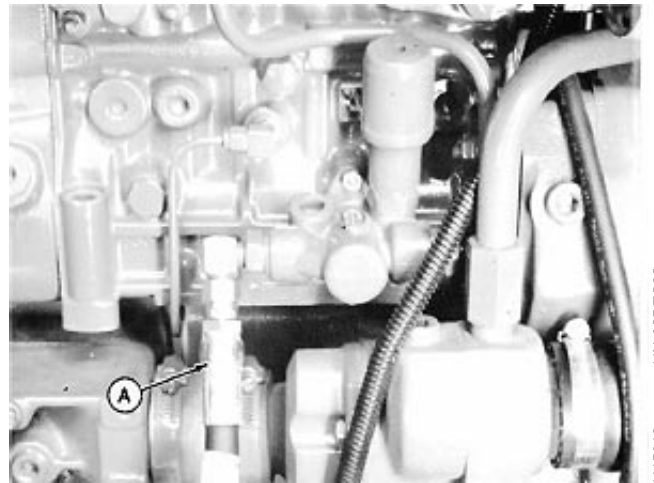


9500 Combine

HX,1401,2005,I -19-28AUG96

37. (9600) Disconnect heater hoses (A and B) and turbocharger tube (E).

- A—Heater Hose
- B—Heater Hose
- C—Block Heater
- D—Block Drain
- E—Turbocharger Tube

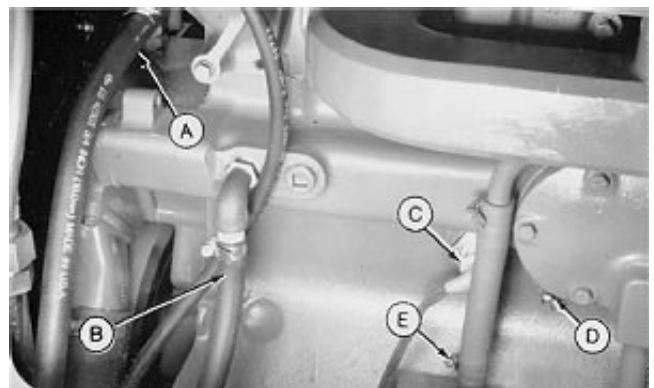


9600 Combine

HX,1401,2005,J -19-27SEP96

38. (9500) Disconnect heater hose (A) and turbocharger return oil line (D).

- A—Heater Hose
- B—Block Heater
- C—Block Drain
- D—Turbocharger Return Oil Line
- E—Turbocharger Tube Mount Clamp

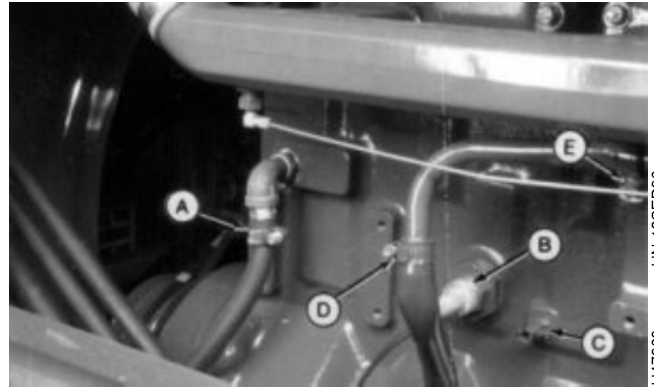

9500 Combine

1401,DV699 -19-27SEP96


H47963 -UN-12SEP96

20-05-11


39. Disconnect cold weather starting aid line (A).

40. Remove parts (B—G) from starting motor.

- A—Starting Aid Line
- B—Nut (2 used)
- C—Main Harness
- D—Plastic Cover
- E—Wiring Harness
- F—Battery Cable
- G—Terminal Nut

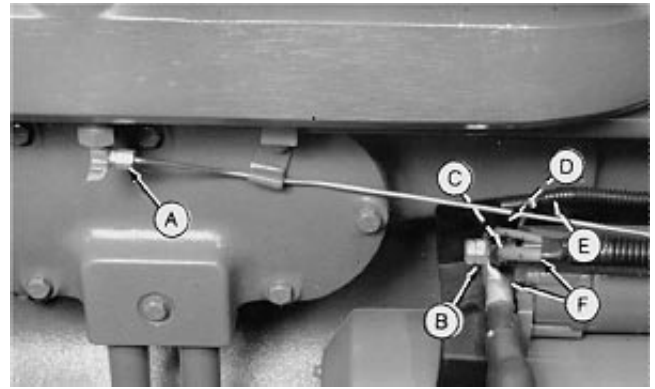


9600 Combine

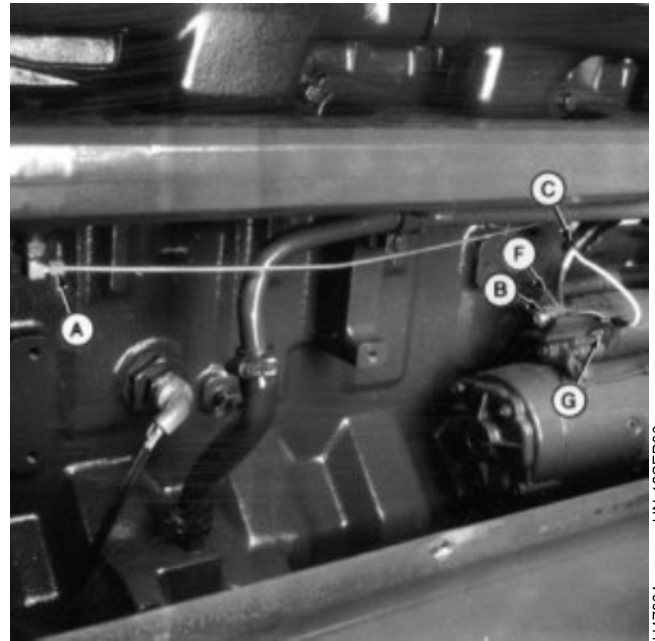

9500 Combine

HX,1401,2005,K -19-28AUG96

41. On lower surface of the turbocharger remove two cap screws (A) at return oil line (B) mount flange. Remove oil line.

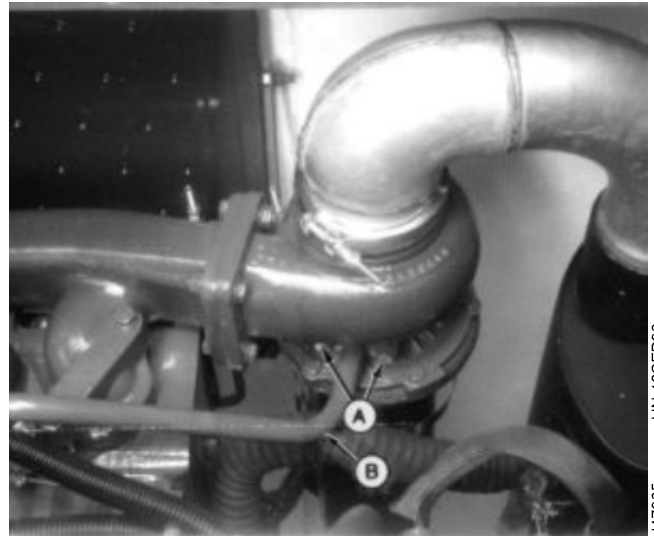


1401,DV470 -19-28AUG96



CAUTION: The approximate weight of the 6359 engine is 533 kg (1175 lbs). The approximate weight of the 6068 engine is 602 kg (1324 lbs). The approximate weight of the 6076 engine is 816 kg (1800 lbs).

IMPORTANT: Use only a lifting sling, like the JDG-23 that has a spreader bar. Other types of lift slings could damage the cylinder head.

42. Install JDG-23 engine lifting sling (A). Take up slack in lift chains before removing engine mount cap screws.

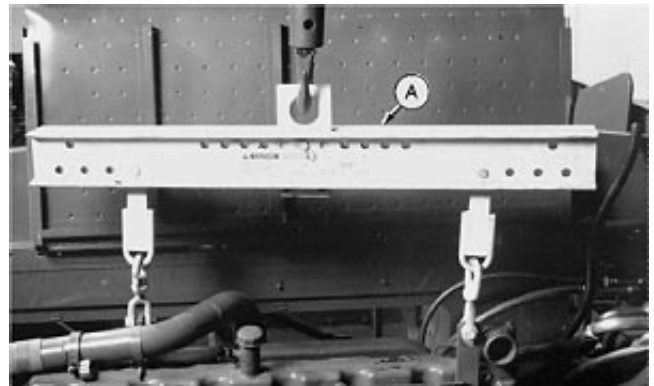

HX1401,2005,G -19-28AUG96


20
05
13

H47965 -UN-12SEP96

H40533 -UN-05JUN89


43. Remove front engine mount cap screws (A—C).
44. Remove front engine mount cap screws (A and B).
45. Remove cap screw(s) (C).

A—Cap Screw (2 used)
 B—Cap Screw (2 used)
 C—Cap Screw (quantity depends on mt instln)

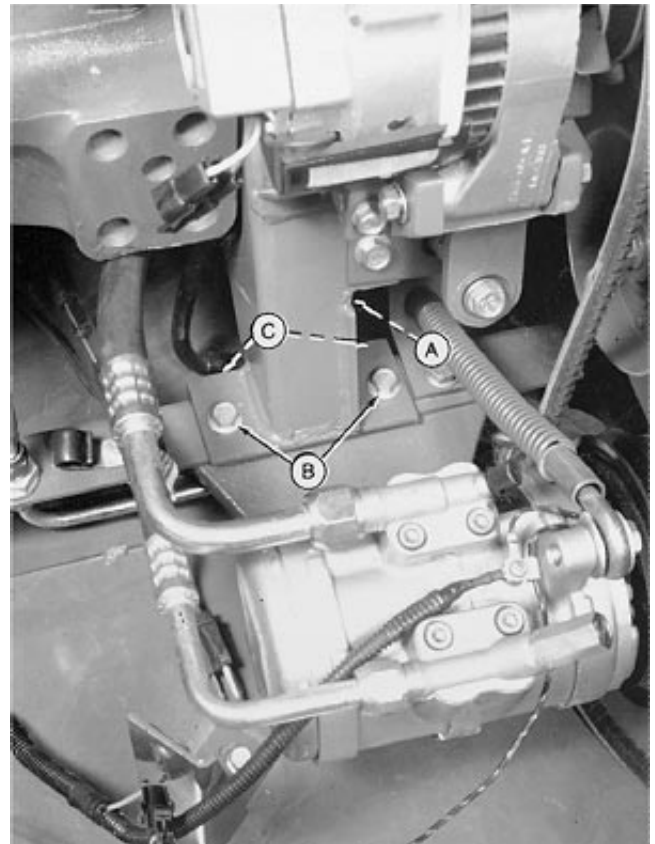

H40472
 -UN-05JUN89

9500(-640200) and 9600(-640300)

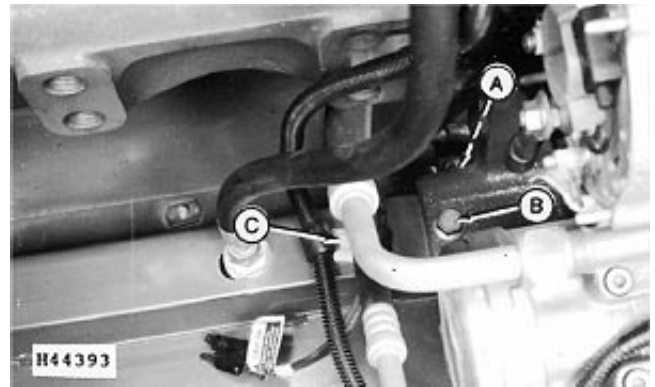

H44393
 -UN-21MAY92

Later Models*



H47966
 -UN-12SEP96

Latest Models**

* = 9500(640201 - 655551), SH9500(645201 - 655531) and
 9600(640301 - 655524)


** = 9500/SH9500(655552-) and 9600(655525-)

HX,1401,2005,M -19-05DEC96

NOTE: DO NOT disconnect refrigerant lines.


46. Remove electrical connections (A and B).

47. Remove cap screws (C and D), remove belt from pulley, and place air conditioner compressor on floor of engine compartment.

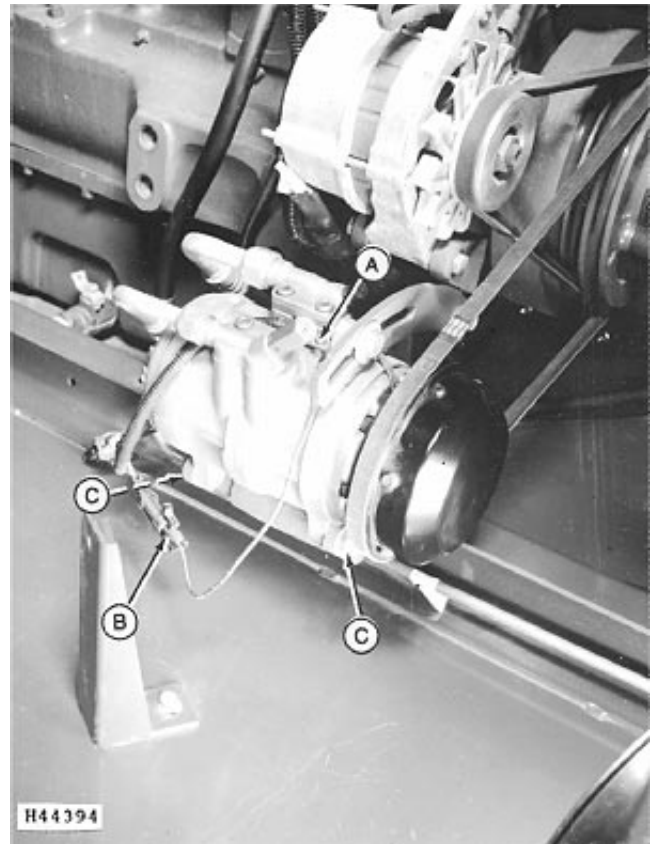

R-12 A/C Compressor Shown


A—Electrical Connector
 B—Electrical Connector
 C—Cap Screw
 D—Cap Screw

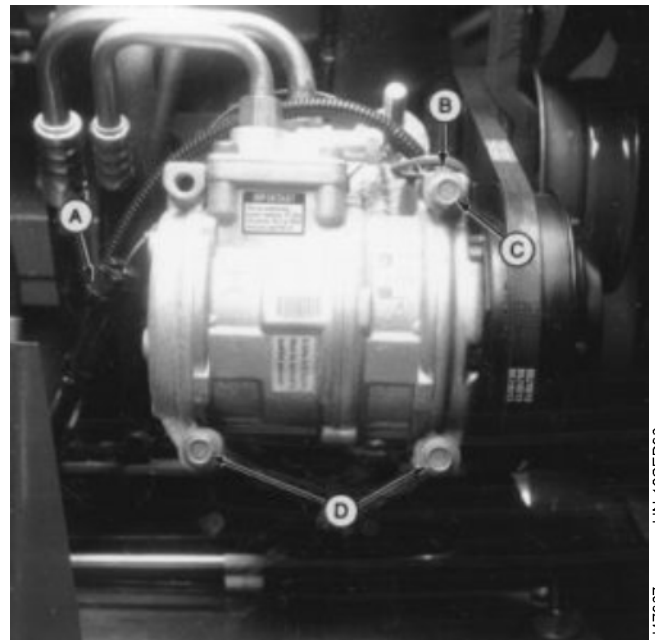

R-134a A/C Compressor Shown

48. Remove clamp (B) to remove breather hose (A).
49. Remove turbocharger oil line (C).
50. Drain engine oil. Approximate capacity is 14 L (14-1/2 qt) for 6359 engine, 19 L (20 qt) for 6068 engine on 9400 combine and 23.2 L (24-1/2 qt) on 9500 and 9600 combines.
51. Remove engine oil drain line (D) from shut-off valve.
52. Disconnect oil pressure sending switch connector (F).
53. Disconnect fuel injector pump connectors (I) (Bosch Fuel Injection - S/N 536794-).
54. Remove rear mounting cap screws (E) on each side.
55. Remove bellhousing cap screws (H) and dust cover cap screws (G).

- A—Breather Hose
- B—Clamp
- C—Turbocharger Oil Line
- D—Oil Drain Line
- E—Cap Screw (4 used)
- F—Oil Pressure Sending Switch Connector
- G—Cap Screw (4 used)
- H—Cap Screw (4 used)
- I—Fuel Injector Pump Connectors (Bosch)

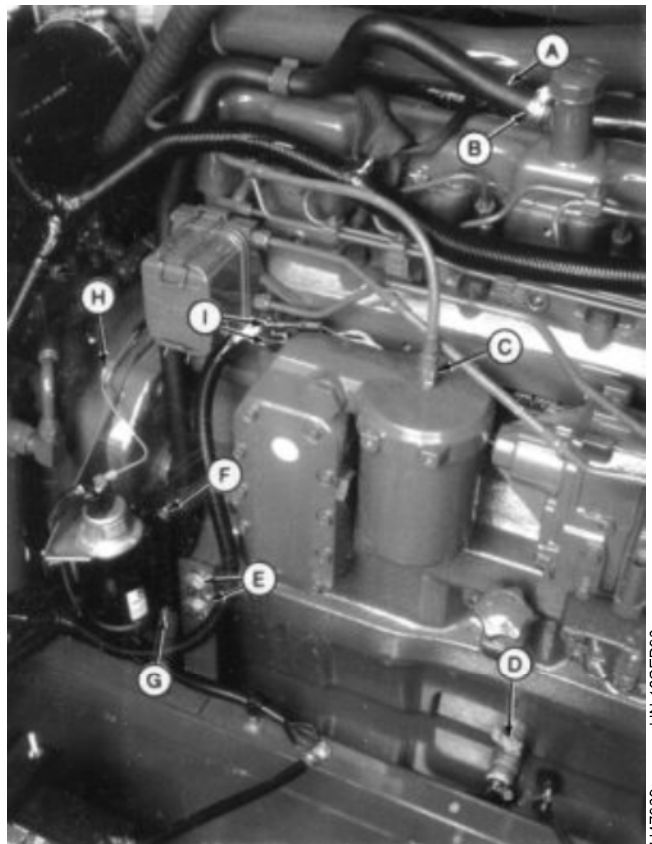


H47968 -UN-12SEP96

HX1401,2005,H -19-27NOV96



CAUTION: Use extreme care when lifting and NEVER permit any part of the body to be positioned under a load being lifted or suspended.

56. Attach engine hoist fixture (A) to engine lift fittings. Carefully move engine away from bellhousing. Lift engine out of combine.
57. For 9400 combine, see CTM-4 or CTM-8 for engine repair; for 9500, 9600 and CTS combines, see CTM-6 or CTM-42 for engine repair.

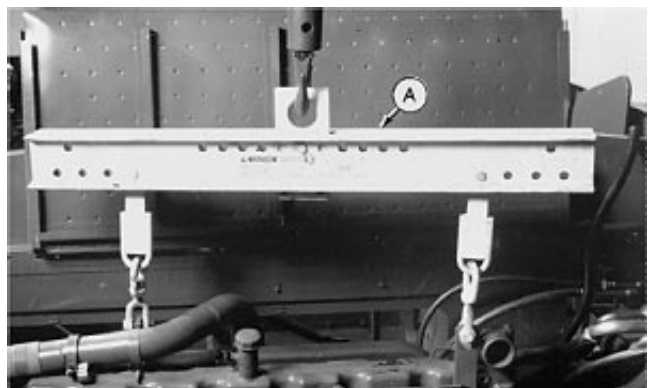


H40533 -UN-05JUN89

HX1401,2005,I -19-05DEC96

INSTALL ENGINE

⚠ CAUTION: Use extreme care when lifting engine and **NEVER** permit any part of the body to be positioned under a load being lifted or suspended.

1. Carefully lower engine to align with bellhousing.

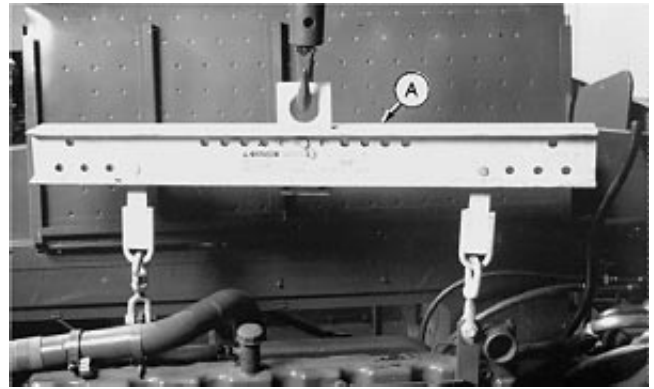

HX,1401,2005,AE-19-17DEC92

H40533 -UN-05JUN89

20
05
17



Suggest:


If the above button click is invalid.

**Please download this document
first, and then click the above link
to download the complete manual.**

Thank you so much for reading

2. Install bellhousing cap screws (H). Tighten to 340 N·m (250 lb-ft).
3. Install rear mounting cap screws (E) and tighten to 80 N·m (60 lb-ft).
4. Install dust cover cap screws (G).
5. Connect oil pressure sending switch connector (F).
6. (Bosch Fuel Inj - Eng S/N 536794-) Connect fuel injector pump connectors (I).
7. Install engine oil drain line (D) to shut-off valve.
8. Install turbocharger oil line (C).
9. Install breather hose (A). Tighten clamp (B).

A—Breather Hose
 B—Clamp
 C—Turbocharger Oil Line
 D—Oil Drain Line
 E—Cap Screw (4 used)
 F—Oil Pressure Sending Switch Connector
 G—Cap Screw (4 used)
 H—Cap Screw (4 used)
 I—Fuel Inj Pump Connectors
 (Bosch Fuel Inj-Eng S/N 536794-)

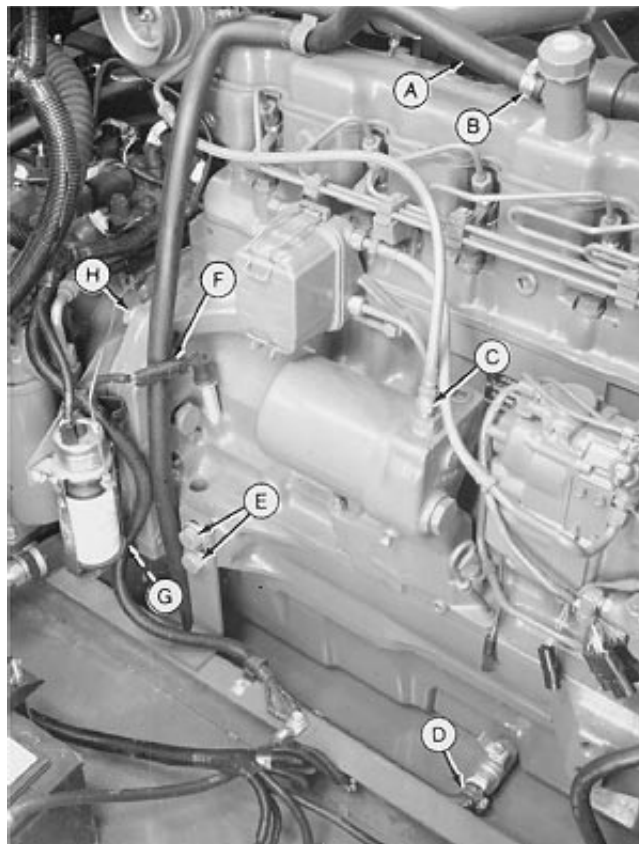

9400 Combine Shown



9500 and 9600 Combines Shown

HX1401,2005,J -19-05DEC96

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>