

7100 and 7200 Series Magnum Tractor

Service Manual

Table of Contents

	Description	Section No	Form No
General		Tab 1	
General Information - 7100 Series		1001*	8-91581
General Information - 7200 Series		1002*	7-60490
Loctite Product Chart			8-98900
Engine		Tab 2	
Engine Troubleshooting		2001	8-91600
Engine Tune-up		2002	8-91611
Engine Removal		2003	8-91621
Tractor Split between Engine and Speed Transmission		2004	8-91631
Tractor Split between Flywheel Housing and Speed Transmission for 7100 Series Transmission			
S/N AJB005513 and After and all 7200 Series		2004	7-61090
Air Induction System		2010	8-91691
Aftercooler System		2011	8-91701
Specification Details		2403*	8-28424
Cylinder Head and Valve Train		2415	8-28432
Cylinder Block		2425	8-28442
Lubrication System		2445	8-28452
Cooling System		2455	8-28462
Turbocharger		2465	8-28470
Turbocharger Failure Analysis		2565	9-78235
Fuel System		Tab 3	
Fuel System Specifications		3001	8-91591
Fuel Tank		3004	8-91752
Fuel System and Filters		3410	8-28480
Injection Pump		3412	8-28492
Fuel Injectors		3413	8-28501
Electrical		Tab 4	
Wiring Schematics and Troubleshooting Prior to P.I.N. JJA0032439		4001*	7-33230
Wiring Schematics and Troubleshooting P.I.N. JJA0032439 and After		4001E*	8-98491
Wiring Schematics and Troubleshooting - 7200E		4002E*	7-61620
Alternator		4004	8-91793
Neutral Start Switch		4005	8-91801
Starting Motor - Nippondenso 12800-5330		4011	8-95970
Starting Motor - Nippondenso 12800-4341		4230	8-25980
Battery Servicing and Testing		4235	8-20291
Steering		Tab 5	
Steering Column and Hand Pump		5001	8-91822
Steering Cylinder - 2 WD and MFD Tractors		5002	8-91832
Steering Axle and lines - 2 WD		5003	8-91840
Emergency Steering System		5010	8-89310

Description	Section No	Form No
Power Train	Tab 6	
Tractor Split between Speed and Range Transmission	6001	8-91851
Tractor Split for Speed Transmission Service, 7100 Series		
Transmission S/N AJB0055133 and After and all 7200 Series	6001	7-60630
Tractor Split between Range Transmission and Rear Housing	6002	8-91861
Tractor Split for Pinion Shaft or Range transmission		
Service - 7100 Series Transmission S/N AJB0055133		
and After and all 7200 Series	6002	7-60720
MFD Axle Removal	6003	8-91871
Transmission Valve - Prior to Transmission S/N AJB0055133	6004	8-91882
Transmission Valve - Transmission S/N AJB0055133 and After	6004	7-60330
Speed Transmission	6005	8-91891
Speed Transmission - 7100 Series Transmission		
S/N AJB0055133 and After and all 7200 Series.....	6005	7-60620
Range Transmission	6006	8-91901
Range Transmission - 7100 Series Transmission		
S/N AJB0055133 and After and all 7200 Series.....	6006	7-60610
Hydraulic Pump Drive	6007	8-91911
Rear Frame	6008	8-91922
Rear Axle and Planetaries	6009	8-91932
PTO - Single Shaft for Models 7130 and 7140 Prior to		
Transmission S/N AJB00059710 and Dual Shaft PTO for		
all 7110 and 7120 Models	6010	8-91942
PTO - Single Shaft for 7130 and 7140 Models		
Transmission S/N AJB00059710 and After, All Models 7150,		
7230, 7240 and 7250. Dual Shaft for all 7210 and 7220 Models	6010	7-60250
MFD Clutch Removal without Tractor Split	6011	7-60770
MFD Differential	6012	8-91961
MFD Axle and Planetaries	6013	8-91972
Brakes	Tab 7	
Brake Valve	7001	8-91981
Trailer Brake and Priority Valves	7002	7-61660
Brake Cylinders	7003	8-91952
Parking Brake	7004	7-61380
Hydraulic System	Tab 8	
Hydraulic Troubleshooting - 7100 and 7200 Series	8001*	8-92013
PTO Valve	8002	8-92021
Remote Hydraulic Circuits	8004	8-92042
Hydraulic Filters - 7100 Series	8005	8-92051
Hydraulic Filters - 7200 Series	8005	7-60780
Differential Lock and MFD Solenoid Valves	8006	8-92060
Charge and Lube Pump - 7100 Series	8007	8-91811
Charge and Lube Pump - 7200 Series	8007	7-61040
Hydraulic Pump	8008	8-91990
Electronic Hitch Alignment - 7100 Series	8009	8-92071
Electronic Hitch Alignment - 7200 Series	8009	7-60420
Three Point Hitch	8010	8-92082
Hitch Valve	8011	8-92091
Hydraulic Schematics - 7100 and 7200 Series	8012*	8-94382
Hydraulic Schematics - 7100E and 7200E Series	8012E*	8-98691

* Schematic set Sections.

	Description	Section No	Form No
Chassis		Tab 9	
Air Conditioning Troubleshooting - 7100 Series		9001	8-92101
Air Conditioning Troubleshooting - 7200 Series		9001	7-60380
Air Conditioning Testing - 7100 Series		9002	8-92111
Air Conditioning Testing - 7200 Series		9002	7-60390
Air Conditioning System and Compressor - 7100 Series		9003	8-92121
Air Conditioning System and Compressor - 7200 Series		9003	7-60400
Air Conditioning Components - 7100 Series		9004	8-92131
Air Conditioning Components - 7200 Series		9004	7-60410
Cab Blower		9005	8-92141
Tractor Seat Air/Oil		9006	8-92151
Hood, Grille and Side Panels - Radiator and Support		9007	8-92161
Decal Location - 7100 Series		9008	8-92170
Decal Location - 7200 Series		9008	7-60820
Cab Removal		9009	8-92180
Pedal and Lever Adjustment		9010*	8-92192
Tractor Seat Air/Air - 7100 Series		9011	8-95560
Tractor Seat Air/Air - 7200 Series		9011	7-60910

* Schematic set Sections.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Section 1001

GENERAL INFORMATION

TABLE OF CONTENTS

Conversion Factors	3
General Torque Specification Table	
SAE	4
Metric	4
Hydraulic Tubes and Fittings	5
Fluid Capacities and Types	6
Engine Speeds	6
Engine Flywheel	6
Fuses	6
Bulb and Lamp Replacement	6
Steering and Oscillation Stops - MFD	7
Steering and Oscillation Stop Charts - without Fenders	8
Steering and Oscillation Stop Charts - with Fenders	8
Tire Specifications	
Front Tires	9
Rear Tires	9
Service Tools Introduced for 7100 Series	
Transmission Service	10-11
Hydraulic Test Fittings	11
MFD Axle Service	12
Electrical Testing	13

CONVERSION FACTORS

U.S. Customary to SI (Metric) Units

SI (Metric) Units to U.S. Customary

	Multiply	By	To Obtain: Multiply	By	To Obtain
Area:	square foot (ft ²) acre	0.092 903 0.404 686	square meter (m ²) hectar (ha)	10.763 91 2.471 05	square foot (ft ²) acre
Force:	ounce force (ozf) pound force (lbf)	0.278 014 4.448 222	newton (N) newton (N)	3.596 942 0.224 809	ounce force (ozf) pound force (lbf)
Length:	inch (in) foot (ft) mile	25.4 0.304 8 1.609 344	millimetre (mm) meter (m) kilometer (km)	0.039 370 3.280 804 0.621 371	inch (in) foot (ft) mile
Mass:	pound (lb)	0.453 592	kilogram (kg)	2.204 622	pound (lb)
Mass/Area:	ton/acre	2241.702	kilogram per hectare (kg/ha)	0.000 446	ton/acre
Mass/Energy: (Fuel Consumption)	pound per brake horsepower- hour (lb/bhp-h)	608.277 4	gram per kilowatt hour (g/kwh)	0.001 644	pound per brake horsepower- hour (lb/bhp-h)
Mass/Volume: (Density)	pound per cubic yard (lb/yd ³) 0.593276	0.593 276	kilogram per cubic meter (kg/m ³)	1.685 555	pound per cubic yard (lb/yd ³)
Power:	horsepower - U.S. customary (hp - U.S. customary)	0.745 700	kilowatt (kw)	1.341 02	horsepower - U.S. customary (hp-U.S. customary)
Pressure:	pound per square inch (psi)	6.894 757	kilopascal (kPa)	0.145 038	pound per square inch (psi)
Temperature:	degrees Fahrenheit (°F)	TC = 5/9 (TF-32)	degree Celsius (°C)	TF = 1.8 TC + 32	degree Fahrenheit (°F)
Torque:	pound inch (lb in) pound foot (lb ft)	0.112 985 1.355 818	newton meter (Nm) newton meter (Nm)	8.850 748 0.737 562	pound inch (lb in) pound foot (lb ft)
Velocity (Speed):	miles per hour (mph)	1.609 344	kilometer per hour (km/h)	0.621 371	miles per hour (mph)
Volume:	cubic inch (in ³) cubic foot (ft ³) cubic yard (yd ³) ounce-U.S. fluid (oz) quart-U.S. liquid (qt) quart-Imperial (qt) gallon-U.S. liquid (gal) gallon-Imperial (gal)	16.387 06 0.028 317 0.764 555 29.573 53 0.946 353 1.136 523 3.785 412 4.546 092	cubic centimeter (cm ³) cubic meter (m ³) cubic meter (m ³) milliliter (ml) liter (l) liter (l) liter (l) liter (l)	0.061 024 35.314 66 1.307 950 0.033 814 1.056 688 0.879 877 0.264 172 0.219 969	cubic inch (in ³) cubic foot (ft ³) cubic yard (yd ³) ounce-U.S. fluid (oz) quart-U.S. liquid (qt) quart-Imperial (qt) gallon-U.S. liquid (gal) gallon-Imperial (gal)
Volume/Area:	bushel (U.S.) per acre	0.087 078	cubic meter per hectare (m ³ /ha)	11.484 000	bushel (U.S.) per acre
Volume/Time: (Flow)	gallon per minute (U.S.) (gpm U.S.) gallon per minute (Imperial) (gpm Imp.)	3.785 412 4.546 092	liter per minute (l/m) liter per minute (l/m)	0.264 172 0.219 969	gallon per minute (U.S.) (gpm U.S.) gallon per minute (Imperial) (gpm Imp.)
Horsepower:	U.S. customary hp net engine hp net engine hp	1.014 0.815* 0.70*	metric horsepower P.T.O. observed hp mox drawbar hp	0.986 3	U.S. customary hp

* Approximation based on observed tests

SAE FASTENER TORQUE CHART

NOTE: Use these torques, unless special torques are specified. Values are for UNC and UNF thread fasteners, plated or unplated, as received from supplier. Fasteners can be dry or lubricated with normal engine oil. Values do not apply if graphite, moly-disulphide or other extreme pressure lubricant is used.

SAE Grade No.	2				5				8*			
Bolt head identification (See Note 1)					  				  			
Bolt Size	LB FT		Nm		LB FT		Nm		LB FT		Nm	
	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
1/4	5	6	7	8	9	11	12	15	12	15	16	20
5/16	10	12	14	16	17	20.5	23	28	24	29	33	39
3/8	20	23	27	31	35	42	48	57	45	54	61	73
7/16	30	35	41	47	54	64	73	87	70	84	95	114
1/2	45	52	61	70	80	96	109	130	110	132	149	179
9/16	65	75	88	102	110	132	149	179	160	192	217	260
5/8	95	105	129	142	150	180	203	244	220	264	298	358
3/4	150	185	203	251	270	324	366	439	380	456	515	618
7/8	160	200	217	271	400	480	542	651	600	720	814	976
1	250	300	339	406	580	696	787	944	900	1080	1220	1464
1-1/8					800	880	1085	1193	1280	1440	1736	1953
1-1/4					1120	1240	1519	1681	1820	2000	2468	2712
1-3/8					1460	1680	1980	2278	2380	2720	3227	3688
1-1/2					1940	2200	2631	2983	3160	3560	4285	4827

NOTE 1: Bolt head identification marks as per grade. Manufacturing marks will vary.

*Thick nuts must be used with Grade 8 bolts

METRIC FASTENER (ISO) TORQUE CHART

NOTE: Use these torques, unless special torques are specified. Values are for course thread fasteners, plated or unplated, as received from supplier. Fasteners can be dry or lubricated with normal engine oil. Values do not apply if graphite, moly-disulphide or other extreme pressure lubricant is used.

ISO Class No.	8.8				10.9				12.9			
Bolt head identification (See Note 1)												
Bolt Size	Nm		LB FT		Nm		LB FT		Nm		LB FT	
	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
M4	3	4	2	3	4	5	3	4	Because of the low ductility of these fasteners, the torque range is to be determined individually for each application. As a general rule, the torque ranges specified for grade 10.9 fasteners can be used satisfactorily on 12.9 fasteners. *M14 is not a preferred size			
M5	6.5	8	5	6	9.5	11	7	8				
M6	10.5	12	8	9	15	17.5	11	13				
M8	26	31	19	23	37	43	27	32				
M10	52	61	38	45	73	87	54	64				
M12	90	107	66	79	125	150	93	112				
*M14	144	172	106	127	200	245	149	179				
M16	217	271	160	200	310	380	230	280				
M20	434	515	320	380	610	730	450	540				
M24	675	815	500	600	1050	1275	780	940				
M30	1250	1500	920	1100	2000	2400	1470	1770				
M36	2175	2600	1600	1950	3500	4200	2580	3090				

NOTE 1: Bolt head identification marks as per grade. Manufacturing marks will vary

STANDARD TORQUE DATA FOR HYDRAULIC TUBES AND FITTINGS

TUBE NUTS FOR 37° FLARED FITTINGS							
SIZE	TUBING O.D.		THREAD SIZE	LB FT		Nm	
	Inches	mm		Min.	Max.	Min.	Max.
4	1/4	6.4	7/16-20	9	12	12	16
5	5/16	7.9	1/2-20	12	15	16	20
6	3/8	9.5	9/16-18	21	24	29	33
8	1/2	12.7	3/4-18	35	40	47	54
10	5/8	15.9	7/8-14	53	58	72	79
12	3/4	19.1	1-1/16-12	77	82	104	111
14	7/8	22.2	1-3/16-12	90	100	122	136
16	1	25.4	1-5/16-12	110	120	149	163
20	1-1/4	31.8	1-5/8-12	140	150	190	204
24	1-1/2	38.1	1-7/8-12	160	175	217	237
32	2	50.8	2-1/2-12	225	240	305	325

O-RING BOSS PLUGS, ADJUSTABLE FITTING LOCK NUTS, SWIVEL JIC - 37° SEATS			
LB FT		Nm	
Min.	Max.	Min.	Max.
6	10	8	14
10	15	14	20
15	20	20	27
25	30	34	41
35	40	47	54
60	70	81	95
70	80	95	109
80	90	108	122
95	115	129	156
120	140	163	190
250	300	339	407

Above torque figures are recommended for plain, cadmium or zinc plated fittings, dry or wet installations and swivel nuts either swaged or brazed. These torques are not recommended for tubes 1/2 inch (12.7 mm) O.D. and larger with wall thickness of 0.035 inch (0.889 mm) or less. The torque is specified for 0.035 inch (0.889 mm) wall tubes on each application individually.

Section 2002


2002

ENGINE TUNE UP


IMPORTANT: This engine was made using the metric measurement system. All measurements and checks must be made with metric tools to make sure of an accurate reading when inspecting parts.

ADJUSTING ROCKER ARM TO VALVE CLEARANCE


Cold Setting

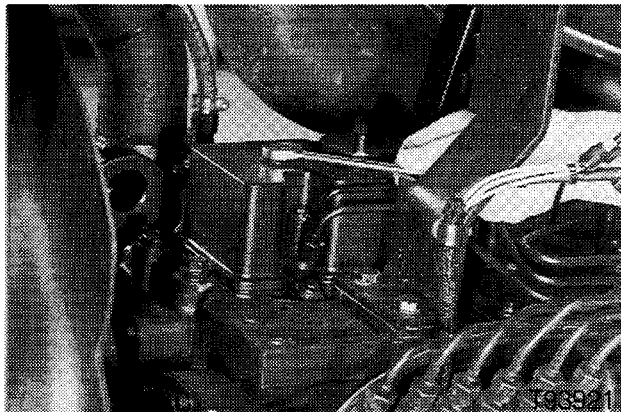STEP 1

Remove the valve cover from the engine. Discard the gasket.

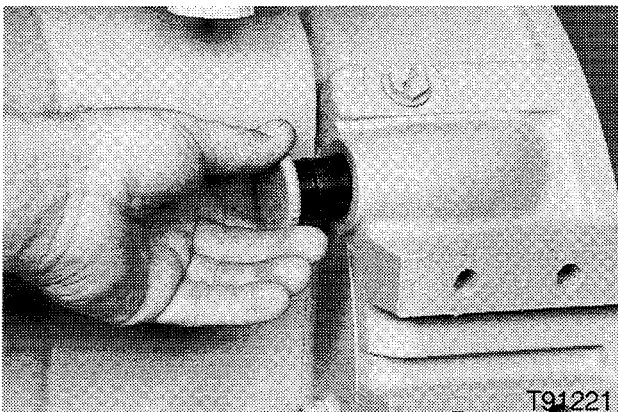STEP 2


Remove the plug in the flywheel housing (if equipped) and install the engine turnover tool, CAS-1690.

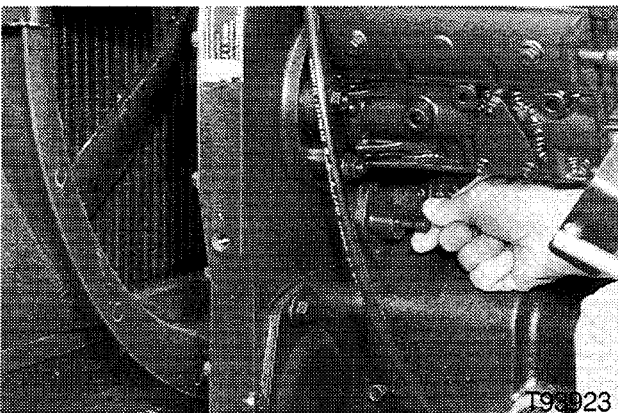STEP 3


While turning the engine over with the turn over tool, push the lock pin in. When the lock pin moves into the camshaft gear, the engine will be at top center.

NOTE: Use caution when turning the engine to prevent damage to the timing pin.

Rac 8-91611

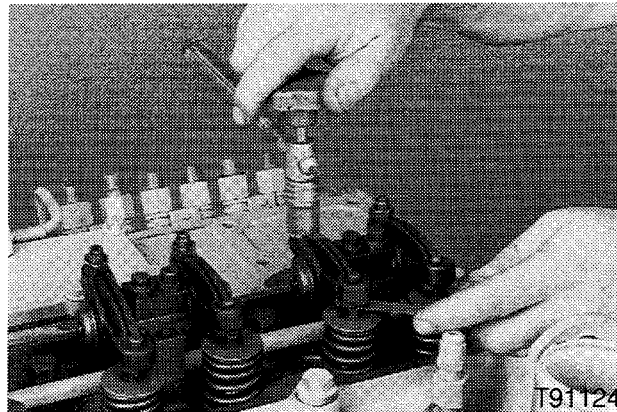
STEP 4

Check and adjust the intake and exhaust valves indicated by the arrows shown below.

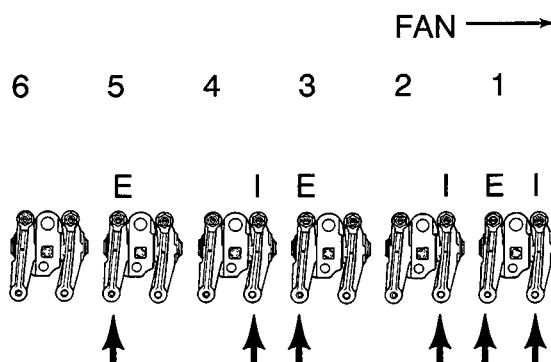


Number one cylinder will be at top center of the compression stroke.

Valve Clearance, Cold - Intake Valves - 0.30 mm
Exhaust Valves - 0.60 mm

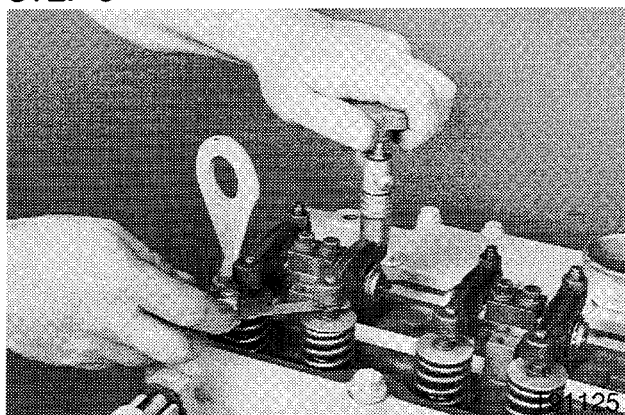STEP 5

Put a mark on the crankshaft pulley and the cylinder block, in alignment. Pull the lock pin from the cam gear. Turn the engine one complete revolution. Make sure the marks are aligned again.


Check and adjust the intake and exhaust valves indicated by the arrows shown below.

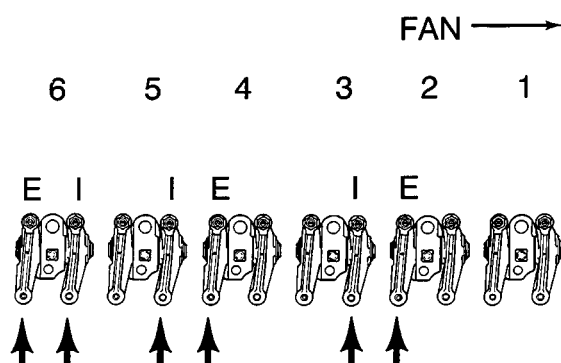


79L91

Number six cylinder will be at top center of the compression stroke

Valve Clearance, Cold - Intake Valves - 0.30 mm
Exhaust Valves - 0.60 mm

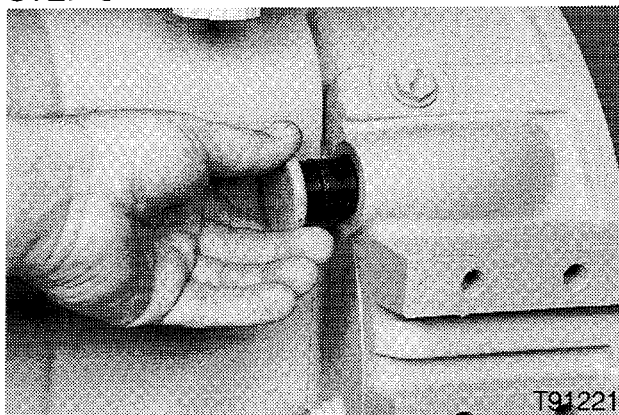STEP 6


Remove the engine turn over tool and install the plug in the flywheel housing (if equipped).

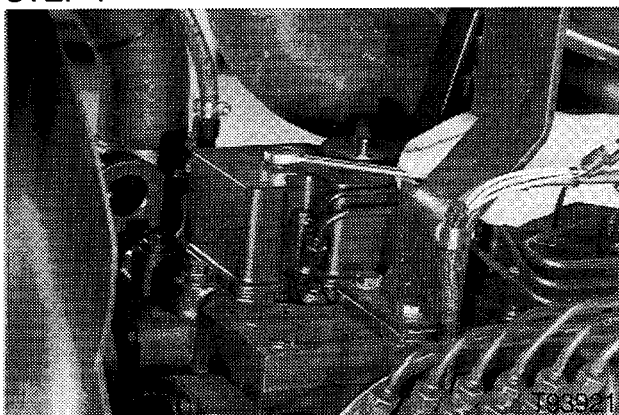STEP 7

Install a new gasket and the valve cover on the engine. Tighten the valve cover mounting bolts to a torque of 21 to 27 Nm. Install the breather tube on the valve cover.


CRANKCASE PRESSURE CHECK (BLOW BY) Manometer Installation

STEP 8

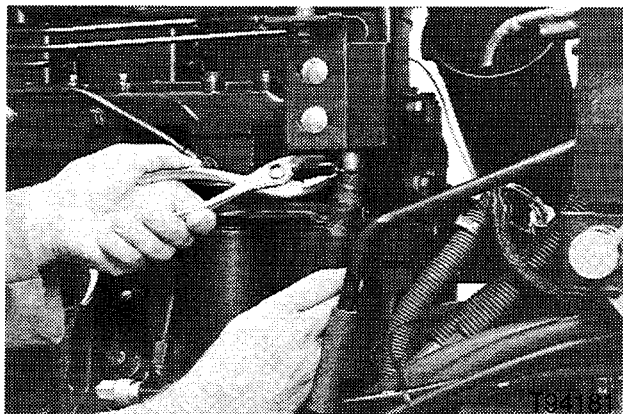

Remove the breather hose.


STEP 9

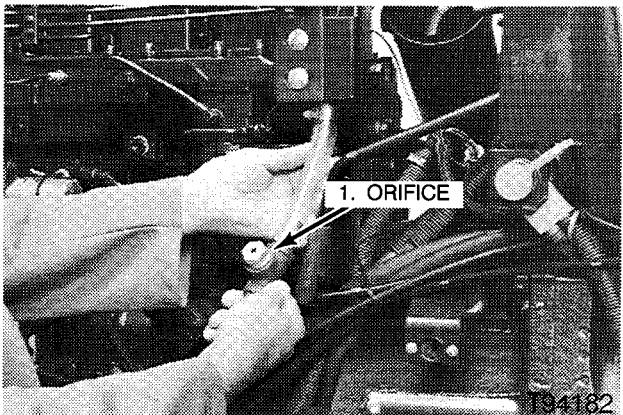

Install the breather adapter with the six cylinder orifice from the CAS-1692 manometer package.


NOTE: Use the orifice for six cylinder engines, marked 6 cyl.

STEP 10

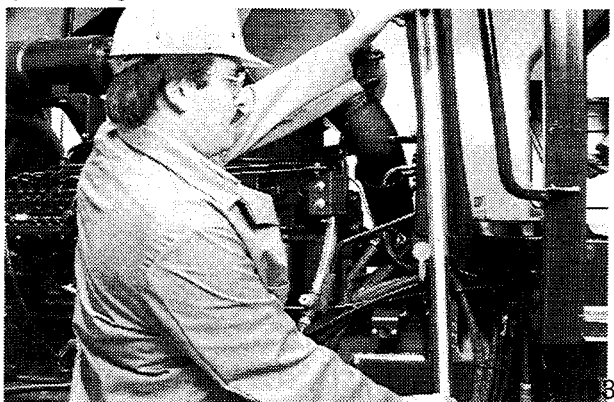


Install the manometer on the tractor.

STEP 11

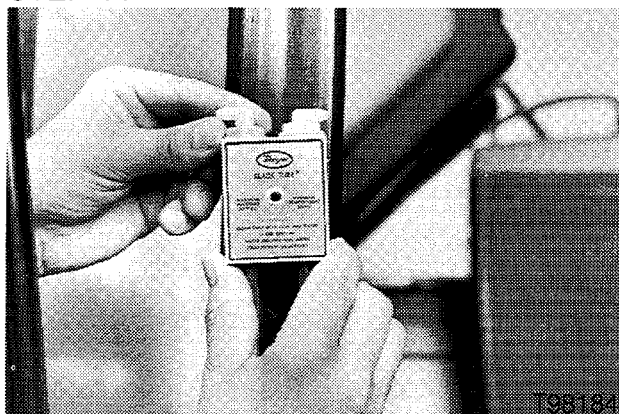


Turn each connector on the manometer one turn counterclockwise to open the check valves.

STEP 12

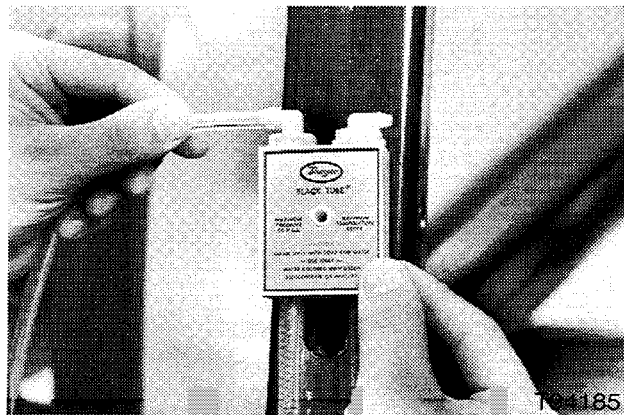

Connect the tube from the breather adapter to one of the connectors on the manometer.

STEP 13

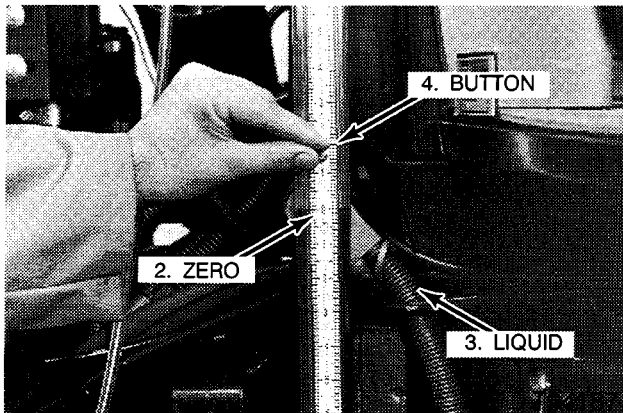

Push the button on the gauge and move the gauge up or down, until the zero on the gauge and the liquid in the tube are aligned.


Testing

NOTE: Do the following steps to get the correct manometer readings.

Step 1 - Warm the engine to operating temperature.

Step 2 - Operate the engine at the rated speed, under a full load.

STEP 14

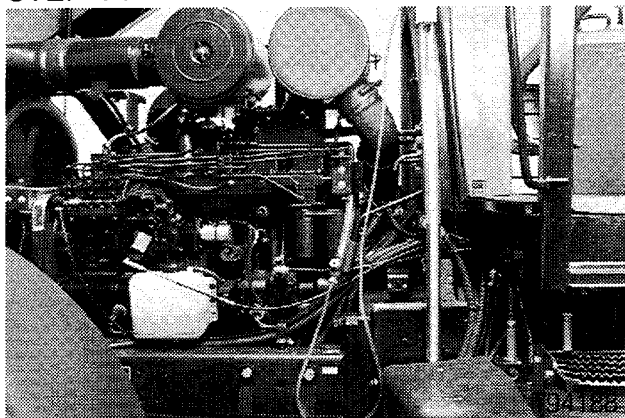

Take a manometer reading from the engine. Add the number of lowered inches to the number of raised inches for the correct manometer reading.

See example below.

LOWERED INCHES 1.5

RAISED INCHES +1.5

TOTAL 3.0 INCHES

See the chart for manometer reading and crankcase pressure (Blow By) limits.

MANOMETER READING


Inches of Water	L/min
1	50
2	84
3	103
4	119
5	133
6	145
7	155
8	164
9	172
10	180
11	187
12	193
13	200
14	206
15	211
16	217
17	222
18	226
19	229
20	232

CRANKCASE PRESSURE
(BLOW BY) LIMITS

Engine Model	Engine Speed	L/min Maximum New	L/min Worn Limit
6T-830	2200	113.0	226.0
6TA-830	2200	113.0	226.0


Manometer Removal

STEP 15

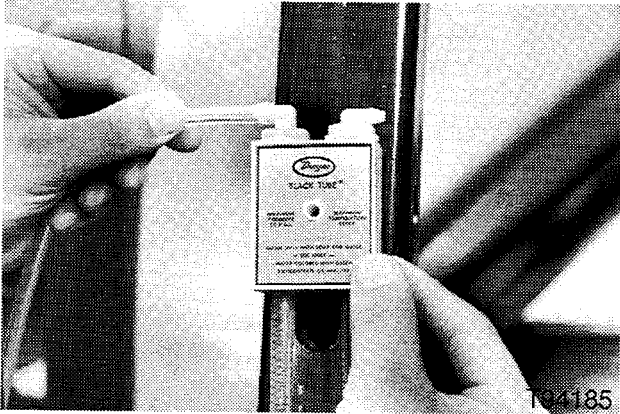


Disconnect the tube from the connector.

STEP 18

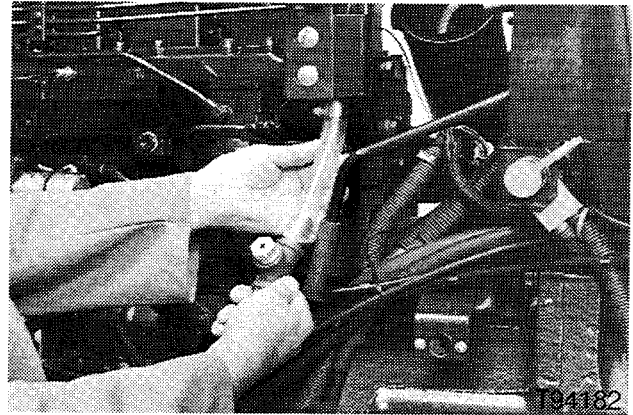


Remove the adapter from the breather tube.

STEP 16

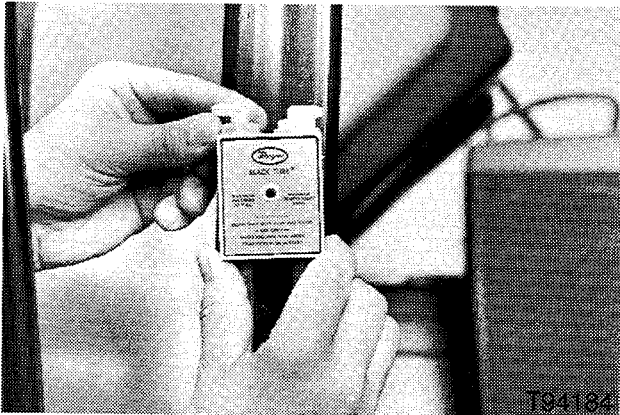


Turn each connector on the manometer one turn clockwise to close the check valve.

STEP 19

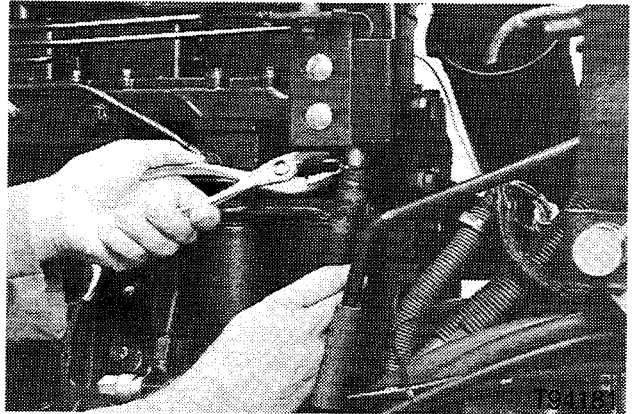

Install breather hose and the hose clamp.


STEP 17

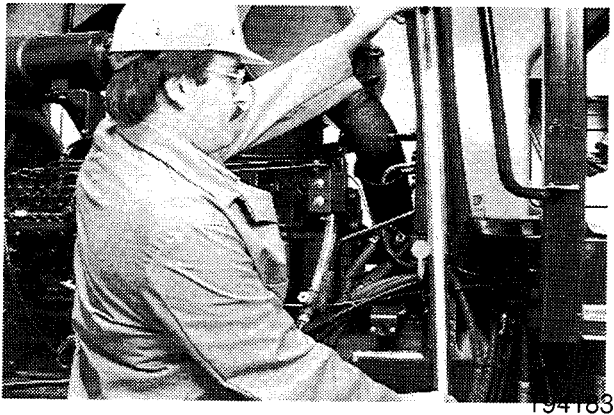

Remove the manometer.


Checking the Fan Belt Tensioner

STEP 20

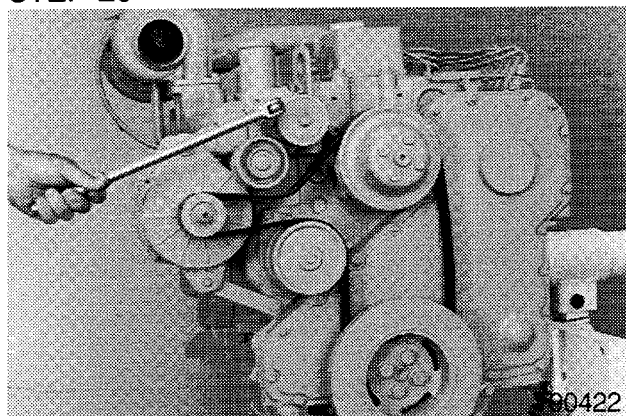


Lift the belt tensioner pulley. If there is tension on the pulley, the tension is good.

If the belt tensioner needs replacement, see Section 2455 in this manual for belt tensioner removal.

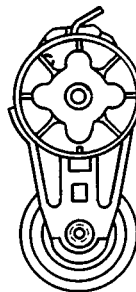


7L91

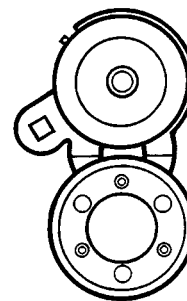

8-1L91


ADJUSTING THE COMPRESSOR BELT

STEP 21

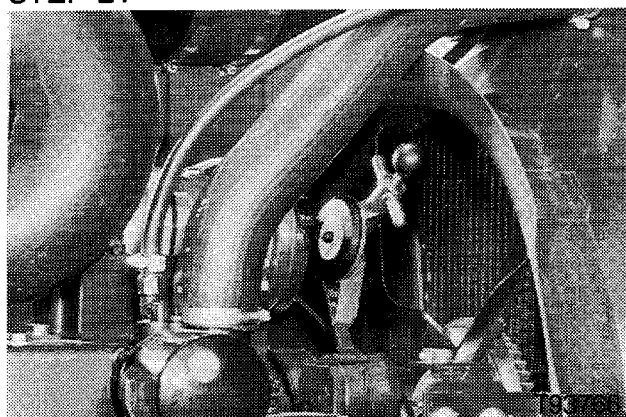

Check the compressor belt for the correct tension using the tension gauge OEM-1294. The belt tension must be 422 to 516 N for a new belt and 400 to 489 N for a used belt. After 10 minutes of run in on a new belt, adjust to used belt specifications.


STEP 22

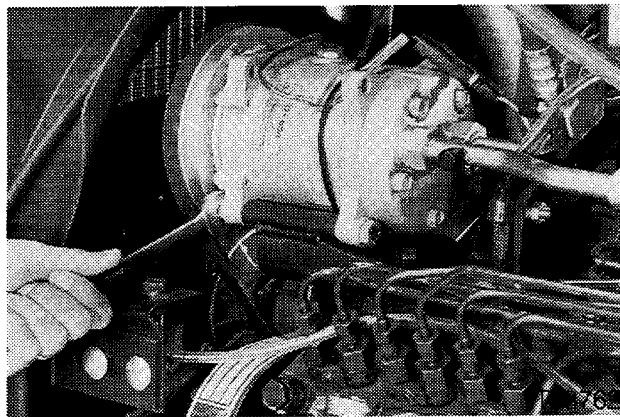

To adjust the compressor belt, loosen the adjusting bolt and pivot bolts. Pull the compressor out from the engine until the correct tension is reached. Tighten the adjusting and pivot bolts.

CHECKING ALIGNMENT BETWEEN CRANKSHAFT AND CAMSHAFT GEARS


STEP 23

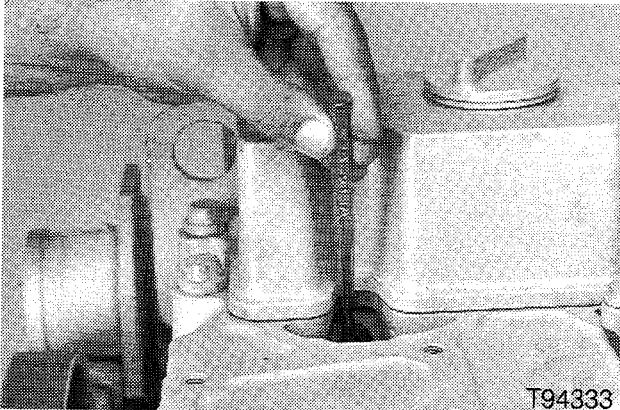

T94333

Remove the number one injector. Install a probe (minimum of 250 mm long) in the injector bore so that the probe will touch the top of the piston.


STEP 24

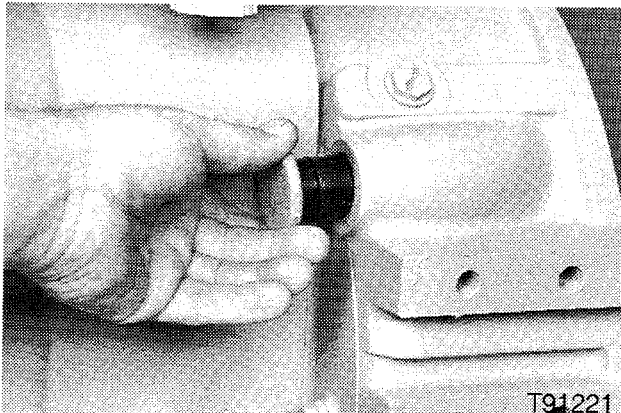

T91221

Remove the plug from the flywheel housing (if equipped).


STEP 25

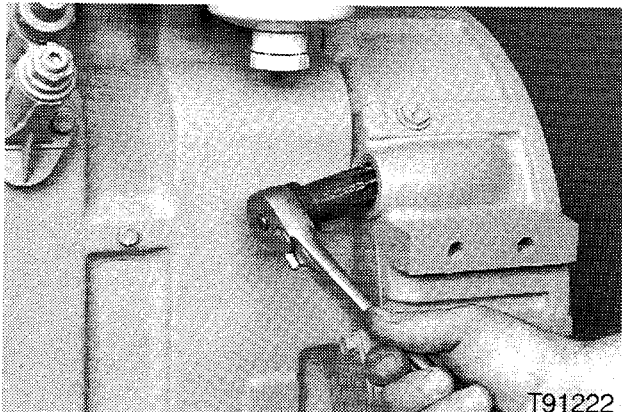

T91222

Install the engine turn over tool CAS-1690.

STEP 26

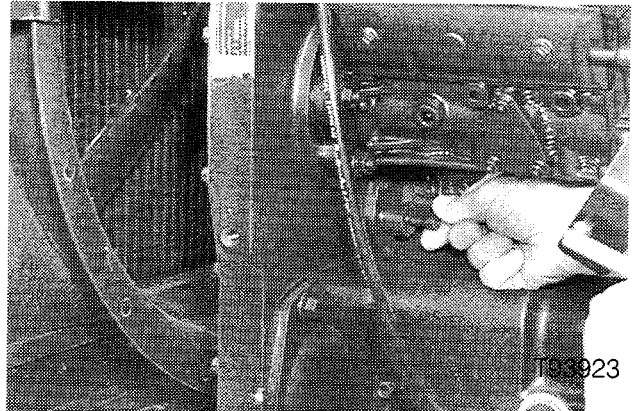


T93923

While turning the engine over with the turn over tool, CAS-1690 (if equipped) push the lock pin in. When the lock pin moves into the camshaft gear the engine will be at top center.


NOTE: Use caution when turning the engine to prevent damage to the timing pin.

STEP 27

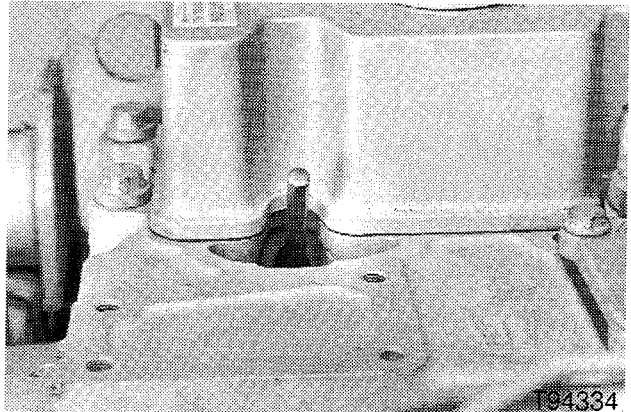


T94334


Pull the timing pin from the cam gear. Turn the engine in either direction a small amount. The probe must go down from this position. If the probe goes up when the engine is turned, timing is not correct. See Section 2425 in this manual for alignment of gears.

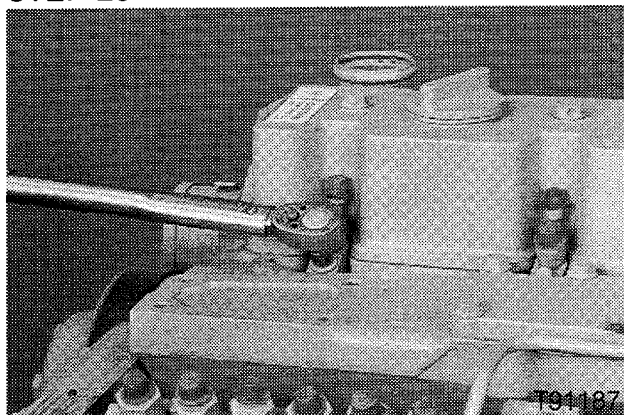STEP 28

Remove the probe from the injector bore. Install the injector with a new seal. Tighten the retaining bolt to a torque of 21 to 27 Nm.

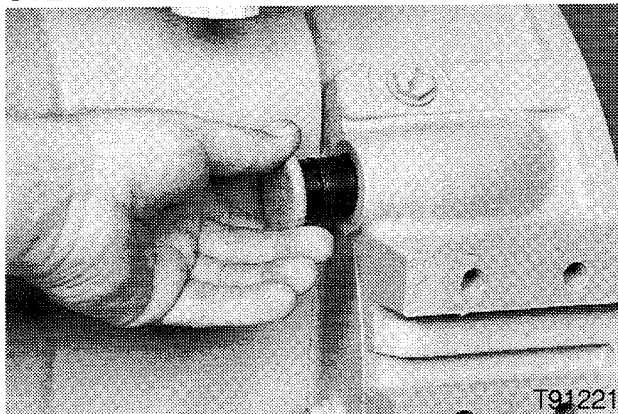STEP 30

Remove the engine turn over tool and install the plug in the flywheel housing (if equipped).

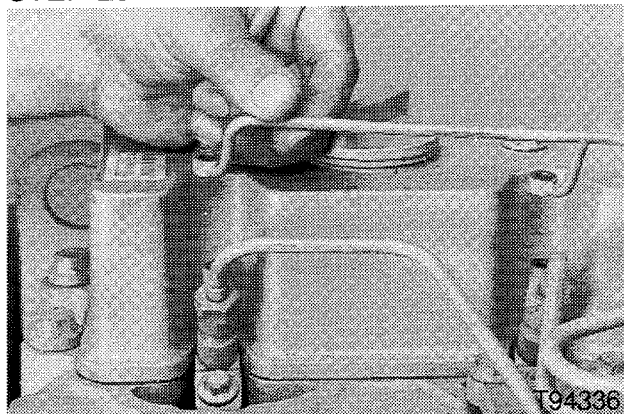STEP 29

Install the injection line and leak off line. Tighten the leak off line bolts to a torque of 8 to 10 Nm.

NOTE: The J I Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.


Section 2003

ENGINE REMOVAL

2003


ENGINE REMOVAL

STEP 1

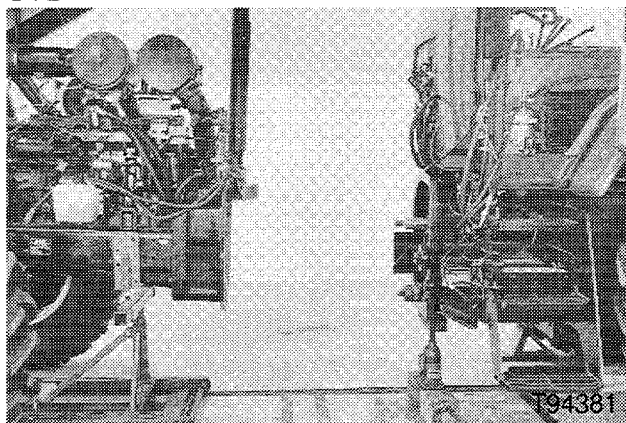

See Section 2004 in this manual and split the tractor between the flywheel housing and the transmission speed housing.


STEP 2

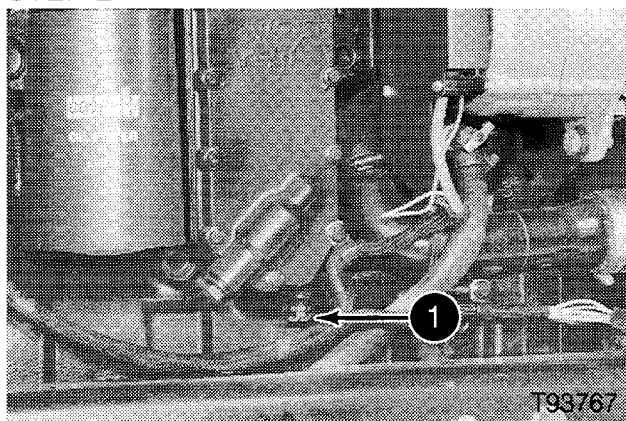

1. Block Drain Valve

Open the valve on the engine oil cooler and drain the coolant from the engine block.


STEP 3

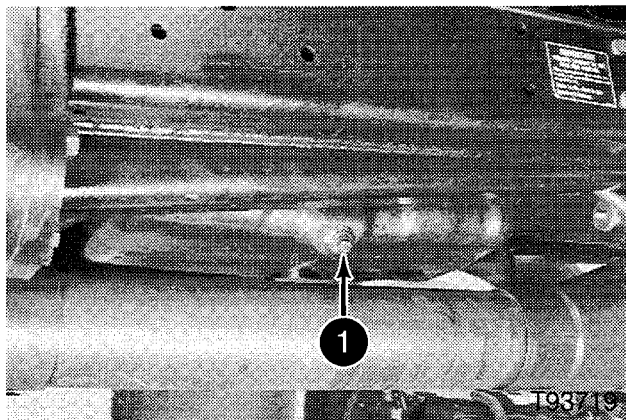

1. Drain Plug

Remove the oil pan drain plug and drain the engine oil.


STEP 4

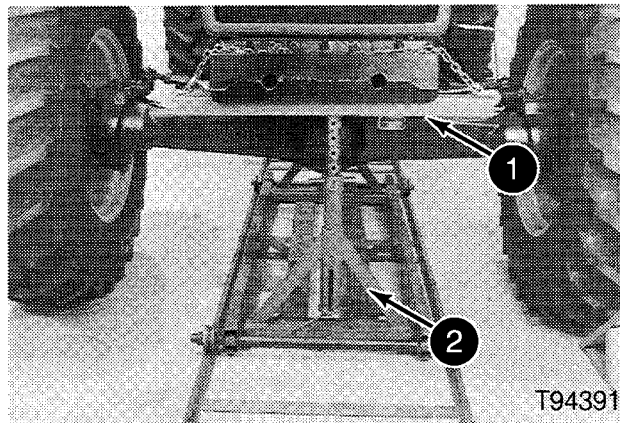

1. Adapter Bar 17-526-4A
2. Support 17-526-5 and Brace 17-526-14


Install a support 17-526-5, brace 17-526-14 and adapter bar from 17-526-4A under the weight carrier. Secure the weight carrier to the support.

STEP 5

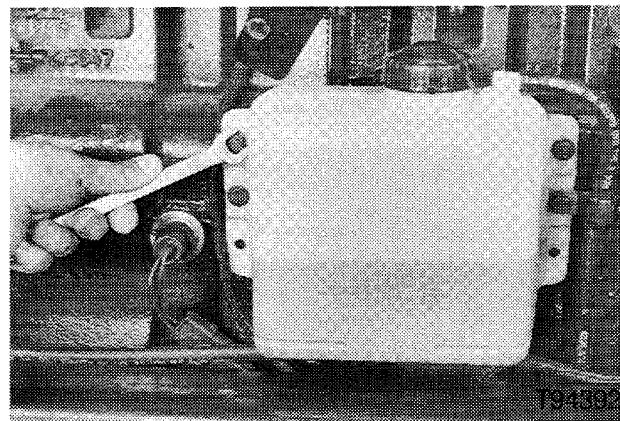


Remove the radiator reservoir from the bracket on the LH side of the engine.


STEP 6

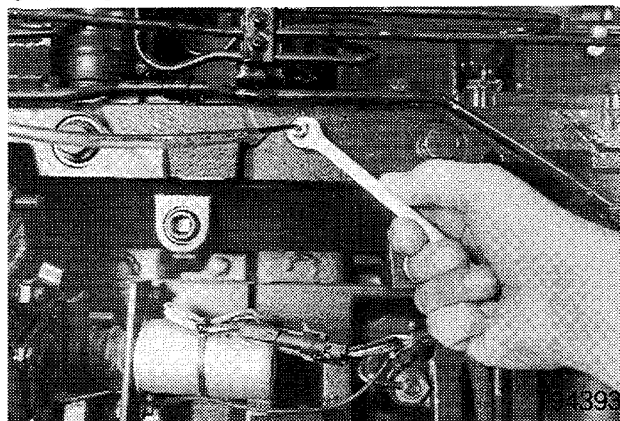


Remove the ether start hose from the fitting on the intake manifold.

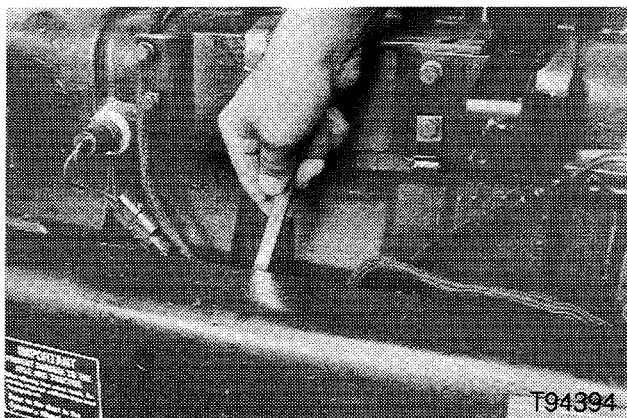STEP 7

Remove the wiring harness clamp from the inside of the LH side frame.

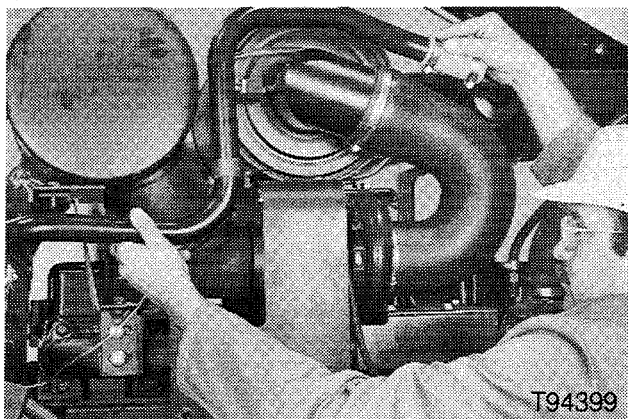STEP 8


Remove the aspirator tube.

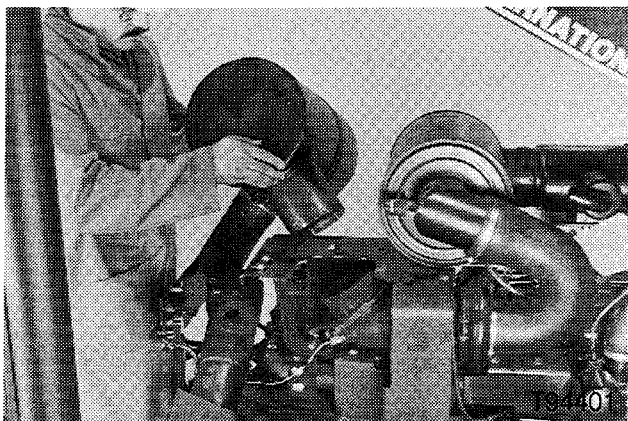STEP 9


Remove the muffler.

STEP 10

Remove the exhaust pipe.

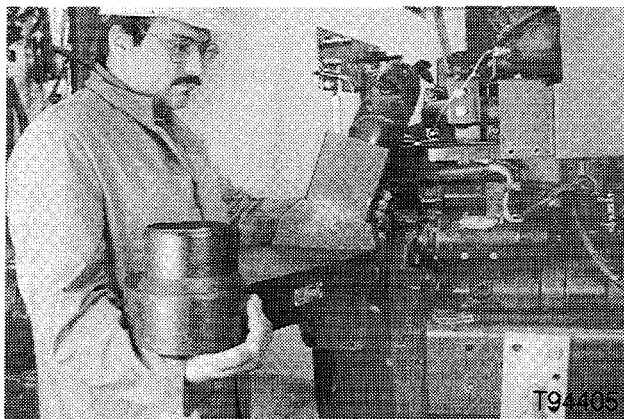
STEP 11

Remove the exhaust elbow and aspirator discharge pipe from the flywheel housing.

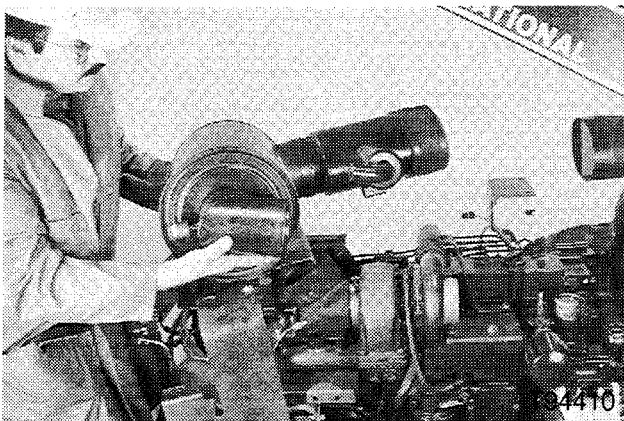STEP 12


Remove the air cleaner and strata tube from the engine.

STEP 13

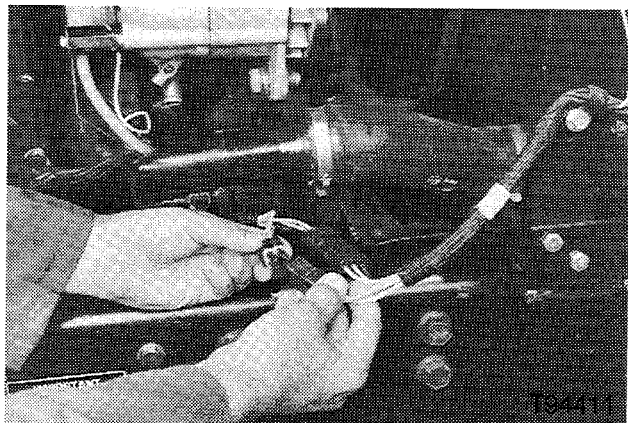


Disconnect the engine wiring harness from the front wiring harness at the RH frame rail.

STEP 14

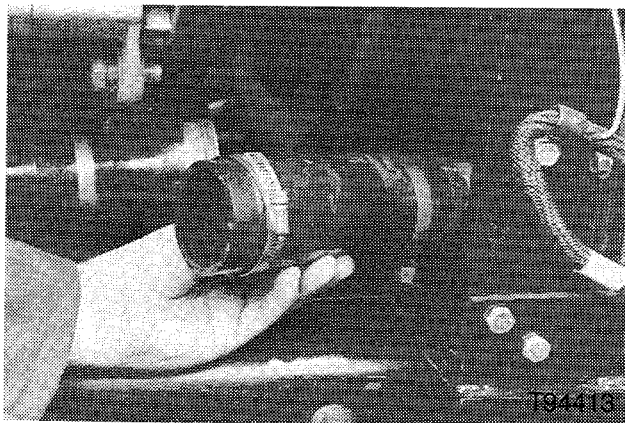

Remove the radiator hoses.

STEP 15

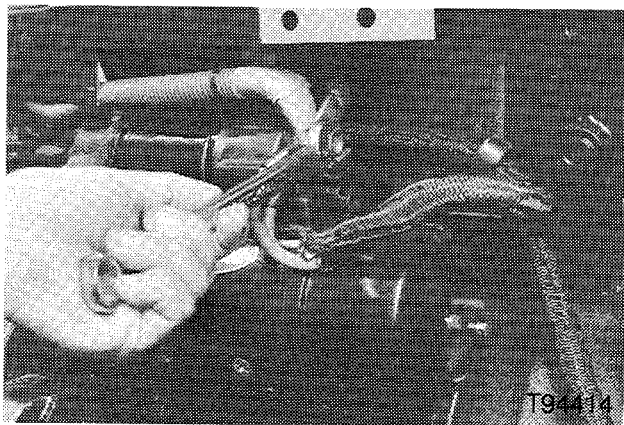


Disconnect the battery cables from the starter.

STEP 16



Remove the hood support and battery cable assembly from the flywheel housing.


STEP 17

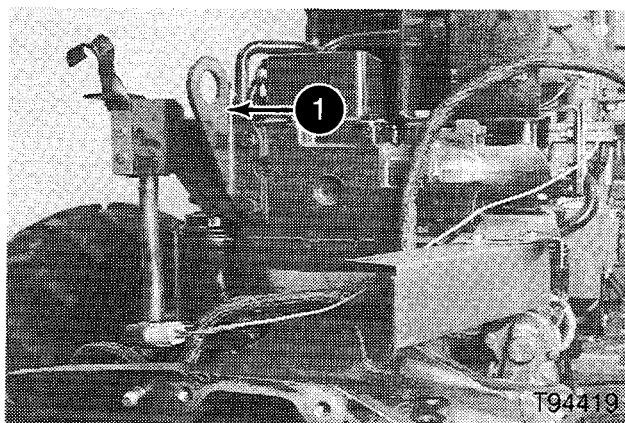


1. Lifting Bracket

Remove the side panel latch mounting bolt from the back of the engine. Move the engine lifting bracket to a vertical position.


STEP 18

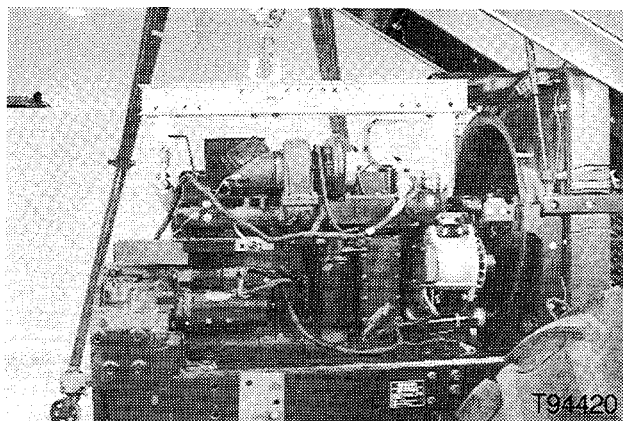


Attach a lifting sling to the engine lifting brackets and support the engine from a hoist.

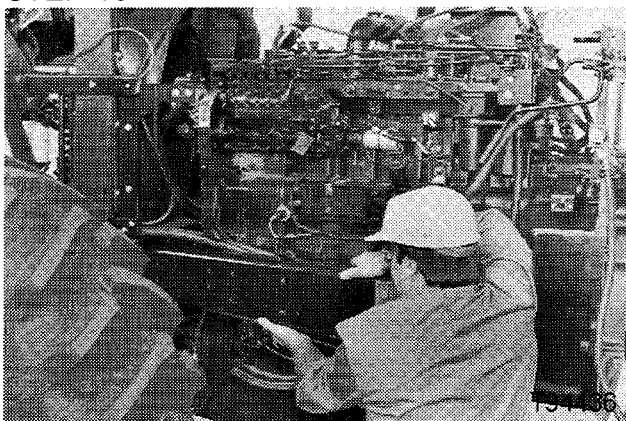STEP 19


Remove the side frames.

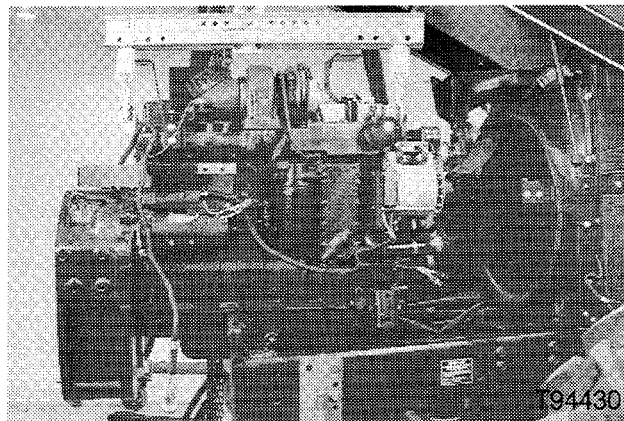STEP 20


Raise the engine, move the engine to the rear and left to clear the RH side frame.

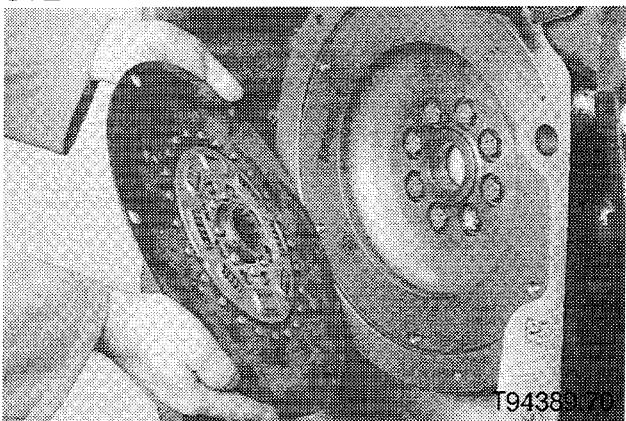FLYWHEEL HOUSING REMOVAL**STEP 21**

Remove the flex plate from the flywheel. Inspect the flex plate for broken springs or cracks. Replace the flex plate if necessary.

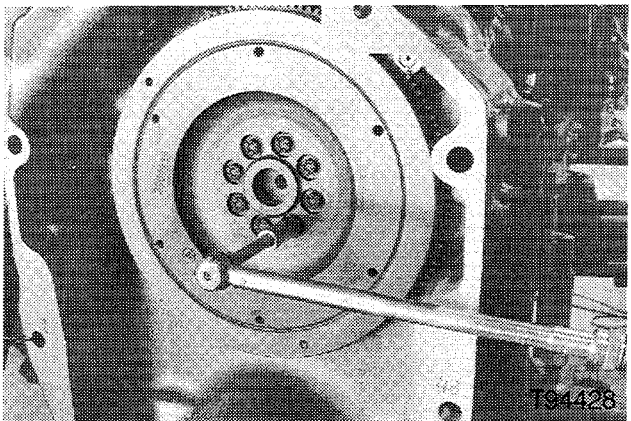
STEP 22

Remove the flywheel from the engine.

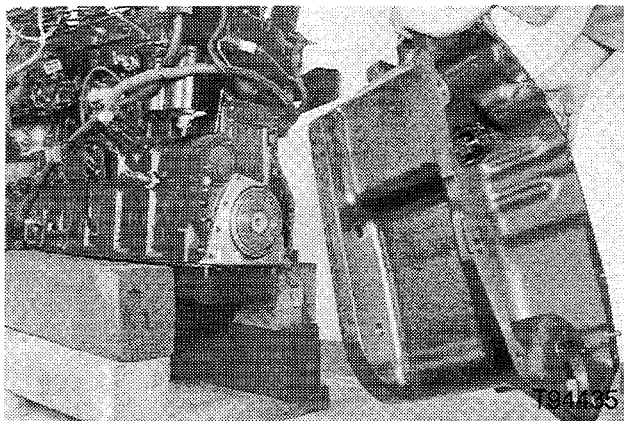STEP 23

Attach a chain and hoist to the flywheel housing and remove the housing. Install the engine on the engine repair stand.

NOTE: The starter can remain attached to the flywheel housing. Make sure that the engine wiring harness is removed from the starter.

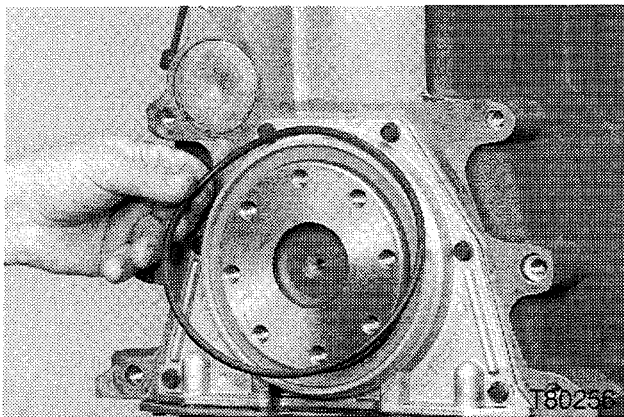STEP 24

Remove and discard the o-ring from the engine rear seal carrier.



Suggest:


If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading


FLYWHEEL HOUSING INSTALLATION

STEP 25

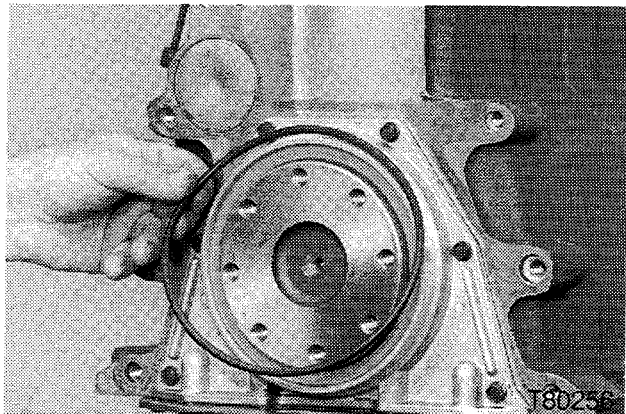


Lubricate a new o-ring with petroleum jelly and install the o-ring on the engine seal carrier.

STEP 27

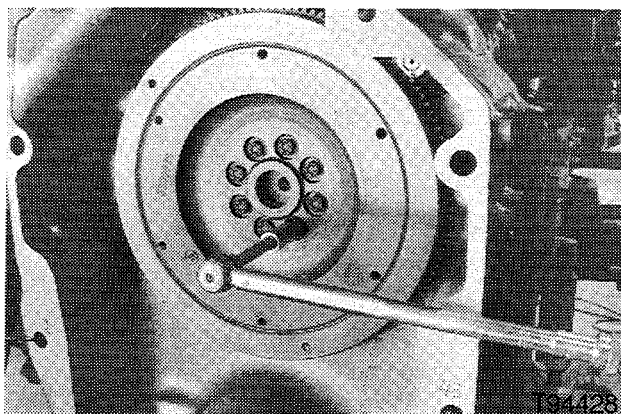


Install the flywheel on the crankshaft. Tighten the mounting bolts to a torque of 137 Nm.

STEP 26

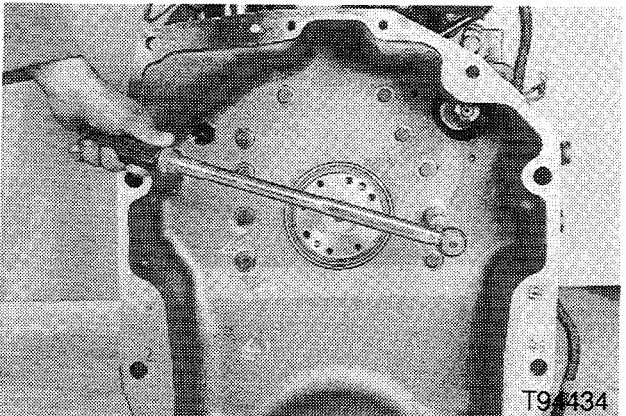

Install the flywheel housing and tighten the bolts to a torque of 60 Nm.

STEP 28

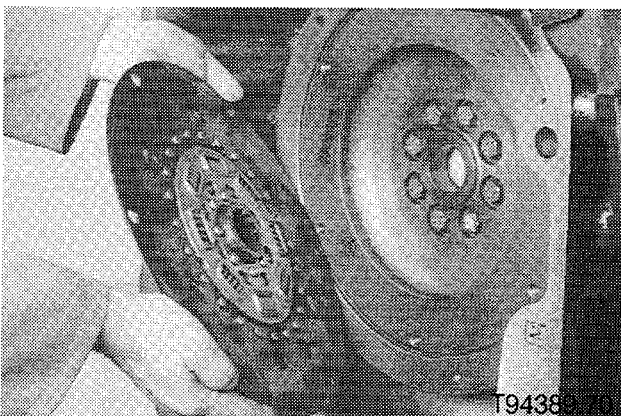

Install the flex plate on the flywheel. The side marked FLYWHEEL SIDE goes toward the flywheel.

Install the flex plate mounting bolts and washers and tighten to a torque of 94 to 106 Nm.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>