


John Deere JD500-C Loader Backhoe

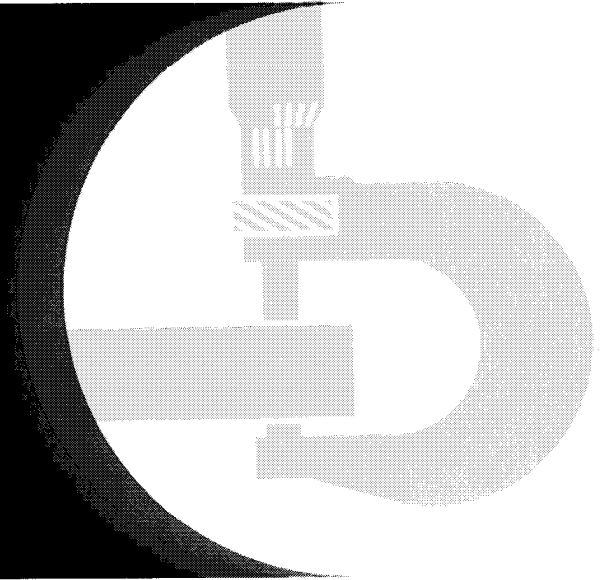

TECHNICAL MANUAL

TM-1038

Litho in U.S.A. (T) Revised

JD500-C Loader Backhoe TECHNICAL MANUAL

TM-1038 (Oct-79)

CONTENTS

SECTION 10 - GENERAL

- Group 5 - Specifications
- Group 10 - Predelivery, Delivery, and After-Sale Services
- Group 15 - Tune-Up
- Group 20 - Lubrication
- Group 25 - Separation

SECTION 20 - ENGINE

- Group 5 - Diagnosis
- Group 10 - Basic Engine
- Group 15 - Lubrication System
- Group 20 - Speed Control Linkage
- Group 25 - Cooling System
- Group 30 - Specifications and Special Tools

SECTION 30 - FUEL SYSTEM

- Group 5 - Diagnosis
- Group 10 - Fuel Tank, Transfer Pump, and Filter
- Group 15 - Air Intake System
- Group 20 - Fuel Injection Pump

SECTION 40 - ELECTRICAL SYSTEM

- Group 5 - General Information and Wiring Diagrams
- Group 10 - Charging System
- Group 15 - Starting Circuit
- Group 20 - Lights, Accessories and Instruments

SECTION 50 - POWER TRAIN

- Group 5 - Diagnosis
- Group 10 - Clutches for Collar-Shift Transmission and PTO
- Group 15 - Collar Shift Transmission
- Group 20 - Collar Shift PTO
- Group 25 - Engine Disconnect Clutch
- Group 30 - Power Shift Transmission
- Group 35 - Power Shift PTO
- Group 40 - Differential
- Group 45 - Final Drive

SECTION 60 - STEERING AND BRAKES

- Group 5 - General Information

SECTION 70 - HYDRAULIC SYSTEM

- Group 5 - General Information, Diagnosis, and Tests
- Group 6 - System Testing (Analyzer)
- Group 10 - Hydraulic Components
- Group 15 - Hydraulic Pump
- Group 20 - Power Steering
- Group 25 - Power Brakes
- Group 30 - Loader Control Valve
- Group 35 - Backhoe Control Valve (9500 and 9705)
- Group 36 - Extendible Dipperstick Control Valve and Linkage
- Group 40 - Cylinders
- Group 45 - 9500 Backhoe Swing Cylinder


SECTION 80 - MISCELLANEOUS

- Group 5 - Front Axle and Pivot Bracket
- Group 10 - Loader Frame, Boom, and Bucket
- Group 15 - Drott 4-in-1 Bucket
- Group 20 - Backhoe Frame, Boom, and Bucket (9500 and 9705)
- Group 25 - Extendible Dipperstick


INDEX

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

INTRODUCTION

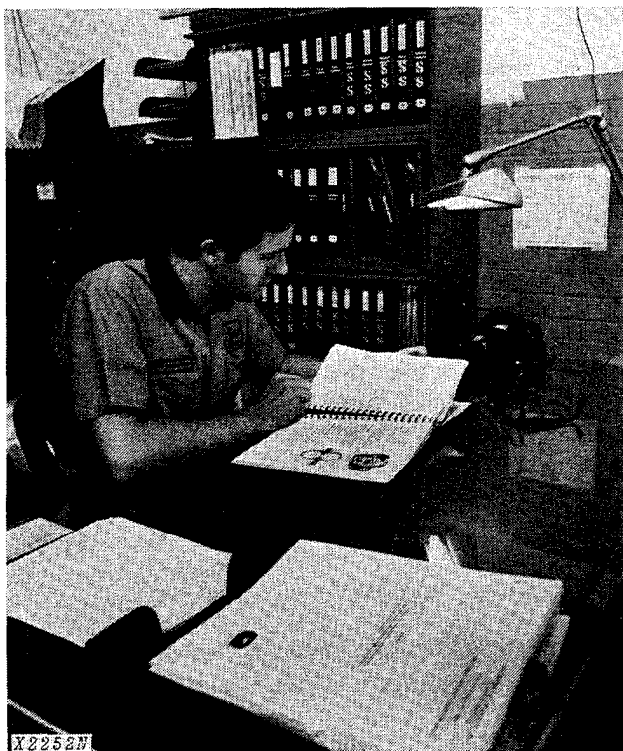

Use FOS Manuals for Reference

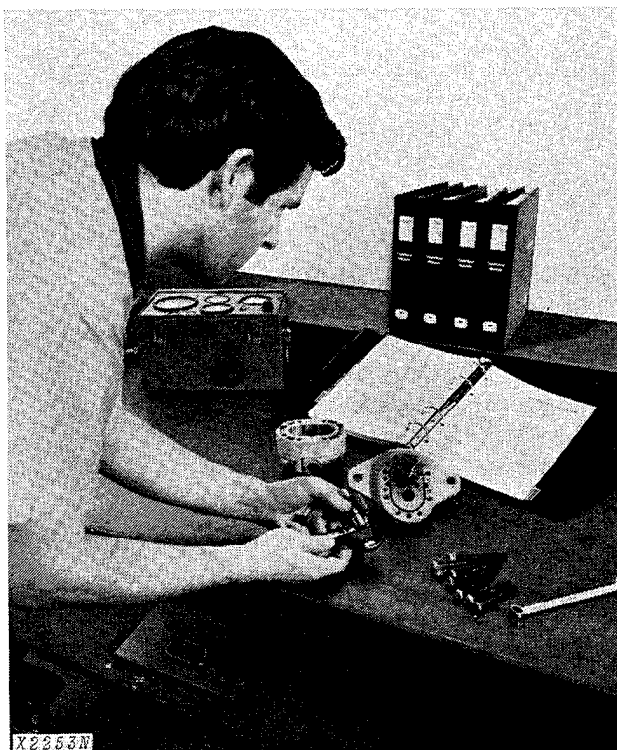

Use Technical Manuals for Actual Service

! This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

This technical manual is part of a twin concept of service:

- **FOS Manuals—for reference**
- **Technical Manuals—for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new service technicians and for reference by experienced service technicians.

Technical Manuals are concise service guides for specific machines. Technical Manuals are on-the-job guides containing only the vital information needed by a service technician.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the technical manual to identify the reference.

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Read it when you need to know correct service procedures or specifications.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 5 - SPECIFICATIONS		Transmission Hydraulic Oils	20-2
General Machine Specifications	5-2	Greases	20-2
GROUP 10 - PREDELIVERY, DELIVERY, AND AFTER-SALE SERVICES		GROUP 25 - SEPARATION	
Predelivery Service	10-1	Removing and Installing	
Delivery Service	10-16	Backhoe	25-1
After-Sale Inspection	10-16	Removing and Installing	
GROUP 15 - TUNE-UP		Loader	25-2
Preliminary Engine Testing	15-1	Removing and Installing Engine	25-3
Engine Tune-Up	15-1	Removing and Installing Engine	
Final Engine Test	15-3	from Front End	25-4
Unit Tune-Up	15-3	Removing and Installing Clutch	
GROUP 20 - LUBRICATION		Housing	25-5
Lubrication Charts	20-1	Removing and Installing Final	
Engine Lubricating Oils	20-2	Drives	25-7
		Torque Values	25-8
		Special Tools	25-8

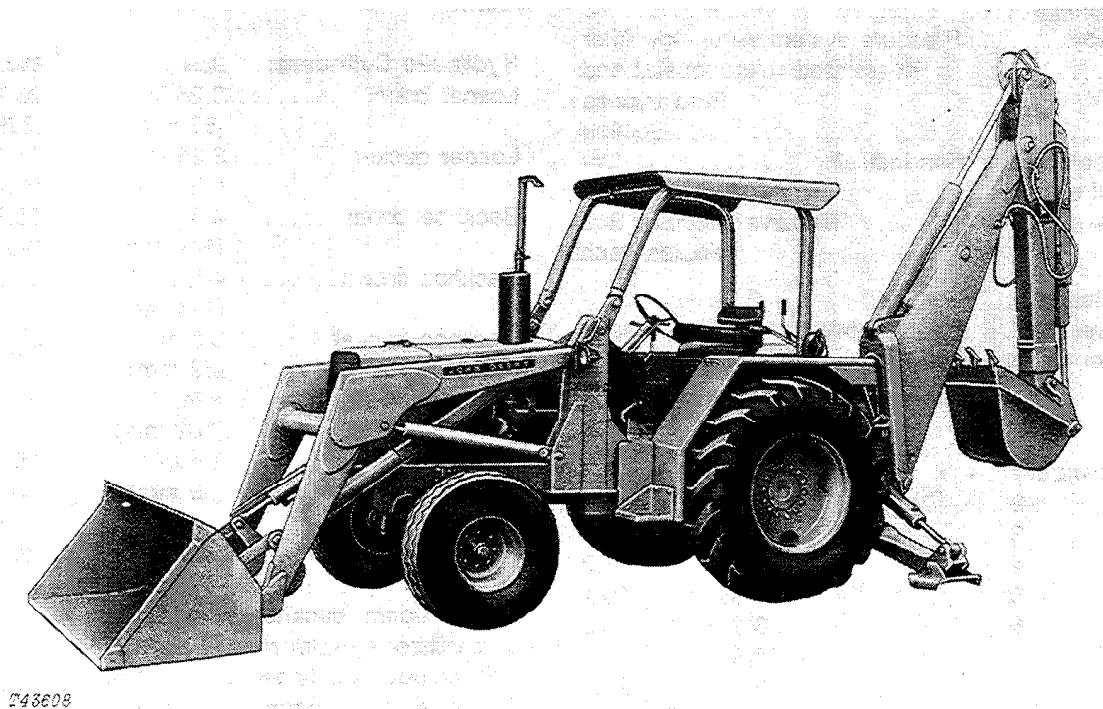


Fig. 1-JD500-C Backhoe Loader

Group 5 SPECIFICATIONS

(Specifications and design subject to change without notice. Wherever applicable, specifications are in accordance with ICED and SAE Standards. Except where otherwise noted, these specifications are based on a unit equipped with 18.4-28, 8 ply rating rear tires; 14.5/75-16, 10 ply rating front tires; 1 cu. yd. (0.76 m³) loader bucket, 24 in. (610 mm) standard backhoe bucket and standard equipment.)

Power (@ 2500 engine rpm): **SAE** **DIN**
Gross 83 hp (61.9 kW*)
Net 80 hp (59.7 kW) 85.0 PS

Net engine flywheel power is for an engine equipped with fan, air cleaner, water pump, lubricating oil pump, fuel pump, alternator and muffler. Gross engine power is without fan. Flywheel power ratings are under SAE standard conditions of 500 ft. altitude and 85°F temperature and DIN 70 020 standard conditions of 760 mm Hg barometer (sea level) and 20°C temperature.

*In the International System of Units (SI), power is expressed in kilowatts (kW).

Engine: John Deere diesel, 4-cylinder, 4-stroke cycle
Bore and stroke 4.25x4.75 in. (108x121 mm)
Piston displacement 270 cu. in. (4425 cm³)
Compression ratio 17.3 to 1
Maximum torque

@ 1300 rpm 202 lb-ft (274 Nm) (27.9 kg-m)
NACC or AMA (U.S. Tax) horsepower 28.9
Main bearings 5
Lubrication Pressure system w/full-flow filter
Cooling Pressurized w/thermostat and fixed bypass
Fan Suction
Air cleaner w/restriction indicator Dry
Electrical system 12 volt w/alternator
Batteries (two 6 volt) Reserve capacity: 340 minutes each

Transmission:

Full Power Shift. 8 speeds forward, 4 reverse: Power Shift from forward to reverse in first 4 gears.

Gear:	Travel Speeds:	
	mph	kmh
Forward 1	1.7	2.7
2	2.4	3.9
3	3.8	6.1
4	4.9	7.9
5	6.3	10.1
6	8.1	13.0
7	10.8	17.4
8	18.0	29.0
Reverse 1	2.0	3.2
2	2.8	4.5
3	4.4	7.1
4	5.7	9.2

Final Drives Inboard, planetary
Brakes ... Hydraulically power actuated, full enclosed wet-disk. Self-equalizing. Foot-operated individually or simultaneously.

Steering: Power

Turning radius (brake applied) .. 11 ft. 2 in. (3.40 m)
Loader clearance (brake applied) ... 33 ft. (10.06 m)
Number of turns, far left to far right 5

Hydraulic System: Closed-center

Pressure 2350 psi (16 203 kPa) (165.2 kg/cm²)
Loader control Single-lever
Backhoe control Two-lever
Pump ... Piston, constant pressure, variable-displacement, 38 gpm (144 L/min) @ 2500 engine rpm
Filter ... 25 micron steel-enclosed paper cartridge in return

Hydraulic Cylinders:	Bore	Stroke
Loader boom	3.25 in. (83 mm)	28.7 in. (729 mm)
Loader bucket	3.25 in. (83 mm)	16.7 in. (424 mm)
Backhoe boom	4.5 in. (114 mm)	36.7 in. (932 mm)
Backhoe crowd	4.5 in. (114 mm)	35.5 in. (902 mm)
Backhoe bucket	3.5 in. (89 mm)	27.37 in. (695 mm)
Backhoe swing	4 in. (102 mm)	9.31 in. (237 mm)
Stabilizer	3.5 in. (89 mm)	16.9 in. (429 mm)

Cylinder rods .. Ground, heat-treated, chrome-plated, polished

Loader boom, backhoe swing and stabilizer cylinder rods 1.75 in. (44 mm) dia.
Loader bucket cylinder rods .. 1.50 in. (38 mm) dia.
Backhoe crowd, boom and bucket cylinder rods 2.25 in. (57 mm) dia.

Tires:	Front	Rear
14.5/75-16.1, 10 ply rating F3		
	18.4-28, 8 ply rating, R4	
	18.4-28, 12 ply rating, R4	

Wheel Treads:

Front	66 in. (1.68 m)
Rear	65.5 in. (1.66 m)

Capacities:	U.S.	Imp.	Liters
Cooling system	4.75 gal.	4.0 gal.	18.0
Fuel tank	34 gal.	28.3 gal.	128.7
Engine lubrication, including filter	8 qt.	6.7 qt.	7.6
Transmission and hydraulic system	21.5 gal.	18.0 gal.	81.4

OPERATING INFORMATION

BACKHOE:

Digging depth (ICED):	
Maximum	15 ft. 1 in. (4.60 m)
2 ft. (610 mm) flat bottom	15 ft. (4.57 m)
8 ft. (2.44 m) flat bottom	14 ft. (4.27 m)
Swing arc	180 deg.
Lifting capacity:	
Boom at full reach and full height	1950 lb. (884 kg)
Dipper lifting, boom holding, full height	3300 lb. (1497 kg)
Digging force (bucket cylinder in power-dig position)	9650 lb. (43.25 kN) (4377 kg)
Digging force, crowd cylinder	7158 lb. (32.08 kN) (3247 kg)
Reach from center of swing mast	18 ft. 7 in. (5.66 m)
Reach from center of rear axle	22 ft. 1 in. (6.73 m)
Loading height (truck-loading position)	11 ft. 8 in. (3.56 m)
Transport height	11 ft. 8 in. (3.56 m)
Bucket rotation	Adjustable for 123, 126 or 154 deg.
Bucket positions	Adjustable for 22 or 13 deg. roll- back and 2 deg. forward

Stabilizer Width:

Transport position	7 ft. 3 in. (2.21 m)
Operating position (overall)	10 ft. 2 in. (3.10 m)
Operating position (ICED)	8 ft. 9 in. (2.67 m)

LOADER:


Rollback at ground level	40 deg.
Breakout force	7800 lb. (34.96 kN) (3538 kg)
Digging depth below ground level (with bucket level)	3.5 in. (89 mm)
Lifting capacity, full height	5300 lb. (2404 kg)
Height to bucket hinge pin	10 ft. 9 in. (3.28 m)
Maximum dump angle	60 deg.
Clearance, bucket dumped at 45 degrees	8 ft. 6 in. (2.59 m)
Reach at maximum height, bucket dumped at 45 degrees	2 ft. 10 in. (864 mm)
Raising time to full height	4.5 sec.
Bucket dump time	1.5 sec.
Lowering time (power)	3.0 sec.

Buckets:

Loader	Nominal Heaped Capacity	Width
General		
Purpose	1 cu. yd. (0.76 m ³)	89.4 in. (2.27 m)
Light		
Materials	1-1/4 cu. yd. (0.96 m ³)	89.4 in. (2.27 m)

Backhoe:	Struck Capacity	Width
Standard		
	2.5 cu. ft. (0.071 m ³)	12 in. (305 mm)
	3.6 cu. ft. (0.102 m ³)	16 in. (406 mm)
	4.4 cu. ft. (0.125 m ³)	18 in. (457 mm)
	6.0 cu. ft. (0.170 m ³)	24 in. (610 mm)
	7.6 cu. ft. (0.215 m ³)	30 in. (762 mm)
	7.2 cu. ft. (0.204 m ³)	36 in. (914 mm)
Heavy-duty		
	4.4 cu. ft. (0.125 m ³)	18 in. (457 mm)
	6.0 cu. ft. (0.170 m ³)	24 in. (610 mm)
	7.6 cu. ft. (0.215 m ³)	30 in. (762 mm)
Ejector		
	4.2 cu. ft. (0.119 m ³)	24 in. (610 mm)

JD500-C BACKHOE LOADER DIMENSIONS

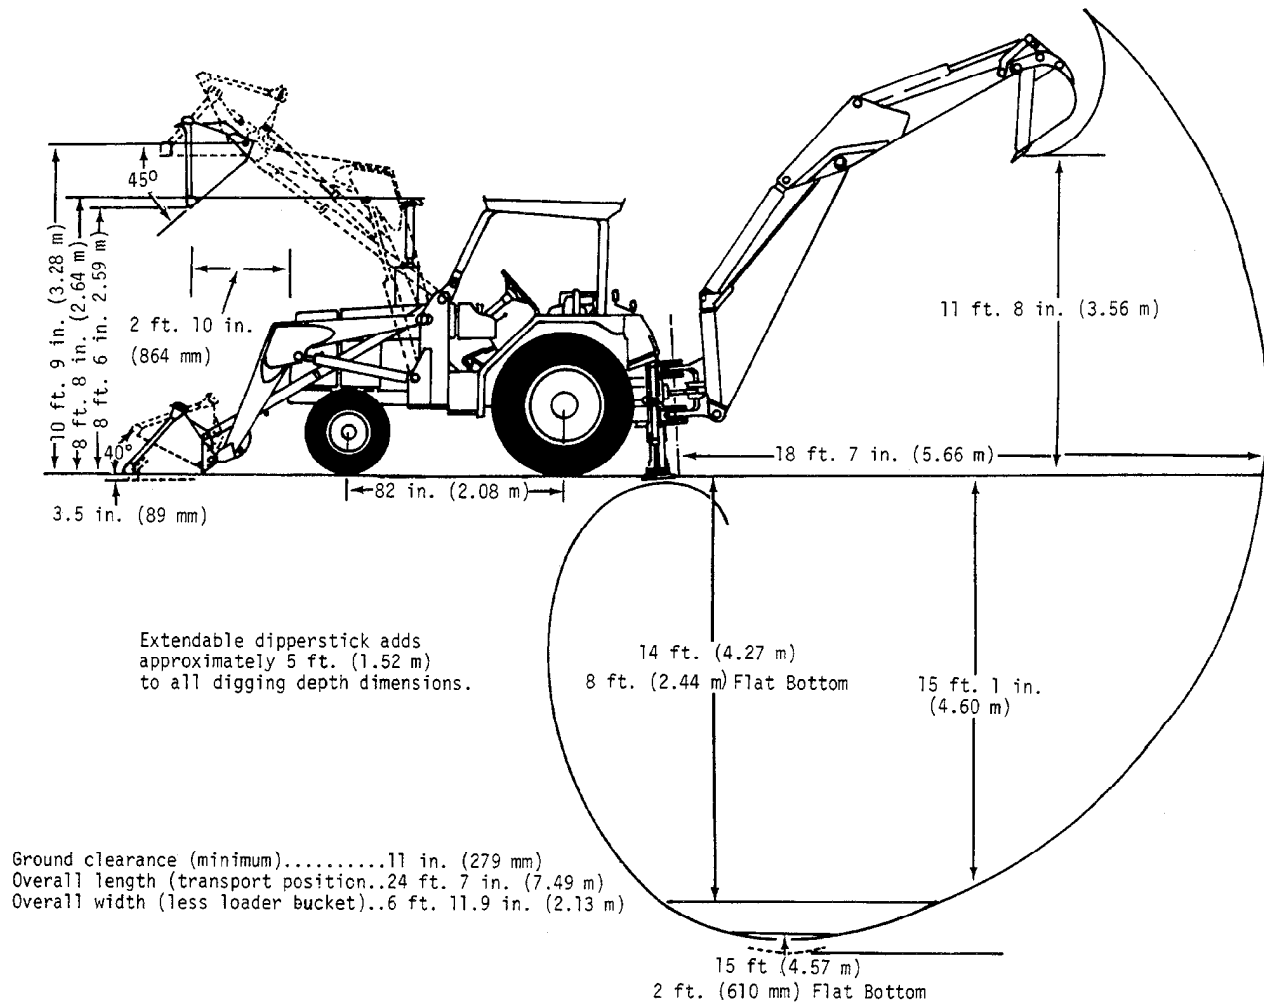

T57849N

Additional Standard Equipment:

Differential lock
Vertical muffler w/rain cap
Fuel gauge
Oil pressure indicator light
Alternator charge indicator light
Water temperature gauge
Trans. lube pressure indicator light
Flat deck w/skid-proof platform
Rear reflector
Transistorized voltage regulator
Key switch w/push-button safety start
Lights

Cold weather starting aid
Fenders
Horn
Bucket-level indicator
Electric hour meter
Foot throttle
Cigar lighter
Trans. temp. gauge
Tachometer
Hand throttle
Antifreeze
Deluxe swing-around seat
Vandal protection

Special Equipment:

Exhaust extension
ROPS w/canopy and seat belt
Steel bucket teeth for loader
Cab (includes ROPS, front windshield wiper, seat belt and exhaust extension)
Cab pressurizer
Cab heater
Cab defroster
Ripper tooth for backhoe
Bolt-on stabilizer street pads
Extendable dipperstick
Parking brake w/warning system
ADCO buckets for backhoes
Back-up alarm
Counterweights
Seat belt - 3 in. (76 mm)
Reversible stabilizer pads

SAE Operating Weight.....15,660 lb. (7 103 kg)

Group 10 PREDELIVERY, DELIVERY, AND AFTER-SALE SERVICES

TEMPORARY UNIT STORAGE

After receiving your unit from the factory and before putting the machine into temporary storage, perform the following checks and services.

For long term storage (over 30 days) information, consult your JD500-C operator's manual.

1. Check battery electrolyte level and charge the battery, if necessary.
2. Check coolant level. Maintain 1-1/2 in. above header plate in tank top.
3. Fill the fuel tank.
4. Check crankcase oil level. Oil should be between marks on dipstick after machine has been shut down for 10 minutes.
5. Relieve hydraulic pressure by stopping engine, lowering backhoe and loader to ground, and operating control levers and steering wheel until system fails to respond.
6. Reduce shipping pressure of all tires to inflation pressure shown on page 10-10-14.
7. Cover unit for protection and cleanliness.

PREDELIVERY SERVICE

Because of the shipping factors involved, plus extra finishing touches that are necessary to promote customer satisfaction, proper predelivery service is of prime importance to the dealer and the customer.

If adjustments are required, procedures are found in the after-sale section.

Use the following list when preparing a backhoe loader for delivery to the customer.


1. Cab Accessories

Check operation of windshield wiper, horn, seat belt, pressurizer, heater, defroster, dome light, etc.

<i>Cab accessories checked</i>	Yes	No
--------------------------------	-----	----

2. Lights

Check operation of all lights.

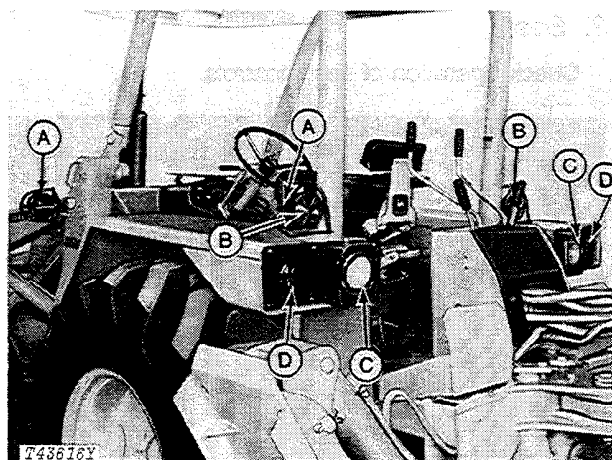

A—Loader Frame Headlights	C—Combination Rear Lamps
B—Warning Lamps	D—Reflectors

Fig. 1-Backhoe Loader Lights

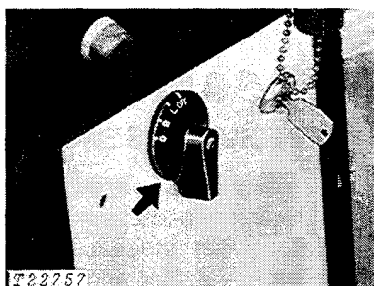


Fig. 2-Light Switch

When key switch is turned clockwise to ON, light switch will turn on all machine lights. The light switch has four positions:

"L" - To turn on all headlights (High) and rear work lights.

"B" - To turn on all headlights (High), tail lights and flashing warning lamps.


"D" - To turn on headlights (Dim), tail lights and flashing warning lamps.

"OFF" - To turn off all lights.

Lights checked Yes No

3. Seat


Check operation of seat controls.

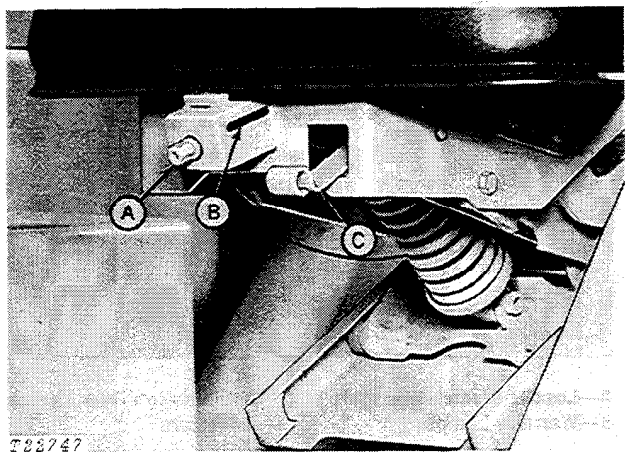

A—Weight Adjusting Screw
B—Indicator
C—Seat Release Latch

Fig. 3-Seat Controls

To move the seat up and back, stand up and lift seat release latch. The seat will move automatically to upper rear position. Sit down to return seat to preset operating position.

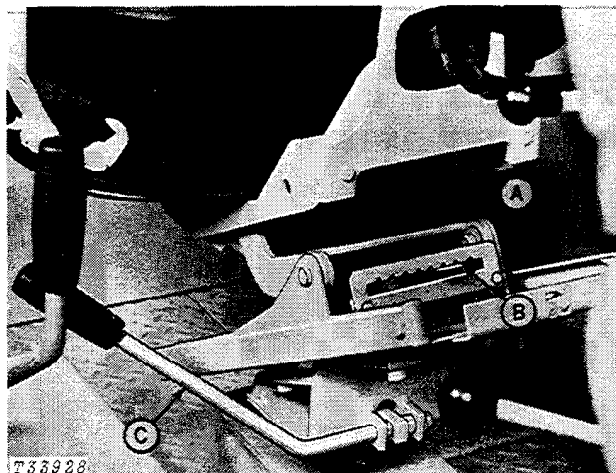

A—Counterbalance Shaft
B—Seat Position Selector Lever
C—Seat Pivot Release Lever

Fig. 4-Seat Controls

To adjust for height, move seat to upper, rear position. Then shift seat position selector lever between "short" and "tall" until pedals and levers can be operated comfortably when you are seated. The seat will always return to this position when you sit down after having moved the seat up to the rear.

To adjust for weight, turn weight-adjusting screw clockwise or counterclockwise until indicator conforms to your weight.

To change position of seat for either backhoe or loader operation, raise pivot release lever and turn seat until it locks into new position.


To change position of seat for either backhoe or loader operation, raise pivot release lever and turn seat until it locks into new position.

If seat does not move fully to rear when unlatched, adjust counterbalance spring as follows: Move seat to upper rear position. Insert a screwdriver in slot in counterbalance shaft, push in to unlatch shaft, and turn shaft counterclockwise. Align latch in end of shaft with one of the pairs of slots in the side of seat support and pull screwdriver outward to latch shaft.

Seat operation checked Yes No

4. Indicator Lights


Check operation of indicator lights. All four indicator lights (Figs. 5-8) glow when key switch is turned to ignition.

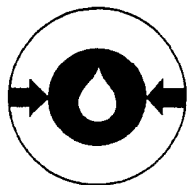

T22738

Fig. 5-Engine Oil Pressure Indicator Light


If light glows red when engine is running, stop engine immediately and determine cause.

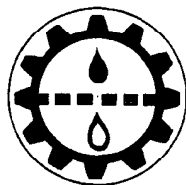

T22740

Fig. 6-Transmission Oil Filter Indicator Light

After engine starts, light may glow while transmission oil is cold. If light glows when oil is warm, stop engine and change transmission filter element.

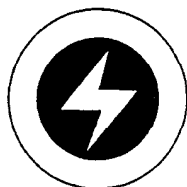

T22737

Fig. 7-Alternator Indicator Light


Light glows red when alternator is not charging. When light goes on with engine running, stop engine and determine cause.



T22739

Fig. 8-Air Filter Indicator Light

If light stays on after engine starts, clean and service air cleaner element.

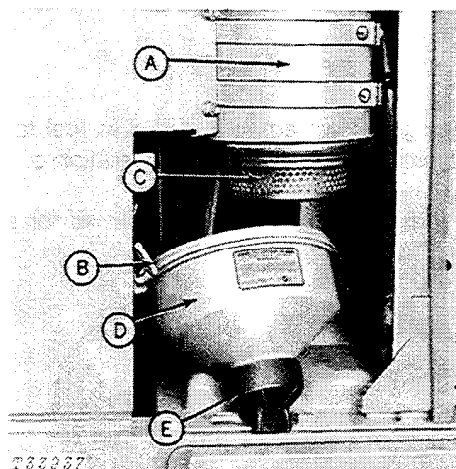

T22737


A—Air Cleaner Body
B—Clamp
C—Element

D—Dust Cup
E—Unloader Valve

Fig. 9-Air Cleaner

Check for restrictions. Replace element if necessary.

NOTE: Indicator light will not signal correctly if the element is ruptured or improperly sealed in air cleaner housing.

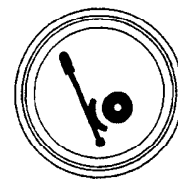

T62798N


Fig. 10-Parking Brake Indicator Light

Indicator light will glow when key switch is on and parking brake is engaged.

Indicator lights checked	Yes	No
Air filter element cleaned	Yes	No

5. Gauges

Check operation of gauges.

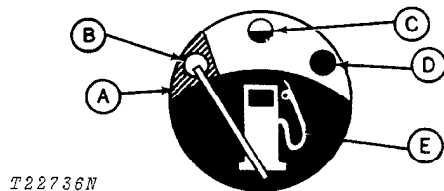


A—Warning Zone
B—Empty Tank
C—Half-Full Tank

D—Full Tank
E—Fuel

Fig. 11-Fuel Gauge

Fuel gauge shows amount of fuel in fuel tank. Fill fuel tank with proper fuel. Check operation of gauge.


Open fuel tank drain cock. Drain liquid for several seconds. Close drain cock.

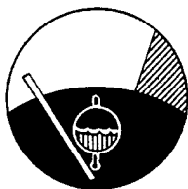

T22741

Fig. 12-Engine Coolant Temperature Gauge


White zone shows normal operating temperature. If indicator hand enters red-orange warning zone (striped area in Fig. 12), stop engine and determine cause.

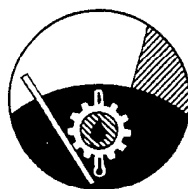

T22742

Fig. 13-Transmission Oil Temperature Gauge

White zone shows normal operating temperature. If indicator hand enters red-orange warning zone (striped area in Fig. 13), stop engine and determine cause.

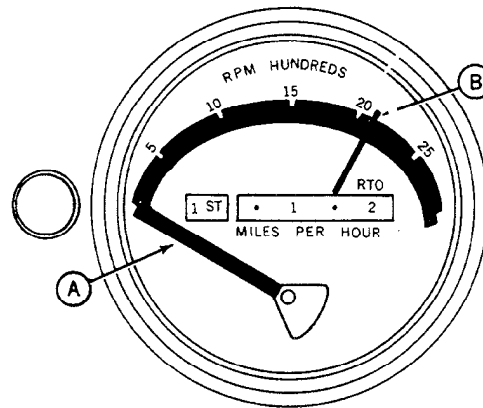

T57845N

Fig. 14-Tachometer

Pointer A shows miles per hour up to 22 mph.

Pointer B shows rpms up to 2650 rpm (fast idle).

Warm up engine and check engine speeds. Slow idle should be 800 rpm. Fast idle 2650 rpm.

If adjustment is needed, see page 10-10-20.

Gauges checked	Yes	No
Fuel tank filled	Yes	No
Fuel tank sediment drained	Yes	No
Engine speeds checked	Yes	No

6. Foot Controls

Check operation of all foot controls.

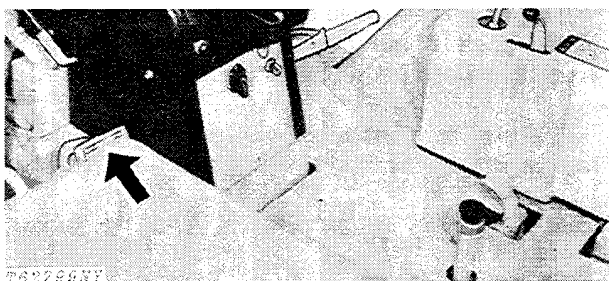


Fig. 15-Inching Pedal

While driving the backhoe loader, depress the inching pedal completely. The transmission should disengage the drive wheels.

If adjustment is needed see page 10-10-21.

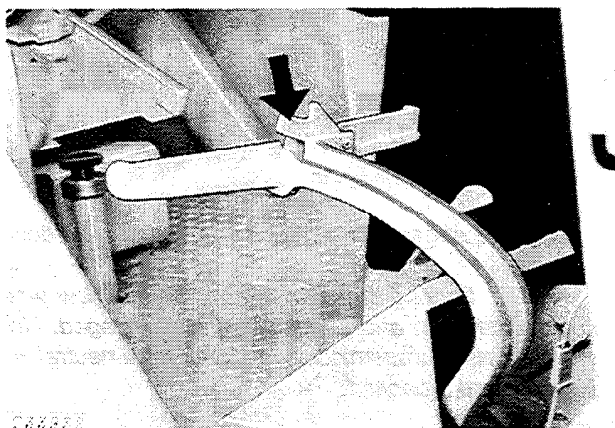


Fig. 16-Brake Pedals and Pedal Bar

Check brake system for leaks or improper operation.

Put backhoe loader in gear and depress brake pedal. Moderate pedal force should hold backhoe loader in place.

If pedal force does not hold backhoe loader in place, pedal feels spongy or bottoms out, repair is required, or system may require bleeding (page 10-10-21).

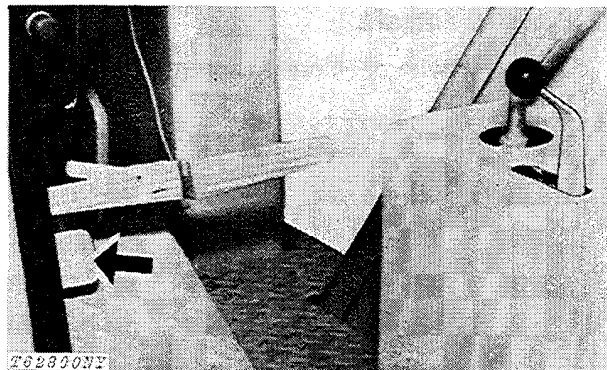


Fig. 17-Foot Throttle

Use foot throttle to speed up engine quickly. When foot throttle is released, engine speed returns to hand throttle setting.

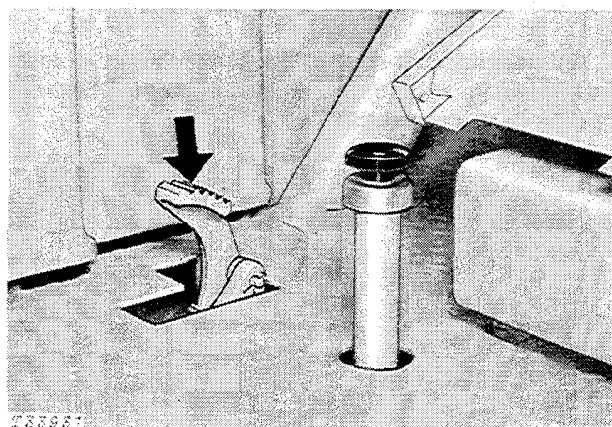


Fig. 18-Differential Lock Pedal

Run the engine. Put the transmission in park. Engage the differential lock. Turn the steering wheel. If the differential lock is working correctly, resistance will be felt.

To disengage differential lock, depress one or both brake pedals.

CAUTION: Do not attempt to turn or operate at high speed with differential lock engaged.

Foot controls checked

Yes No



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

7. Hand Controls

Check operation of all hand controls.


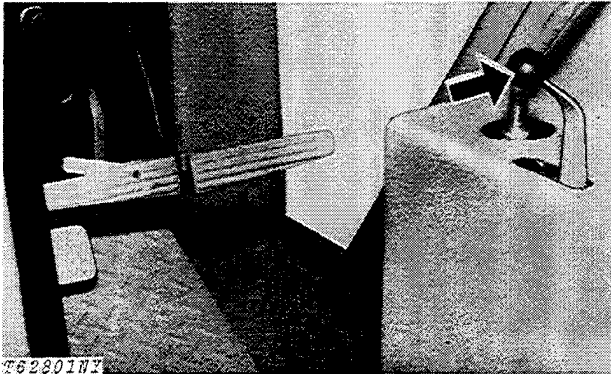


Fig. 19-Hand Throttle

Push throttle forward to speed up engine.

An adjustable throttle stop on the throttle lever bracket limits engine speed to 2200 rpm. The hand throttle can override this stop.

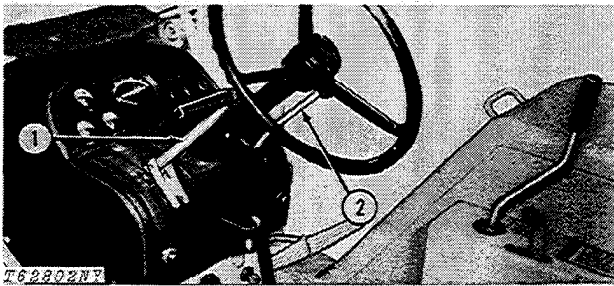

1—Reverser Lever 2—Transmission Shift Lever

Fig. 20-Transmission Shift Controls

Check operation of transmission in all gears.

The power shift transmission can be shifted "on the go" or when the machine is stopped by moving the shift lever and reverser lever to the desired position. It is not necessary to use inching pedal when starting out or when shifting.


To move forward, push reverser lever into forward position and move shift lever to desired gear. Shift one gear at a time.

To reverse the machine when operating in one of the first four gears, pull the reverser lever rearward to the reverse (R) position. When shift lever is in 5th gear or higher, the reverser lever cannot be put in reverse.

A backup alarm sounds at intervals when machine is operated in reverse.

Reduce engine speed before making sudden speed changes. Use hand rail beside shift lever to aid shifting when traveling over rough ground.

The transmission speed of shift may be adjusted for rapid shift or smooth shift. See page 10-10-23.

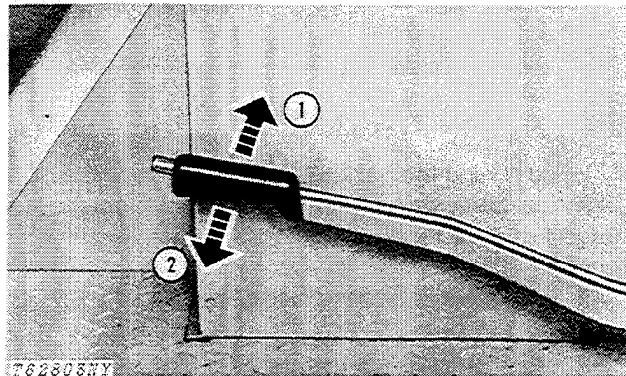

1—Engaged

2—Disengaged

Fig. 21-Parking Brake

1. To engage, pull up.

2. To disengage, press button and push lever down.

NOTE: Parking brake warning light will glow when key switch is on and parking brake is engaged. Horn will blow also if transmission is shifted from neutral with parking brake applied.

If adjustment is needed, see page 10-10-23.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>