

940, 1040 and 1140 Tractors



OPERATORS MANUAL

940, 1040 and
1140 Tractors

OML34725 Issue B4 English

John Deere Werke Mannheim
OML34725 Issue B4

LITHO IN U.S.A.
ENGLISH





INSPECTIONS

We appreciate the confidence you have shown in John Deere and your John Deere dealer for the purchase of this equipment.

We want you to have the best performance from your new machine. To accomplish this, your dealer will perform a Predelivery Inspection and will familiarize you with the proper and safe operation of this machine.

After the machine has operated the first 100 hours, you should contact your dealer and arrange an appropriate date at which the After-Sale Inspection will be performed. It will be performed most effectively in the workshop of your dealer.

Your dealer completed the predelivery inspection according to the check list, while at the end of this manual you will find the After-Sale Inspection check list.

These check lists will be completed by your dealer while the inspections are being performed. He will then forward the original and one copy of each inspection list to the John Deere Sales Branch Service Department, retaining the second copy for his files. The dealer will confirm completion of these inspections on that portion of the check list which remains in this manual.

The After-Sale Inspection is an important prerequisite to assure best performance of your new machine. For this reason you should not miss **THE OPPORTUNITY** to make proper arrangements with your dealer to get this service done at the proper time.

SAFETY



CAUTION: This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

IMPORTANT: This machine is designed and manufactured according to **JOHN DEERE** specifications. To avoid accidents and to assure optimum performance the machine must not be modified or altered in ways not approved by **JOHN DEERE**, nor must it be used in conditions or for purposes it is not designed for.

To assure safe operation of this machine, read the Safety Rules on the first pages of this manual.

MEASUREMENTS

Your operator's manual contains the international standardized SI metric measurement system.


DIRECTION

Right-hand and left-hand sides of this machine are determined by facing in the direction of forward travel.

SERIAL NUMBERS

Record the serial numbers of your machine on pages provided at the end of this manual and provide this information to your dealer when ordering spare parts.

Identification Views

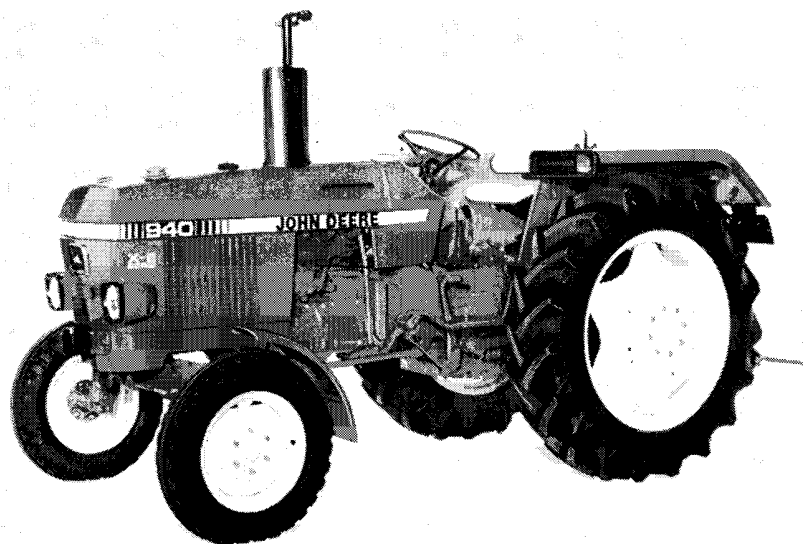

L103 959



L103 960

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

INDEX	IV	OPERATOR'S PLATFORM AND CAB	35
SAFETY RULES	2	Operator's seats	35
General	2	Roll guard	36
Operation	4	Seat belt	36
Service	5	Windshield wipers and windshield washer system	36
CONTROLS AND INSTRUMENTS	7	Heater and fan	37
Controls	7	Cleaning cab air filters	37
Instrument cluster	8	Checking torques for hardware	37
BREAK-IN PERIOD	9	WHEEL TREADS	38
After the first 4 and 8 hours	9	Adjusting front wheel tread	38
After the first 50 hours	10	Checking front wheel toe-in	41
After the first 100 hours	10	Adjusting front wheel toe-in	41
Within the first 100 hours	10	Adjusting rear wheel tread	42
REDUCE FUEL CONSUMPTION	11	TIRES	44
OPERATING THE ENGINE	13	Tire pressures	44
Prestarting check	13	Servicing tires	44
Starting the engine	14	Tire combinations	45
Ether starting aid	15	BALLAST	46
Thermostart starting aid	16	Measuring rear wheel slip	47
Starting with a booster battery	16	Rear wheel weights	47
Towing the tractor to start	17	Installing rear wheel weights	48
Towing the tractor	17	Installing front weights	48
Parking the tractor	18	Filling tires with liquid ballast	49
Stopping the engine	18	ROCKSHAFT	51
GROUND TRAVEL SPEEDS	19	Control lever	51
At desired engine speed	19	Selector lever	53
At rated engine speed	20	Rate-of-implement drop	54
OPERATING THE TRACTOR	27	THREE-POINT HITCH	55
Shifting gears	27	Draft links	55
Hi-Lo shift unit	28	Center link	58
Creeper transmission	28	Lift links	59
Front wheel drive	29	Attaching implements	60
Differential lock	29	Positioning sway blocks	61
Foot brakes	30	Stabilizer chains	61
LIGHTING SYSTEM	31		
"Bilux"	31		
"Sealed-Beam"	34		

Contents

SELECTIVE CONTROL VALVES	62	Every 2000 hours	104
Spool type	62	Every spring and autumn	104
Transport lock	62	Every 2 years	105
Poppet-valve type	63	FUEL SYSTEM	107
Float position	63	Bleeding the fuel system	107
Rate of cylinder operation	63	Draining the water trap	107
Hydraulic hose couplers	64	ELECTRICAL SYSTEM	108
Quick-couplers	64	Alternator	108
Breakaway couplers	65	Dangers when handling batteries	109
Maximum permissible oil withdrawal	66	Checking specific gravity	109
DOUBLE-ACTING REMOTE HYDRAULIC CYLINDER	67	Removal of batteries	110
POWER TAKE-OFF	68	Installing the batteries	111
PTO guard	68	Starting motor	111
Operation of continuous-running PTO	68	Fuses	112
Operation of independent PTO	70	TRACTOR STORAGE	113
Changing independent PTO shafts	70	Removing tractor from storage	114
Handshift PTO speed change	71	TROUBLE SHOOTING	115
Attaching PTO driven equipment	72	Hydraulic system	115
HITCHES AND DRAWBARS	73	Engine	116
Swinging drawbar	73	Electrical system	117
Lengthwise adjustment of drawbar	73	SPECIFICATIONS	118
Drawbar for three-point hitch	74	Engine	118
Clamps to prevent drawbar rotation	74	Maximum permissible axle loads and weights	119
Extended drawbar	74	Electrical system	120
Front hitch	74	Capacities	120
Front hitch with front weights	75	SERIAL NUMBERS	121
Swinging trailer hitch	75		
Hydraulic trailer hitch	76		
FUEL, LUBRICANTS AND COOLANT	77		
Fuel	77		
Fuel storage	77		
Engine oil	78		
Transmission/hydraulic oil	78		
Transmission oil for MFWD front axle	79		
Multipurpose grease	79		
Engine coolant	80		
LUBRICATION AND PERIODIC SERVICE	81		
Removing grille screens	81		
Removing hood	81		
Service timeable	82		
Service	86		
As required	86		
Every 10 hours	91		
Every 50 hours	93		
Every 100 hours	95		
Every 200 hours	97		
Every 500 hours	99		
Every 1000 hours	101		

Index

A

Adjustable front axle	38
Adjusting front wheel toe-in	39
Adjusting front wheel tread	38
Adjusting rear wheel tread	42
Air cleaner indicator light	8
Alternator	108
Alternator indicator light	8

B

Ballast	46
Batteries	109
Bleeding brakes	88
Bleeding fuel system	107
Breakaway couplers	65
Break-in period	9

C

Circuit protection ("Sealed-Beam")	112
Checking front wheel toe-in	41
Checking wheel retaining bolts	9
Clutch pedal adjustment	90
Cold weather starting aids	14
Coolant temperature gauge	8
Cooling system	105
Controls	7
Creeper transmission	28
Control lights	8

D

Differential lock	29
Drawbars	73
Double-acting remote hydraulic cylinder	67

E

Electrical system	108
Engine coolant	80
Engine oil	78
Engine speeds	100
Engine warm-up period	17

F

Filling tires with liquid ballast	49
Front wheel drive	29
Front wheel steering angle limit	41
Fuel, lubricants and coolant	77
Fuel filter	102
Fuel gauge	8
Fuel injection nozzles	104
Fuel system	107
Full beam indicator light	8
Fuses ("Bilux")	112

G

Grease	79
Ground travel speeds	19 to 26

H

Handbrake adjustment	89
Heater and fan	37
Hi-Lo shift unit	28
Hitches and drawbars	73
Hydraulic foot brakes	30
Hydraulic hose couplers	64
Hydraulic trailer brake	30

I, L

Identification views	1
Instrument cluster	8
Instruments	8
Lighting system	31
Lubricants	79
Lubrication and maintenance records	123
Lubrication and periodic service	81

Index

M

Maximum permissible oil withdrawal	66
Measuring rear wheel slip	47
Mechanical front wheel drive, oil	79

O

Oil pressure indicator light, engine	8
Oil pressure indicator light, transmission	8
Operating the engine	13
Operating the tractor	27
Operator's seats	35
Operator's platform and cab	35

P

Parking the tractor	18
Periodic service timetable	86
-As required	86
-Daily or 10-hour	91
-50-hour	93
-100-hour	95
-200-hour	97
-500-hour	99
-1000-hour	101
-2000-hour	104
-Every spring and autumn	104
-Annually	104
-Every two years	105
Power take-off	68

R

Range shift lever positions	27
Rear wheel treads	42
Reduce fuel consumption	11
Remote hydraulic cylinder	67
Removing tractor from storage	114
Rockshaft	51
Roll guard	36

S

Safety rules	2
Seat belt	36
Selecting gears	19
Selecting correct ground travel speeds	15
Selective control valves (spool type)	62
Selective control valves (poppet valve type)	63
Serial numbers	121
Service	86
Shift lever positions	27
Shifting transmission	27
Specifications	118
Speed-hour meter	8
Starting motor	111
Starting the engine	13
Stopping the engine	18
Storage, tractor	113
Steering angle limit	41

T

Three-point hitch	55
Tires and tire pressures	44
Toe-in, front wheel	41
Towing the tractor to start	17
Towing the tractor	17
Trailer brake	30
Transmission/hydraulic oil	78
Travel speeds	19
Tread adjustment	38
Trouble shooting	115

W

Warm-up period	17
Water trap	107
Wheel treads	38
Windshield wipers and windshield washer system	36


Safety Rules(General)

AVOID TRACTOR RUNAWAY

1. Do not start engine by shorting across starting motor terminals. With gear engaged machine will immediately start to move.

Never attempt to start or operate tractor except from operator's station. When starting the tractor make sure transmission is in neutral or "park" position.

2. When servicing front-wheel drive tractor with rear wheels supported off ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission-hydraulic system pressure will engage front driving wheels, pulling rear wheels off support if front wheels are not raised. Under these conditions, the front-drive wheels can engage even with switch in disengaged position.


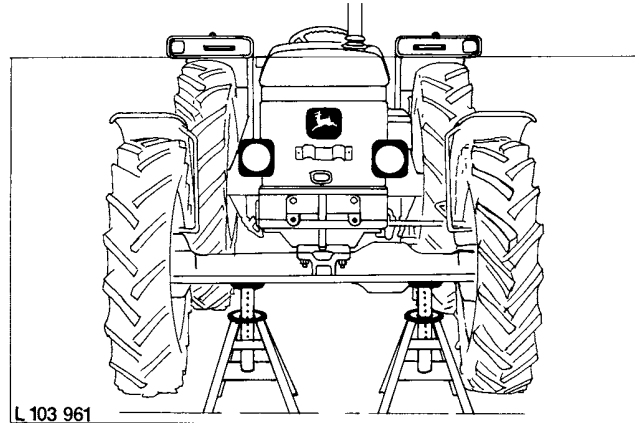


L103961-940ALE-310883

BE INFORMED

1. Do not put this operator's manual away unread. Read the manual carefully regardless of your previous experience. Allow yourself this time, it will save you time and labour later on.

2. Be prepared in case of accident or fire. Keep first aid kit and fire extinguisher handy. Be acquainted with correct handling of the fire extinguisher.

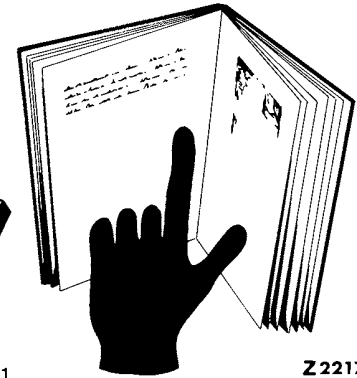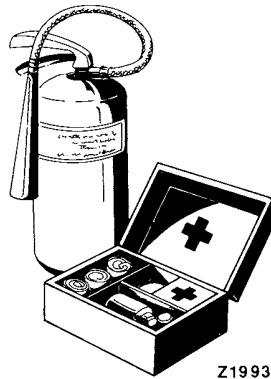

Z19931,Z22172-1640ALE-251182

WEAR SUITABLE CLOTHING

Clothing worn by operator must be fairly tight and belted. Loose jackets, shirts or ties must never be worn.



Z 20912


Z20912-1640ALE-251182

HANDLING FUEL

Always shut off engine before refilling fuel tank.



CAUTION: Smoking is strictly forbidden when handling fuel.

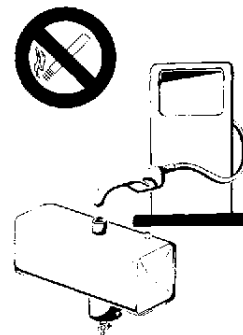


20923

Z20923-1065AZE-261081

NOISE PROTECTION

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

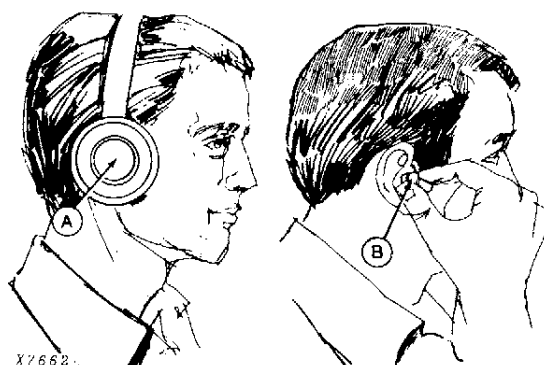


X7662

X7662-1065AZE-261081

SAFETY ON PUBLIC ROADS



CAUTION: Always comply with local traffic regulations when driving on public roads.

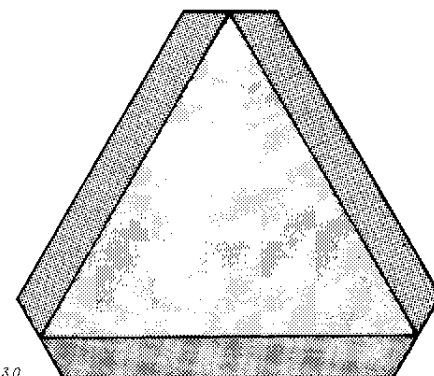


H28930

H28930-1065AZE-261081

HANDLE CHEMICALS PROPERLY

The operator's cab air filters (A) are not designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.

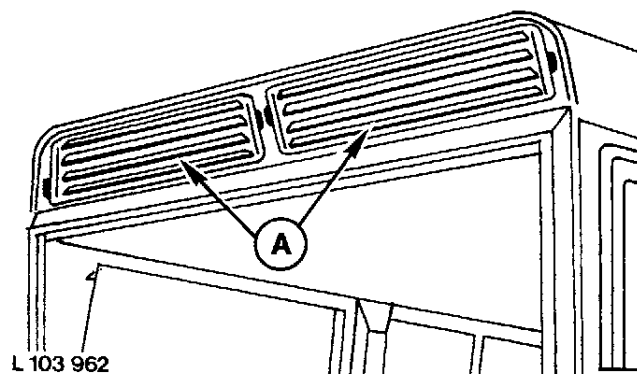

L 103 962


L103962-940ALE-310883

Safety Rules(Operation)

OPERATING THE ENGINE

Before starting the engine make sure there is plenty of ventilation. Never operate the engine in a closed building. Danger of asphyxiation!

When starting the engine rockshaft control lever must be in "lower" position.

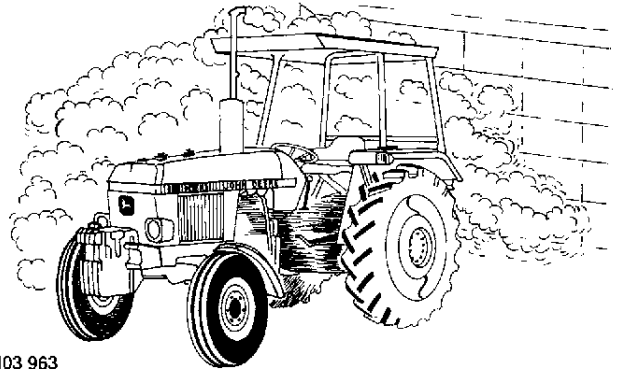


L 103 963

L103963-940ALE-310883

ROLL GUARD

A protective roll guard is incorporated in the operator's cab. On this construction, as well as on the roll guard on tractors without an operator's cab, do not, under any circumstances, modify structural members by welding on additional parts, drilling holes, grinding etc. Disregarding this instruction reduces stability of the roll guard.

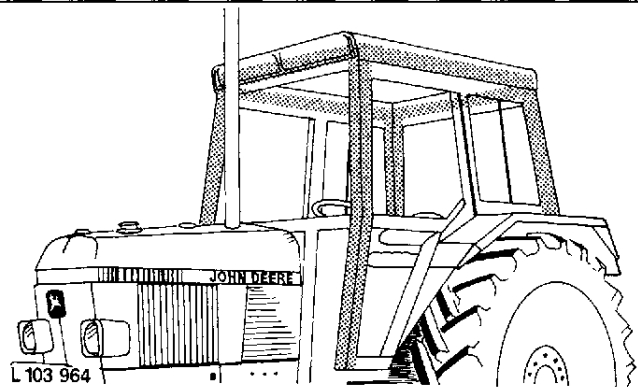


L 103 964

L103964-940ALE-310883

PTO DRIVE

High-inertia implements do not become stationary immediately when PTO control lever is shifted to disengaged position. Allow sufficient time for implement to "coast down" to a halt after having disengaged the PTO.

Make sure PTO drive shaft guard is installed.

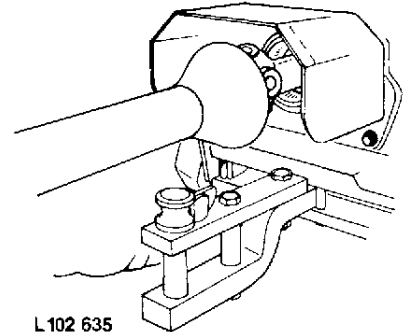


L 102 635

L102635-1640ALE-271282


PARKING THE TRACTOR

Before leaving the tractor lower any equipment to the ground.

When parking on a slope, place chock behind a rear wheel.

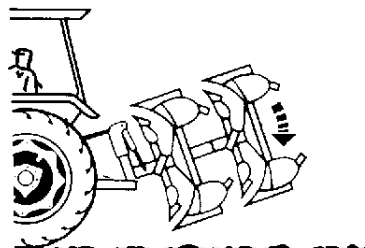

L 103 965

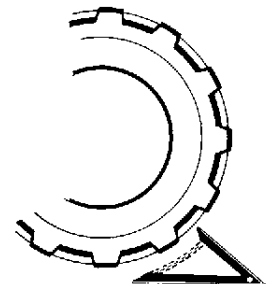

L102 637

L103965,L102637-940ALE-310883


Safety Rules(Service)

SERVICE - GENERAL

Do not service the tractor while the engine is running.

Reinstall all shields and guards removed for servicing and make sure they are in a servicable condition.

Have adjustments carried out by trained personnel only.

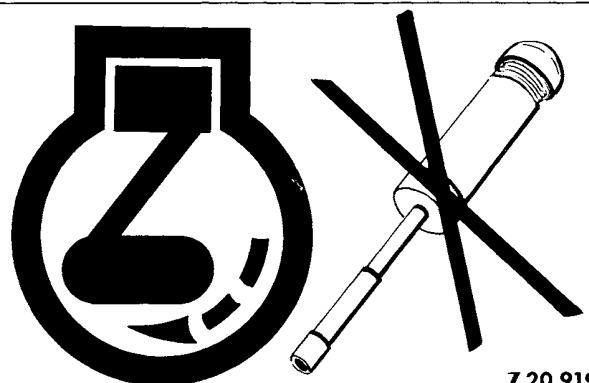


Z 20 919

Z20919-1640ALE-271282

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure (fuel or hydraulic oil) can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure. Use a piece of cardboard or wood to search for leaks. Do not use your hand.

If any fluid is injected into the skin, consult a doctor immediately, otherwise this may result in a serious infection.

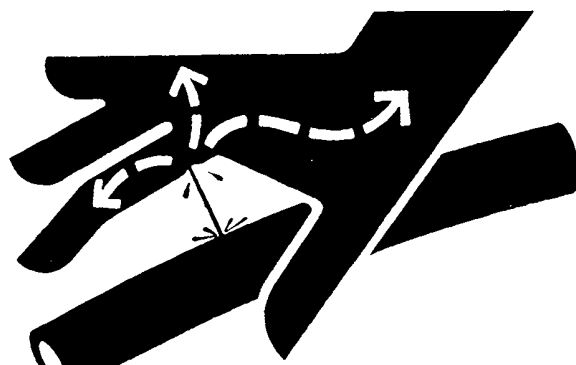


L 102 134

L102134-1640ALE-271282

SERVICE COOLING SYSTEM SAFELY

Remove radiator cap carefully when engine is hot. With engine shut off, turn radiator cap to first stop to relieve pressure before removing it completely.

Top up radiator with coolant with engine stationary.

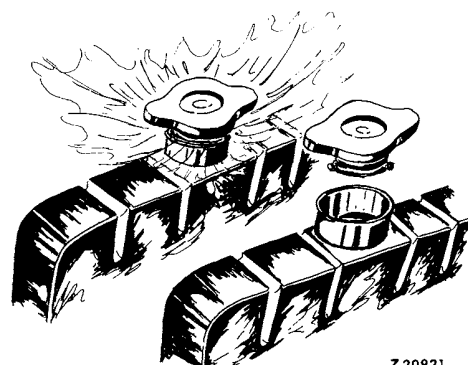

Z 20921


Z20921-1640ALE-271282

SERVICE TIRES SAFELY

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious bodily injury or death. **DO NOT** attempt to mount a tire unless you have the proper equipment and experience to perform the job safely. Have it done by your JOHN DEERE dealer or a qualified tire repair service.

When sealing tire beads on rims, never exceed maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your JOHN DEERE dealer. Such information is also available from your local tire manufacturer agents.

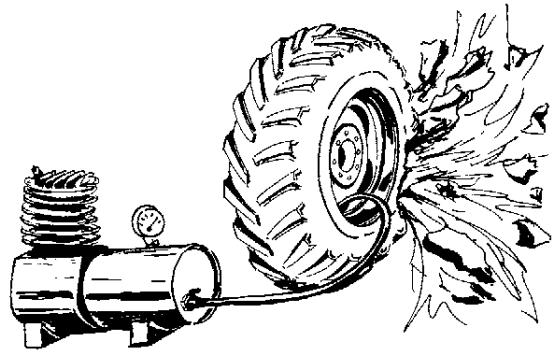


Z 20924

Z20924-1640ALE-271282

DISCONNECTING ELECTRICAL CIRCUIT

Disconnect battery ground strap before carrying out any electrical repairs on the tractor.

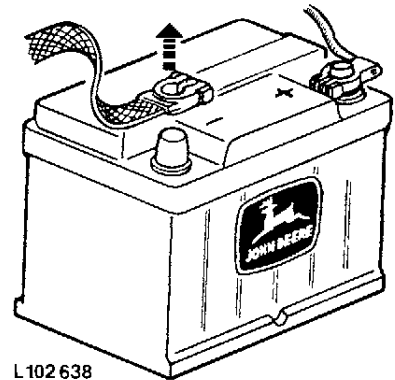


L 102 638


L102638-1640ALE-271282

Controls and Instruments

- A—Handbrake
- B—Clutch pedal
- C—PTO control lever
- D—Turn signal switch
- E—Speed-hour meter
- F—Hazard warning light switch
- G—Engine shut-off knob
- H—Starter switch
- I—Hand throttle lever
- J—Main switch
- K—Brake pedals
- L—Gear shift lever
- M—Range shift lever
- N—Rockshaft control lever
- O—Selective control valve lever
- P—Foot throttle

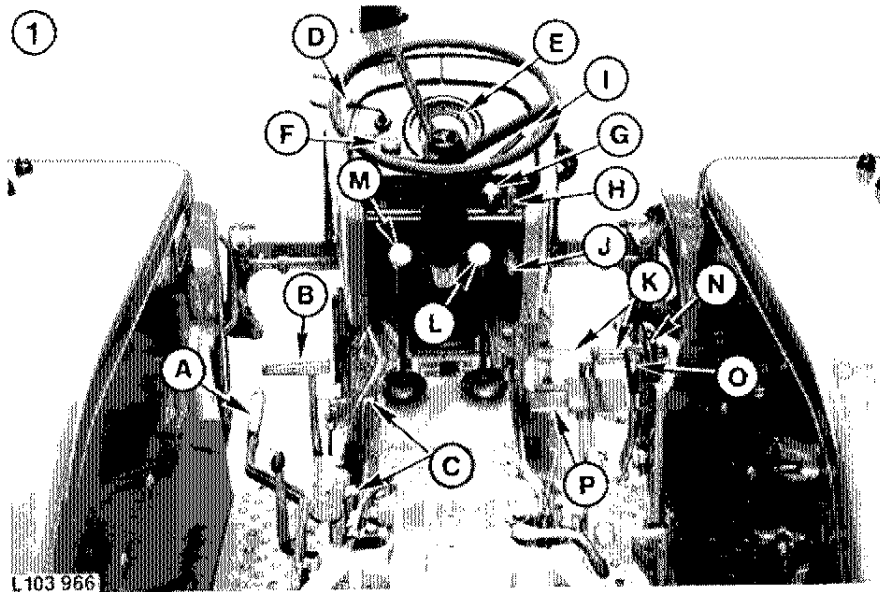


- 1—Tractor Without Cab
- 2—Tractor With Cab

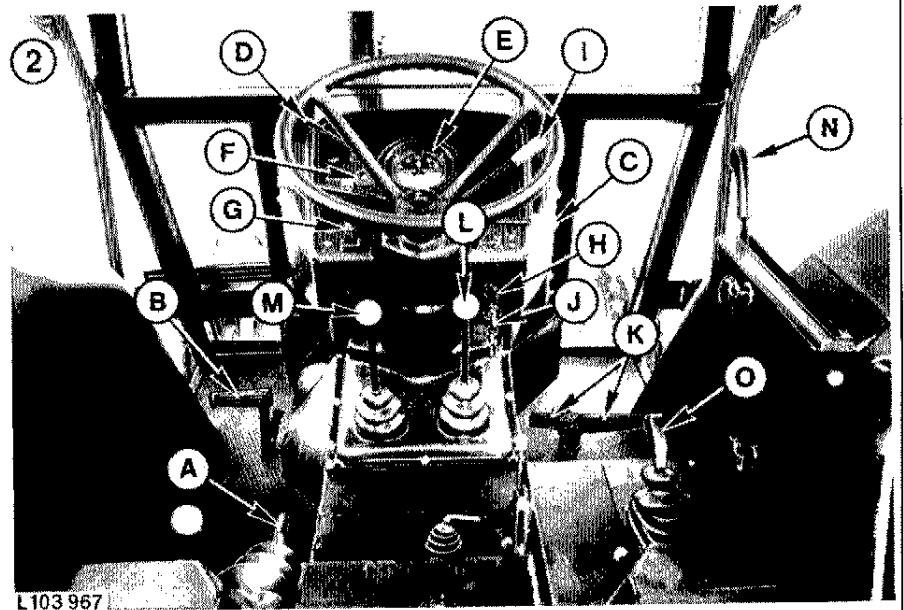

L103966, L103967-940ALE-310883

- A—Heater switch
- B—Fan switch
- C—Windshield wiper switch
- D—Windshield washer switch
- E—Work light switch

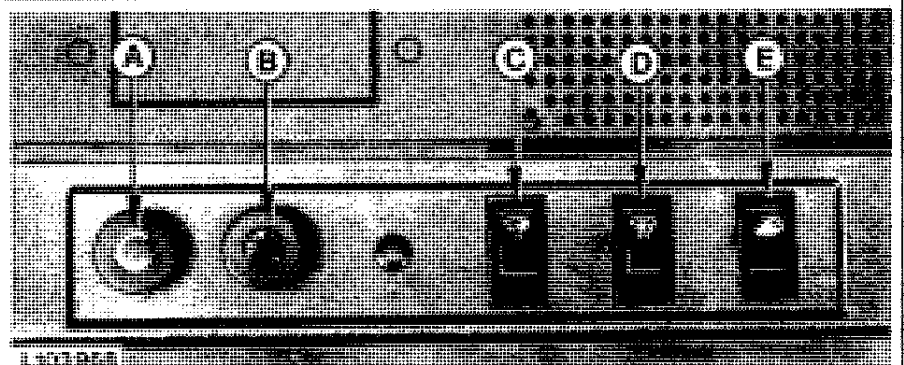


L103968-940ALE-310883

INSTRUMENT CLUSTER

Air cleaner, alternator, engine oil pressure and transmission oil pressure* indicator lights should light up as soon as the main switch key is turned on. If this is not the case, a blown bulb or fuse may be the cause. Replace defective bulb or fuse.

The control lights should go out as soon as the engine is running.

* On tractors equipped with collar-shift transmission, transmission oil pressure indicator light glows only when a malfunction occurs.

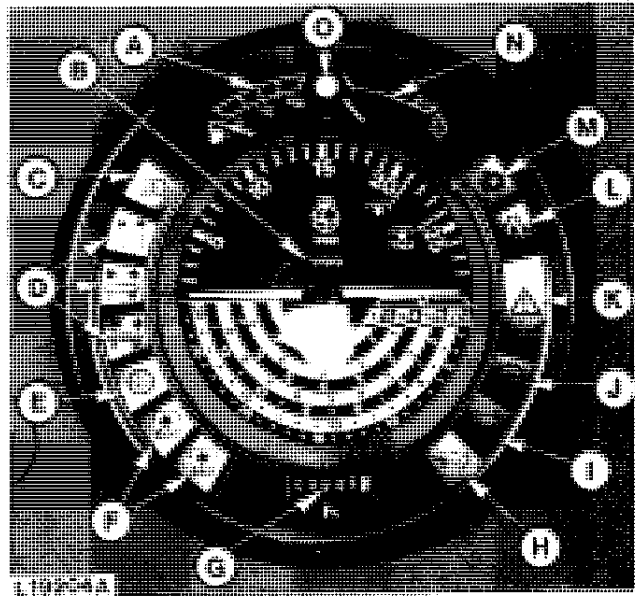

A—The fuel gauge shows amount of fuel in tank, from "full" (4/4) to "empty" (0). Never run fuel tank completely dry, otherwise you will have to bleed the fuel system.

B—The engine and tractor speed gauge shows the engine speed and tractor speed in the gear engaged.

C—The full-beam indicator light will go on as soon as the full-beam headlight switch is turned on.

D—The flashing indicator lights for tractor and trailer start flashing when turn-signal or hazard warning lights are turned on.

E—If air cleaner indicator light glows with engine running, the air cleaner element must be cleaned or replaced.

F—The PTO speed indicator lights (on tractors with PTO hand speed-change only) show the PTO speed engaged.

G—The hour meter shows the number of engine operation hours in full and tenths of hours. The hour meter facilitates close observation of the proper service intervals.

H—The front wheel drive indicator light glows when the front wheel drive is engaged.

I—If the alternator indicator light glows with engine running, check for loose alternator connections, condition and tension of V-belt or defective alternator. If necessary have alternator checked by your JOHN DEERE dealer.

J—If transmission oil pressure indicator light glows during tractor operation, stop tractor and check transmission/hydraulic oil level. Should indicator light glow and oil level is correct, then oil filter is clogged. Replace filter.

K—The warning light blinks when indicator lights I, J or L glow or when range shift lever is moved with the handbrake applied.

L—If engine oil pressure indicator light glows with engine running, shut-off engine and check oil level.

M—The handbrake indicator light glows when the handbrake is applied and the main switch is turned on. Furthermore, an acoustical warning signal can be installed.

N—Should the coolant gauge needle move into the red zone the engine is overheating. Immediately reduce load or shift to a lower gear. Should the needle remain in the red zone, shut-off engine and determine cause of the overheating.


O—This indicator light glows when the fog tail light is switched on.

Break-In Period

AFTER FIRST 4 AND 8 HOURS OF OPERATION

Tighten Rear Wheel Retaining Bolts as Follows:

Bolts (A) with 18.4-16.1 tires : 175 Nm (130 ft-lb).
With other tire sizes : 240 Nm (175 ft-lb) torque.
Bolts (B) with "inch" sized bolts requiring 7/8 in.
spanner : 200 Nm (145 ft-lb); With "metric" sized
bolts requiring 22 mm spanner : 250 Nm (185 ft-lb)
torque.

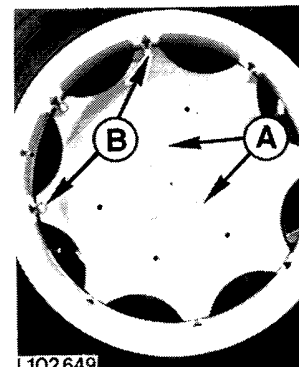


L102 649


L102649-940ALE-010983

Tighten Front Wheel Retaining Bolts. (torques vary depending on tractor equipment)

- A-180 Nm (130 ft-lb)
- B-300 Nm (220 ft-lb)
- C-200 Nm (145 ft-lb)

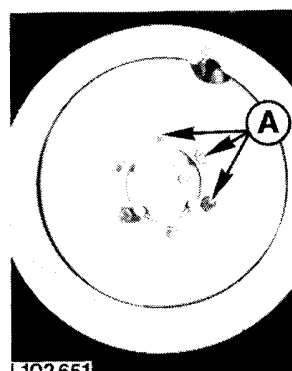

L102 651

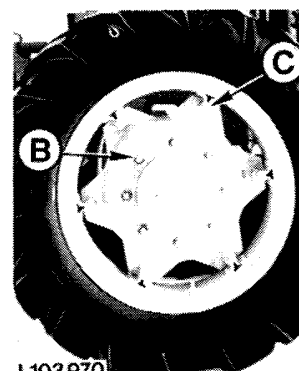


L103 970

L102651,L103970-940ALE-010983

Adjustable Front Axle

Tighten attaching screws (A) to 400 Nm (300 ft-lb) torque.

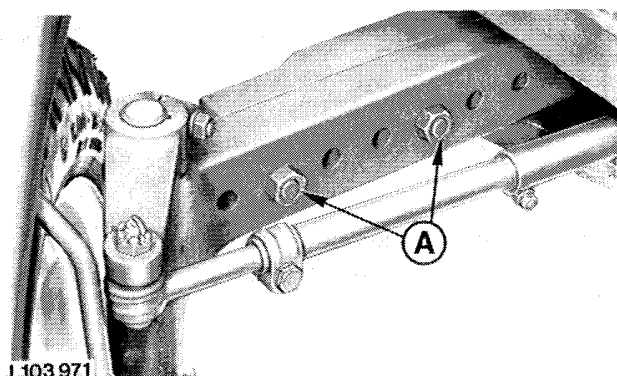


L103 971

L103971-940ALE-010983

STEERING ARM ATTACHING SCREWS

Tighten attaching screws to 120 Nm (90 ft-lb) torque.

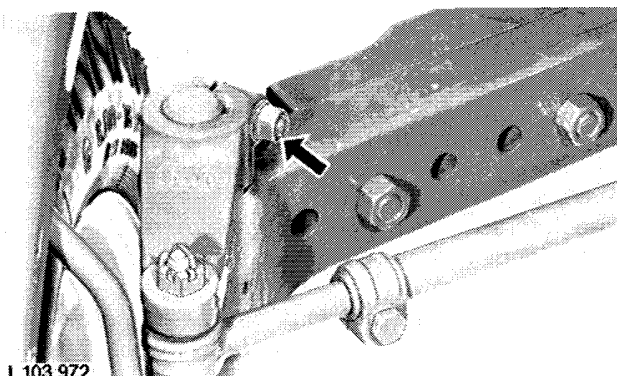


L 103 972

L103972-940ALE-010983

AFTER THE FIRST FIFTY HOURS OF OPERATION

Replace transmission oil filter (see "Detailed Periodic Services" – every 500 hours of operation).

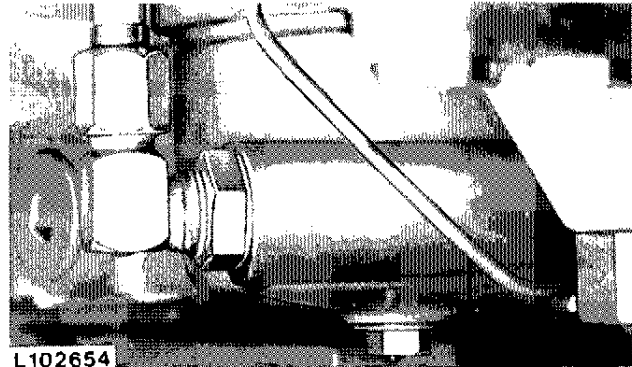


L102654

L102654-1640ALE-110183


AFTER THE FIRST 100 HOURS OF OPERATION

On tractors with MFWD or swept-back front axle, tighten clamping screws (A) to 40 Nm (30 ft-lb) torque and clamping screws (B) to 110 Nm (80 ft-lb) torque.

On tractors with straight front axle tighten clamping screws (A) to 55 Nm (40 ft-lb) torque and screw (B) to 90 Nm (65 ft-lb) torque.

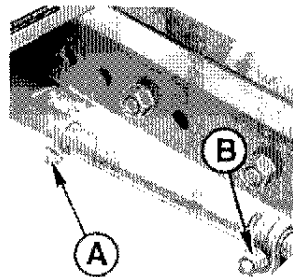

L103 992

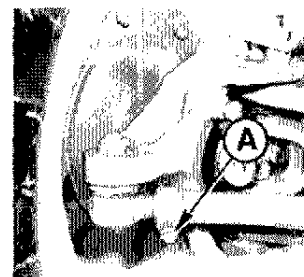

L104 609

Change engine oil.
See "Detailed Periodic Services" - every 100 hours of operation.

Change front axle oil.
See "Detailed Periodic Services" - every 1000 hours of operation.

Renew engine oil filter element.
See "Detailed Periodic Services" - every 200 hours of operation.

L103992, L104609-940ALE-290983

WITHIN THE FIRST 100 HOURS OF OPERATION

Operate engine at normal loads.
Avoid light loads.
Avoid excessive engine idling.
Check torque of wheel retaining bolts frequently.
Check engine crankcase oil level frequently.


NOTE: During the break-in period a higher-than-usual oil consumption should be considered as normal.

EINOM-1640ALE-120183

Reduce Fuel Consumption

SERVICE CORRECTLY


Replace air, fuel, engine oil and transmission/hydraulic filter elements at correct specified service intervals (see section "Lubrication and Periodic Service").

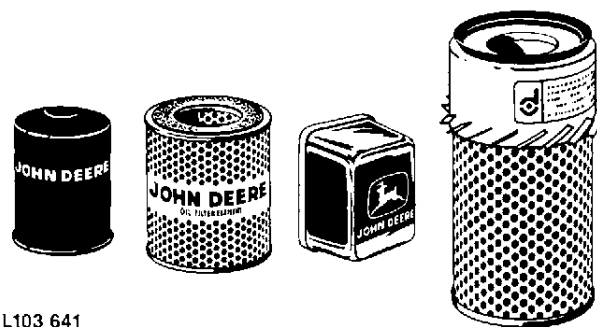

L103 641

L103641-1640ALE-050583


Use recommended oils and lubricants only (see section "Fuel, Lubricants and Coolant").

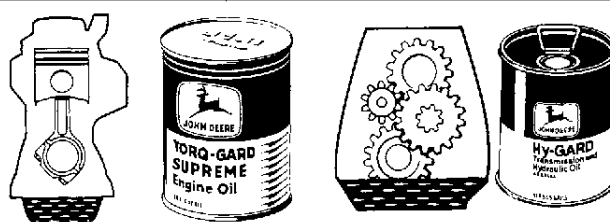

L103 642

L103642-1640ALE-050583


Have the fuel system checked regularly by your JOHN DEERE dealer.

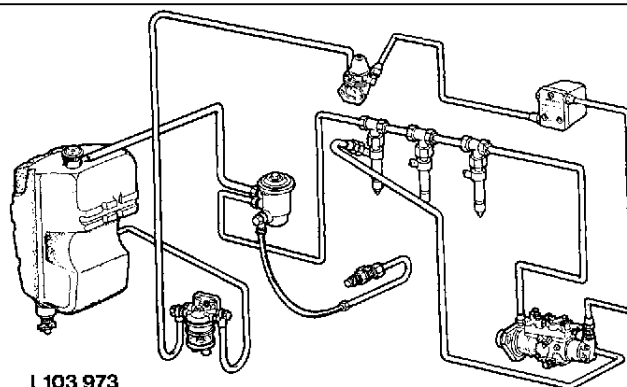

L103 973

L103973-940ALE-050983

Regularly check function of rockshaft "MAX" load control.

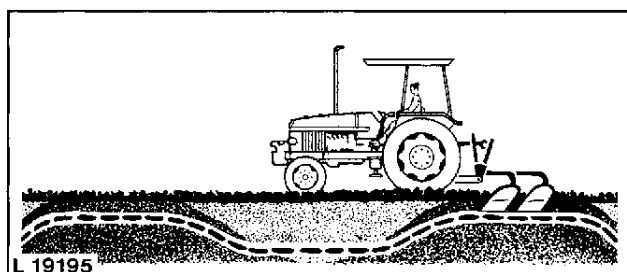

L 19195

L19195-940ALE-050983



Suggest:


If the above button click is invalid.

**Please download this document
first, and then click the above link
to download the complete manual.**

Thank you so much for reading

DRIVE WITH CORRECT TIRE PRESSURES

Adapt tire pressures to type of work and ground conditions (consult your JOHN DEERE dealer or local tire agent).

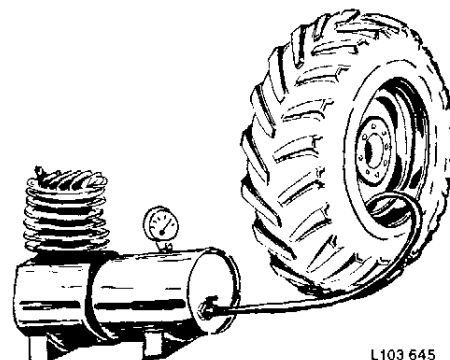

L103 645

L103645-1640ALE-050583



CHOOSE CORRECT BALLAST

Choose ballast to obtain 10 to 15% wheel slip. Use no more ballast than necessary, reduce ballast for light work.

A—Too much ballast

B—Too little ballast

C—Correct ballast

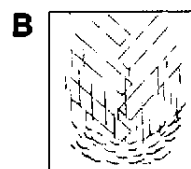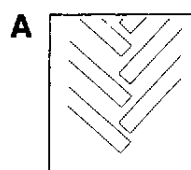

L103 646




L103646-1640ALE-050583

SELECT CORRECT GEAR

Always drive in the highest possible gear with reduced engine speed.

Choose a gear so that engine speed (A) with engine not under load, drops 150 to 250 rpm with tractor operating and engine under load (B).

NOTE: With light work reduce engine speed below 2000 rpm. Select a gear so that engine speed drops 200 to 300 rpm when operating.

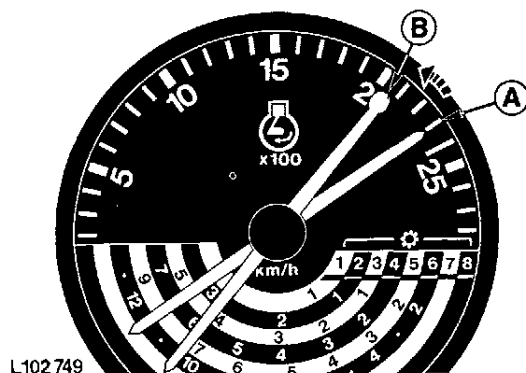

L102 749

L102749-1640ALE-050583

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>